 
 


1

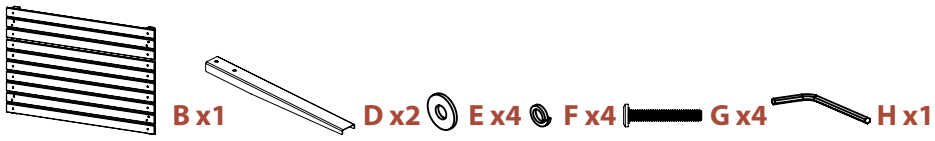

! Notice that screen panel B has two top screw holes.

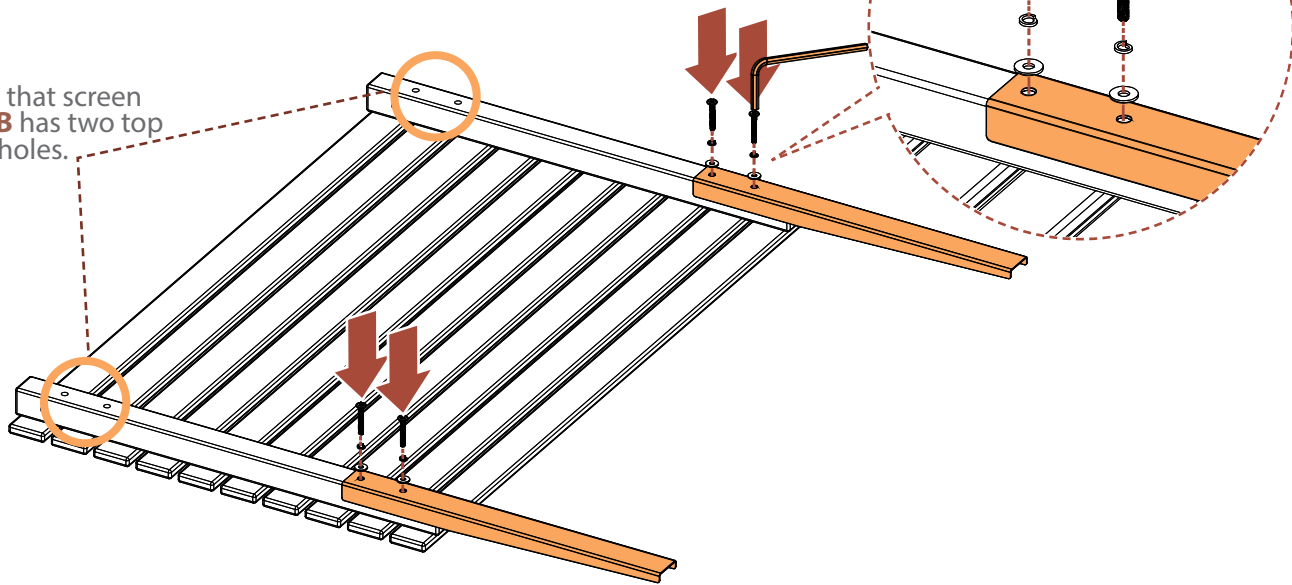


# ENCLO

 HIDE IT WITH STYLE

ASSEMBLY  
INSTRUCTIONS  
**EC18042**




**A** x1

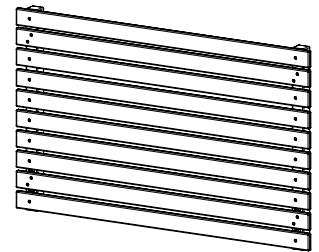

! Notice the top panel has no top screw holes.


**Top Panel**  
2" x 23 3/4" x 38"

 **B** x2

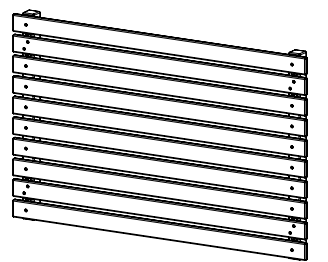


**Screen Panels**  
2" x 24" x 38"

 **C** x4



**Bracket**

 **D** x2

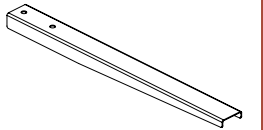

**Stake**

**E** x20



**Washer**

**F** x20



**Lock Washer**

**G** x20



 
**Bolt**

**H**



**Allen Wrench**

**I**




**Wooden Block**

**J** x2




**Joiner Clips**

 2




**I** x1

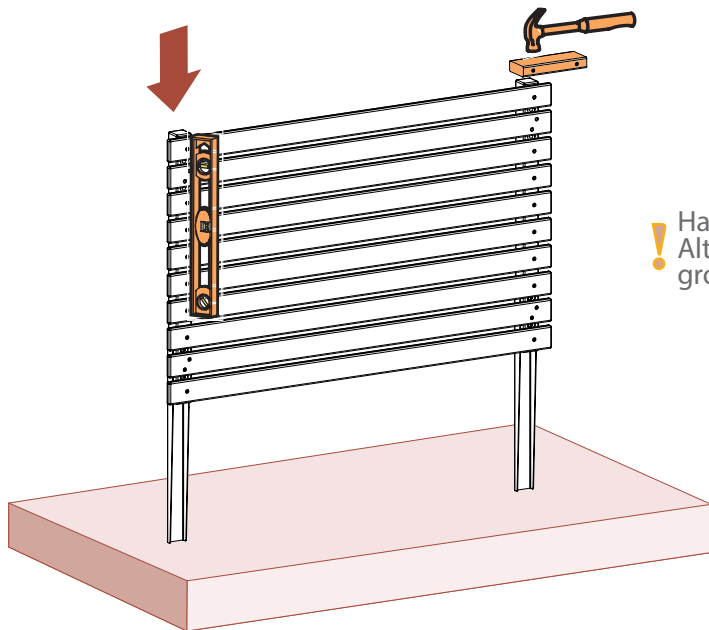 


! Hammer with wooden block I. Alternate sides until level with the ground.

 3

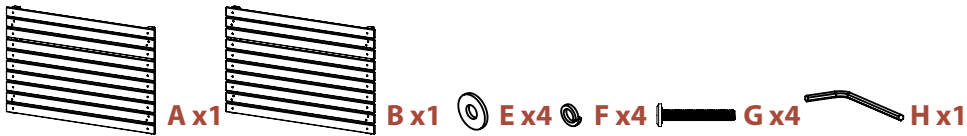

 ! Notice the top panel A has no top screw holes.

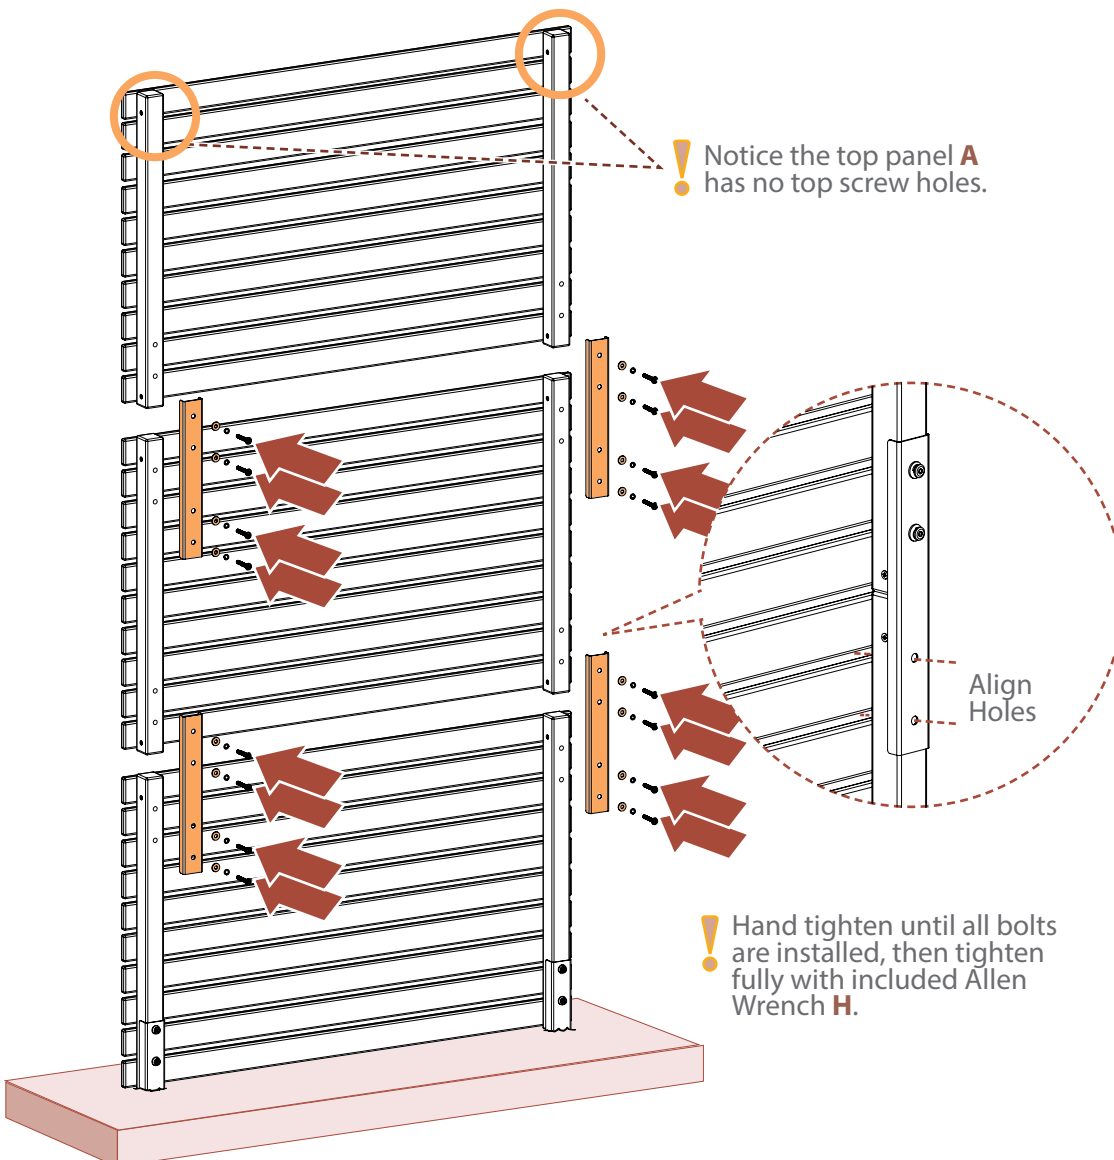


Align Holes

! Hand tighten until all bolts are installed, then tighten fully with included Allen Wrench H.

4



 ! After you build up your second panel, temporarily remove your bolts, and insert your joiner clips J before reinserting and tightening the bolts.

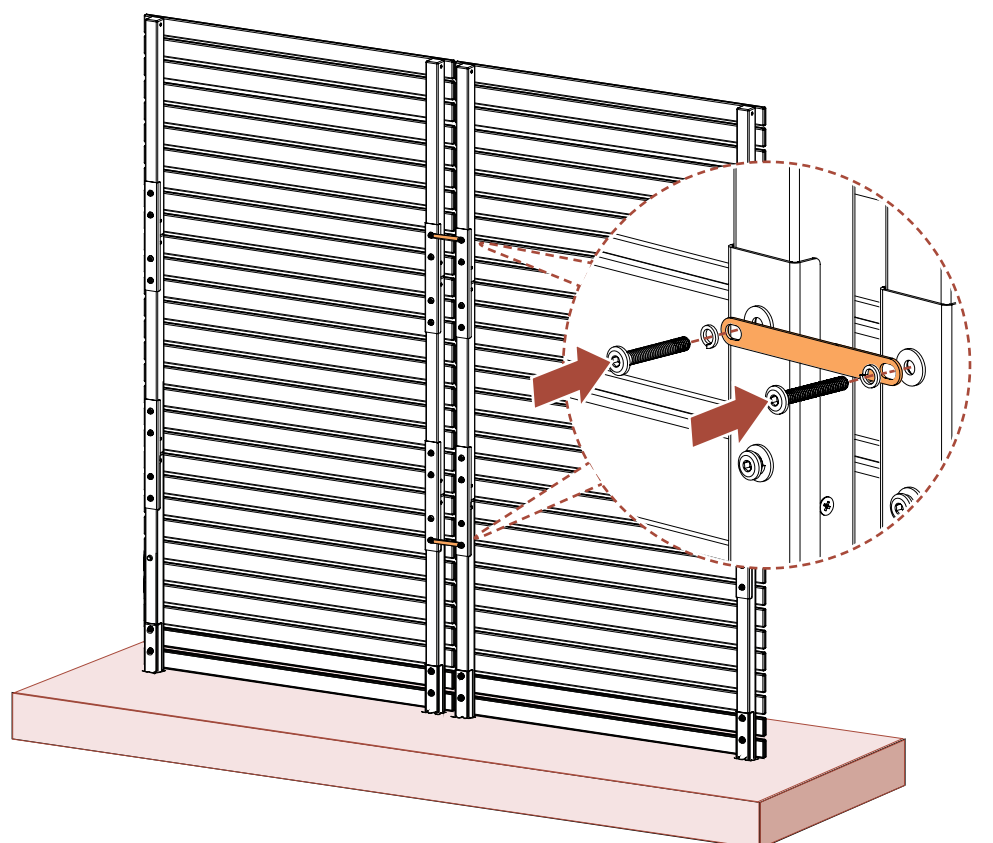

# GENERAL INFORMATION

## MISSING OR DAMAGED PARTS?



➤ **Visit Our Website**  
so we can help you right away!  
**parts.nychbrands.com**

\* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, ➤ Your product number (**EC18042**)  
**please have the** ➤ Your affected part letters  
**following** ➤ Your original product box

## NEED ASSEMBLY HELP?

If you are having problems with assembly or installation of this product,  
**please contact at:**

📞 **704-892-5222 / 877-234-6196**    ✉ **support@encloscreens.com**

## NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

