



**ASSEMBLY
INSTRUCTIONS
EC18042**



1

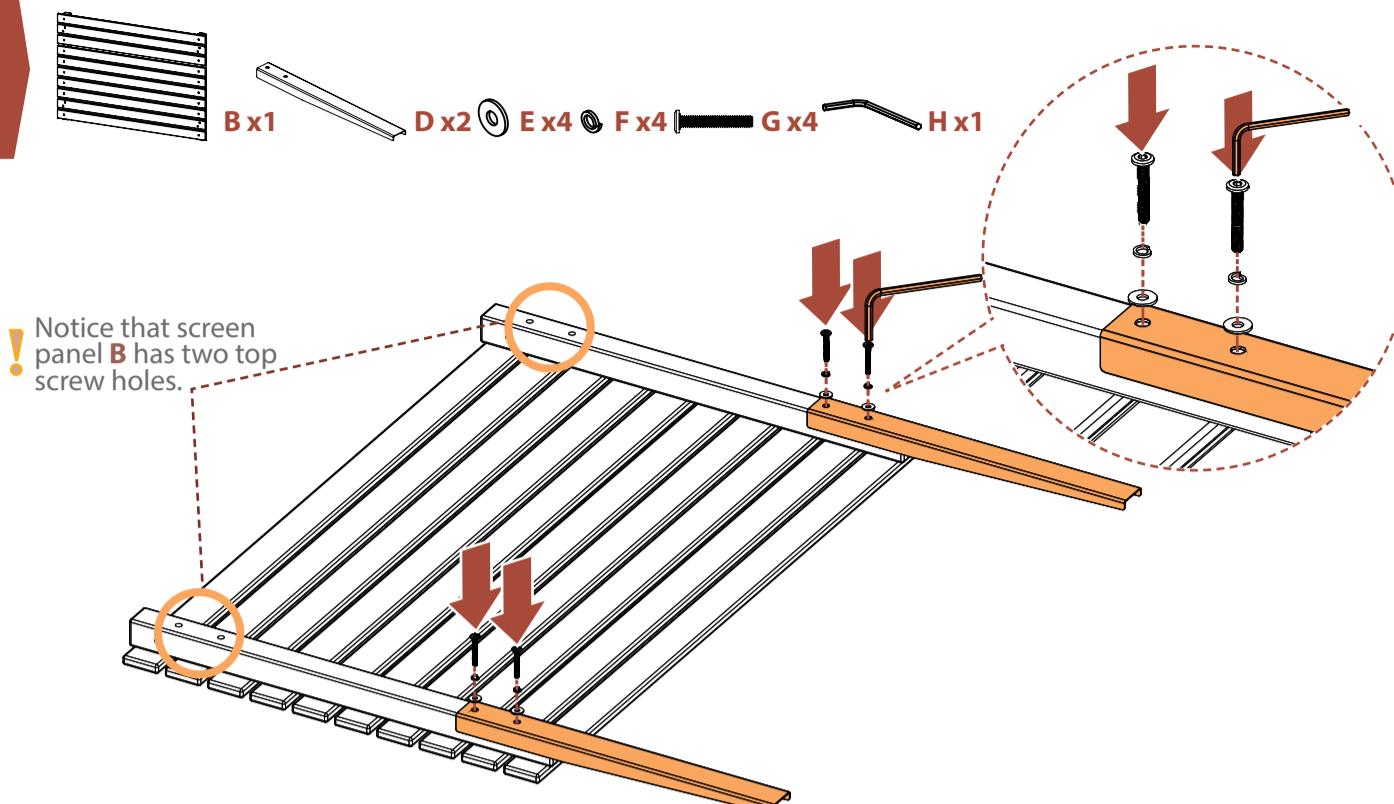


2

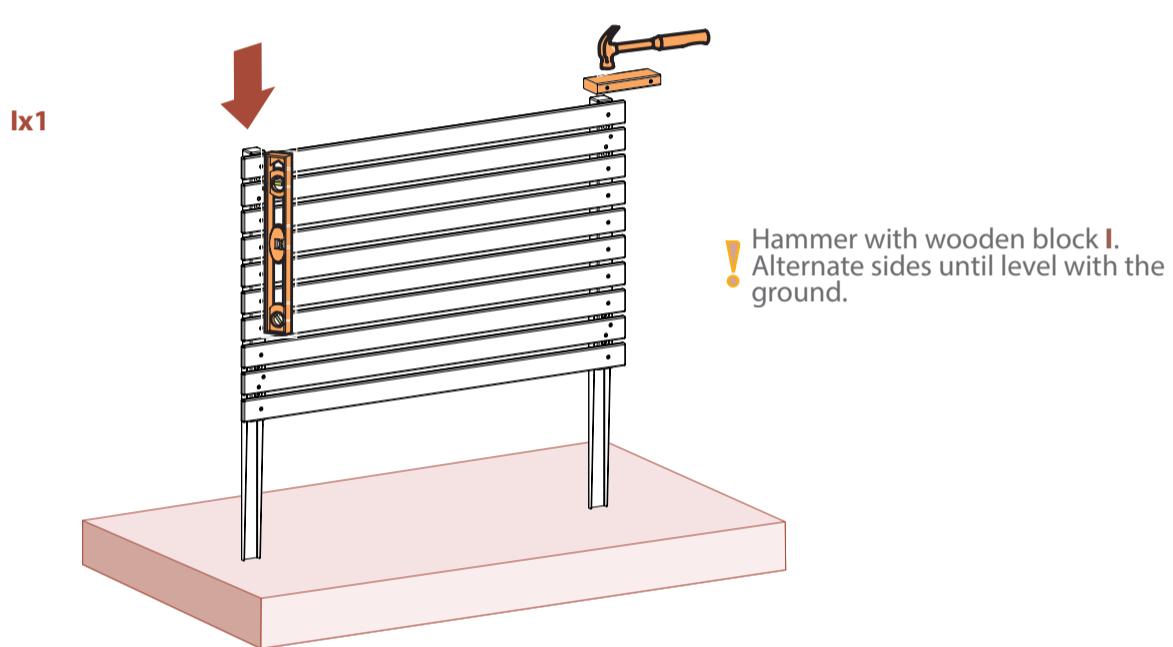

3


A x1 B x1 C x2 D x2 E x4 F x4 G x4 H x1 I x1 J x2

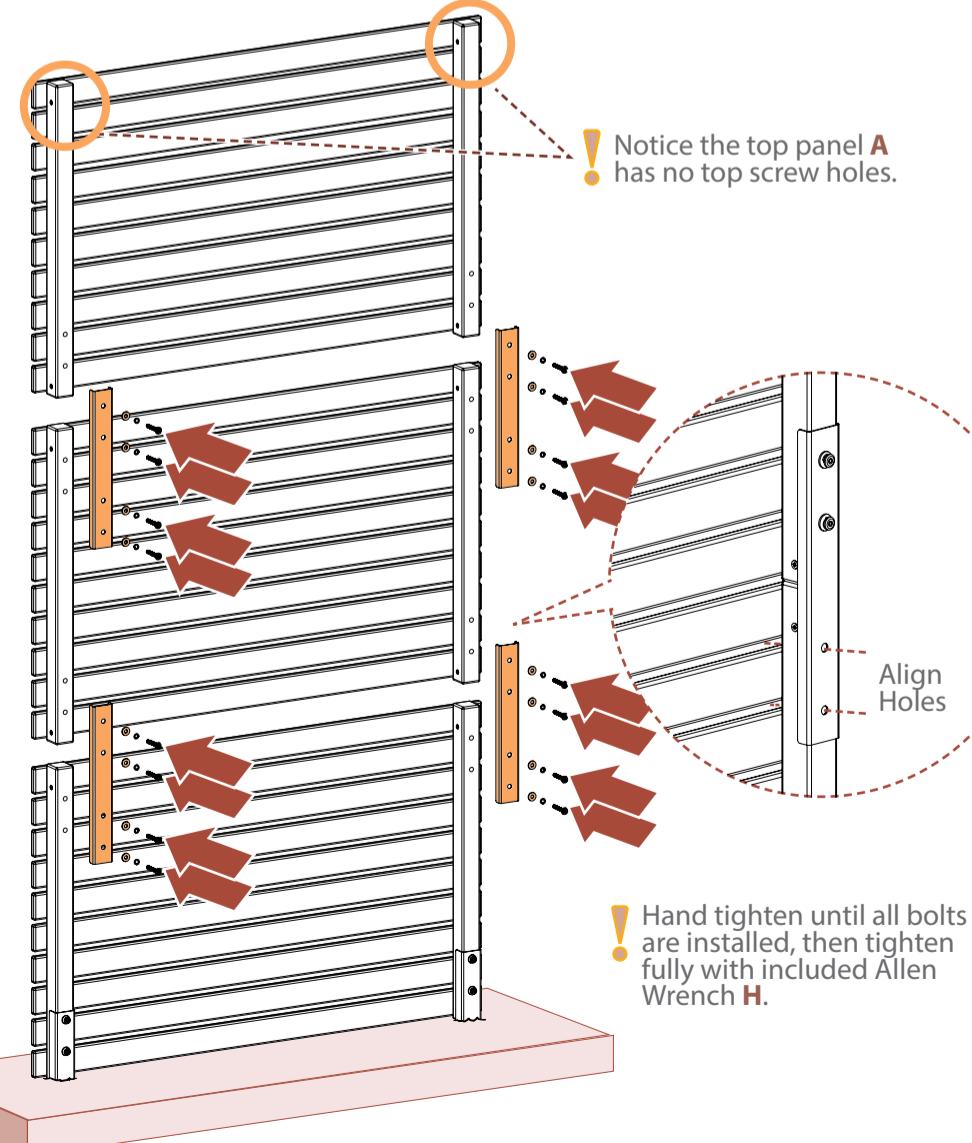


4

J x2

After you build up your second panel, temporarily remove your bolts, and insert your joiner clips J before reinserting and tightening the bolts.

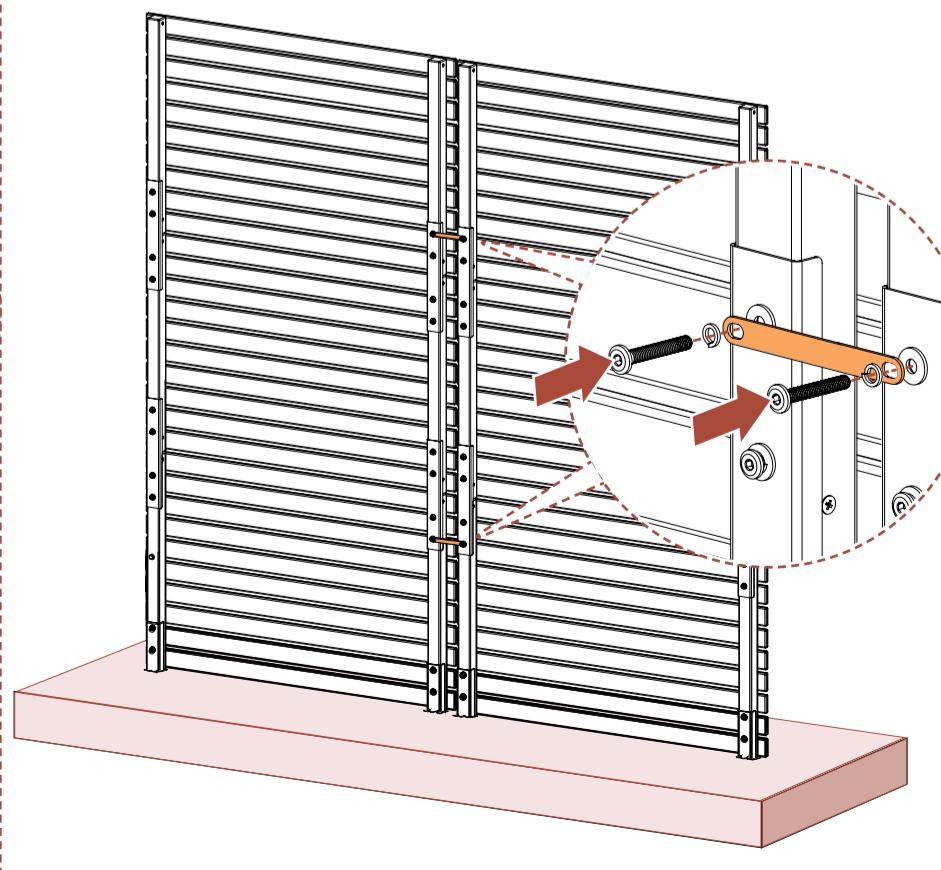


A x1

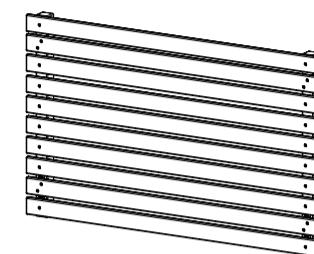

Notice the top panel has no top screw holes.

Top Panel
2" x 23 3/4" x 38"

B x2

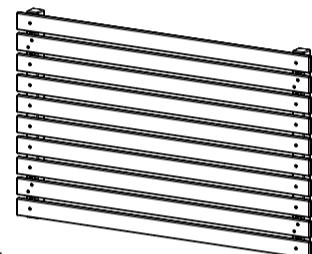

Screen Panels
2" x 24" x 38"

C x4



Bracket

D x2



Stake

E x20



Washer

F x20



 
Lock Washer

G x20



Bolt

H



Allen Wrench

I



Wooden Block

J x2



Joiner Clips

GENERAL INFORMATION

MISSING OR DAMAGED PARTS?



► **Visit Our Website**
so we can help you right away!
parts.nychbrands.com

* You can also reach us via phone or email.

Hours of Operation - Weekdays 9am-5pm EST

To better help you, **please have the following**

- Your product number (**EC18042**)
- Your affected part letters
- Your original product box


NEED ASSEMBLY HELP?

If you are having problems with assembly or installation of this product,
please contact at:

📞 704-892-5222 / 877-234-6196 📩 support@encloscreens.com

NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

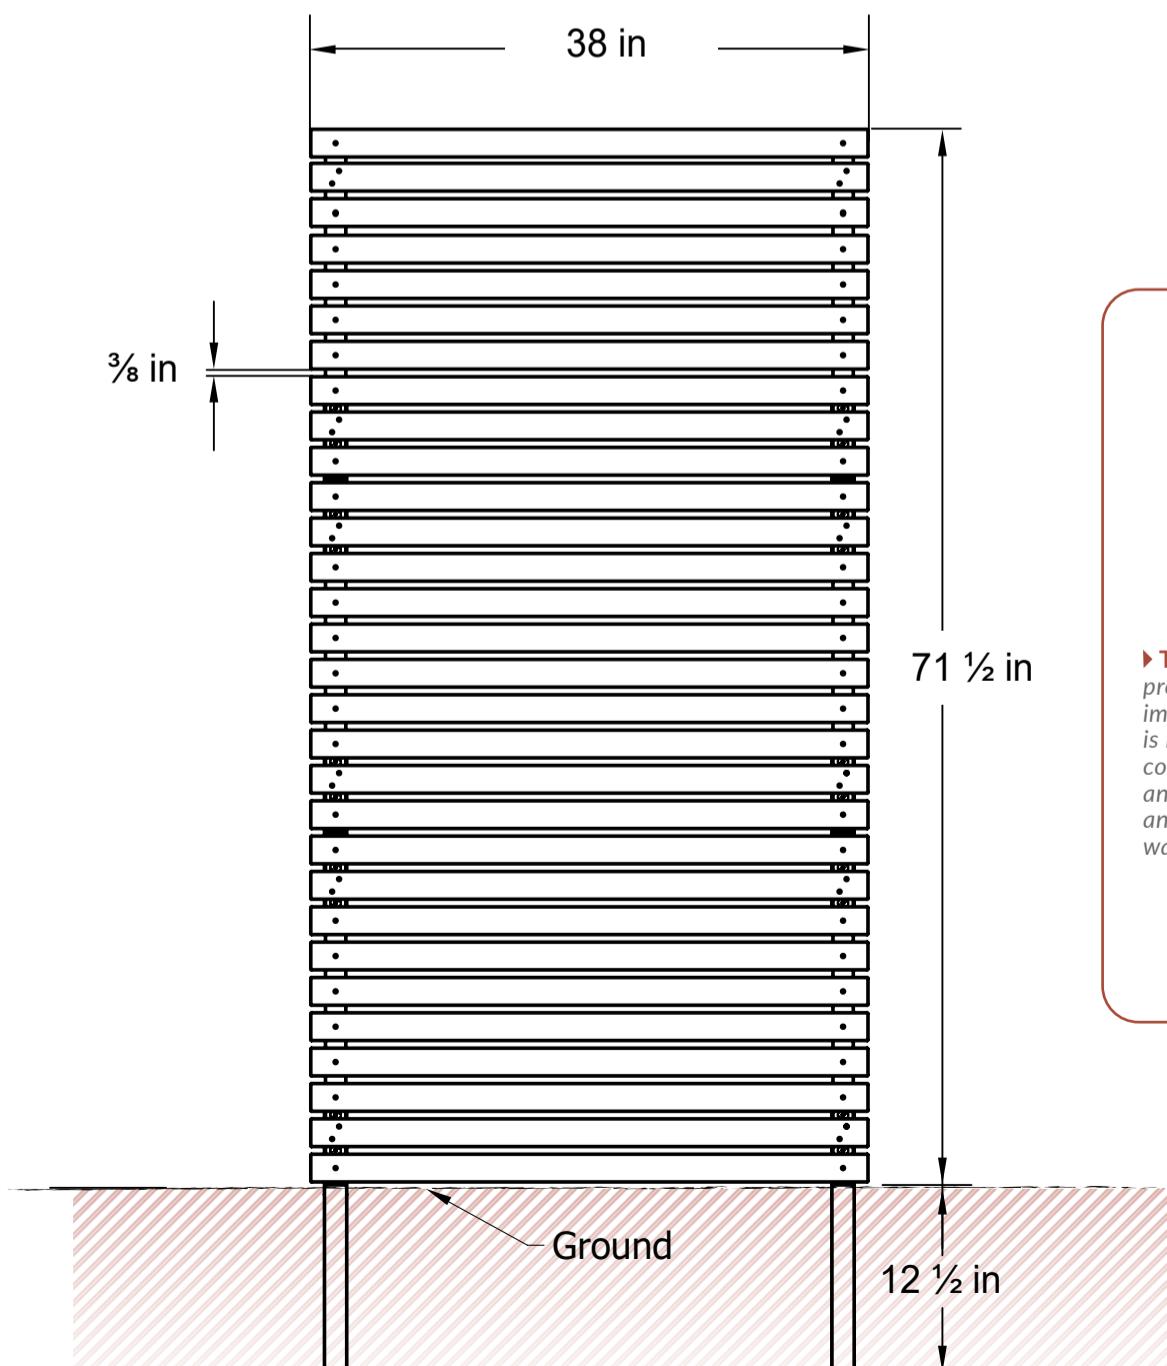

► **Touch up paint is included** if your product has any small scratches impacting the stain. If your product is heavily damaged in shipping, contact our customer care team and we will help resolve your issues and get replacement parts sent your way.

parts.nychbrands.com
support@encloscreens.com
704-892-5222 / 877-234-6196