
Metal Post Stabilizers



When Do I Need these?


Your pipe anchors, even when driven to the recommended depths of 36” and 42”, will have a wind load resistance problem if the ground around them is unstable. If your entire fence line is located in loose or extremely loamy conditions, you may want to consider purchasing the metal post stabilizers.

Product specs:

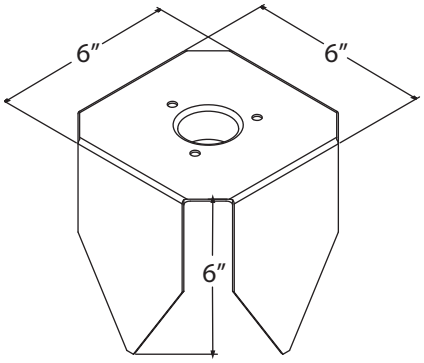


Installation Instructions:

A

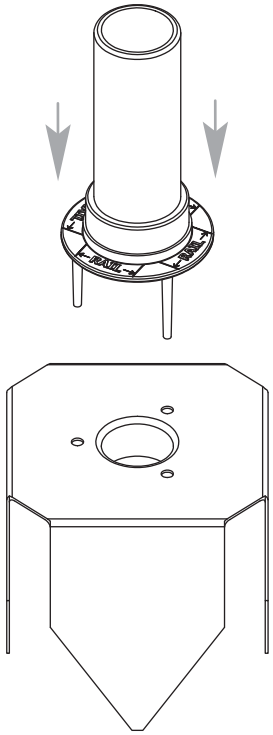

Insert the three legs on the Anchor Positioner into the three holes on the Metal Post Stabilizer.

B

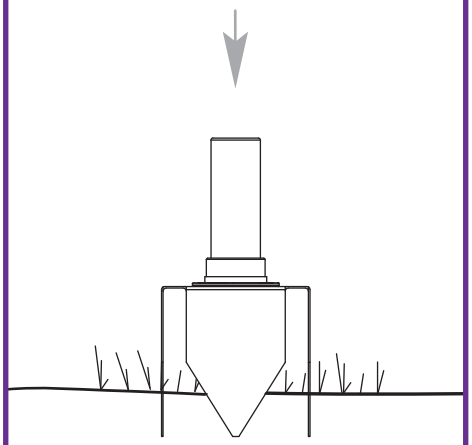

Identify location and insert flush into the ground using hand force.

WamBam
The only fence that's fun to install.