




HIDE IT WITH STYLE

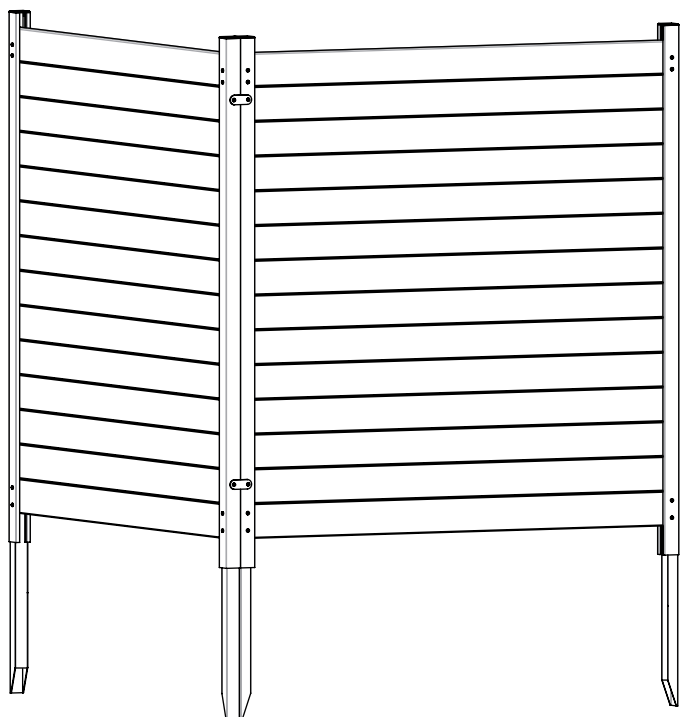

Richmond Screen Kit 38" W x 42" H

45 min
*Approximate assembly
time for 2 screens*



Scan the QR code
for an assembly video



**ASSEMBLY
INSTRUCTIONS**
EC18008

www.encloscreens.com

VER. 121525

GENERAL INFORMATION

MISSING OR DAMAGED PARTS?



➤ **Visit Our Website**
so we can help you right away!
parts.nychbrands.com

* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, **please have the following**

- Your product number (**EC18008**)
- Your affected part letters (**page 4-5**)
- Your original product box

NEED ASSEMBLY HELP?


If you are having problems with assembly or installation of this product,
please contact at:

📞 **704-892-5222 / 877-234-6196** ✉ **support@encloscreens.com**

NEED TO RETURN?


If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

DETAILED **PRODUCT DIMENSIONS** & SPECIFICATIONS

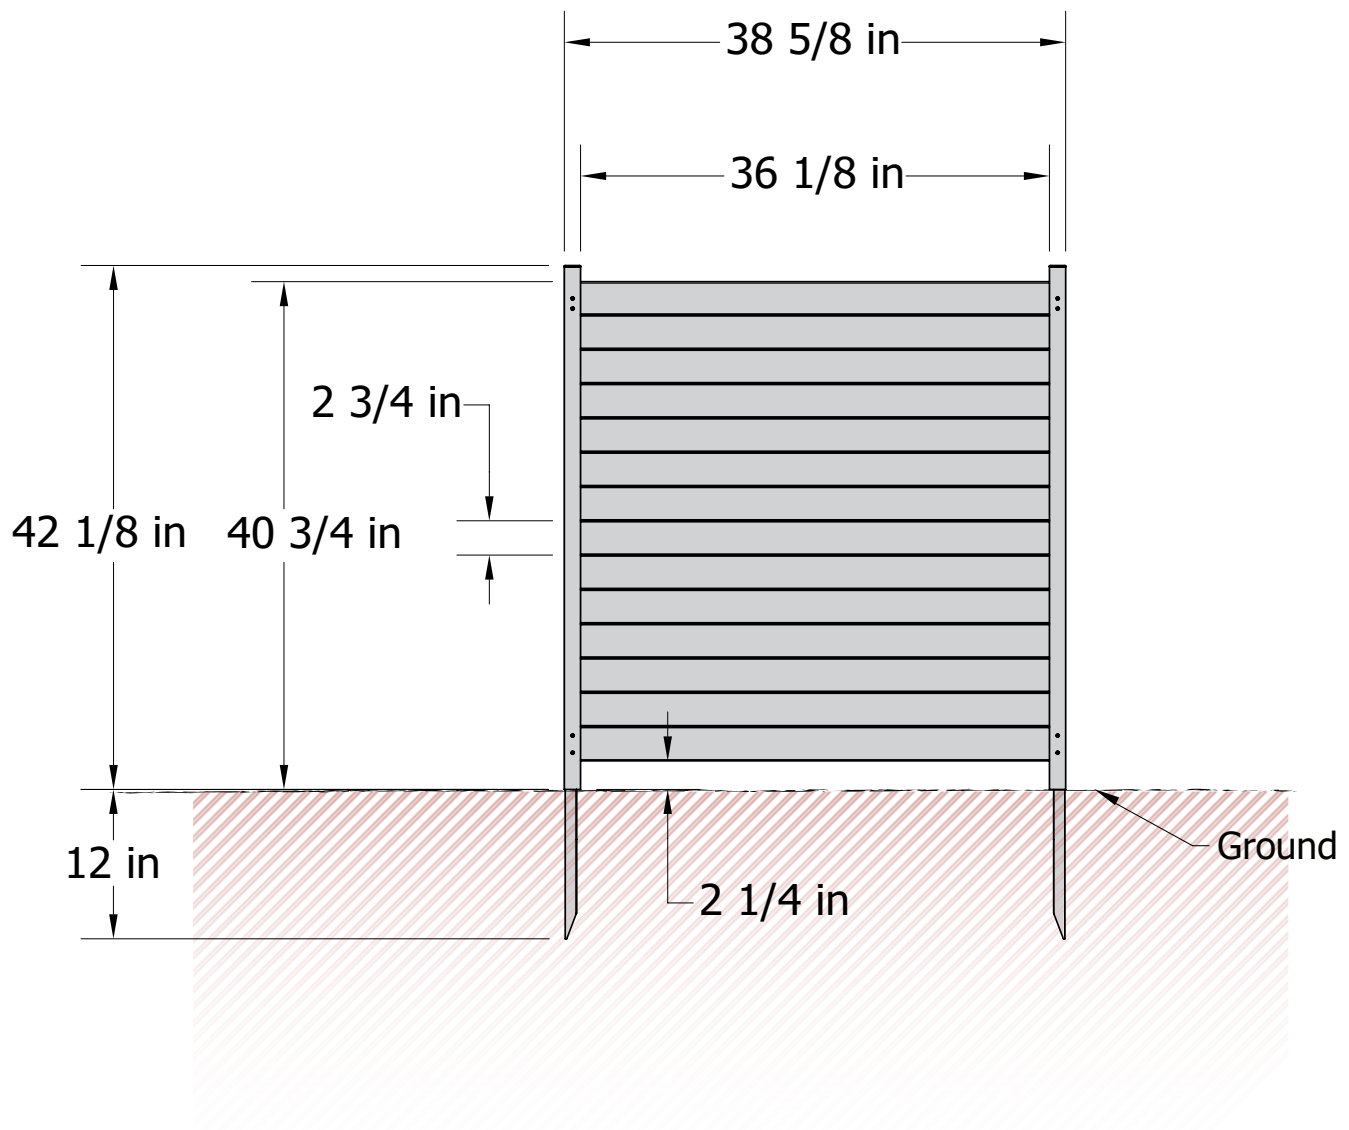


LAY OUT MATERIALS

► Tools required for a smoother installation experience.

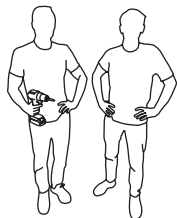


We recommend
2 people for
a smoother
assembly.

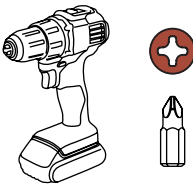

► **Power Drill with Phillips Bit**

LARGE PARTS

A

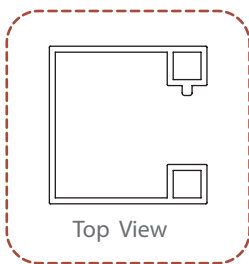


Top View



Left Post (2)
1 1/4" x 1 1/4" x 42"

B

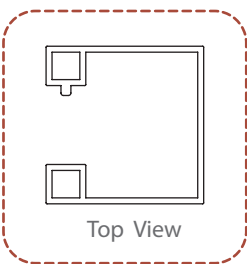

Top View



Right Post (2)
1 1/4" x 1 1/4" x 42"

C






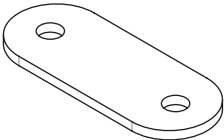

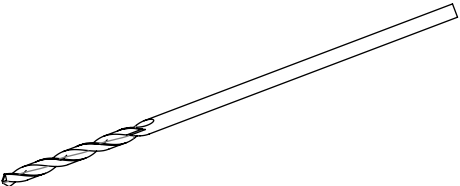
Board (26)
5/8" x 3" x 38"

D



Top Board (2)
5/8" x 2 5/8" x 38"

LAY OUT MATERIALS

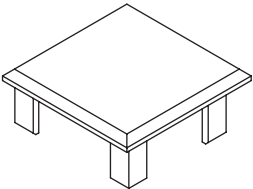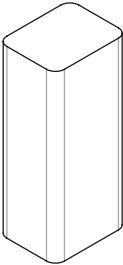SMALL PARTS	
<div>E</div> <div></div> <div>Post Cap (4)</div>	<div>F</div> <div></div> <div>Wood Assembly Spacer (2)</div>
<div>G</div> <div></div> <div>Post Anchor (4) $\frac{7}{8}" \times 1 \frac{1}{9}" \times 17"$</div>	<div>H</div> <div></div> <div>Joiner Clip (2) $\frac{1}{13}" \times \frac{3}{4}" \times 1 \frac{3}{4}"$</div>
<div>I</div> <div></div> <div>1" Stainless Steel Screw (20)</div>	<div>J</div> <div></div> <div>1/8" Steel Drill Bit (1)</div>

1




A x1



B x1


NOTE: The end of each post marked with a sticker is the top.

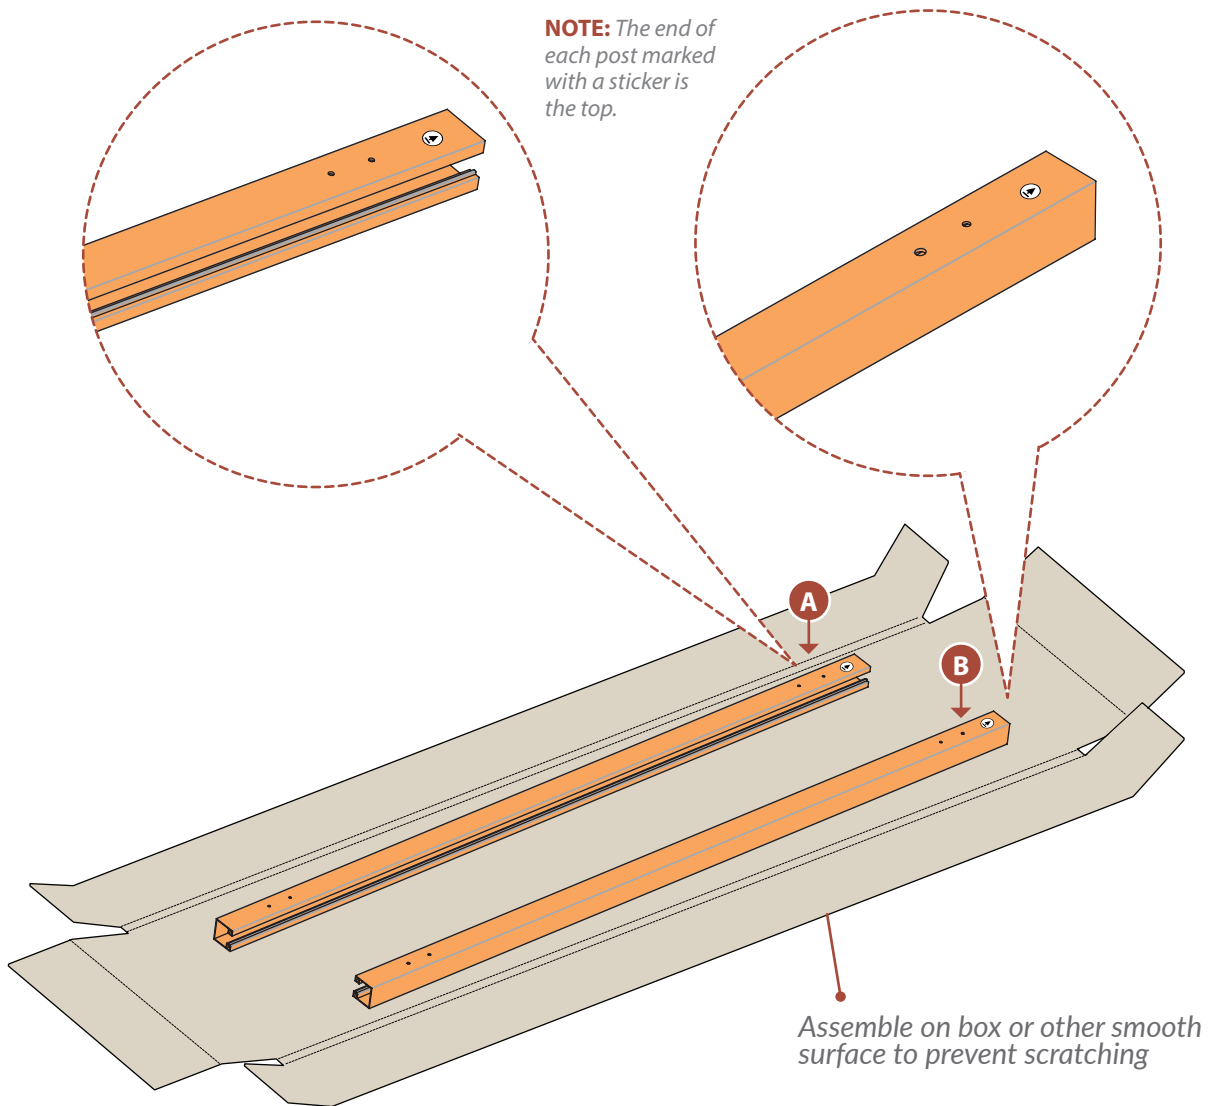


2




C x1

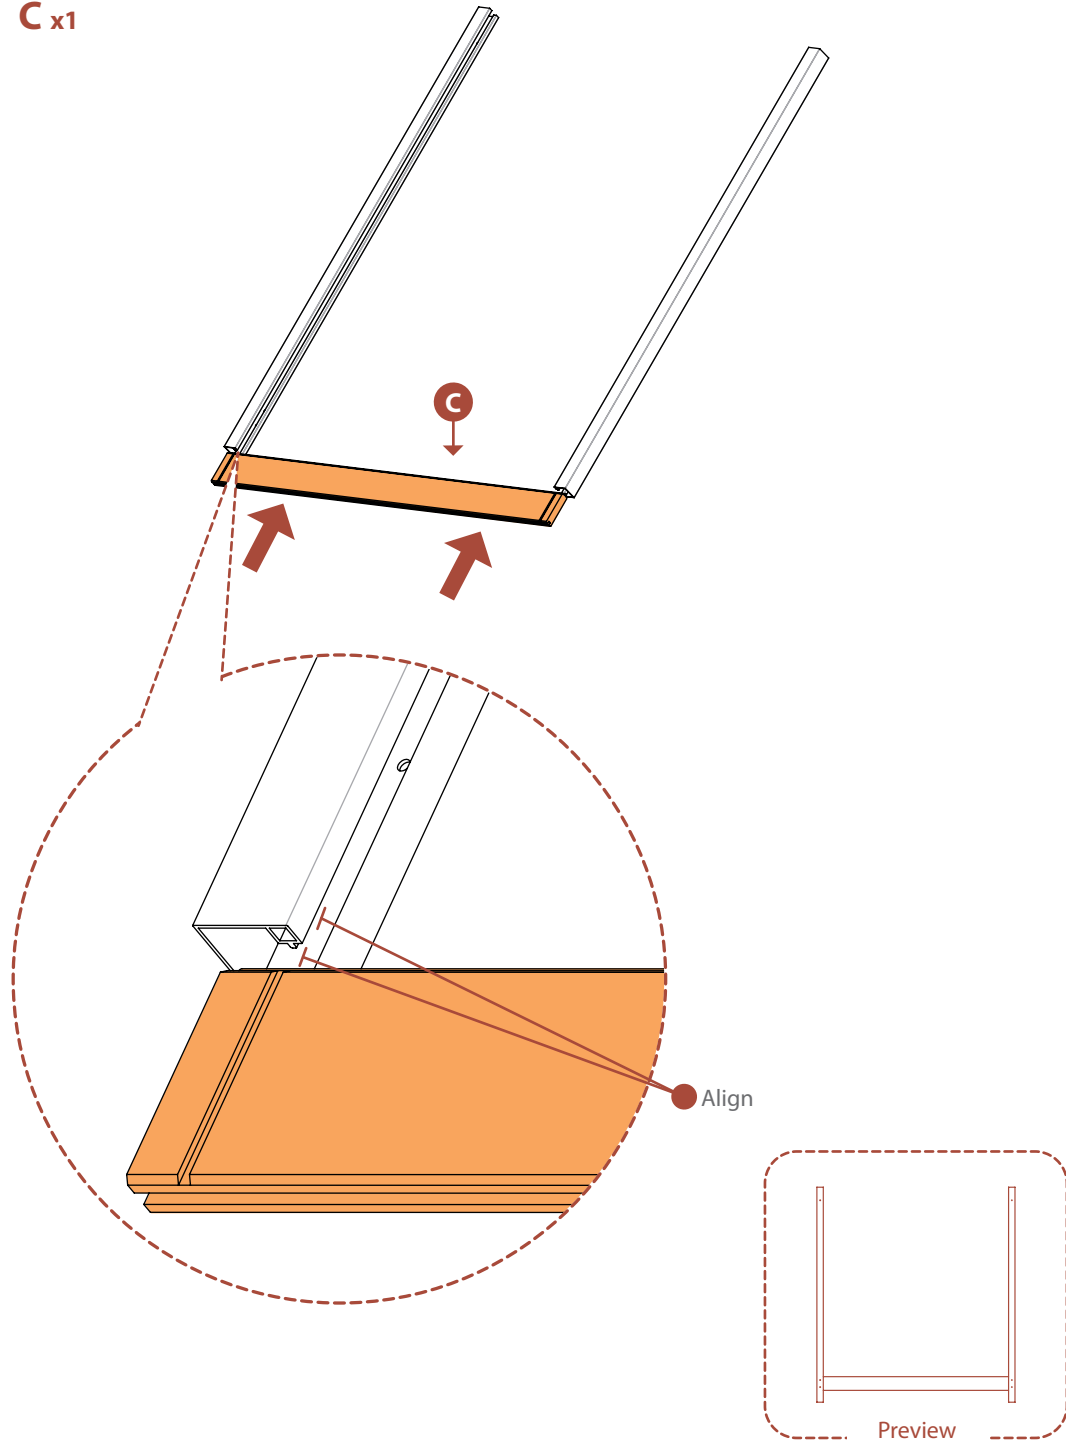

3




F x2

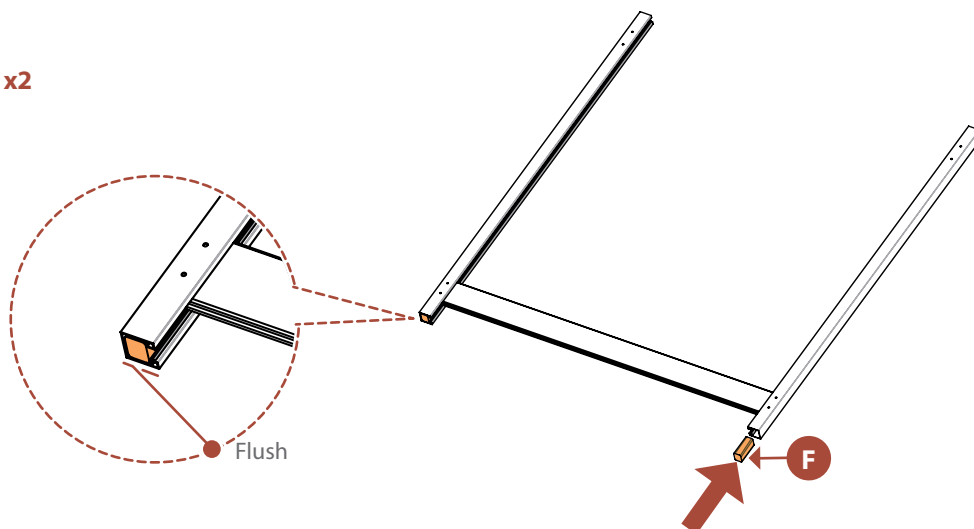

4




G x2

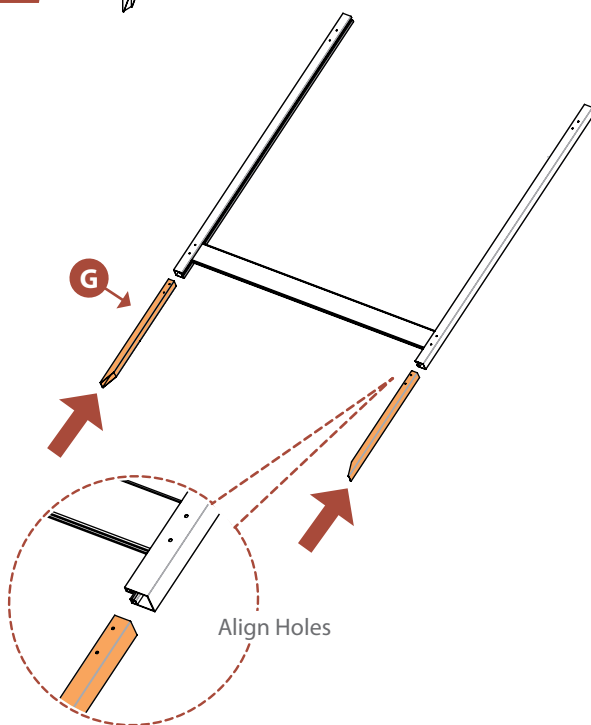



5





I x4

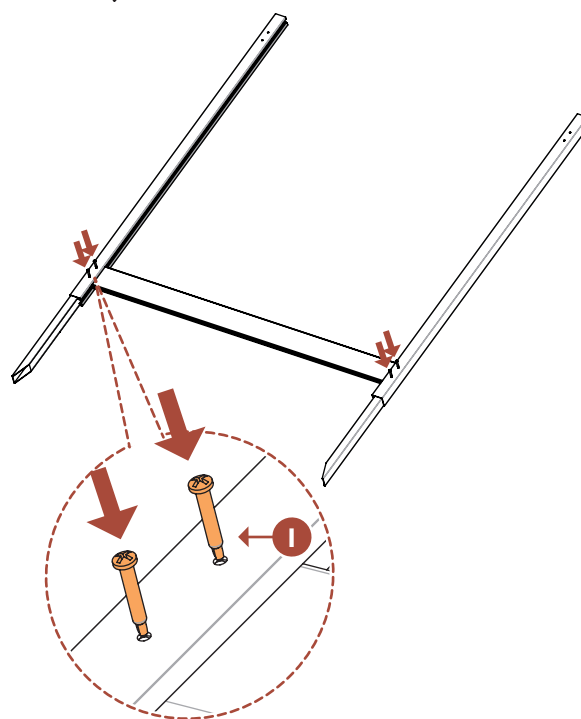

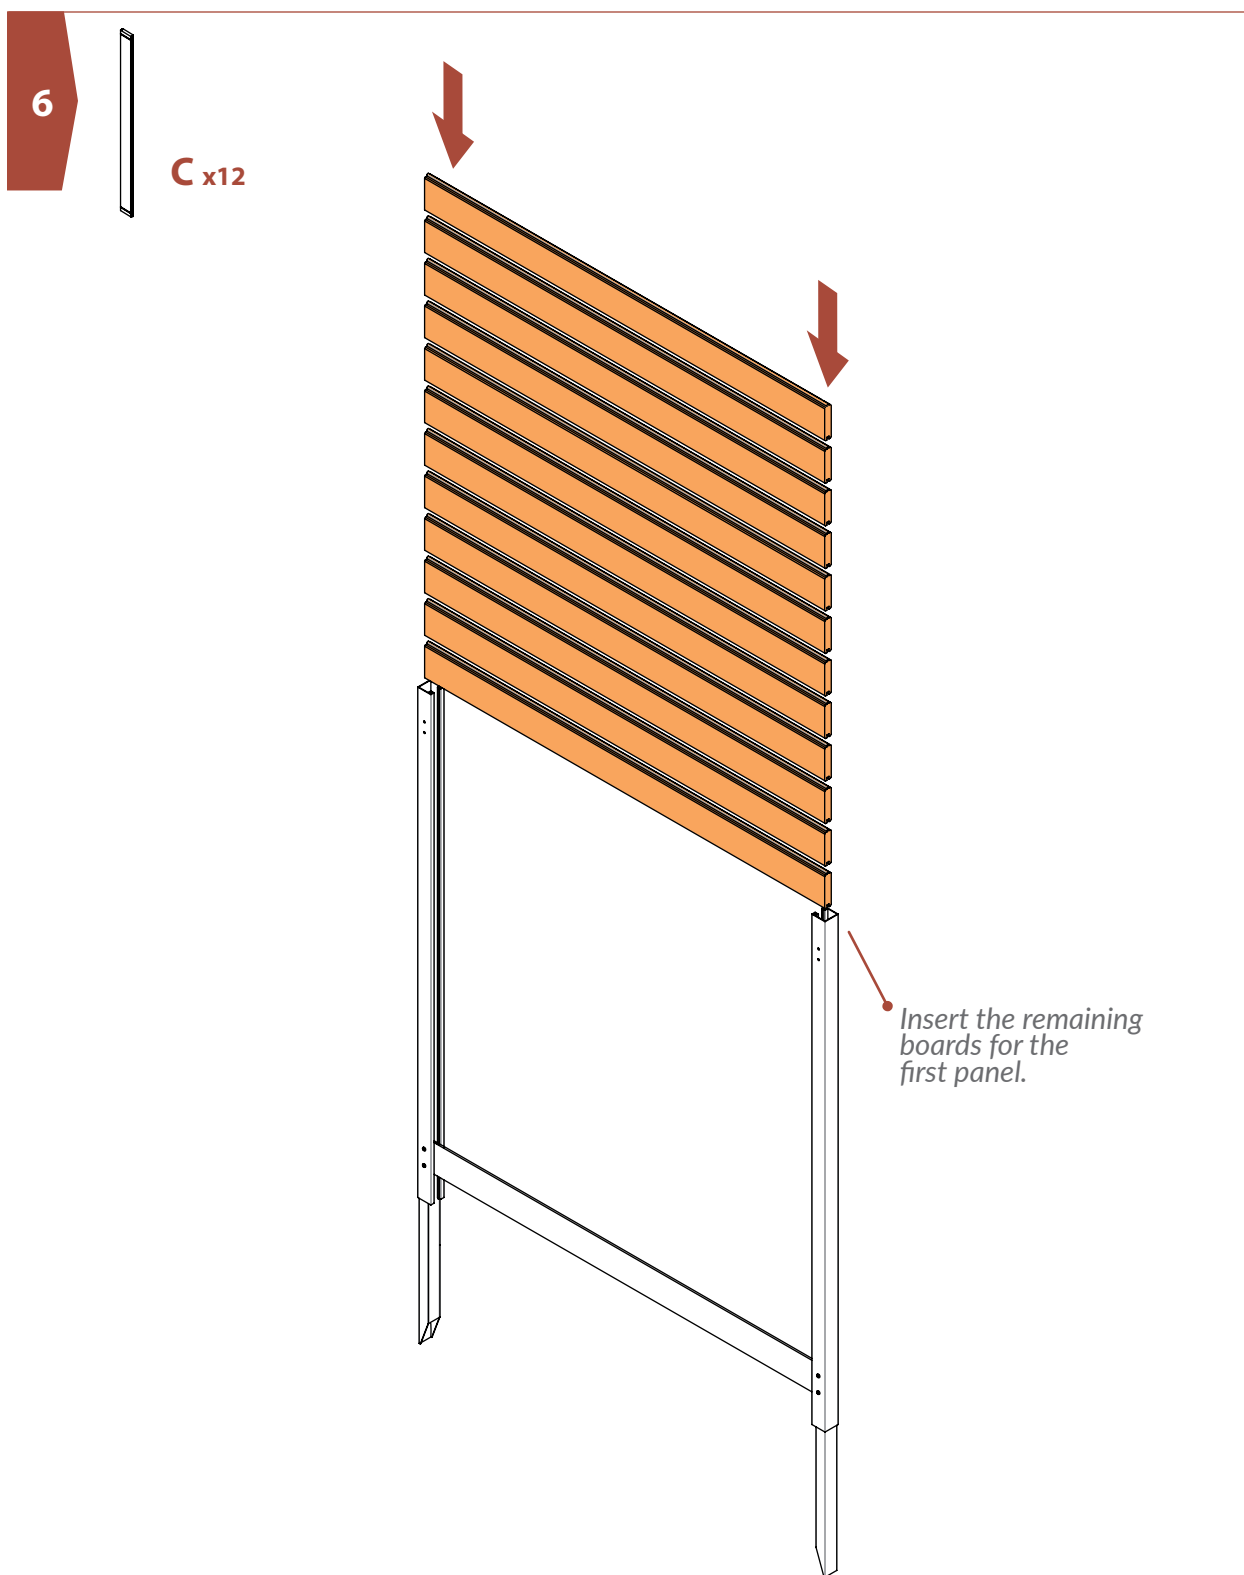

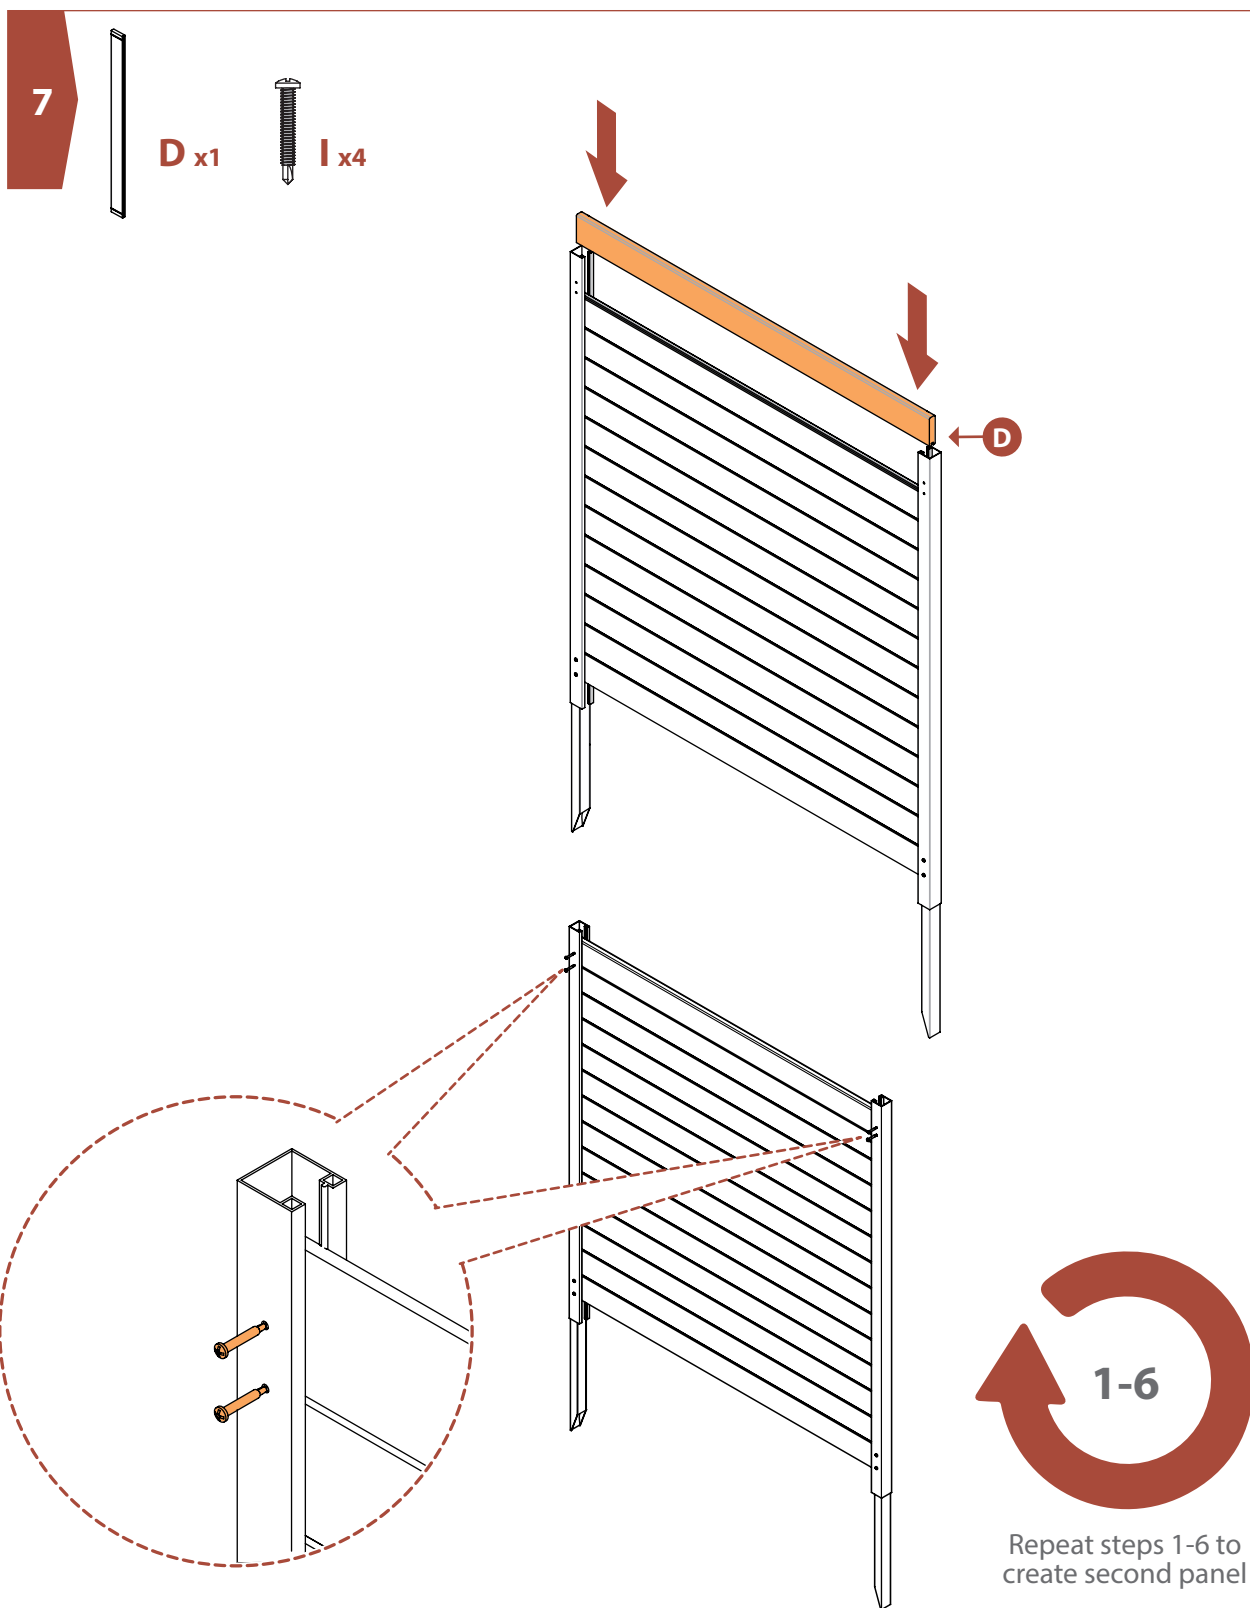


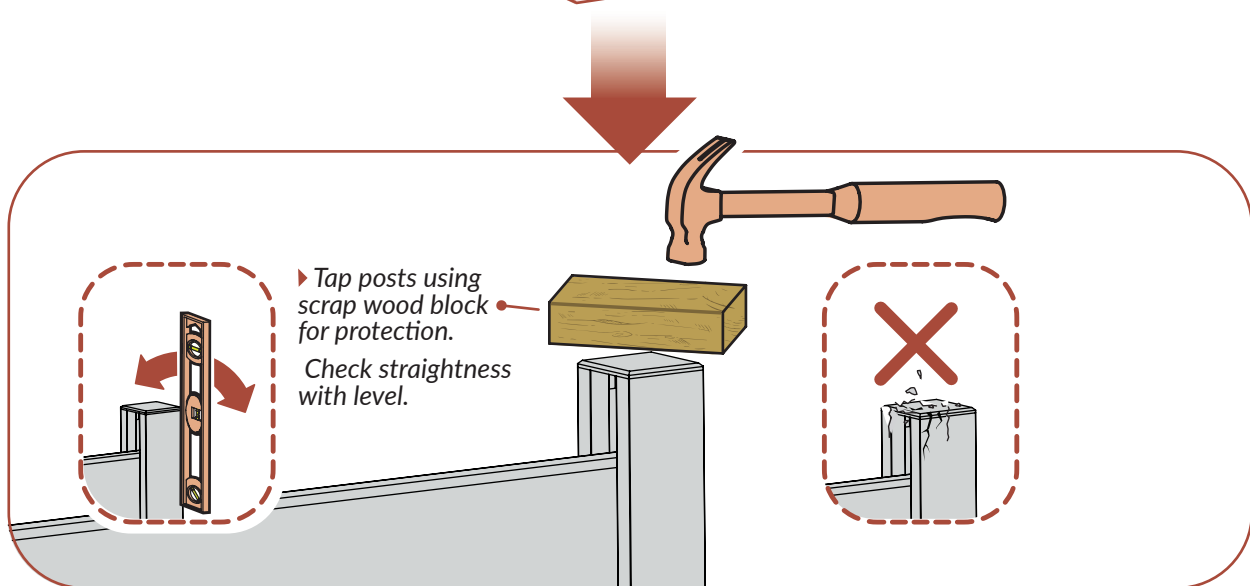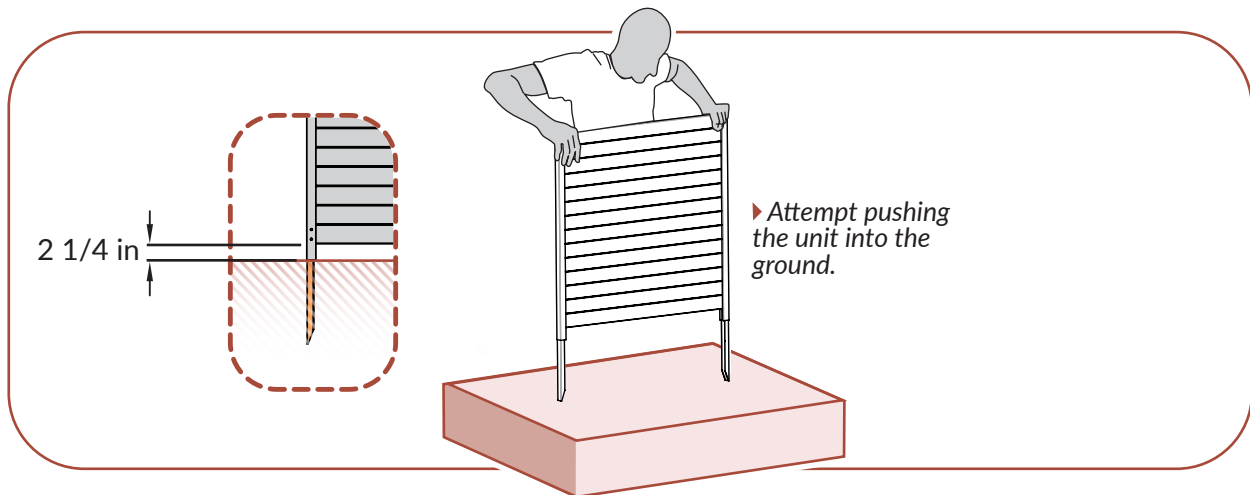



IF GROUND IS TOO HARD





OR

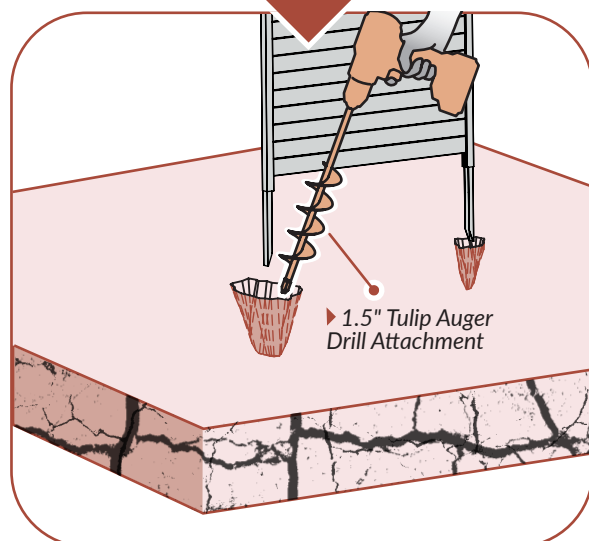


7

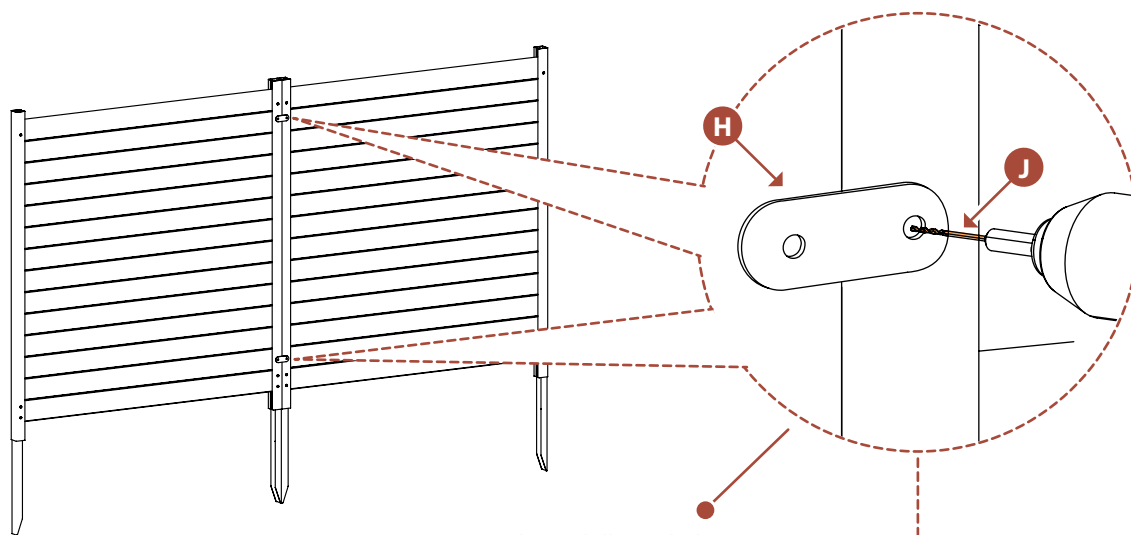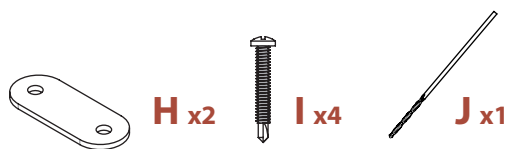


Optional: Pre-drill your holes before placing screws.

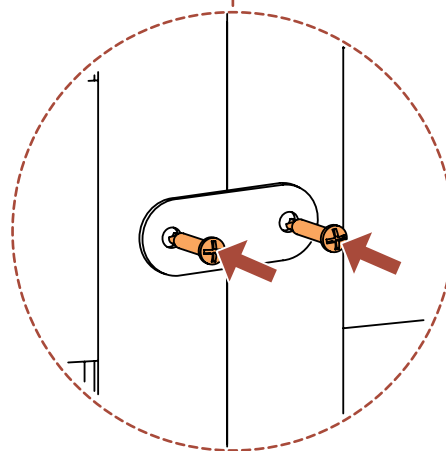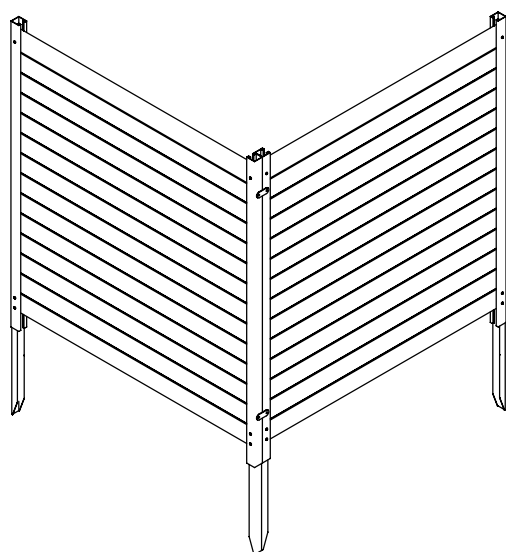

8



E x4

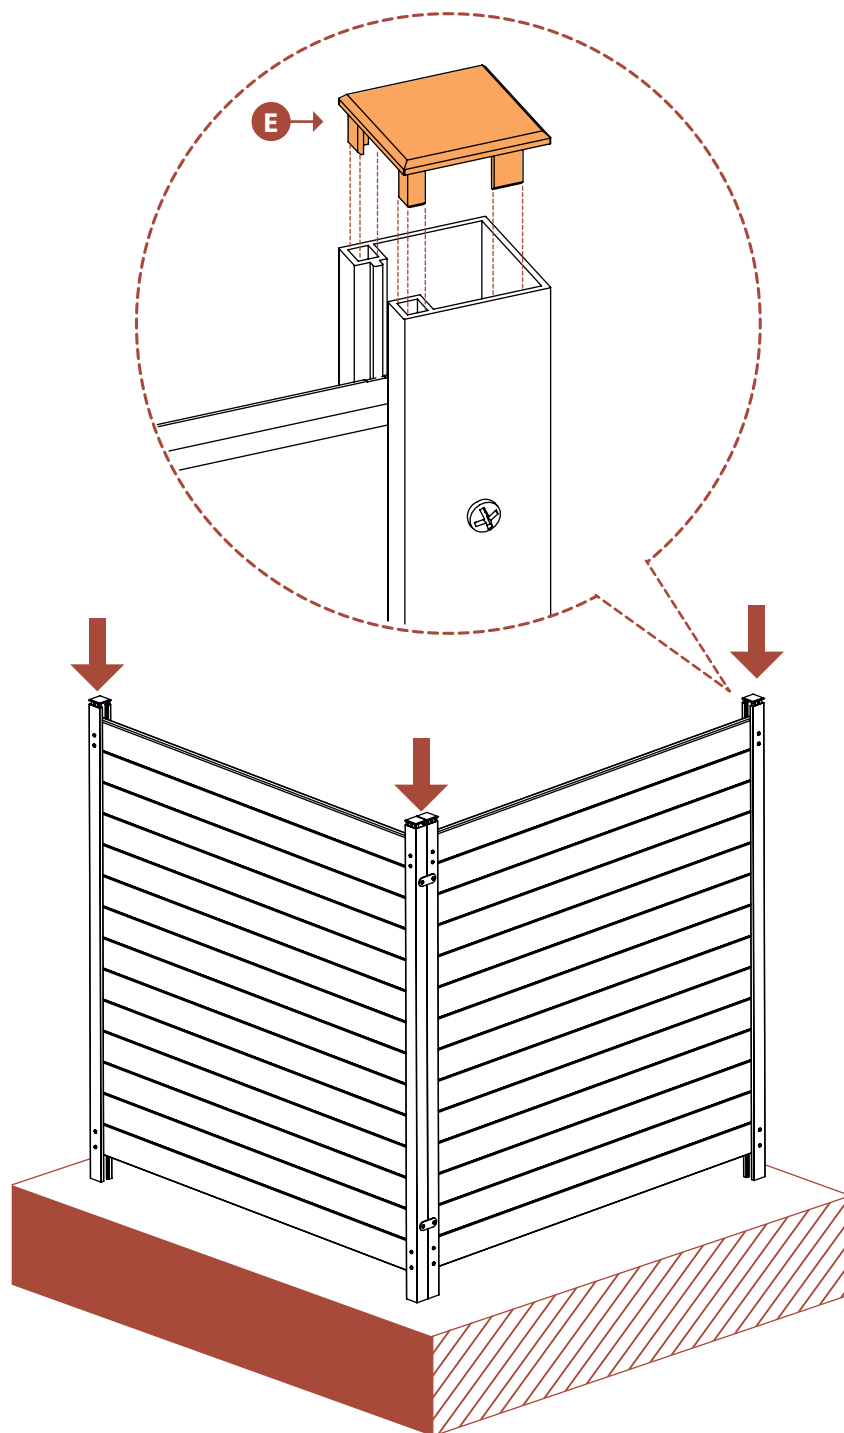



HIDE IT WITH STYLE

www.encloscreens.com

support@encloscreens.com



704-892-5222
877-234-6196



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



ASSEMBLY
INSTRUCTIONS
EC18008