


# ENCLO

HIDE IT WITH STYLE

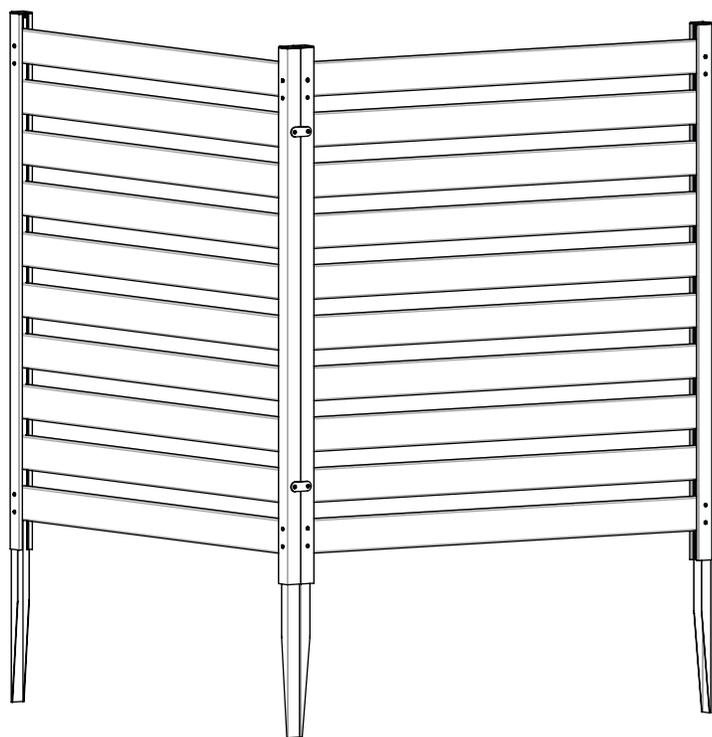

## Charleston Screen Kit 38" W x 42" H

**45 min**  
Approximate assembly  
time for 2 screens



**Scan the QR code**  
for an assembly video



**ASSEMBLY**  
INSTRUCTIONS  
EC18009

[www.encloscreens.com](http://www.encloscreens.com)

VER. 121525

## GENERAL INFORMATION

### MISSING OR DAMAGED PARTS?



➤ **Visit Our Website**  
so we can help you right away!  
**parts.nychbrands.com**

\* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, **please have the following**

- Your product number (**EC18009**)
- Your affected part letters (**pages 4-5**)
- Your original product box

### NEED ASSEMBLY HELP?


If you are having problems with assembly or installation of this product,  
**please contact at:**

📞 **704-892-5222 / 877-234-6196**    ✉ **support@encloscreens.com**

### NEED TO RETURN?


If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

# DETAILED PRODUCT DIMENSIONS & SPECIFICATIONS

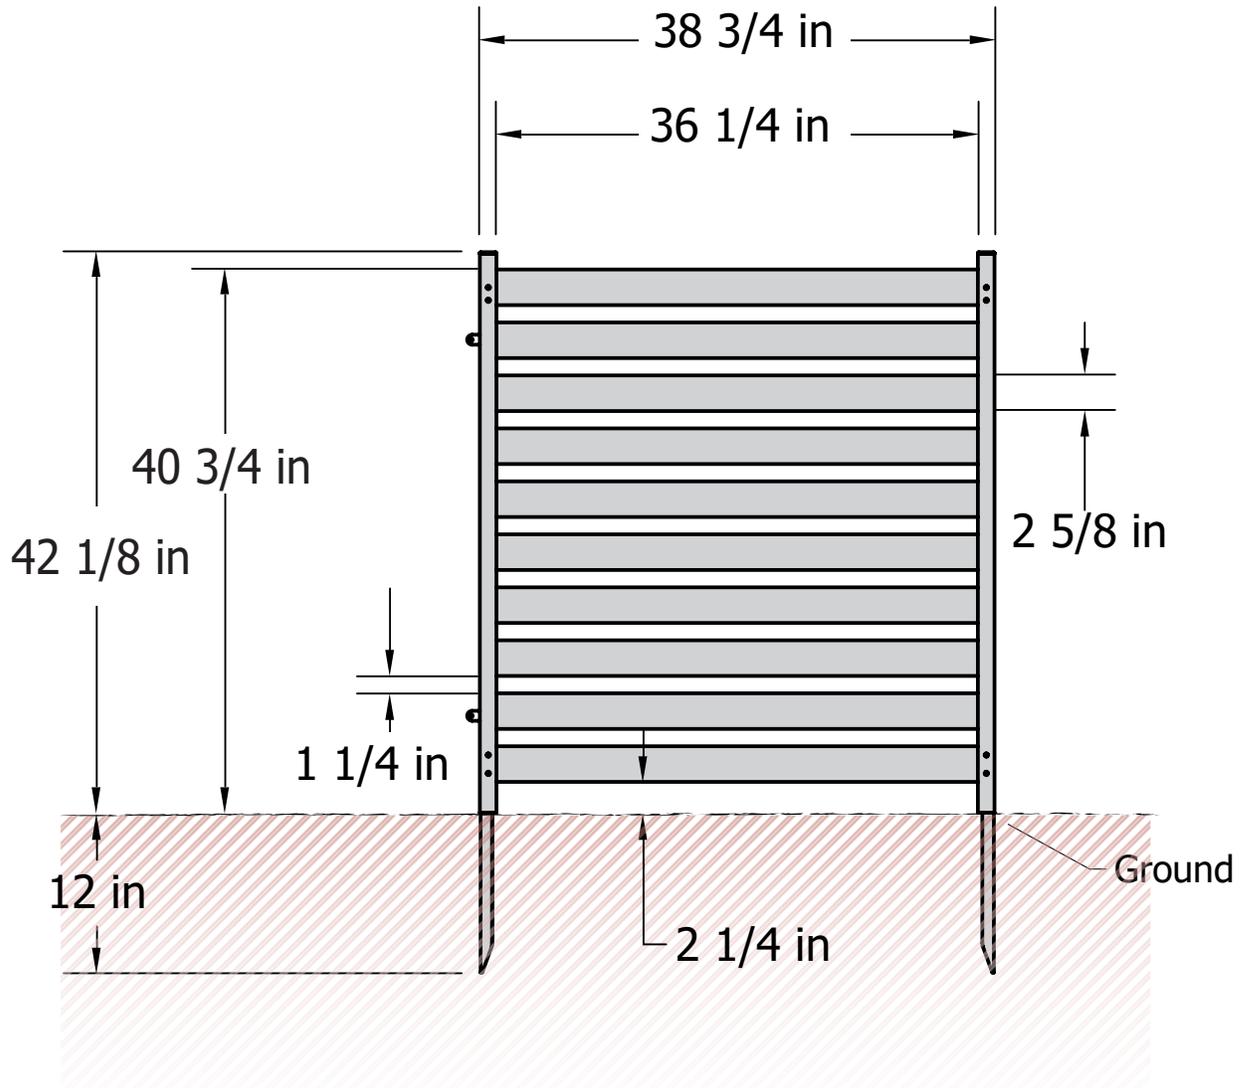


# LAY OUT MATERIALS



► Tools required for a smoother installation experience.

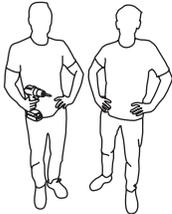

We recommend 2 people for a smoother assembly.

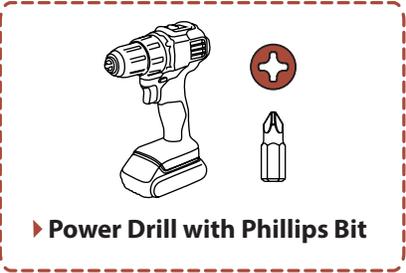


► Power Drill with Phillips Bit
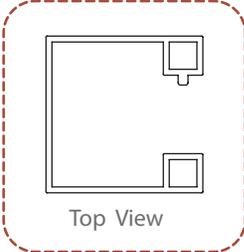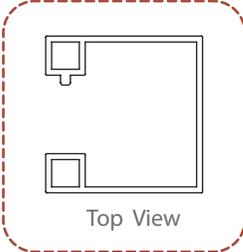
| LARGE PARTS   |   |
|---|---|
| <p><b>A</b></p>  <p>Top View</p> <p><b>Left Post (2)</b><br/>1 1/4" x 1 1/4" x 42"</p>  | <p><b>B</b></p>  <p>Top View</p> <p><b>Right Post (2)</b><br/>1 1/4" x 1 1/4" x 42"</p>  |
| <p><b>C</b></p>  <p><b>Board (20)</b><br/>5/8" x 2 5/8" x 38"</p>  | <p><b>D</b></p>  <p><b>Post Anchor (4)</b><br/>7/8" x 1 1/8" x 17"</p>   |

# LAY OUT MATERIALS


## SMALL PARTS

E

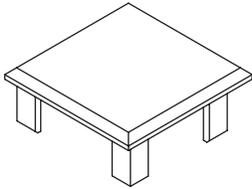


**Post Cap (4)**

F

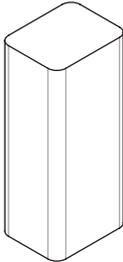


**Wood Assembly Spacer (2)**

G

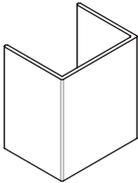


**Spacer (36)**  
 $\frac{7}{8}'' \times 1\frac{1}{2}'' \times 1\frac{1}{2}''$

H

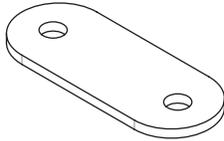


**Joiner Clip (2)**  
 $\frac{1}{13}'' \times \frac{3}{4}'' \times 1\frac{3}{4}''$

I



**1" Stainless Steel Screw (20)**

J

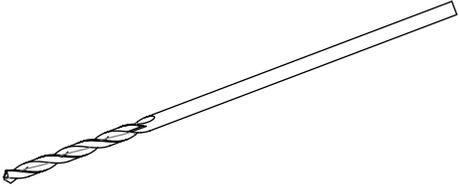

**1/8" Steel Drill Bit (1)**

1






A x1



B x1

**NOTE:** The end of each post marked with a sticker is the top.

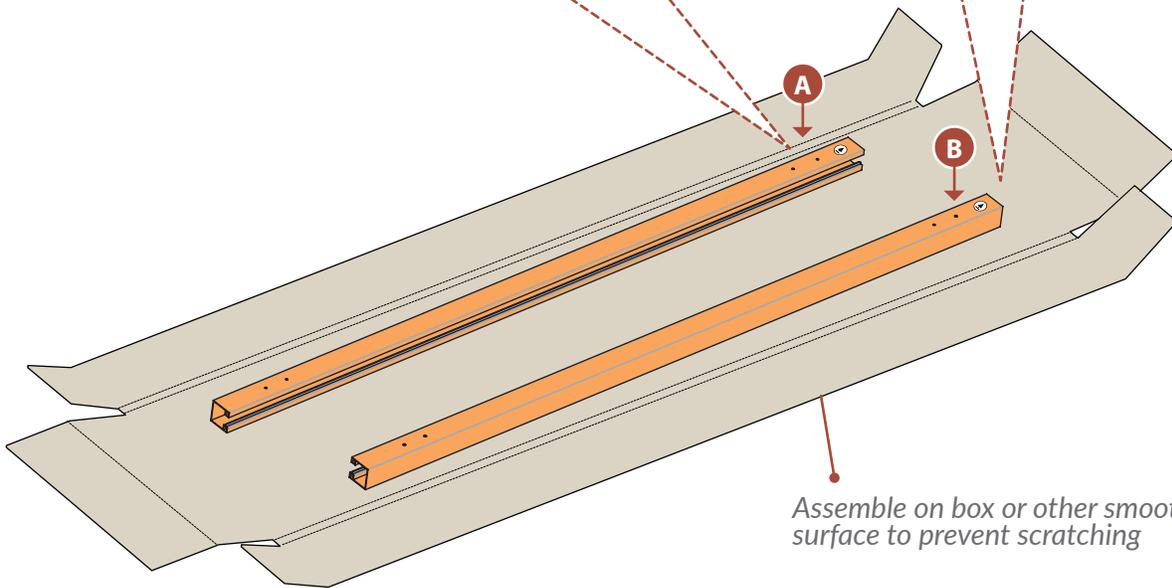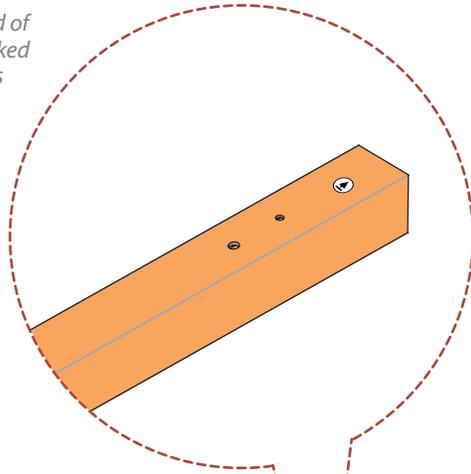
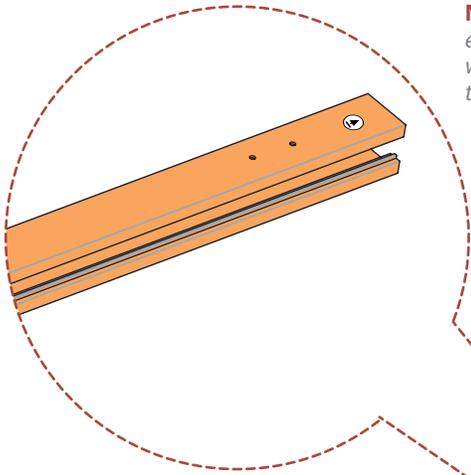





Assemble on box or other smooth surface to prevent scratching

2



C x1

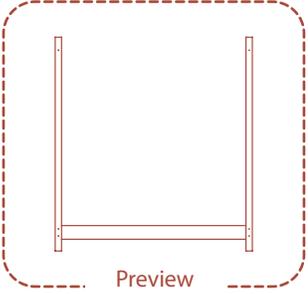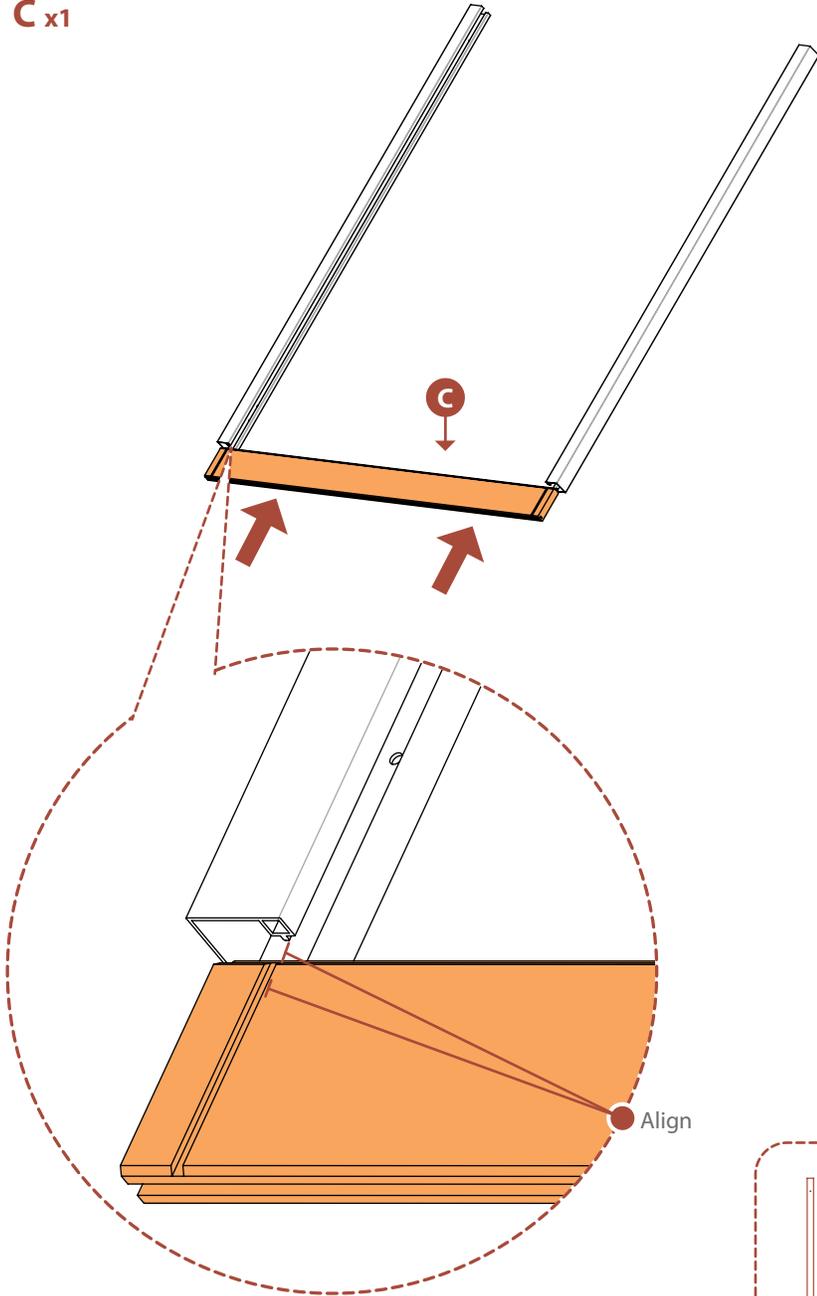

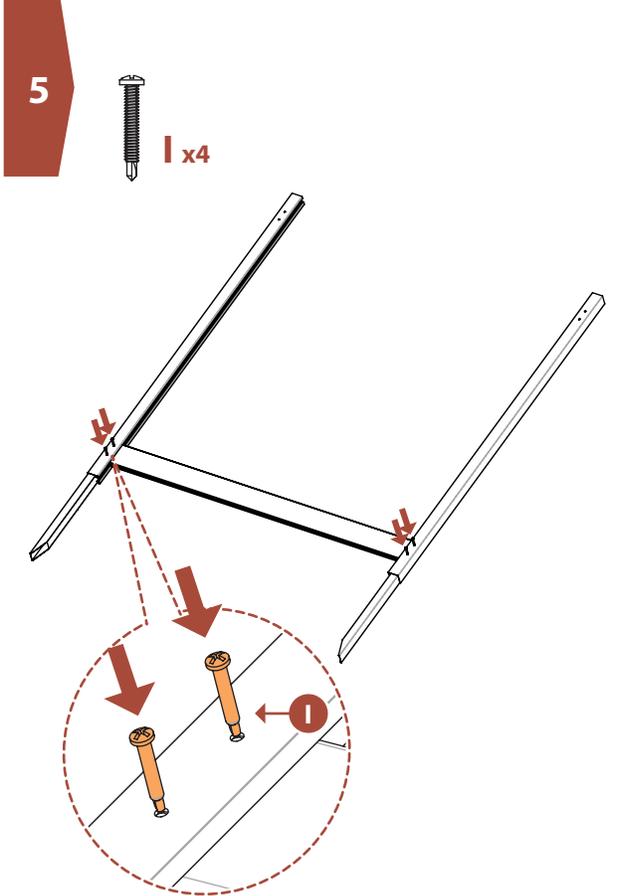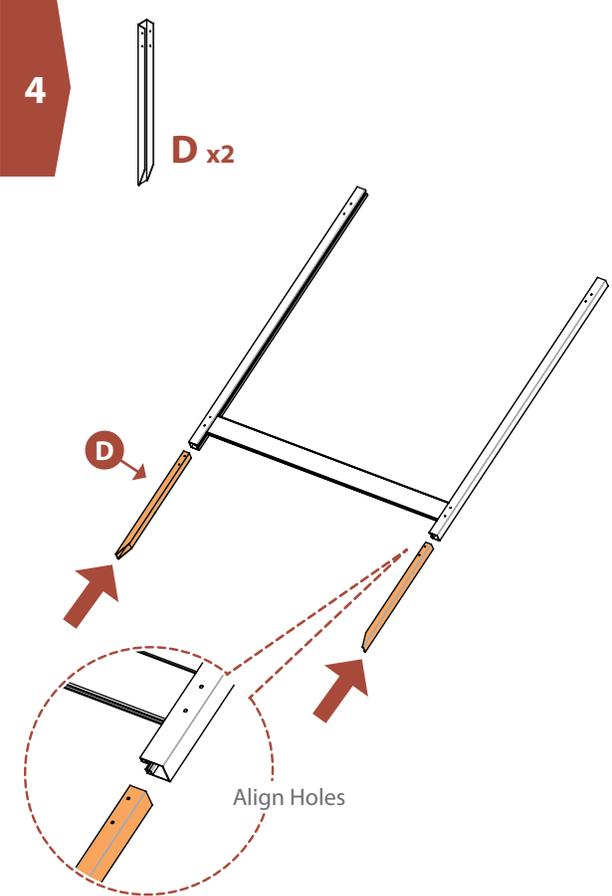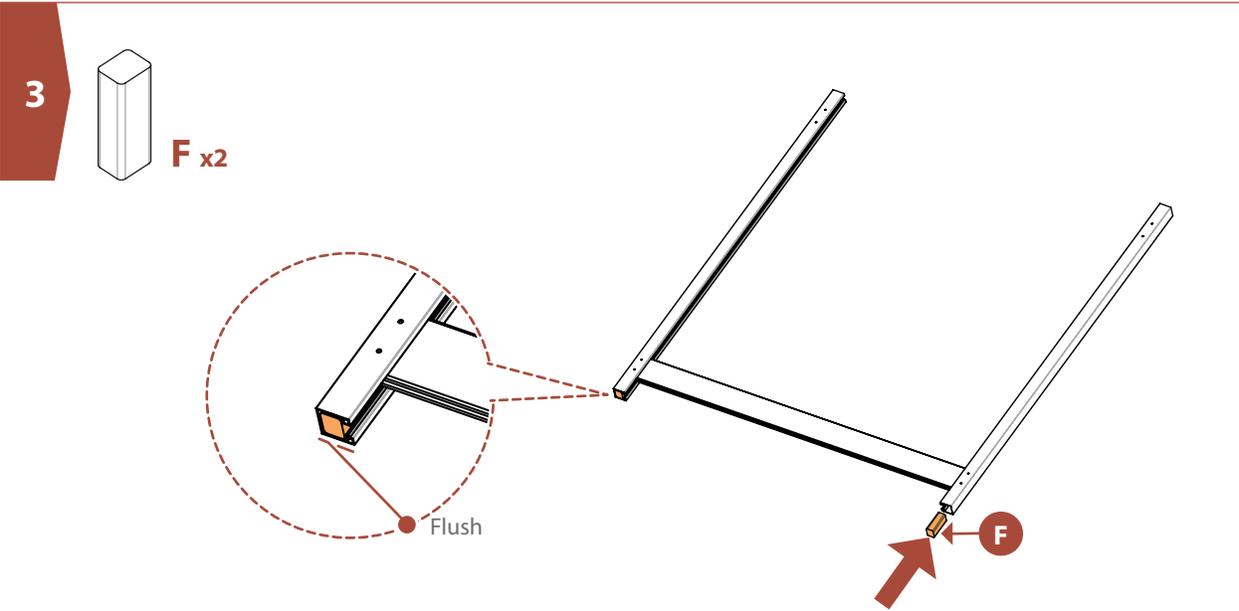



6




C x9





G x18

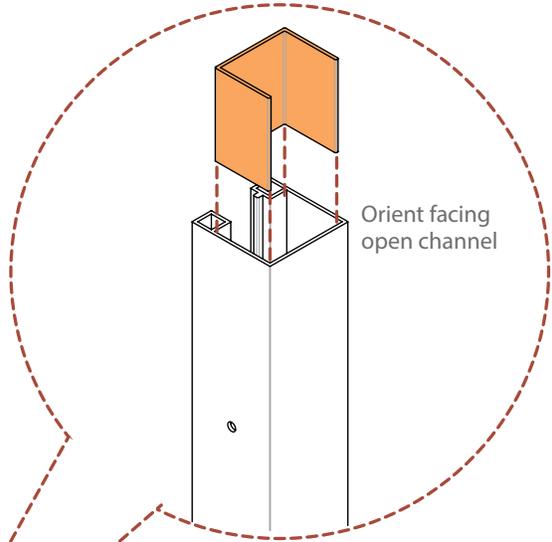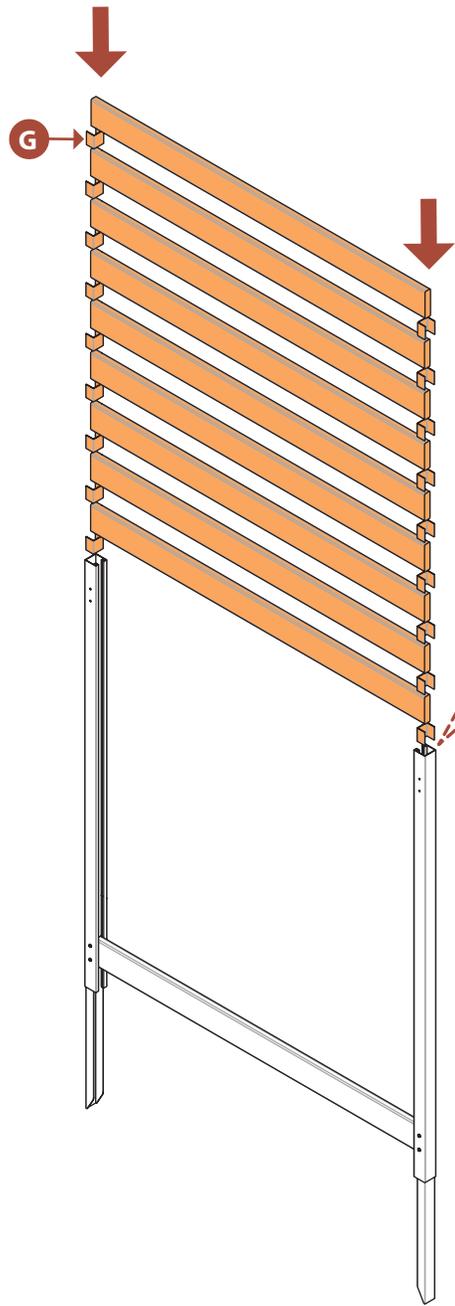


7

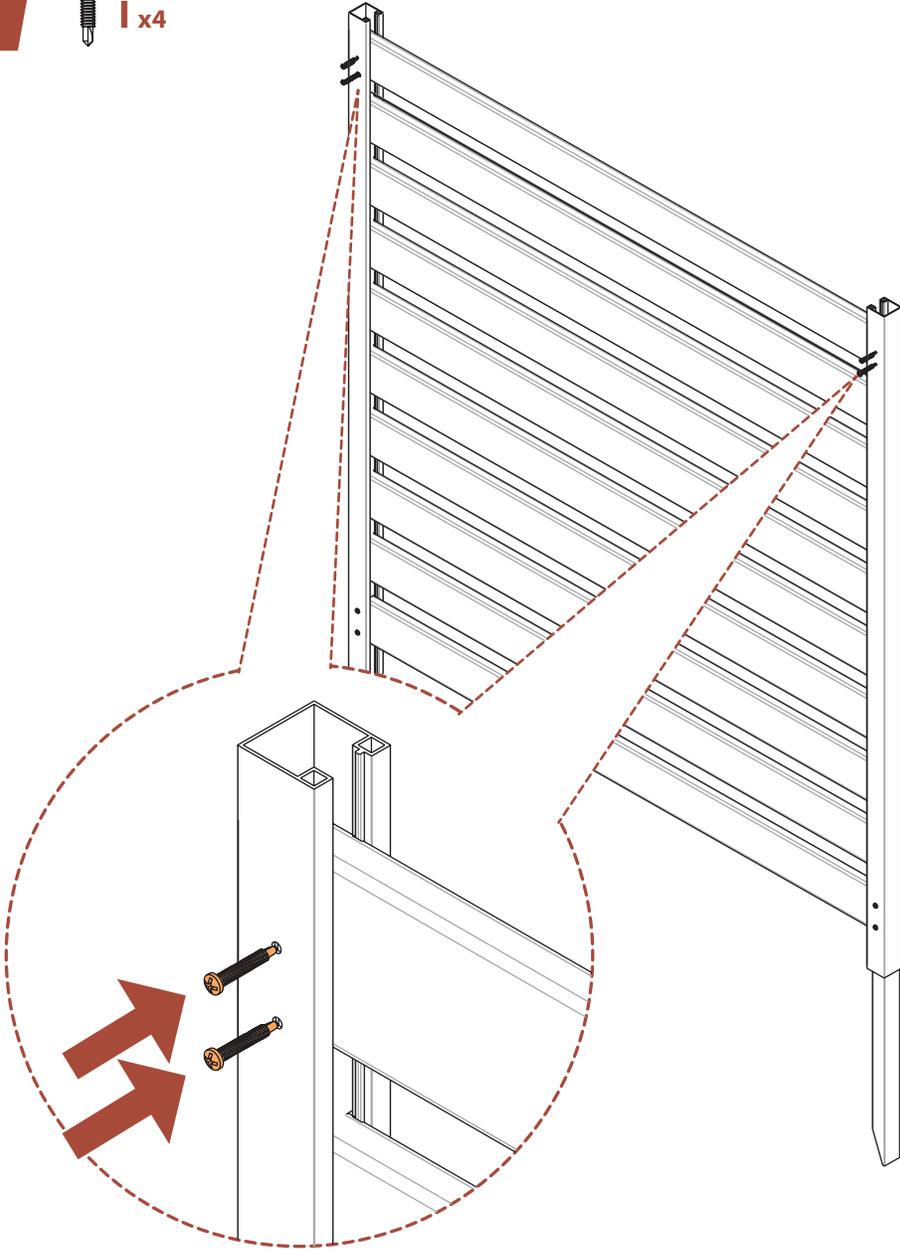


Repeat steps 1-6 to create second panel

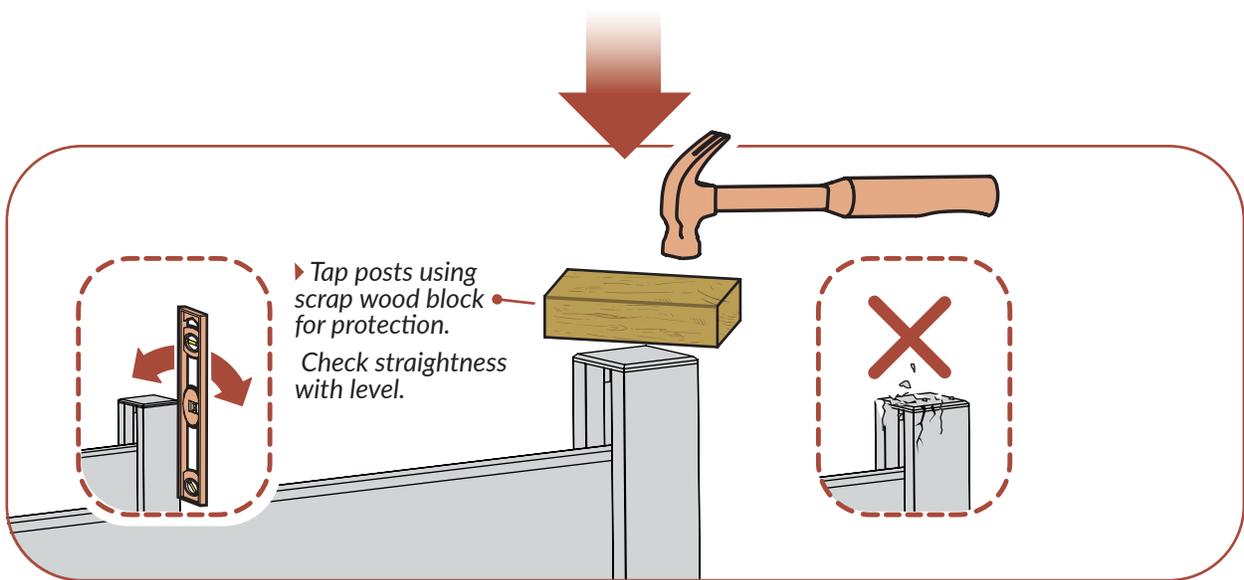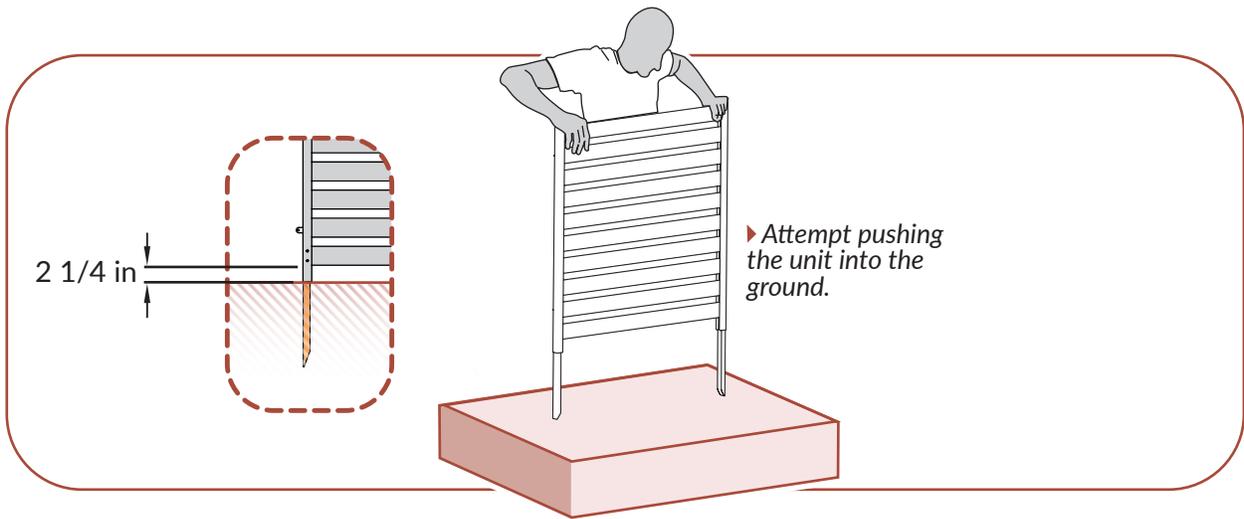



**IF GROUND IS TOO HARD**

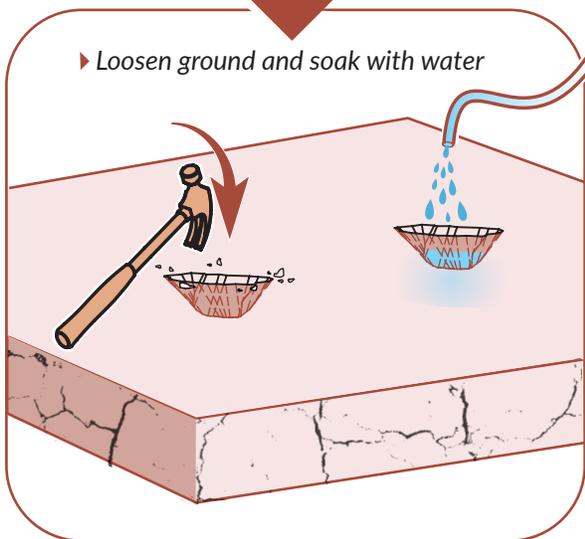



OR

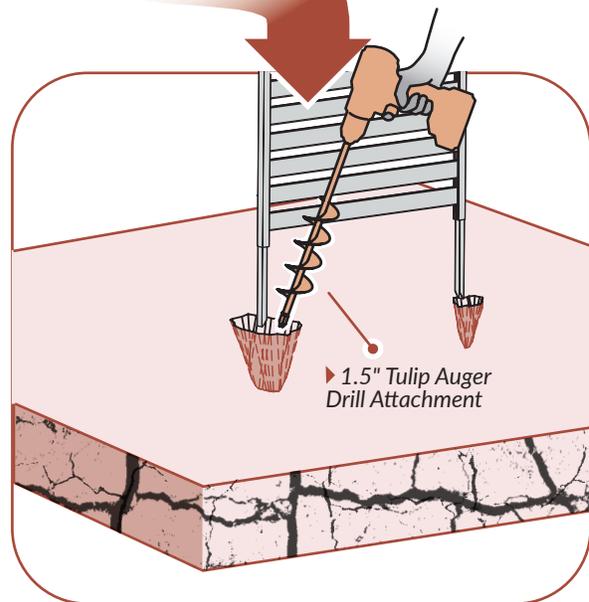


7

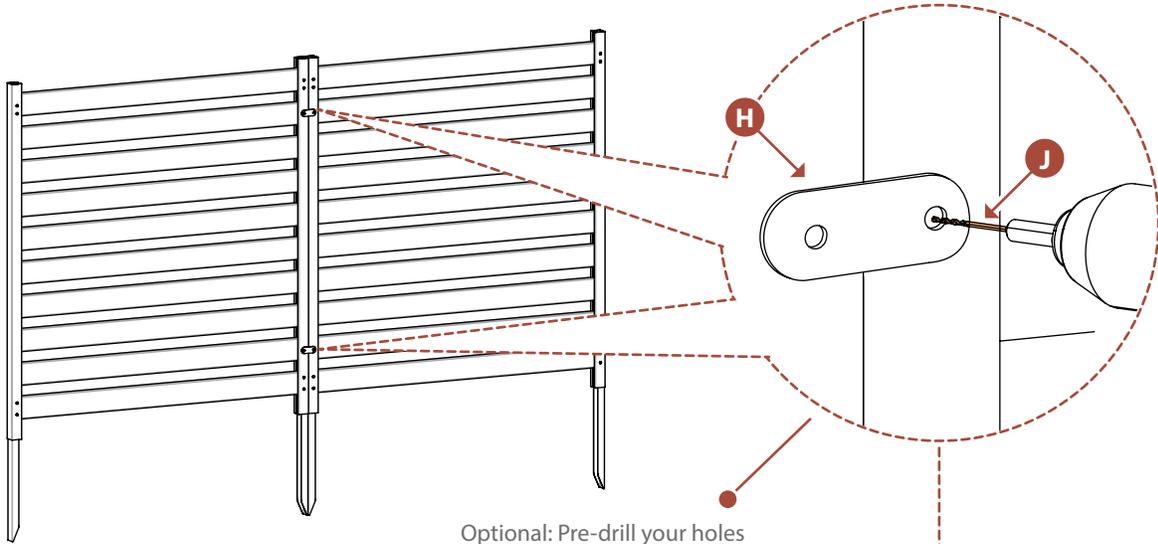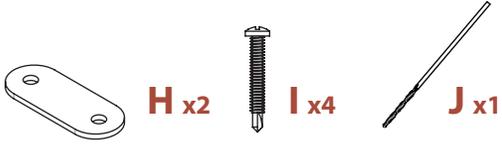


Optional: Pre-drill your holes before placing screws.

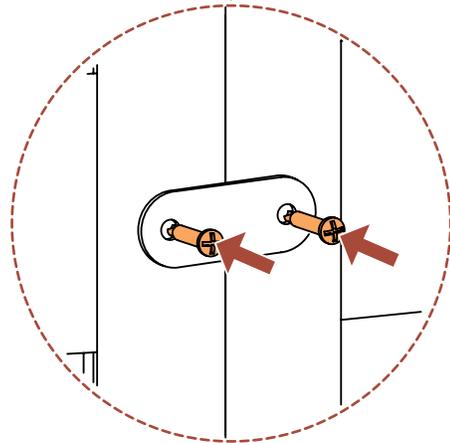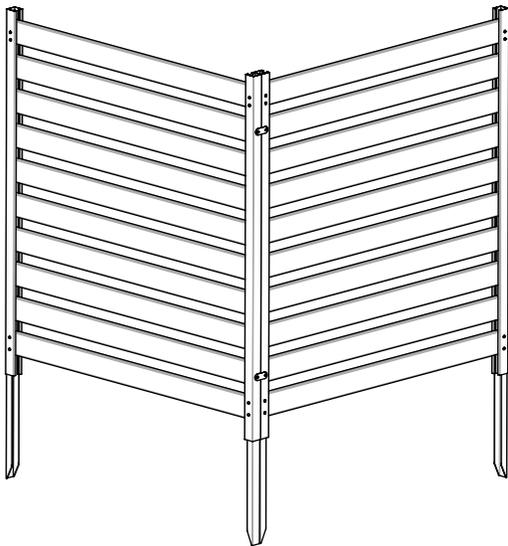

8



E x4

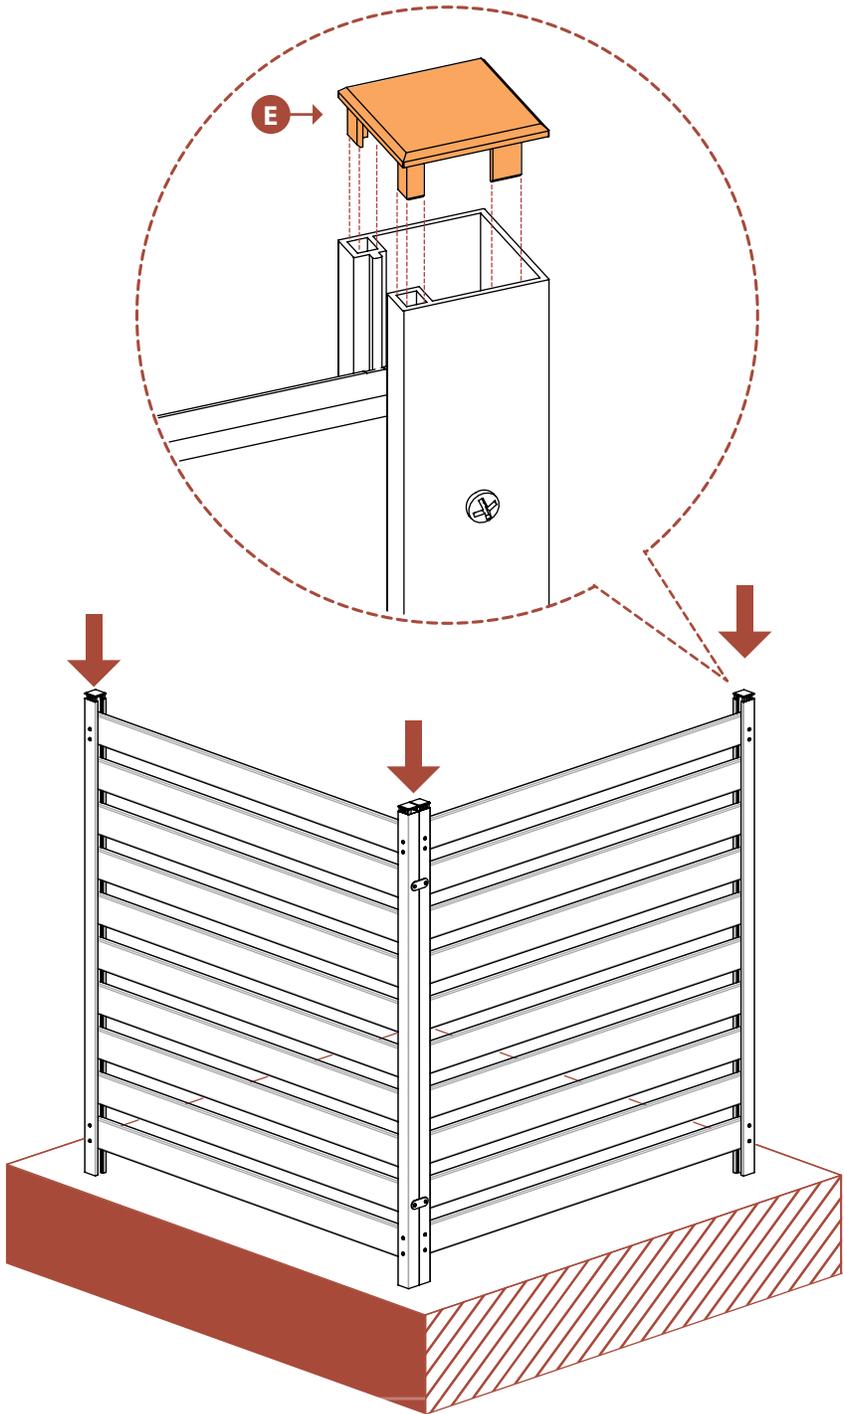

# ENCLO

## HIDE IT WITH STYLE

[www.encloscreens.com](http://www.encloscreens.com)

support@encloscreens.com



**704-892-5222**  
**877-234-6196**



*6935 Reames Rd. Ste. K.*  
*Charlotte, NC 28216*



**ASSEMBLY**  
**INSTRUCTIONS**  
EC18009

VER. 121525