




HIDE IT WITH STYLE

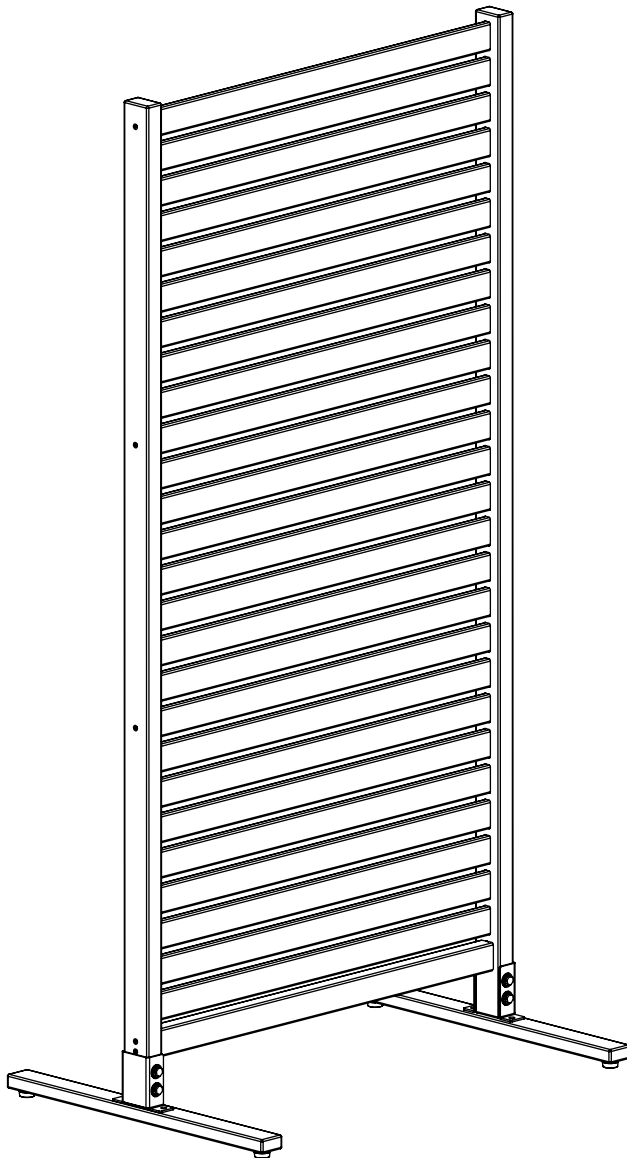

Tiaga Wood Freestanding Screen

73 1/2"H X 36"W

30 min
Screen Assembly
Approximate time

60 min
Surface Mounting
Approximate time



Assembly Video
Scan the QR Code below



ASSEMBLY
INSTRUCTIONS
AZ18030

www.encloscreens.com

VER. 112025

GENERAL INFORMATION



IMPORTANT

- Check the inside of the larger pieces in your box for other materials packed inside.
- We recommend an area approximately 5'x 8' for unobstructed assembling.
- You should not need to use excessive force when assembling components.
- No free replacement parts will be provided for wind related damage.

MISSING OR DAMAGED PARTS?

(Only available in the continental US and Canada)



VISIT OUR WEBSITE FIRST, SO WE CAN HELP YOU RIGHT AWAY!

Although great care has been taken to ensure proper packaging and handling of this product, occasionally problems occur. If you discover any missing, damaged, or defective parts, please visit our website to order replacement parts. If you experience any further trouble with your product, please contact our customer service department.

 parts.nychbrands.com (Continental US and Canada only)

 support@encloscreens.com

 **704-892-5222 / 877-234-6196**

Customer service agents are available to take calls weekdays from 9am-5pm EST. If you call outside of business hours, please leave a voicemail.

To help you quickly and accurately, please have reference item number **EC18030** and the specific part name which can be found on page 5. It is helpful if you can provide the batch lot which is a stamped number on the end of the box.


NEED ASSEMBLY HELP?

- If you are having problems with the assembly or installation of this product, we are happy to assist you with the process, **so please give us a call at 704-892-5222 / 877-234-6169**

NEED TO RETURN?

- If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**










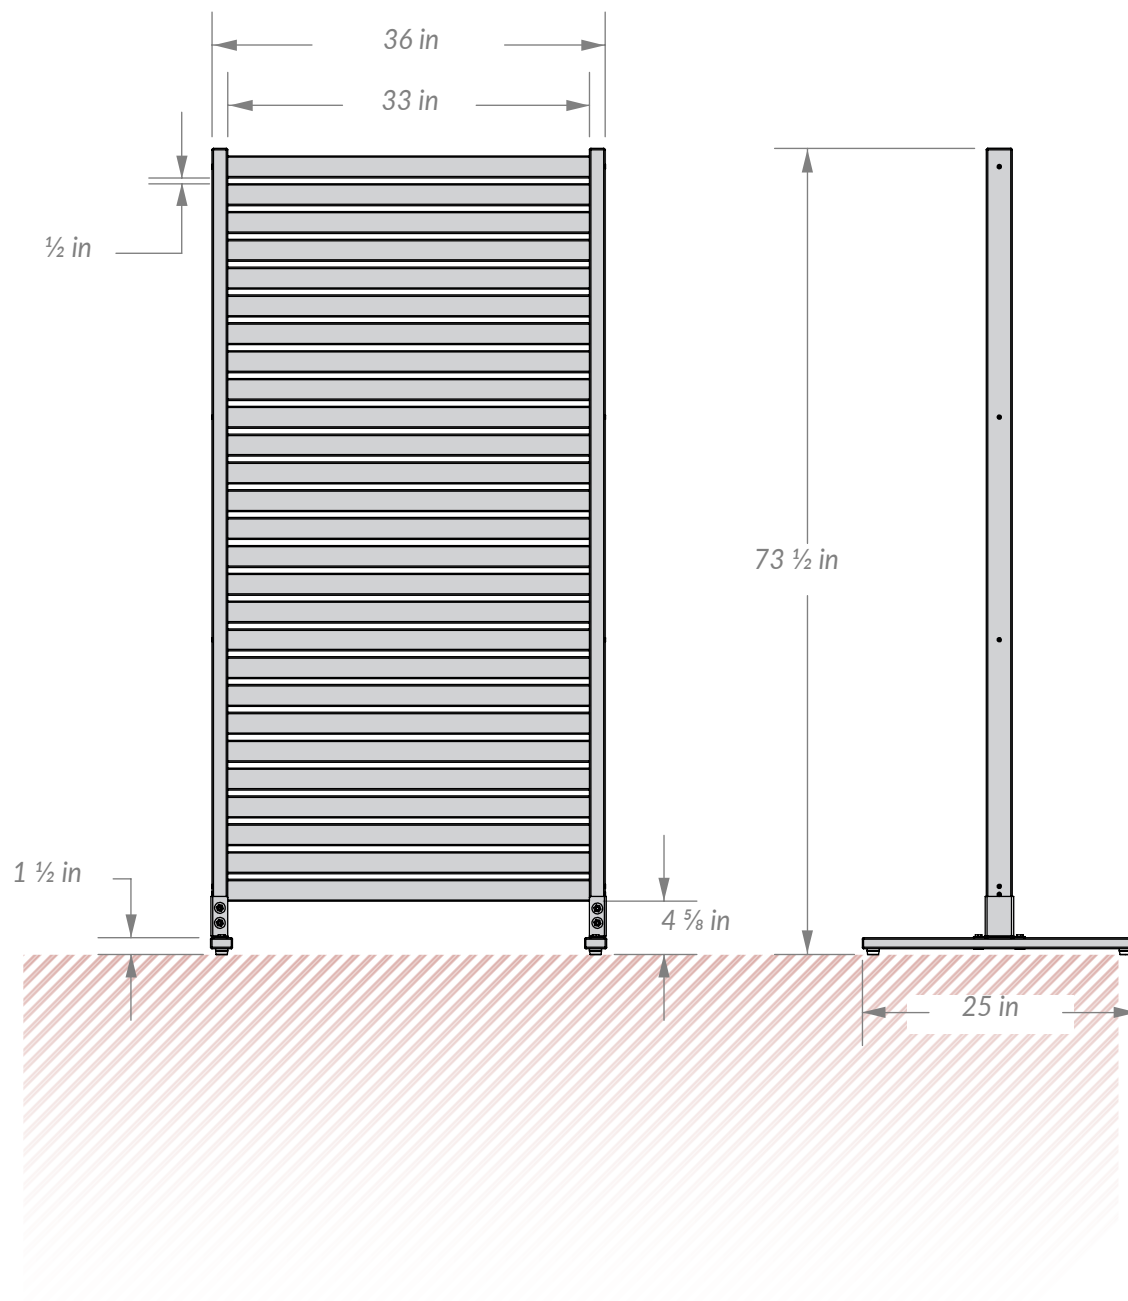


DETAILED **PRODUCT DIMENSIONS & SPECIFICATIONS**



! Tipping may occur if left freestanding in areas with wind exposure













LAY OUT MATERIALS

BOX CONTENTS

A Post (2) $1\frac{1}{2}" \times 2\frac{3}{8}" \times 72"$ 		
B Slat (25) $\frac{5}{8}" \times 2" \times 34\frac{7}{8}"$ 	D Feet (2) $1" \times 2" \times 25"$ 	
C Rail (2) $1\frac{1}{4}" \times 2" \times 34\frac{7}{8}"$ 	E Joiner Bracket (2) 	
F  M5*40mm Wood Screw (10)	G  M6*30mm Bolt (4)	H  M6*80mm Bolt (4)
I  Nut (4)	J  Washer (12)	K  Lock Washer (8)
	L  Wrench (2)	

TOOLS AND OPTIONAL HARDWARE

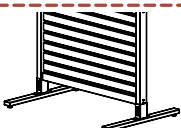(NOT INCLUDED)

 FREESTANDING		
 Power Drill	 Power Drill	 Hammer Drill
 Phillips Bit	 1/4" Wood Drill Bit	 1/4" Concrete Drill Bit
 1/4" Lag Screws 3" Length (4)	 Matching Driver Bit	 Hammer
 1/4" Concrete Wedge Anchor 2 1/4" Length (4)	 Matching Wrench	

Freestanding configuration is only recommended for environments with low wind exposure.


ASSEMBLING

1




A x1

► We recommend
2 people for
a smoother
assembly.

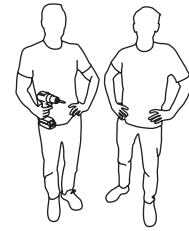

Important:


Press the rail
firmly against a wall
before inserting
pickets – this keeps
them in place while
you attach the
second rail.

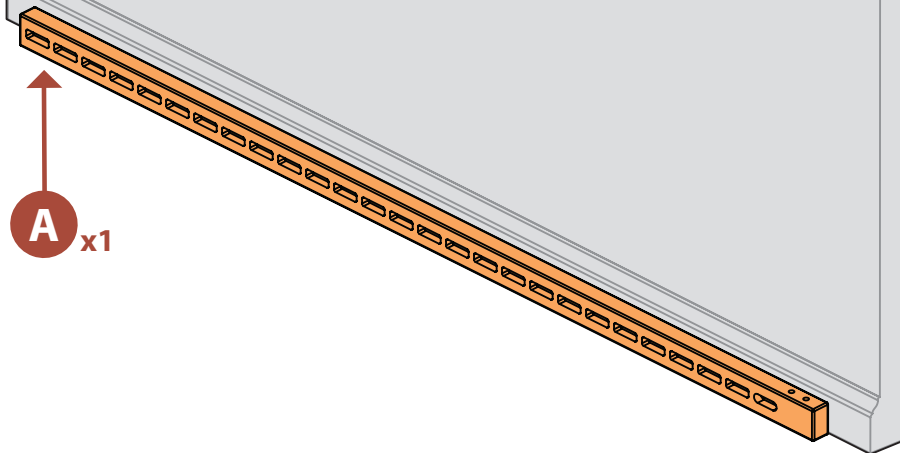


2




B x25

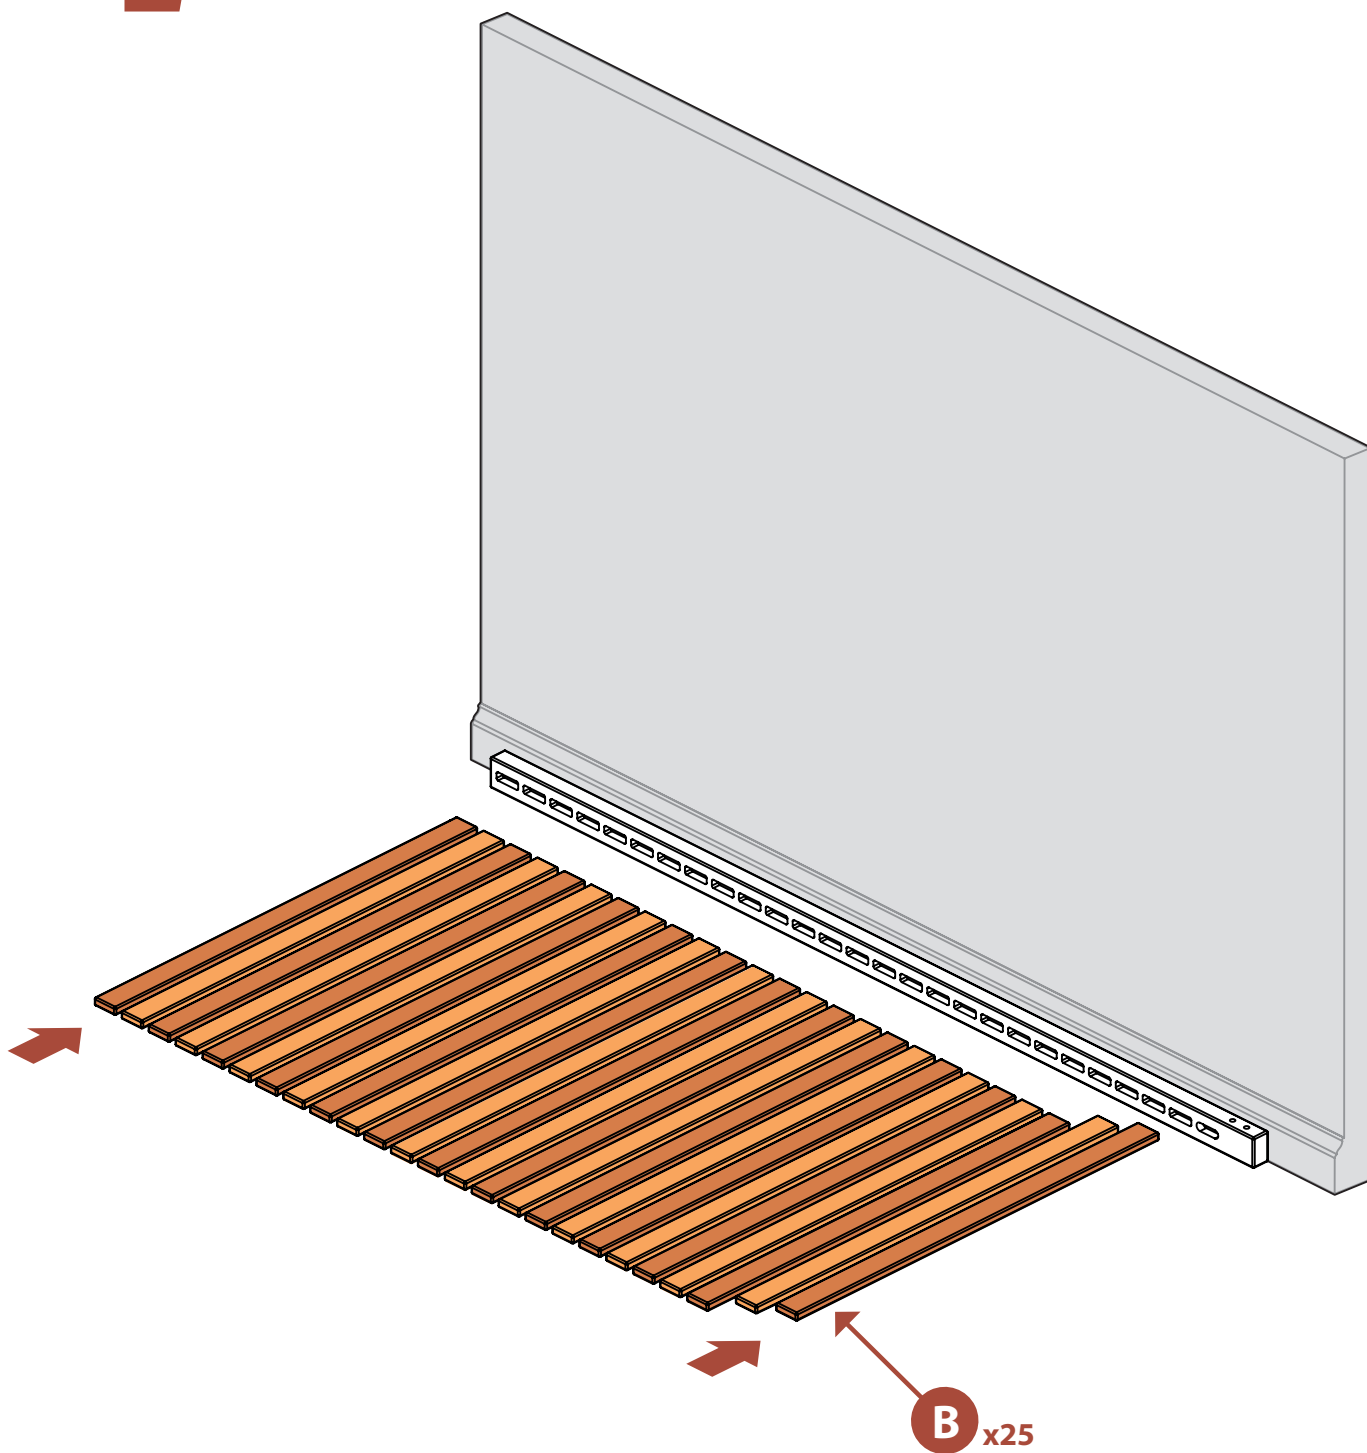

3



C x2

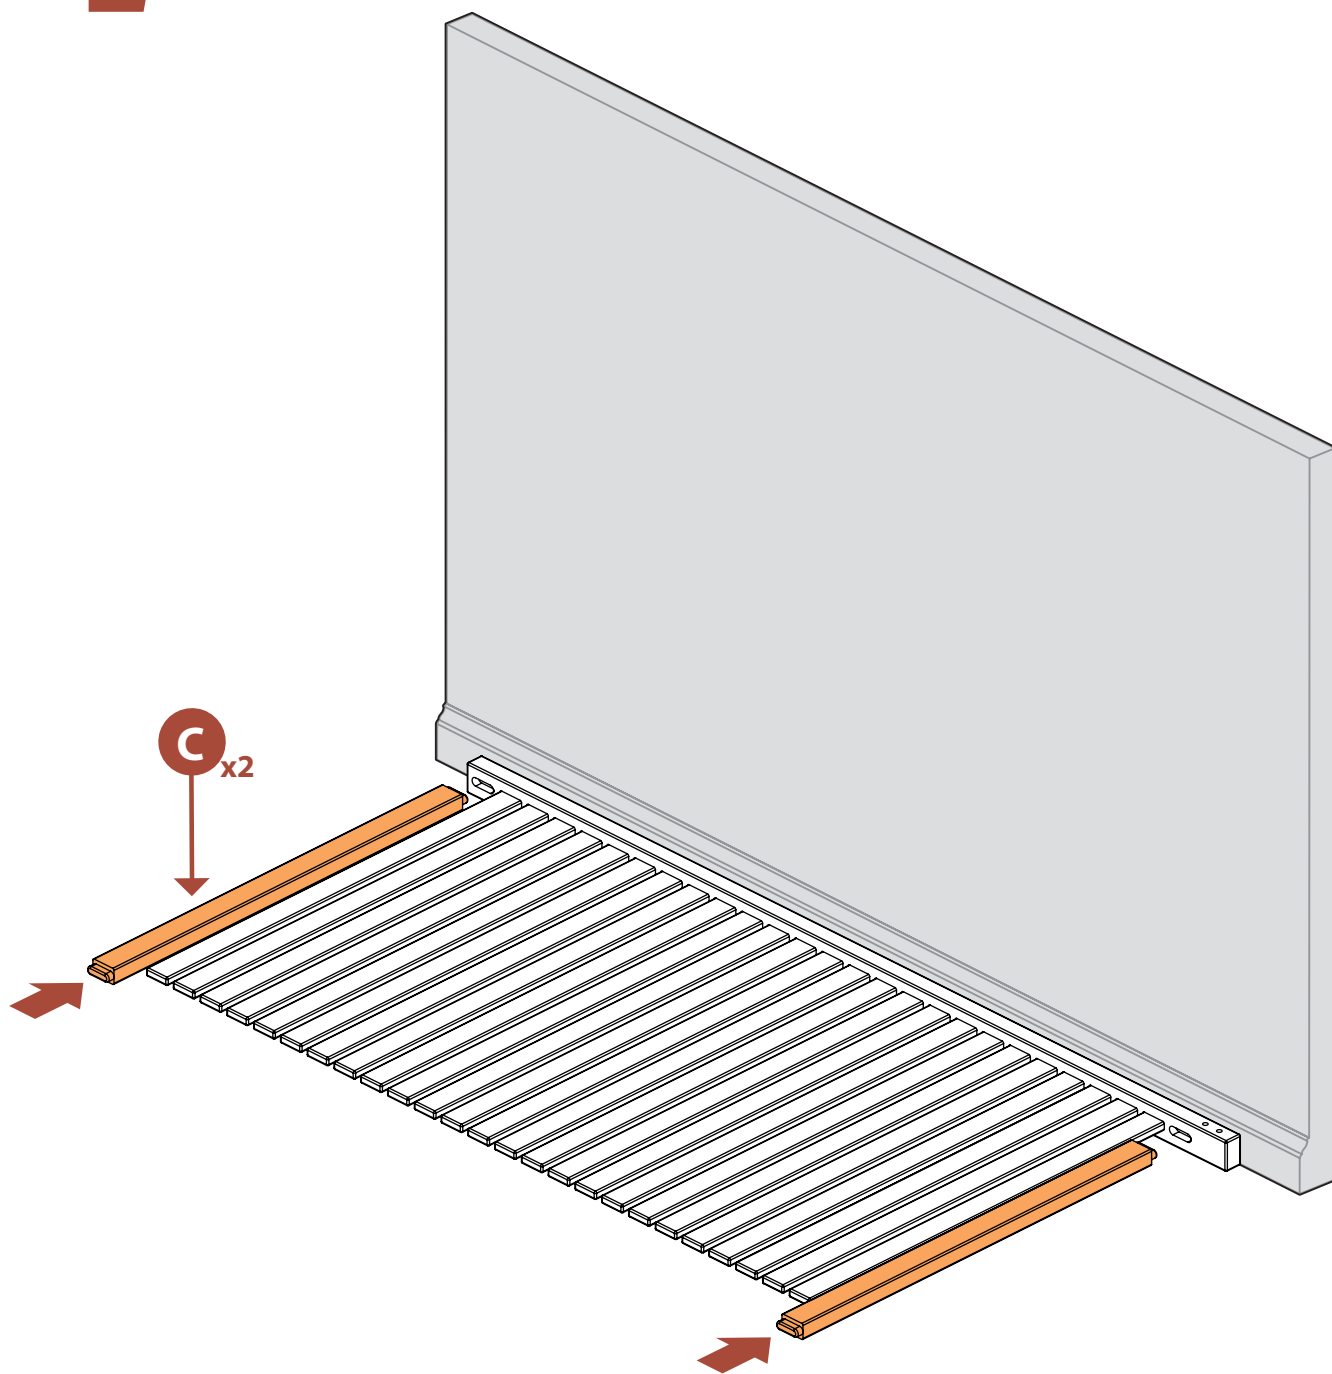

4




A x1

WATCH THIS!




5

 **F x10**

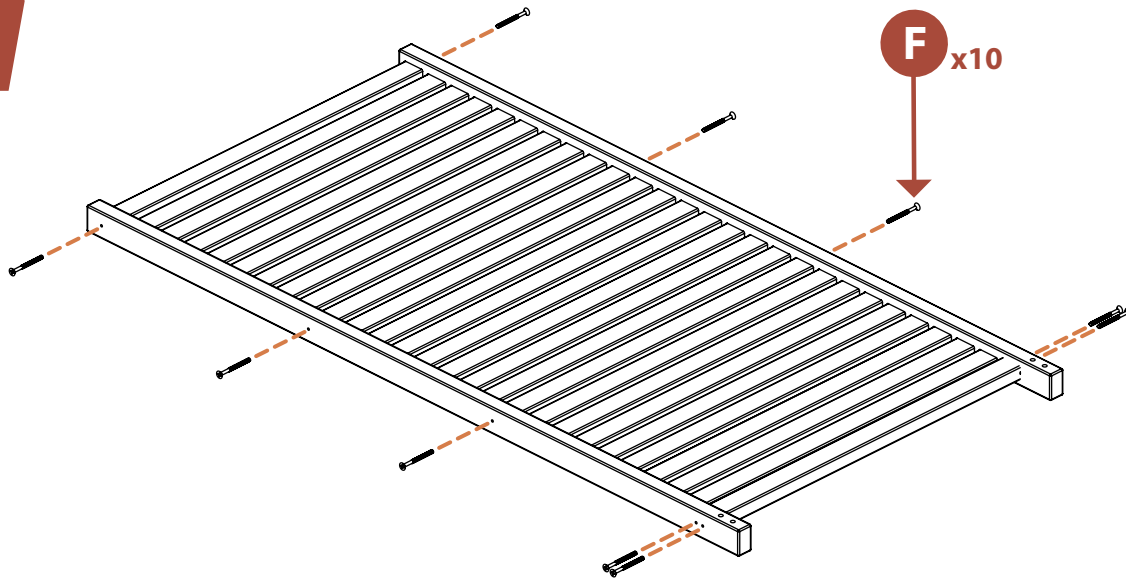

FREESTANDING

PAGE 10

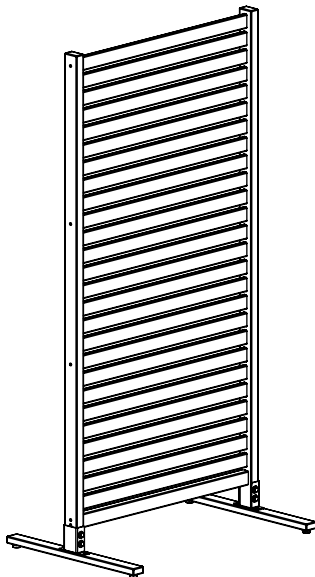


Freestanding application is only recommended for indoor usage or environments with low wind exposure.

OR

SURFACE MOUNTED (RECOMMENDED)

PAGE 11-15

- ! Surface mounting hardware not included
- ! Screen does not serve as a substitute for a security railing for the prevention of falling

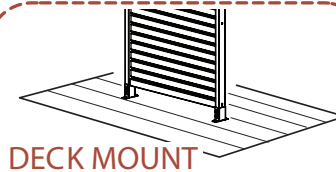

Power Drill




1/4" Wood Drill Bit



1/4" Lag Screws 3" Length (4)



Matching Driver Bit

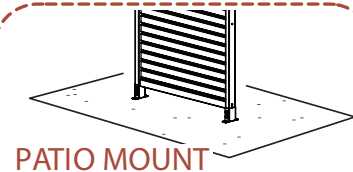


Hammer Drill




1/4" Concrete Drill Bit




Hammer



1/4" Concrete Wedge Anchor 2 1/4" Length (4)




Matching Wrench



FREESTANDING



FREESTANDING

1

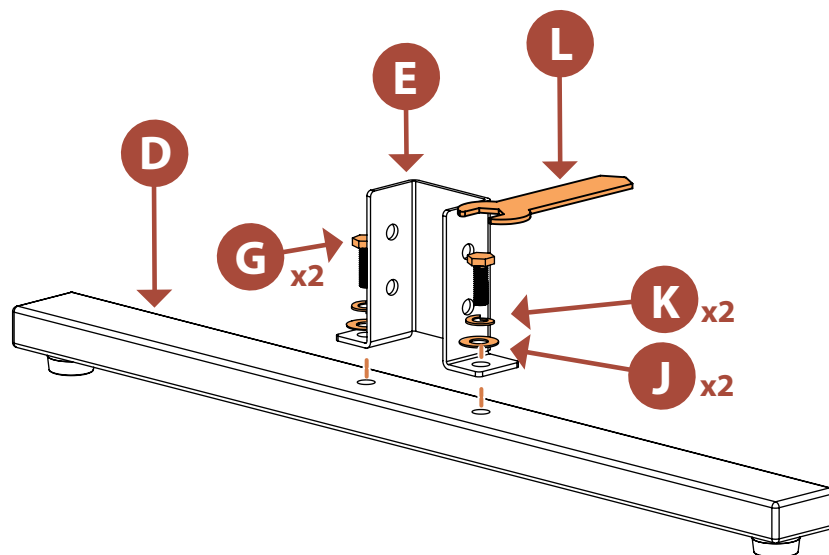


FREESTANDING

2

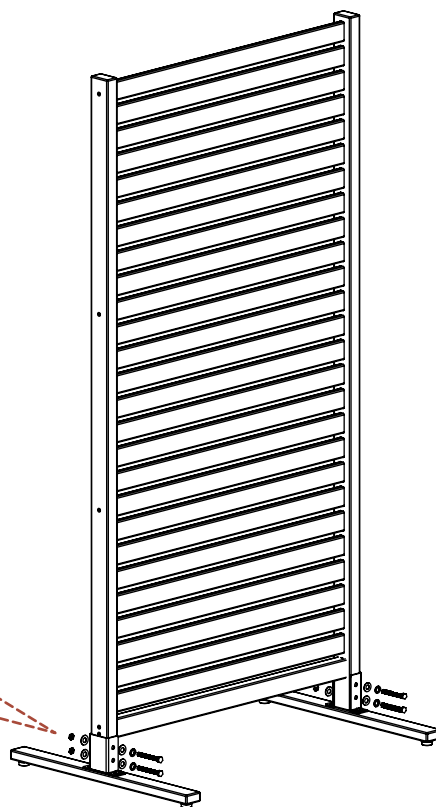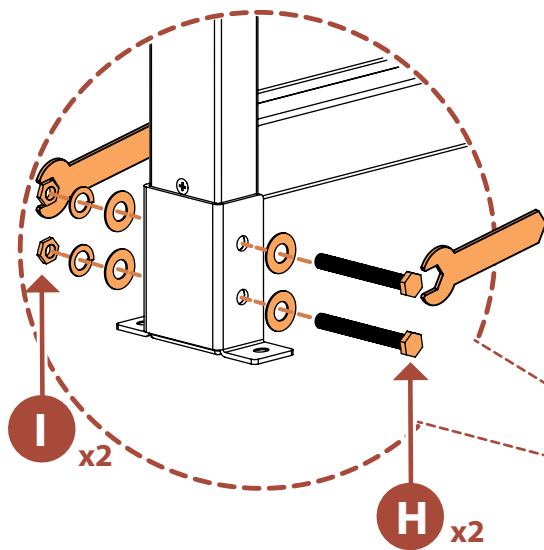


SURFACE MOUNTED (DECK)

MOUNTED
1

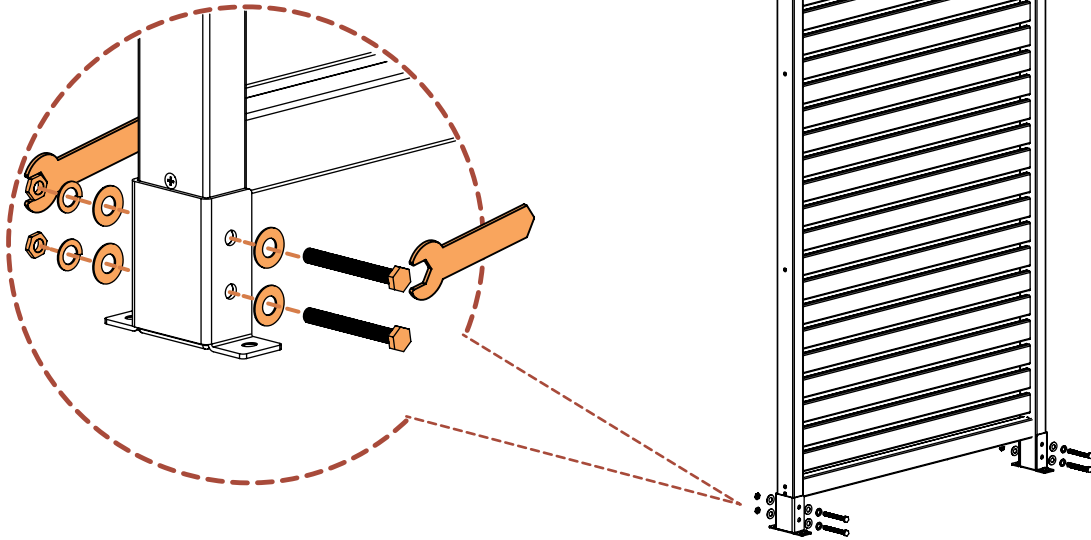


MOUNTED
2

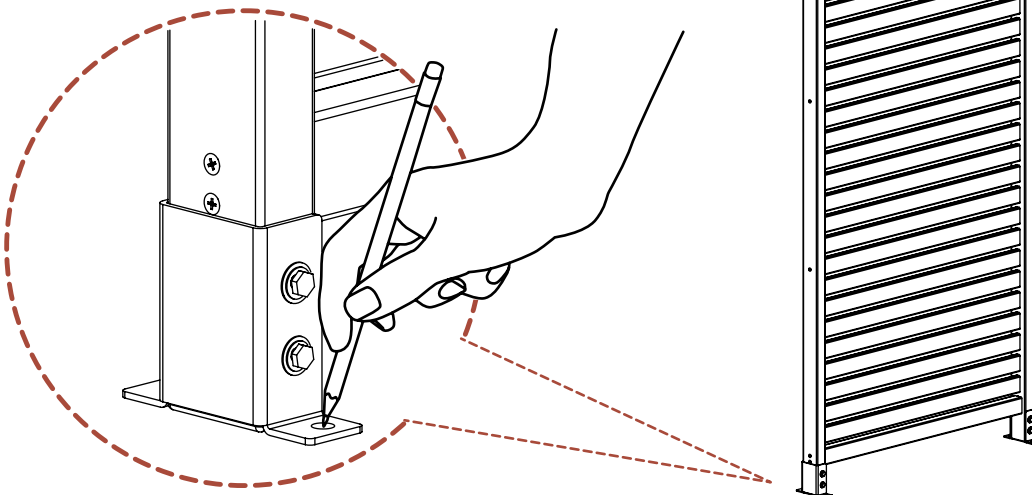




Refer to mounting hardware instructions
to ensure proper installation.

(Surface mounting hardware not included)

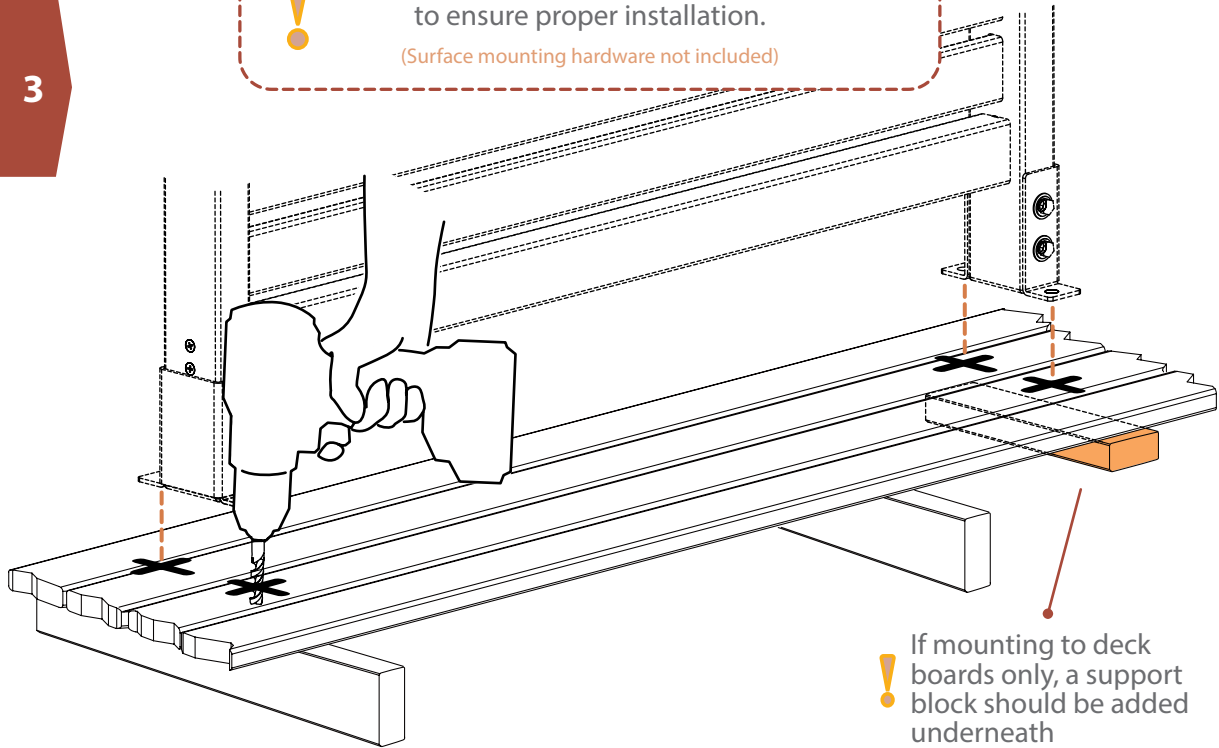


! If mounting to deck
boards only, a support
block should be added
underneath

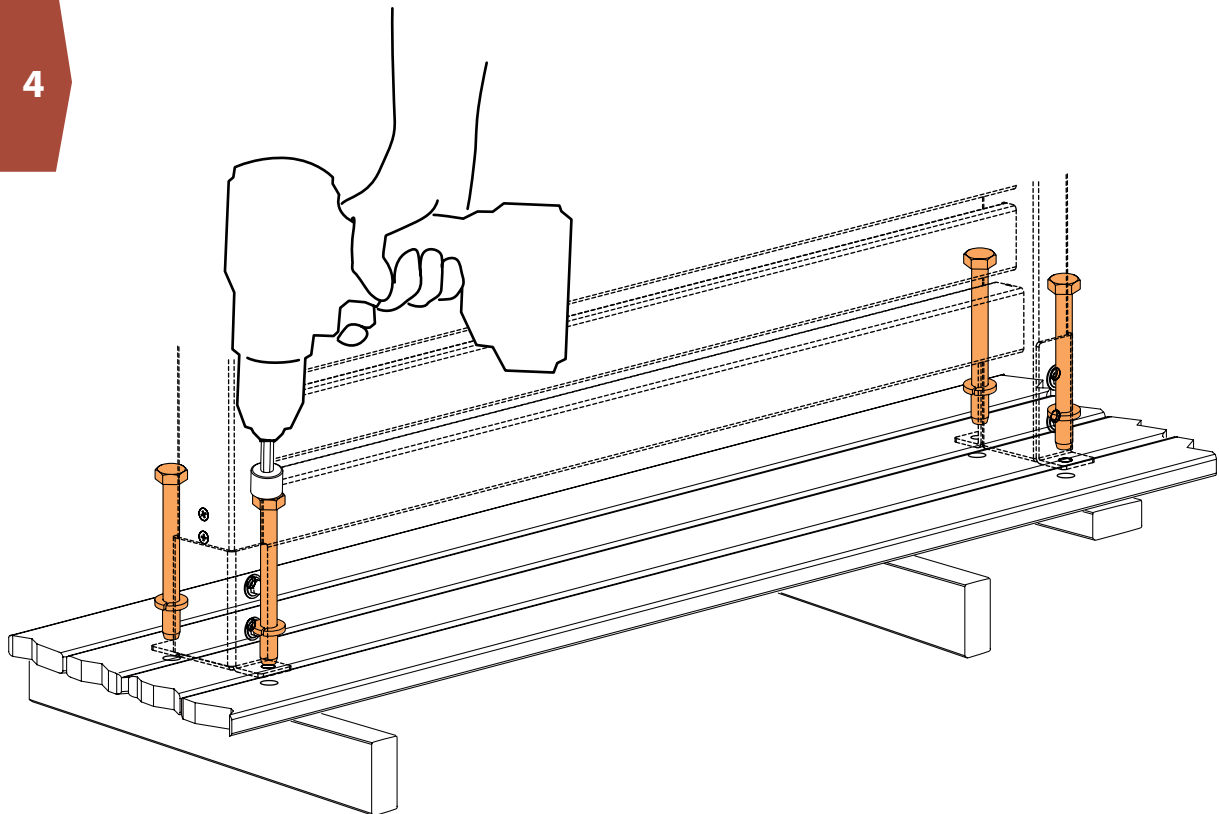


SURFACE MOUNTED (PATIO)


MOUNTED
1

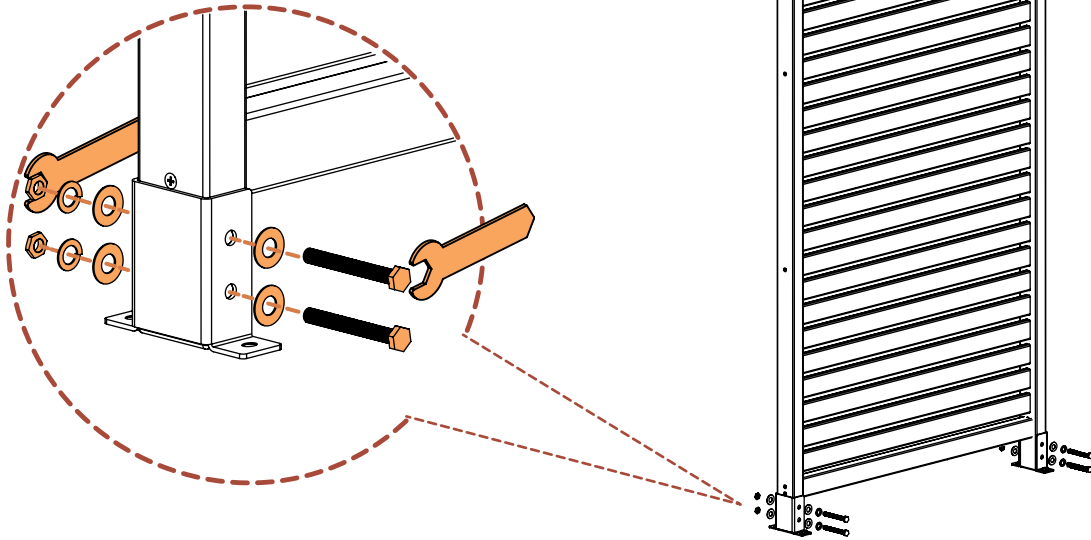

MOUNTED
2

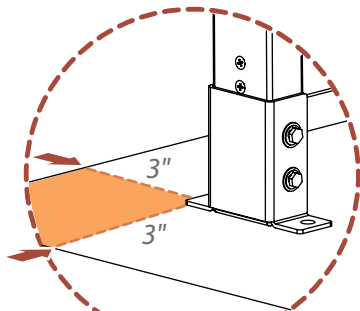



! Ensure there is at least **3"** between the edge of the concrete and the surface mount.

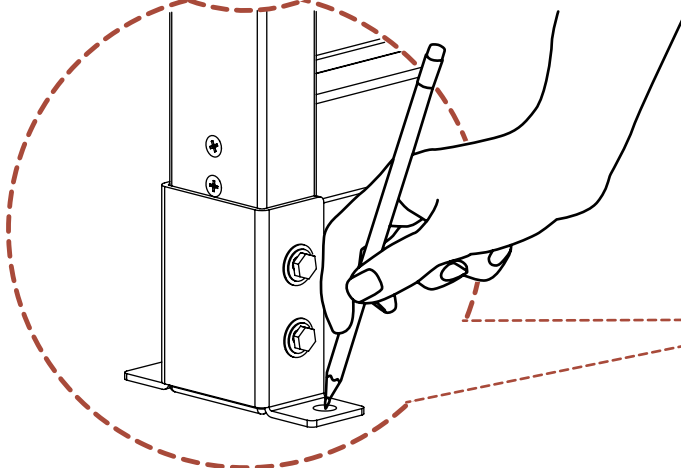



Refer to mounting hardware instructions
to ensure proper installation.

(Surface mounting hardware not included)

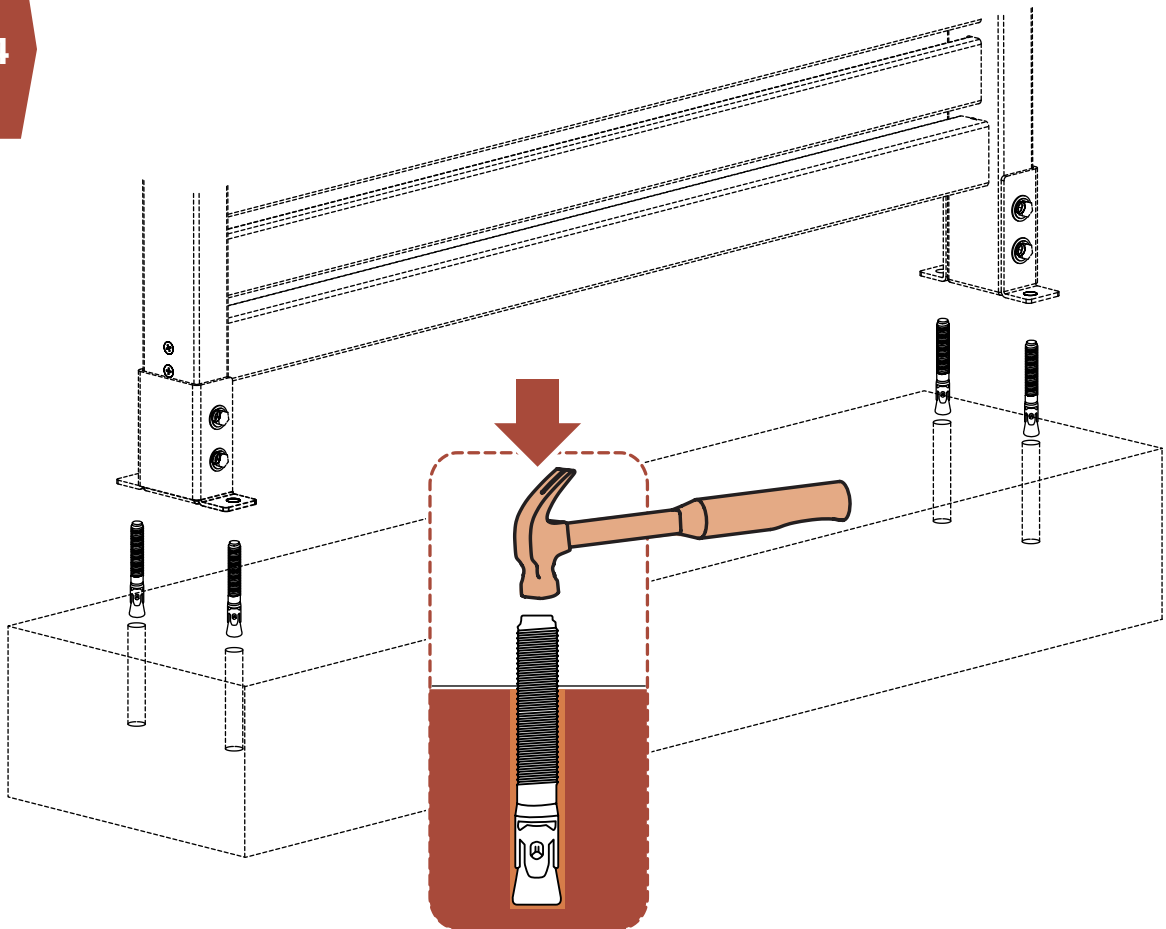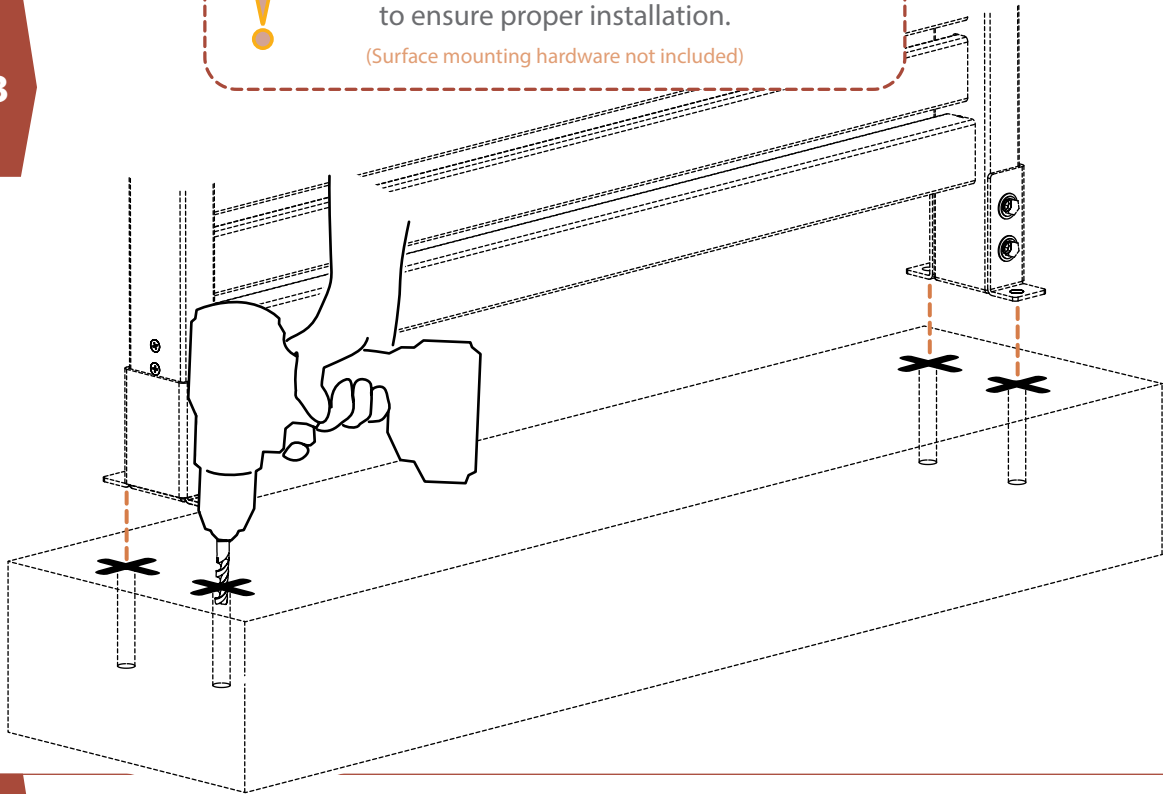


MOUNTED

5




Refer to mounting hardware instructions
to ensure proper installation.

(Surface mounting hardware not included)

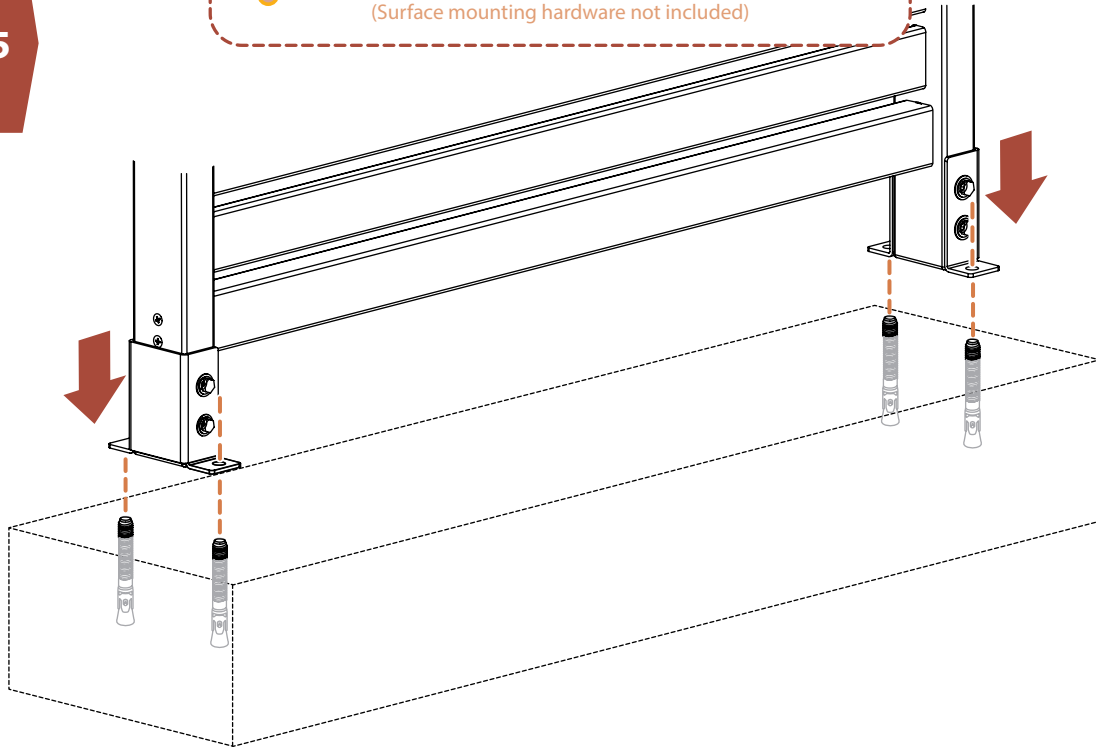

MOUNTED

6

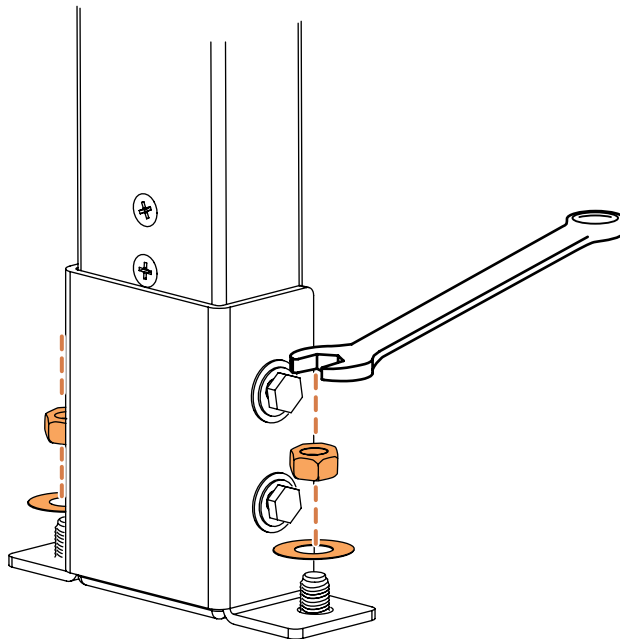



HIDE IT WITH STYLE

www.encloscreens.com

support@encloscreens.com



704-892-5222
877-234-6196



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



ASSEMBLY
INSTRUCTIONS
AZ18030