



Nappa Privacy Screen Kit

2-Pack





Assembly Video
Scan the QR Code below





ASSEMBLY INSTRUCTIONS

EC18020 (CEDAR COLOR)
EC18021 (CHARCOAL COLOR)

www.encloscreens.com

INFORMATION



- Check the inside of the larger pieces in your box for other materials packed inside.
- When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- We recommend an area approximately 5'x 8' for unobstructed assembling.
- You should not need to use excessive force when assembling components.

MISSING OR **DAMAGED PARTS?**

VISIT OUR WEBSITE FIRST, SO WE CAN HELP YOU RIGHT AWAY!

Although great care has been taken to ensure proper packaging and handling of this product, occasionally problems occur. If you discover any missing, damaged, or defective parts, please visit our website to order replacement parts. If you experience any further trouble with your product, please contact our customer service department.

- parts.nychbrands.com
- **704-892-5222 / 877-234-6196**

Customer service agents are available to take calls weekdays from 9am-5pm EST If you call outside of business hours, please leave a voicemail.


To help you quickly and accurately, please have reference item number EC18021 and the specific part name which can be found on page 4. It is helpful if you can provide the batch lot which is a stamped number on the end of the box.

NEED **ASSEMBLY** HELP?

If you are having problems with the assembly or installation of this product, we are happy to assist you with the process, so please give us a call at 704-892-5222 / 877-234-6169


NEED TO RETURN? • If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, you will need to initiate the return from the company you originally purchased from.

PACKAGING DETAIL

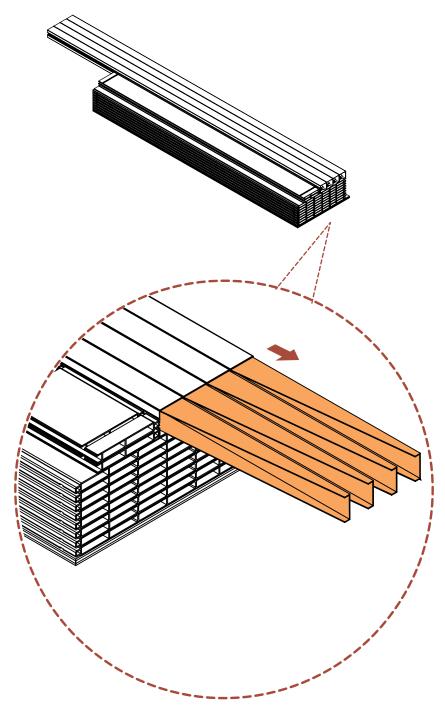



▶ Check the inside of the larger pieces in your box for other materials packed inside.


DETAILED PRODUCT DIMENSIONS & SPECIFICATIONS

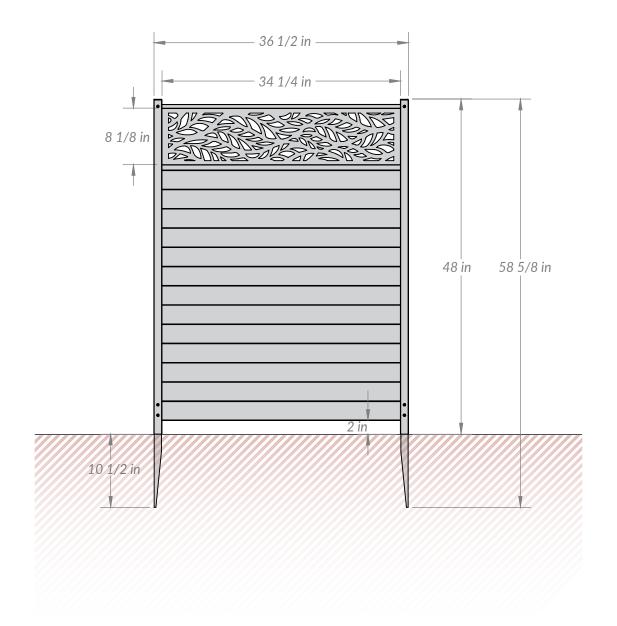


LAY OUT MATERIALS

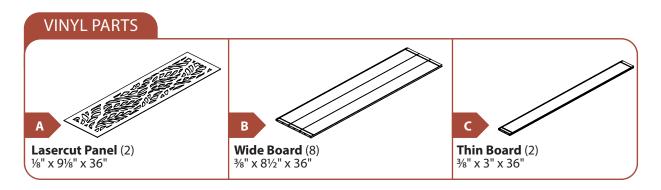


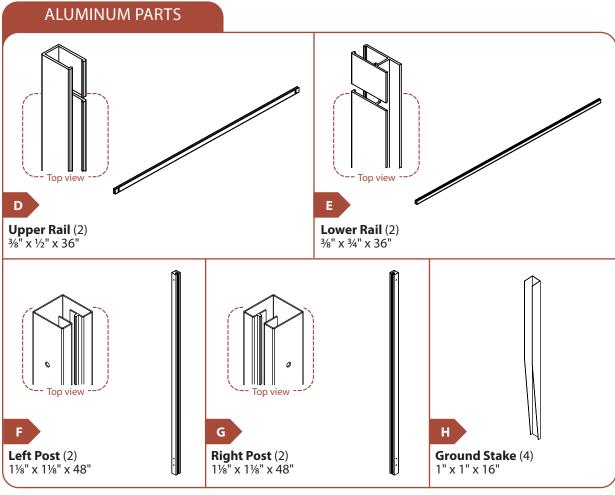


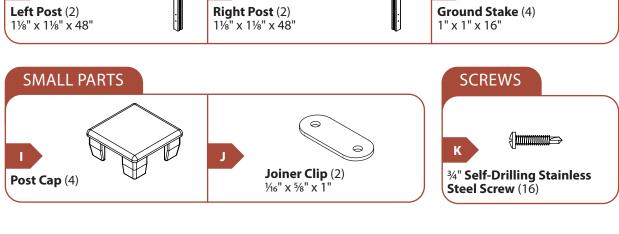


ASSEMBLING

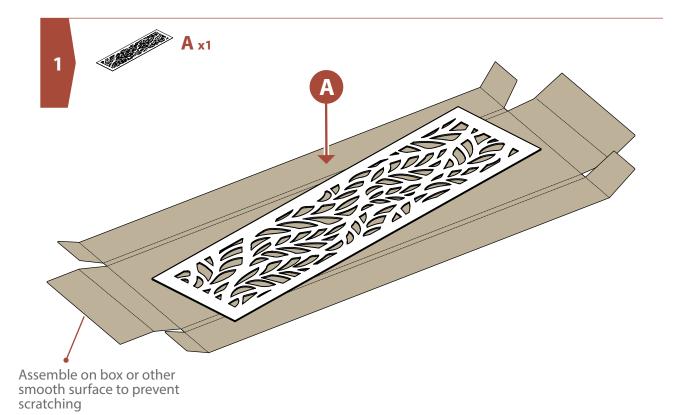


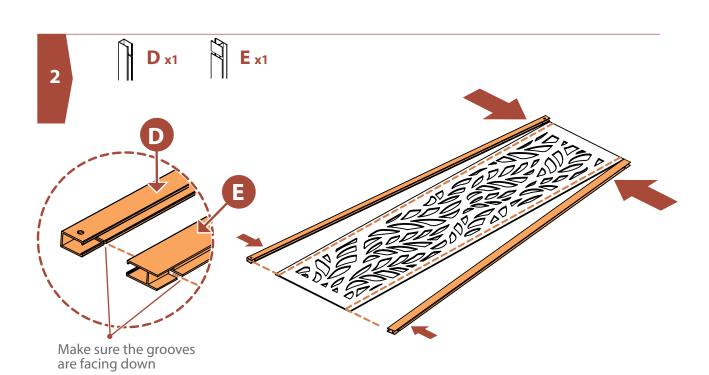


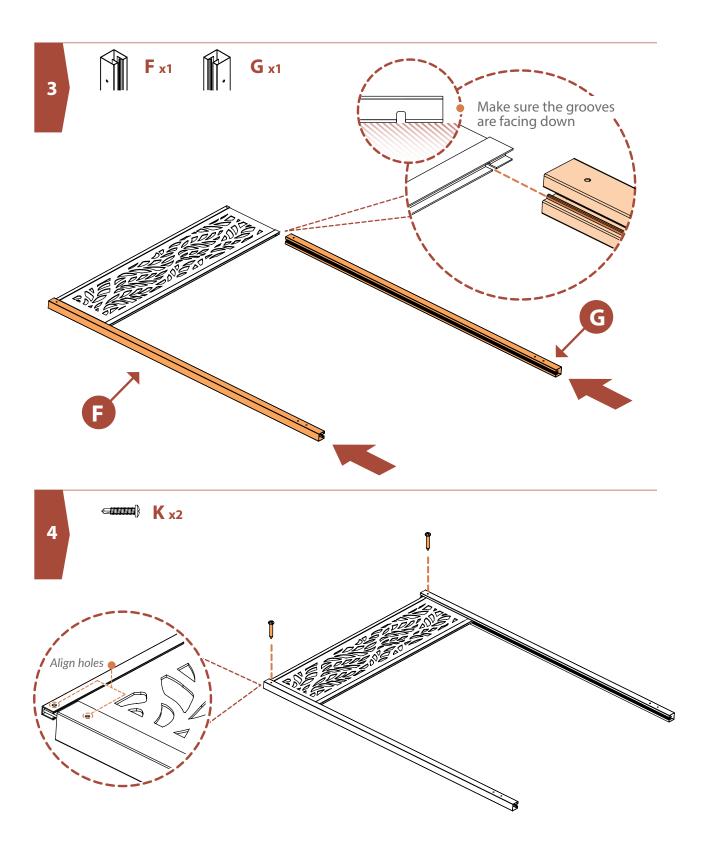




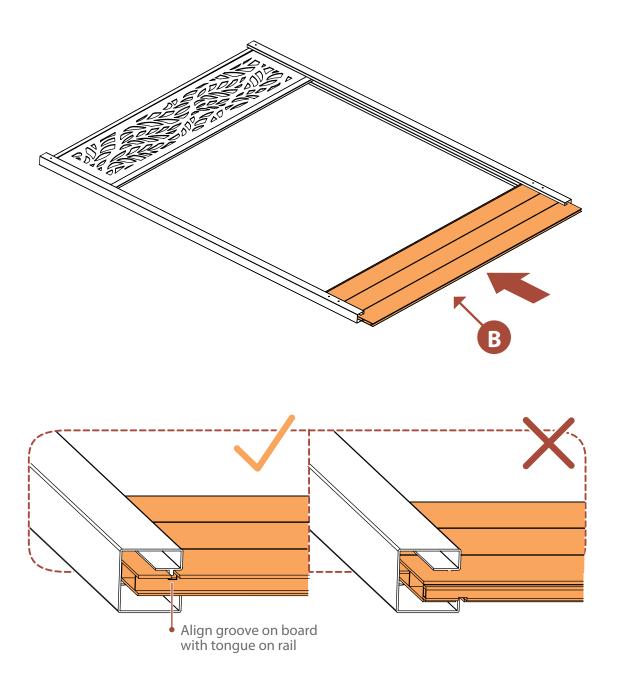

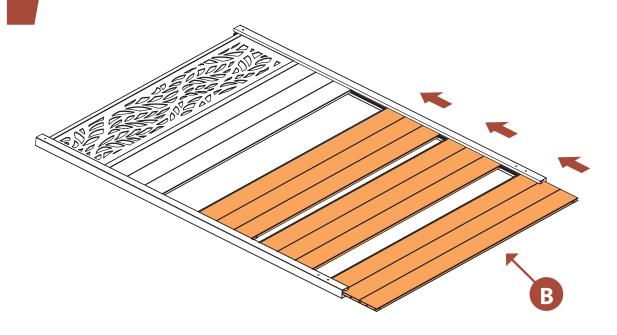


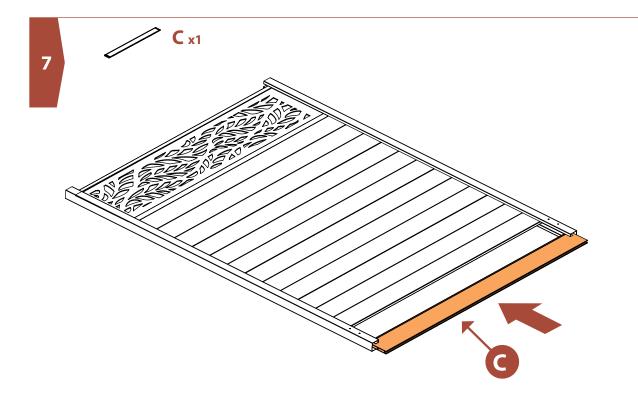




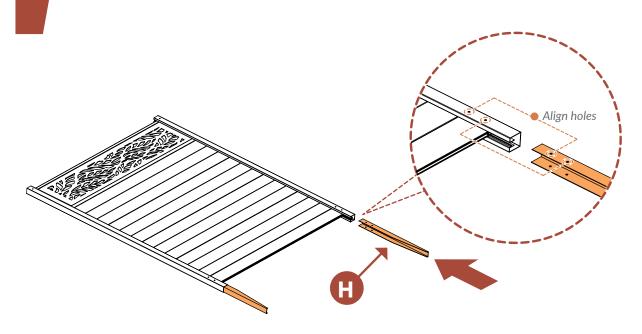


€ K x4

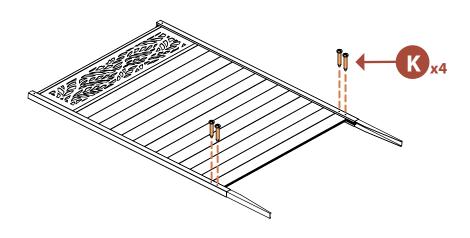


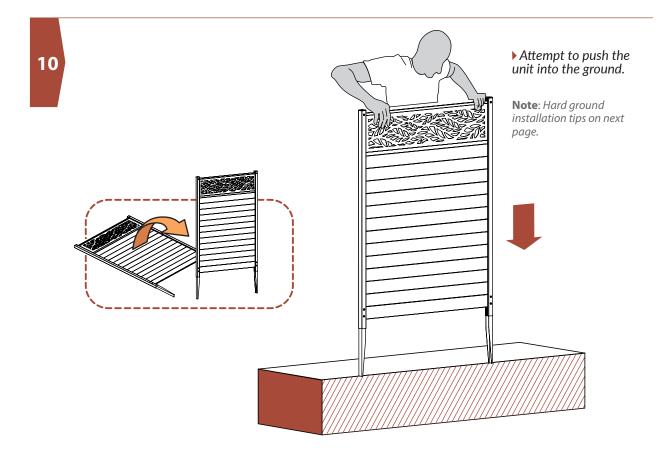


▶ All 10½" of the post anchors should be inserted into the ground, so that they are no longer visible.

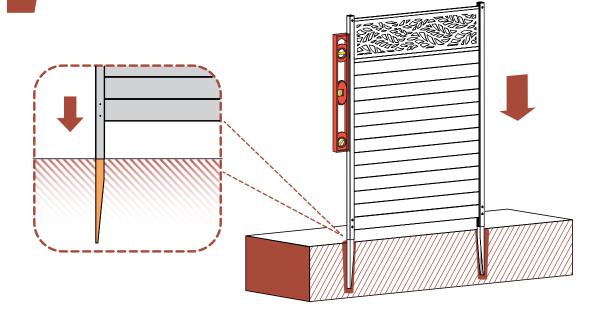

▶ Hammer and switch posts every few taps.

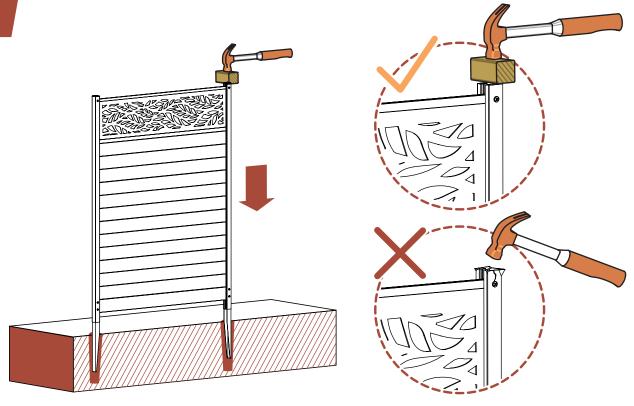


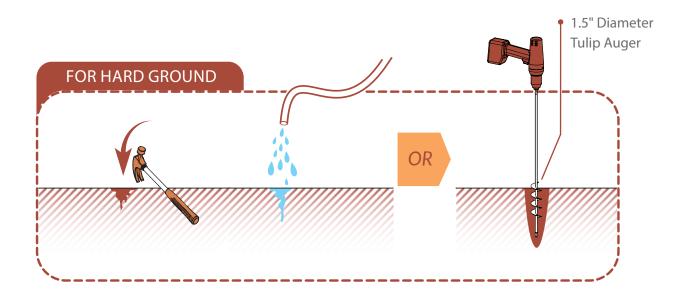

FOR HARDER GROUND


If your ground is really hard, you may need to dig a hole large enough to accommodate one post from each panel - Approximately 8" in diameter and 11" deep. Backfill and compact the dirt. = 8 in. 11 in.


√ J x2 **√ K** x4

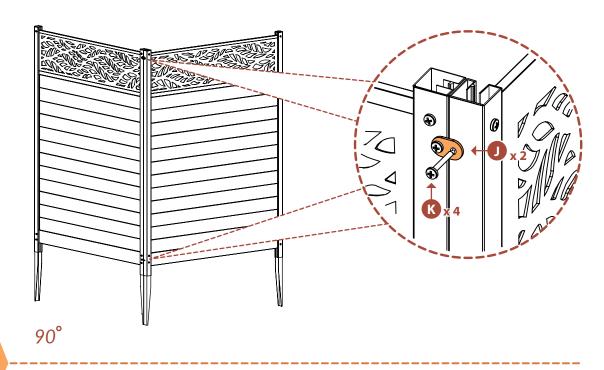

OR

180°

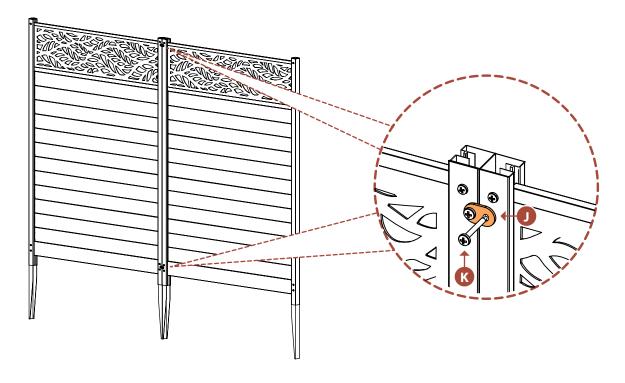

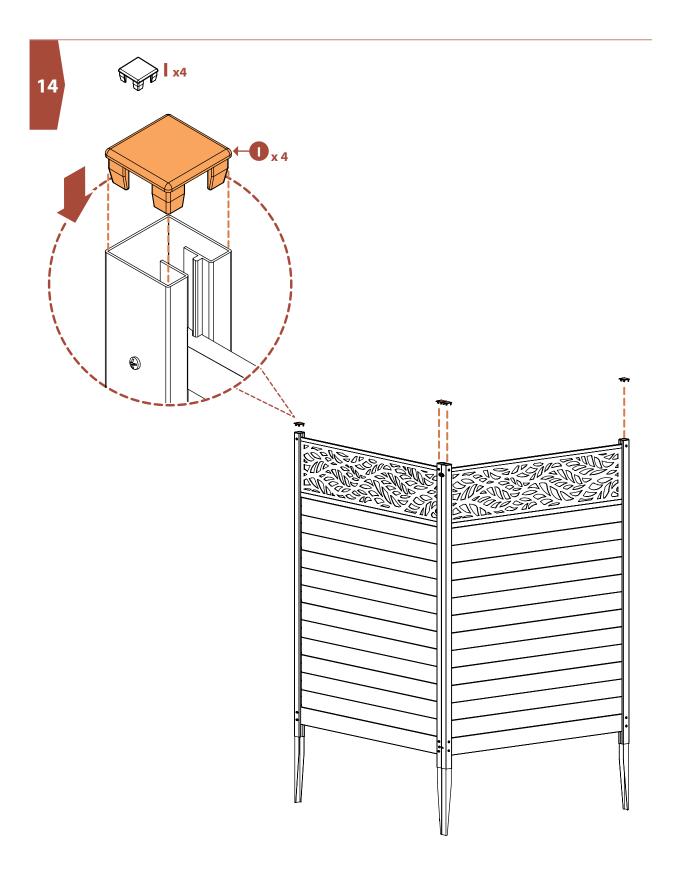

ENCLO HIDE IT WITH STYLE

www.**encloscreens**.com

support@**encloscreens**.com



704-892-5222 877-234-6196



6935 Reames Rd. Ste. K. Charlotte, NC 28216



ASSEMBLY INSTRUCTIONS EC18020 (CEDAR COLOR) EC18021 (CHARCOAL COLOR)