




HIDE IT WITH STYLE

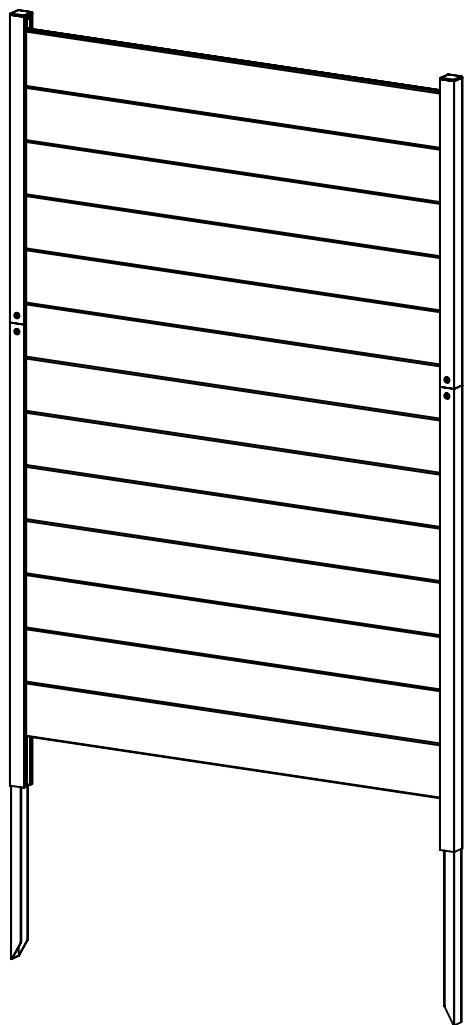

## Fairmont Wood Privacy Screen

60 1/2"H X 39"W

**60 min**  
**Assembly**  
*Approximate time*



**Assembly Video**  
*Scan the QR Code below*



**ASSEMBLY**  
**INSTRUCTIONS**  
EC18043

[www.encloscreens.com](http://www.encloscreens.com)

VER. 060525

## GENERAL INFORMATION

### MISSING OR DAMAGED PARTS?



➤ **Visit Our Website**  
so we can help you right away!  
**parts.nychbrands.com**

\* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, **please have the following**

- Your product number (**EC18043**)
- Your affected part letters (**page 5**)
- Your original product box

### NEED ASSEMBLY HELP?


If you are having problems with assembly or installation of this product,  
**please contact at:**

📞 **704-892-5222 / 877-234-6196**    ✉ **support@encloscreens.com**

### NEED TO RETURN?


If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

## DETAILED **PRODUCT DIMENSIONS & SPECIFICATIONS**

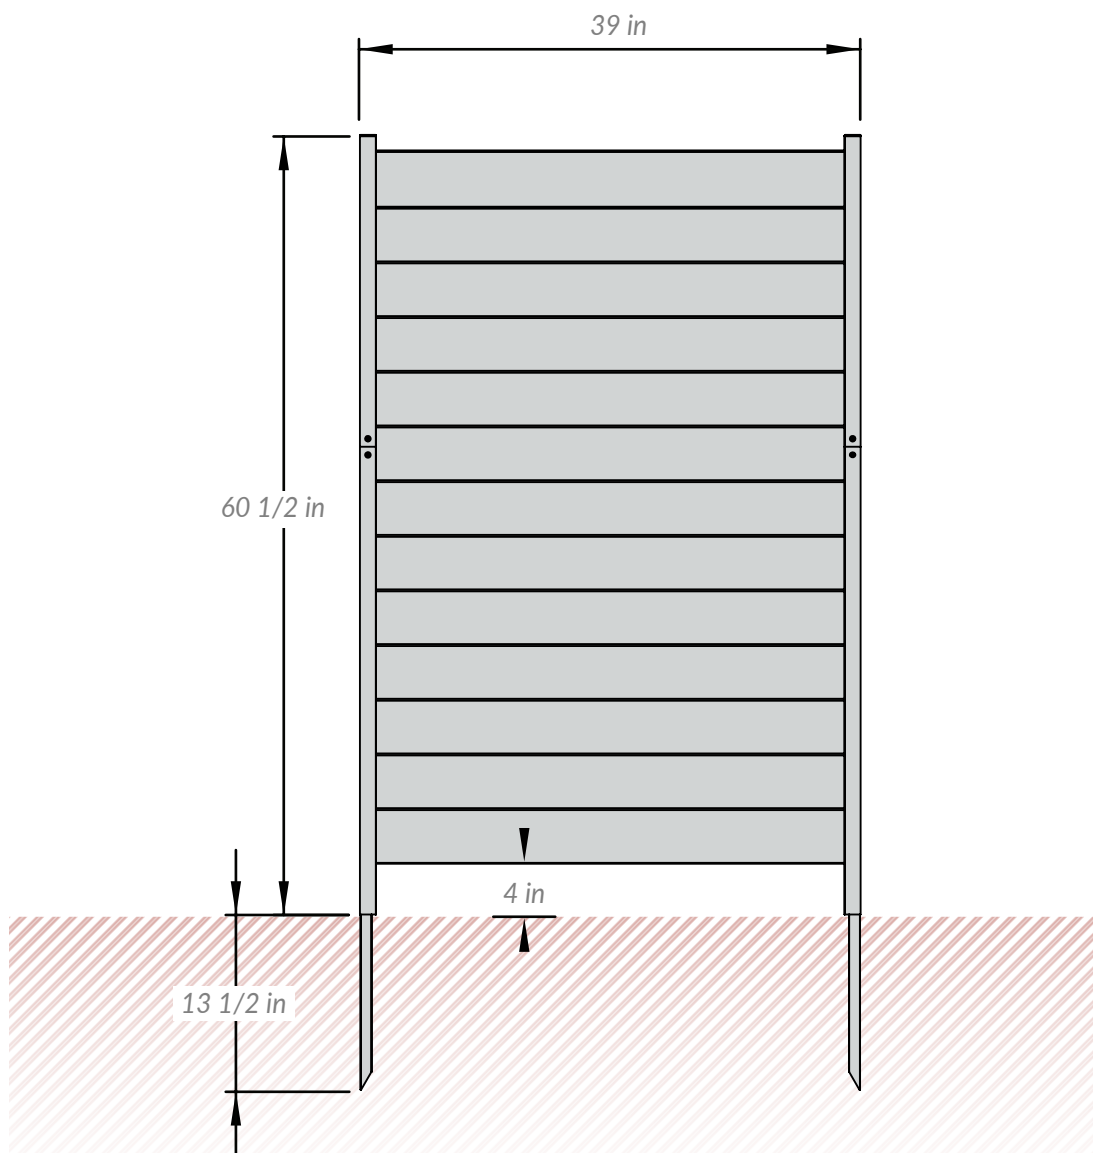

## PACKAGED MATERIALS

---

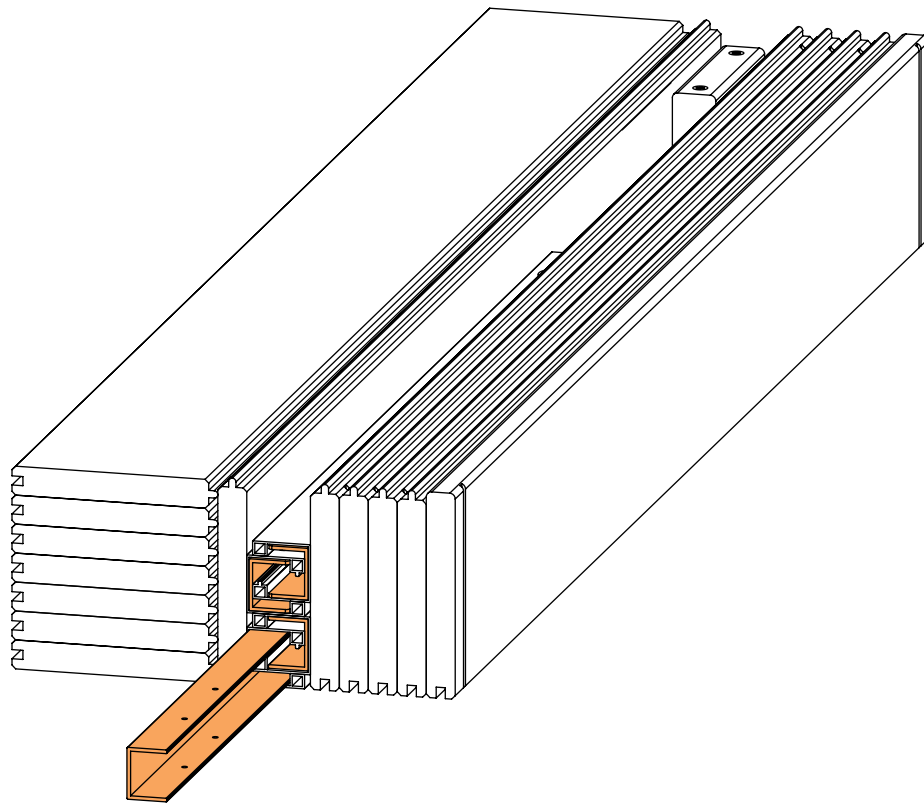


● Ground Stakes (I) are packaged inside of posts.

# LAY OUT MATERIALS

## WOOD PARTS


A

**Slatted Wood Board (12)**  
 $\frac{5}{8}$ " x  $4\frac{1}{2}$ " x  $38\frac{1}{4}$ "

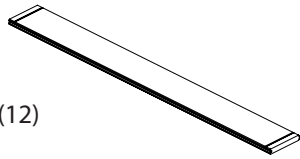

B

**Top Wood Board (1)**  
 $\frac{5}{8}$ " x  $4\frac{1}{2}$ " x  $38\frac{1}{4}$ "

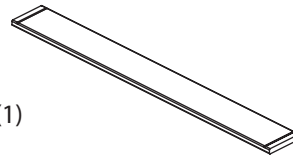


C

**Wood Spacer (2)**  
 $\frac{5}{8}$ " x  $1\frac{1}{4}$ " x  $3\frac{7}{8}$ "



D


**Wood Block (1)**

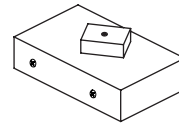


## LARGE PARTS

E

**Right Post Top (1)**  
 $1\frac{1}{4}$ " x  $1\frac{1}{4}$ " x  $24\frac{1}{8}$ "

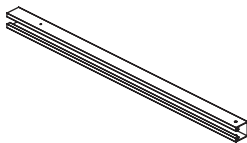


Bottom view

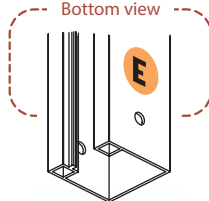


F

**Left Post Top (1)**  
 $1\frac{1}{4}$ " x  $1\frac{1}{4}$ " x  $24\frac{1}{8}$ "

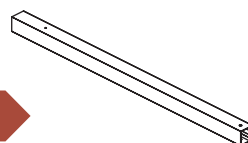


Bottom view

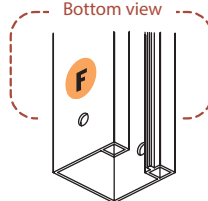

G


**Right Post Bottom (1)**  
 $1\frac{1}{4}$ " x  $1\frac{1}{4}$ " x  $36\frac{3}{8}$ "

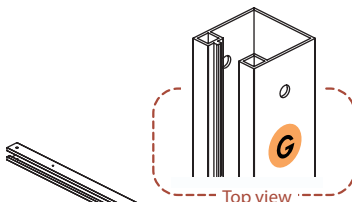

Top view

H


**Left Post Bottom (1)**  
 $1\frac{1}{4}$ " x  $1\frac{1}{4}$ " x  $36\frac{3}{8}$ "

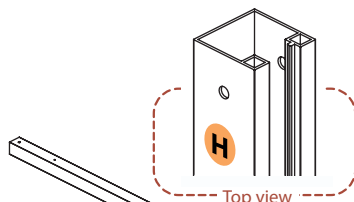

Top view

I


**Ground Stake (2)**  
 $\frac{7}{8}$ " x  $1\frac{1}{8}$ " x  $23\frac{1}{2}$ "

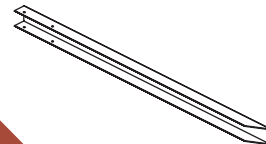

## WOOD PARTS


J

**Post Bridge (2)**  
 $\frac{7}{8}$ " x  $1\frac{1}{8}$ " x  $6\frac{1}{2}$ "

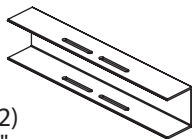


K

**Post Cap (2)**

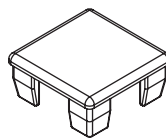

L

**Joiner Clip (2)**



## SCREWS


M

**1" Self-Drilling Stainless Steel Screw (12)**



N

**$\frac{1}{2}$ " Wide Head Stainless Steel Screw (8)**




## TOOLS

O


**$\frac{1}{8}$ " Drill Bit (1)**




# ASSEMBLING

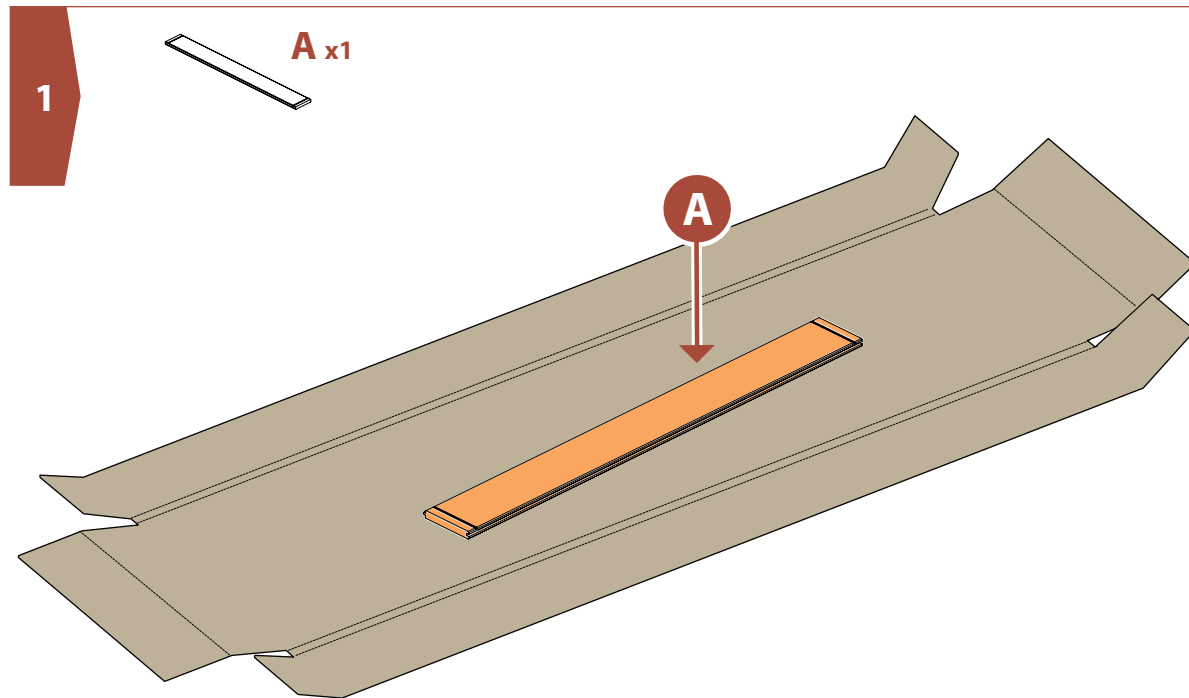


Assemble on box or other smooth surface to prevent scratching

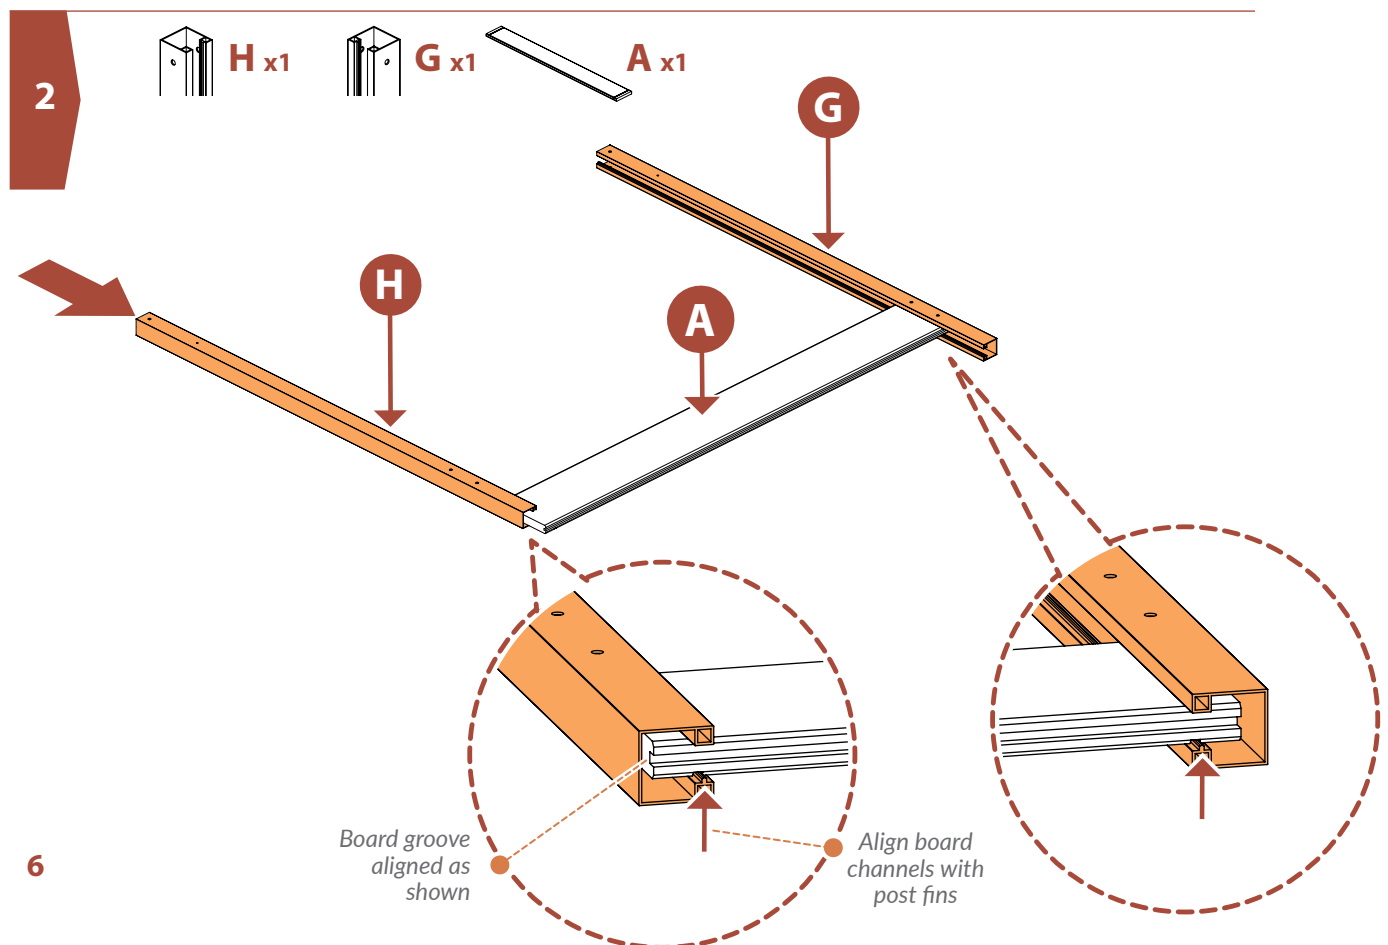

3



I x2

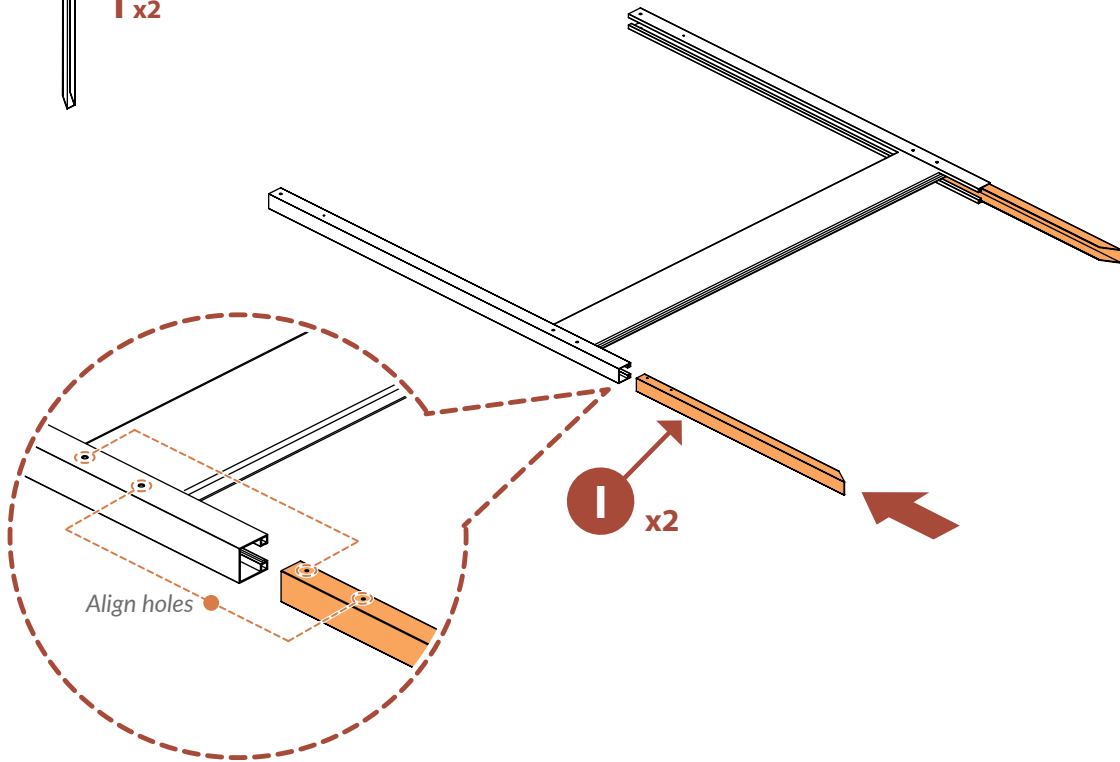


4



M x4




C x2

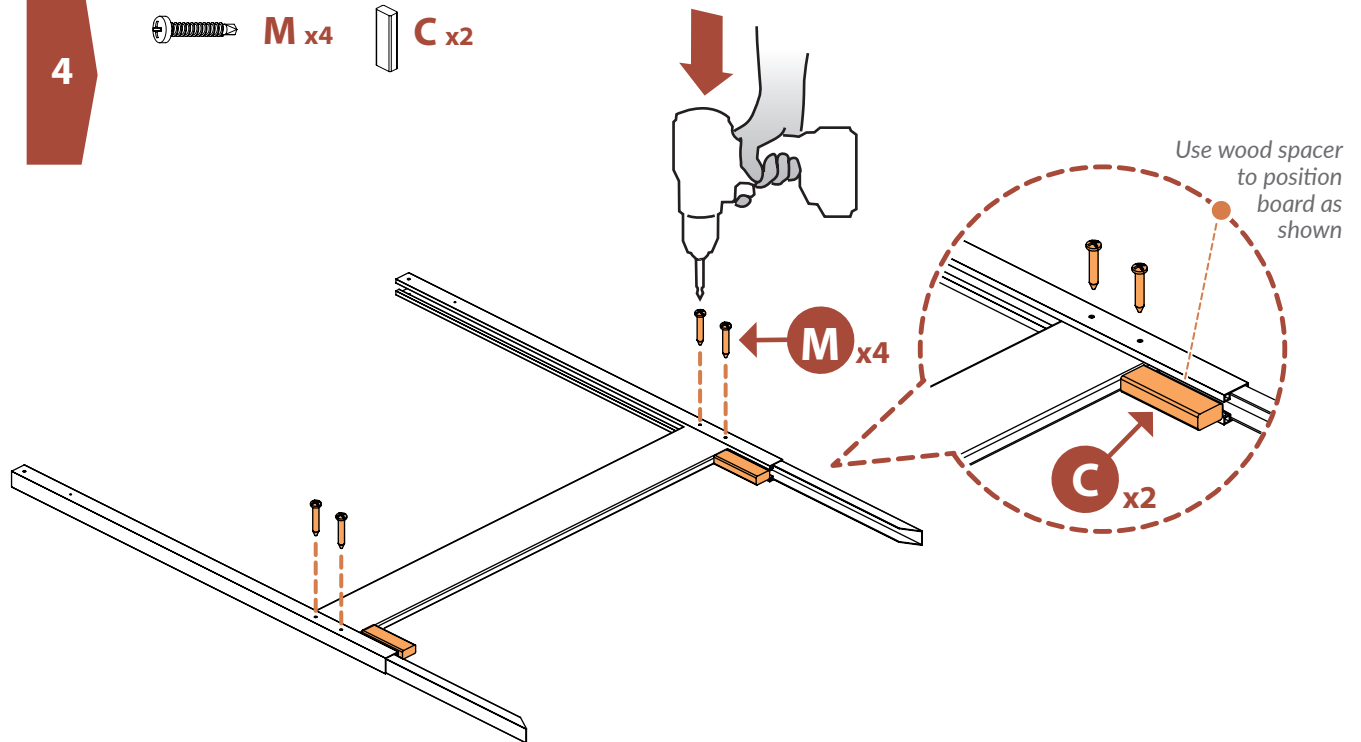


5

A x6

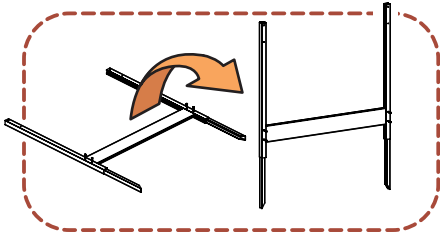


**Note:** Lay the panel against a wall for an easier assembly.

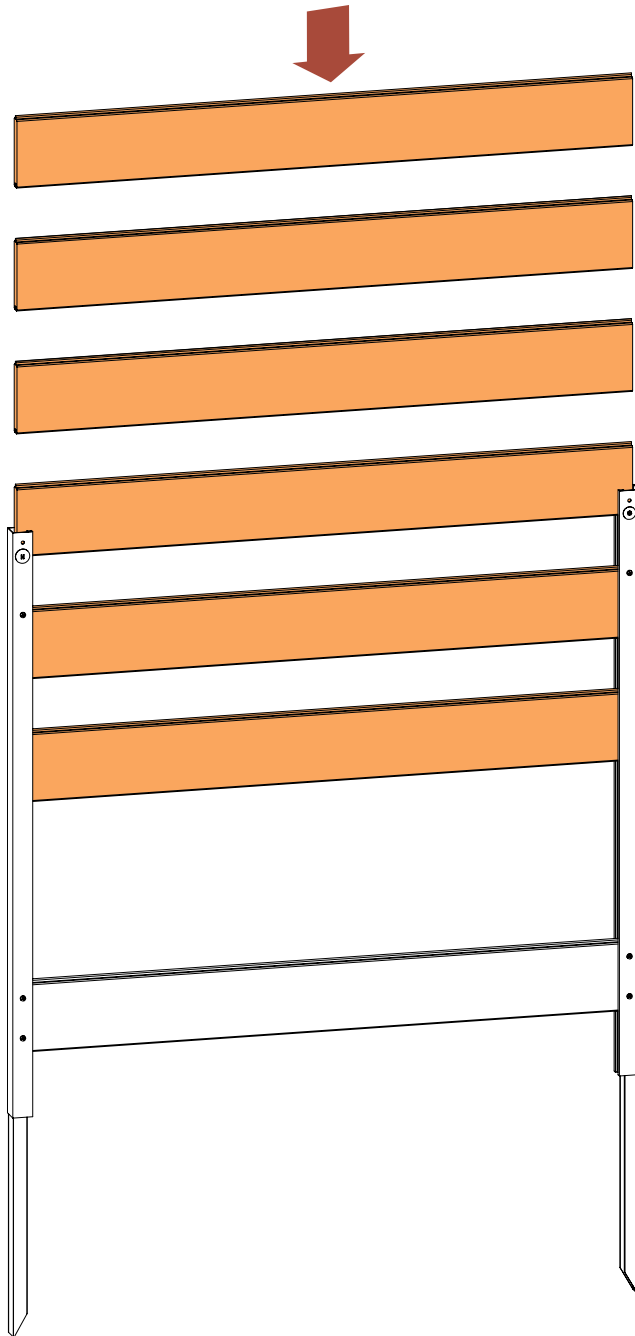



6


 **M x2**

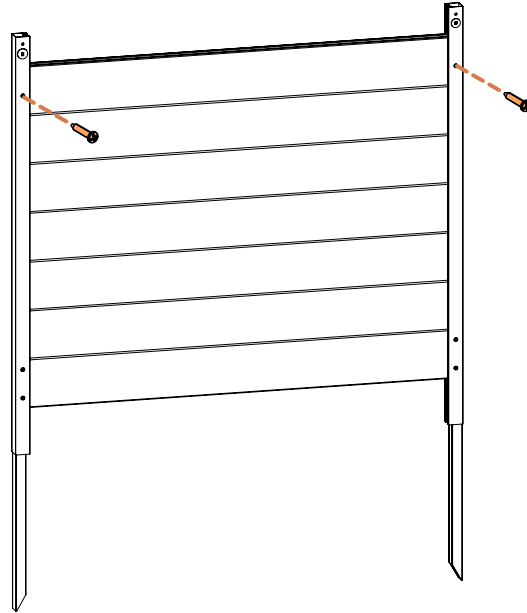



7

► Attempt to push the unit into the ground.

**Note:** Hard ground installation tips on next page.

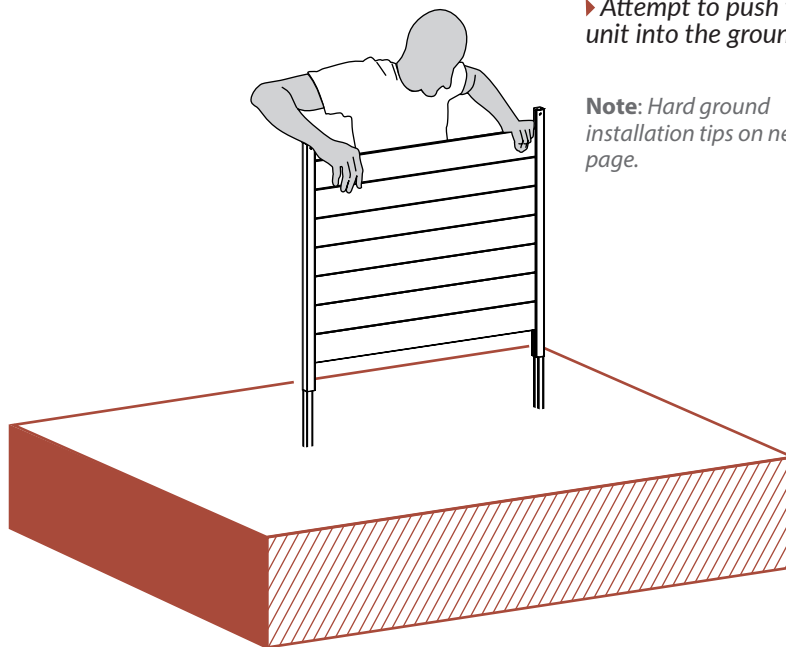


► All 13½" of the ground stakes should be inserted into the ground, so that they are no longer visible.

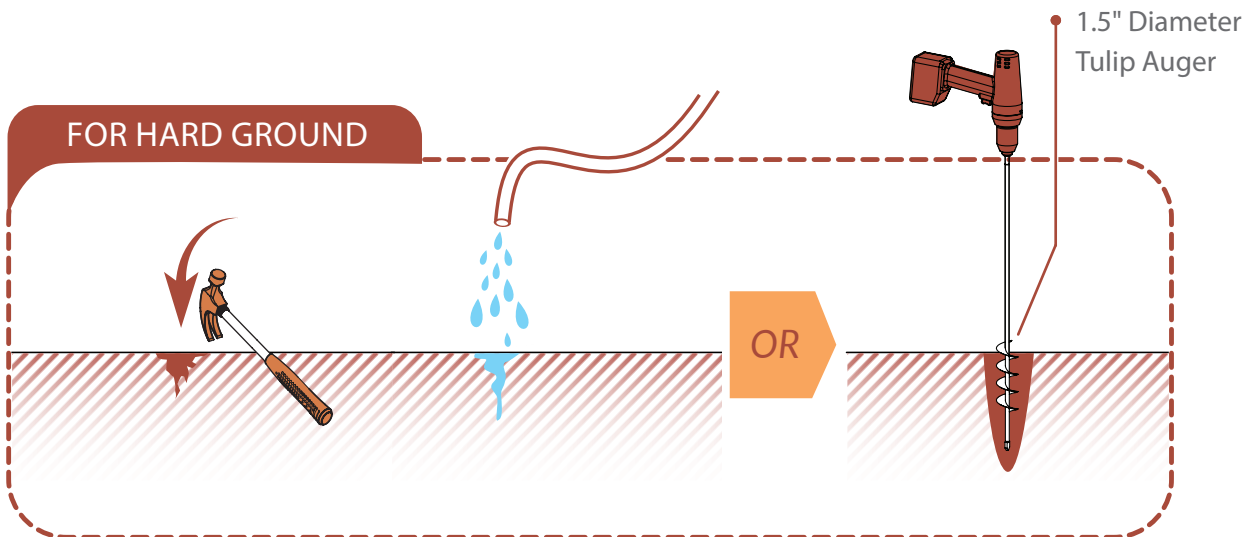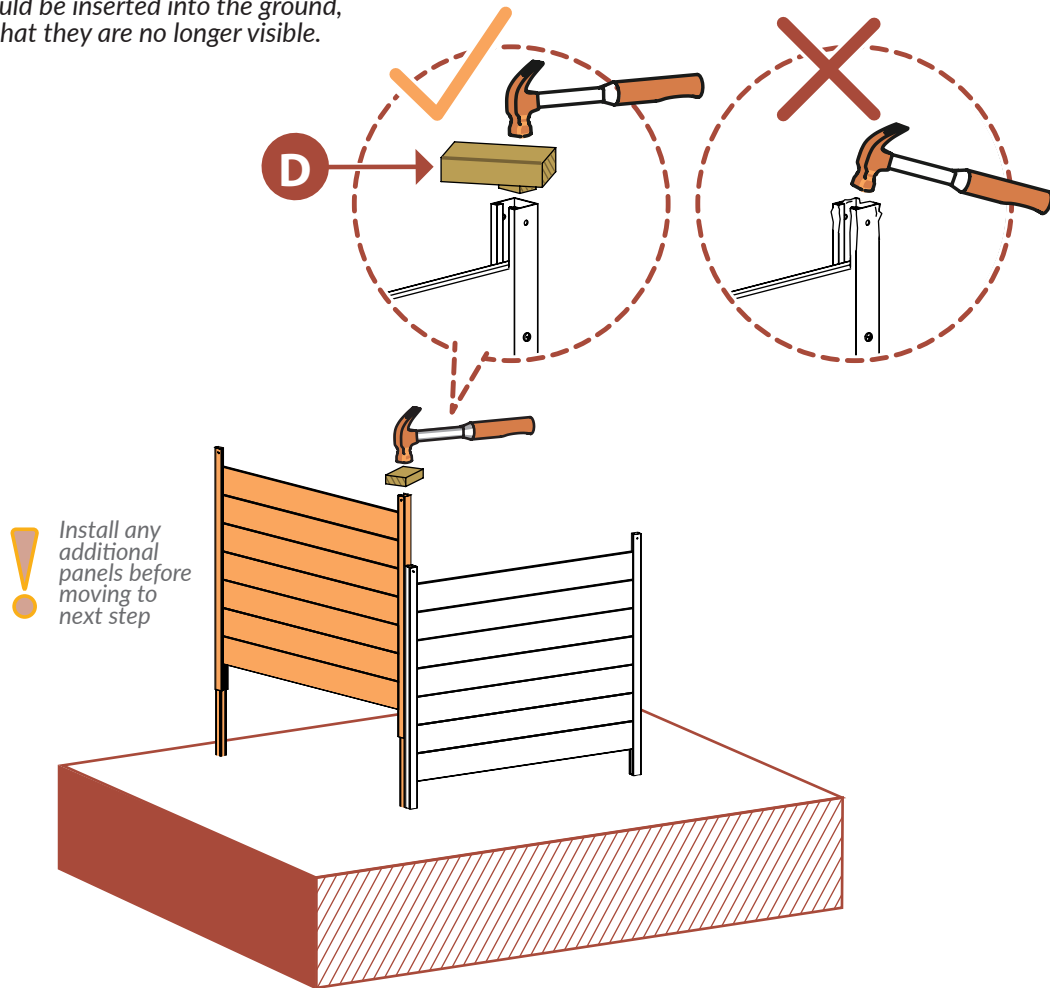


## FOR HARDER GROUND


► If your ground is really hard, you may need to dig a hole large enough to accommodate one post from each panel - Approximately 8" in diameter and 13" deep. Backfill and compact the dirt.

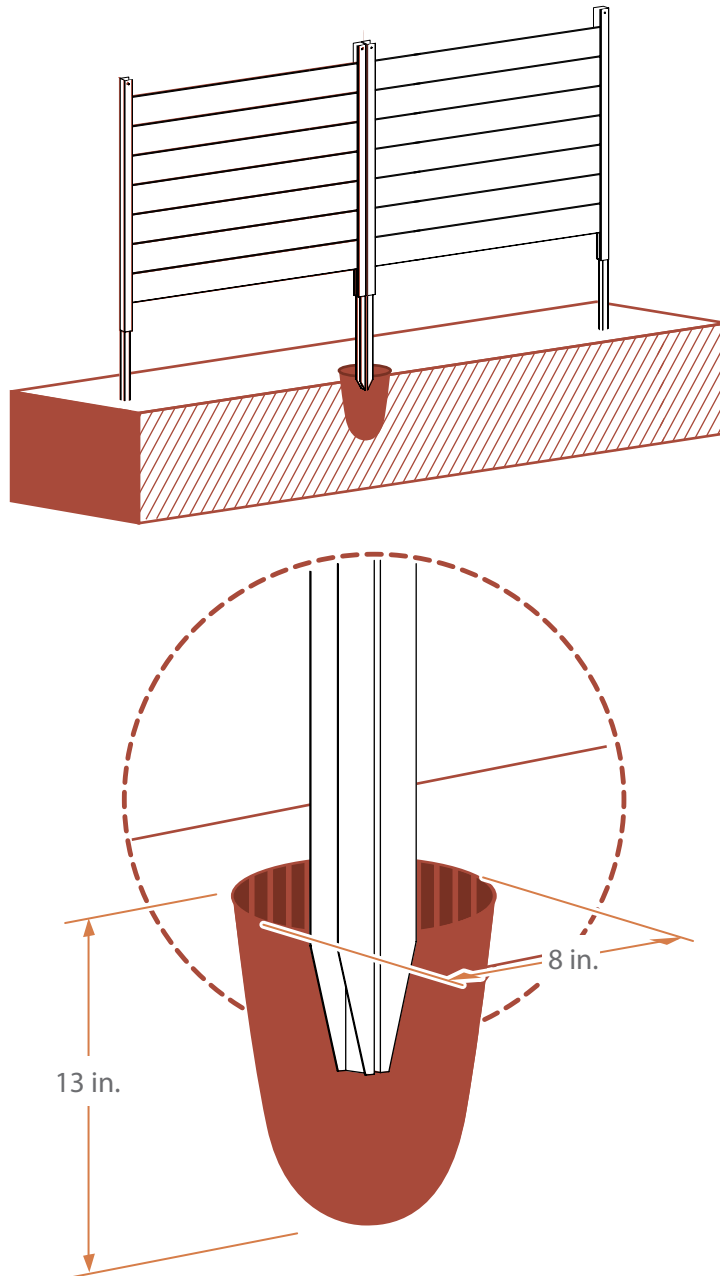


9

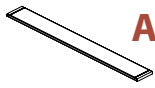


A x1

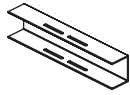



J x2

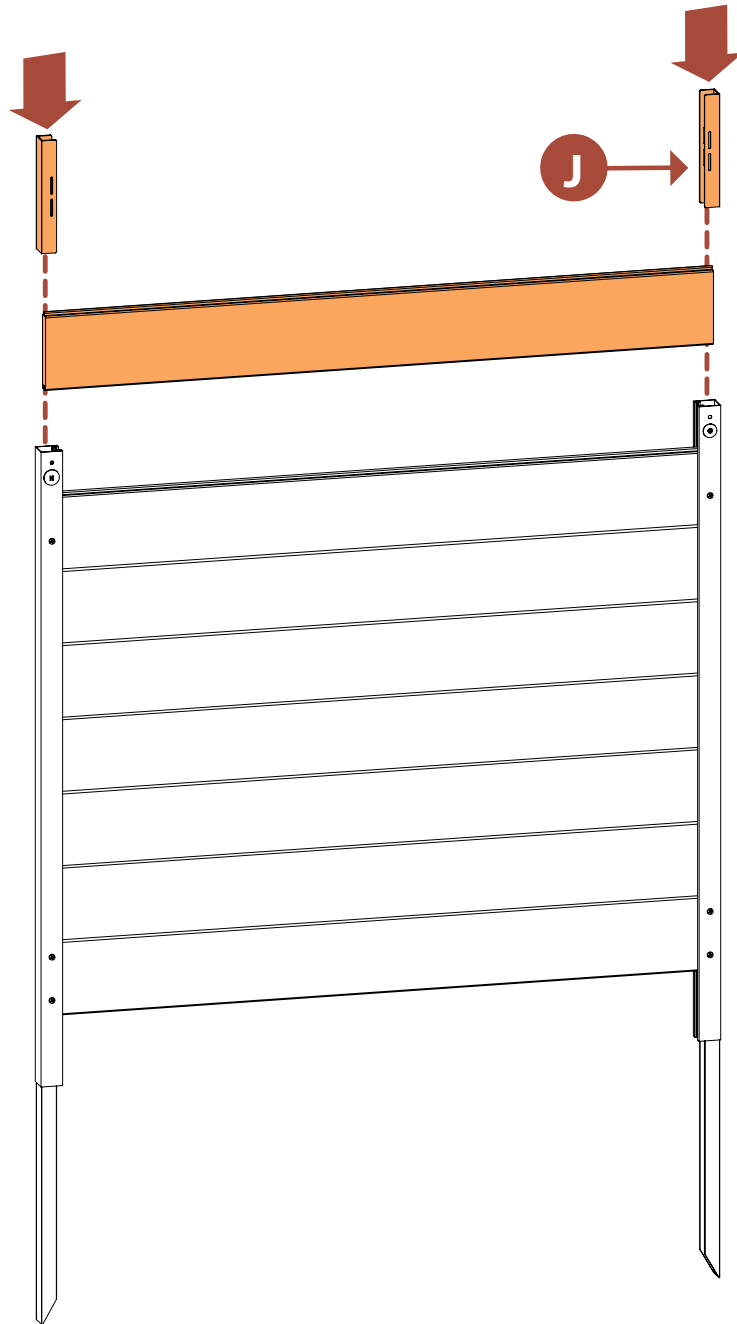

10

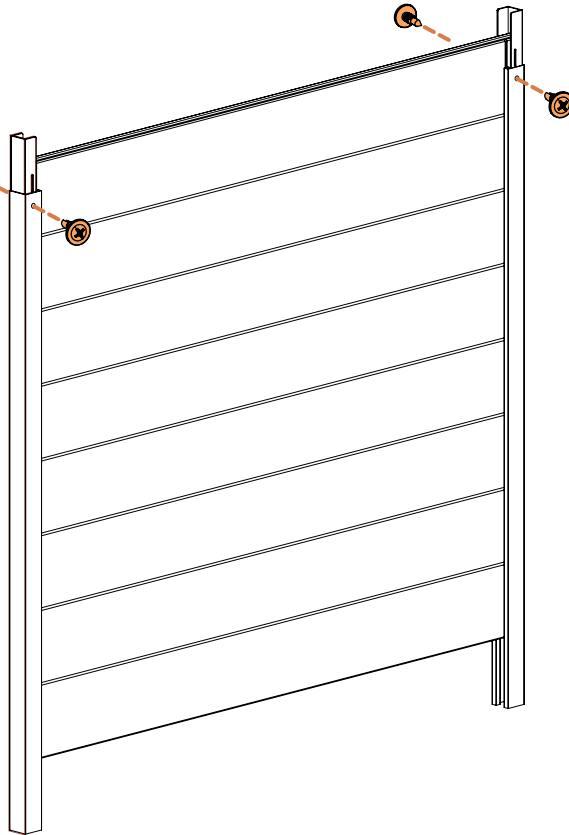**N x4****N x4****IF HOLE IS BLOCKED****O x1****N x4**

If rear hole is blocked, either leave off screw or pre-drill new hole as shown with the included drill bit - part (O).

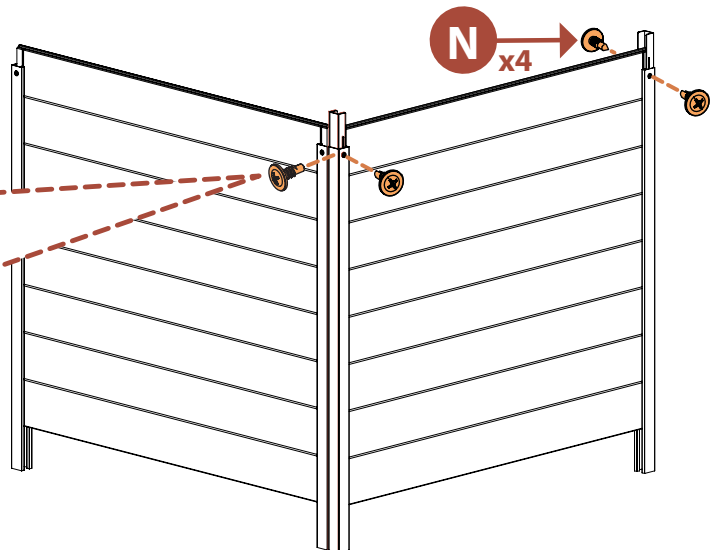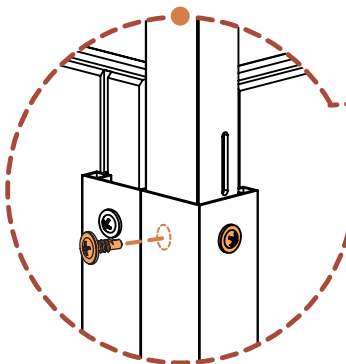


11



**F** x1




**E** x1

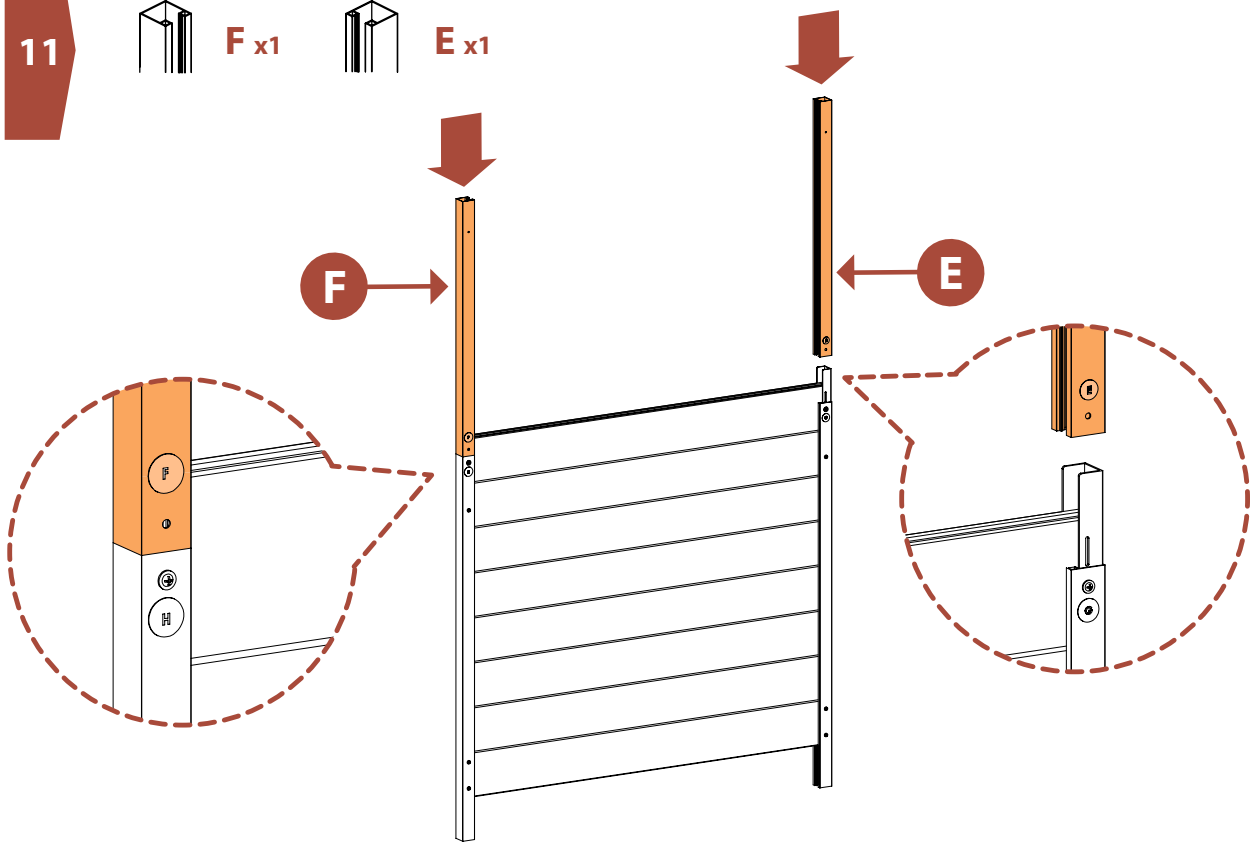


12



**N** x4

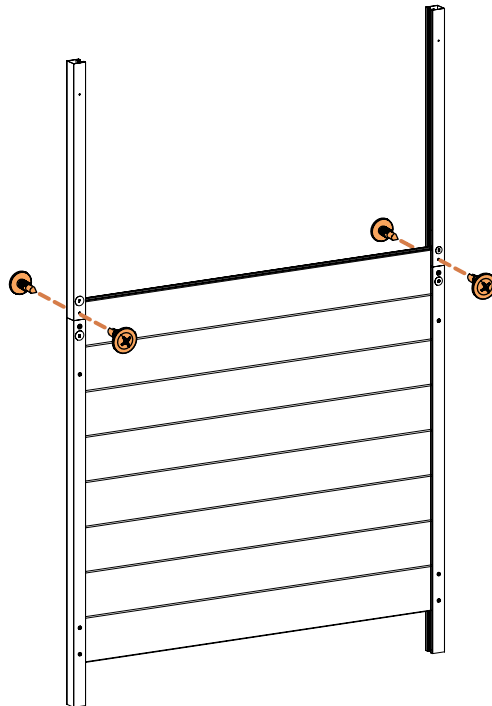


13

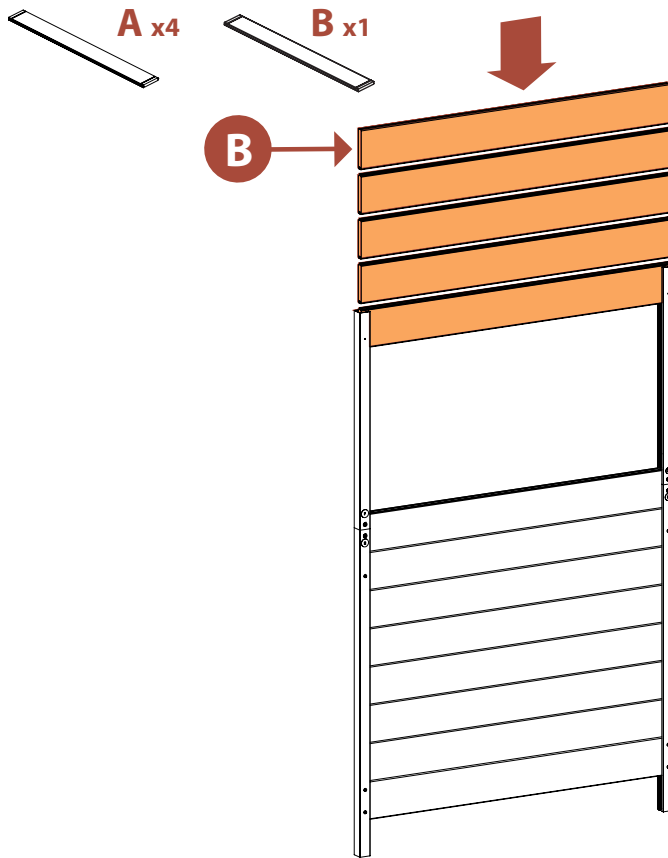

14


 **M x2**

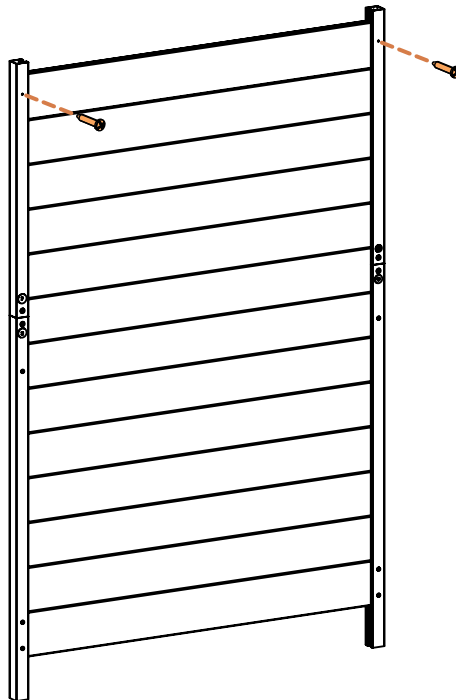

15



K x2

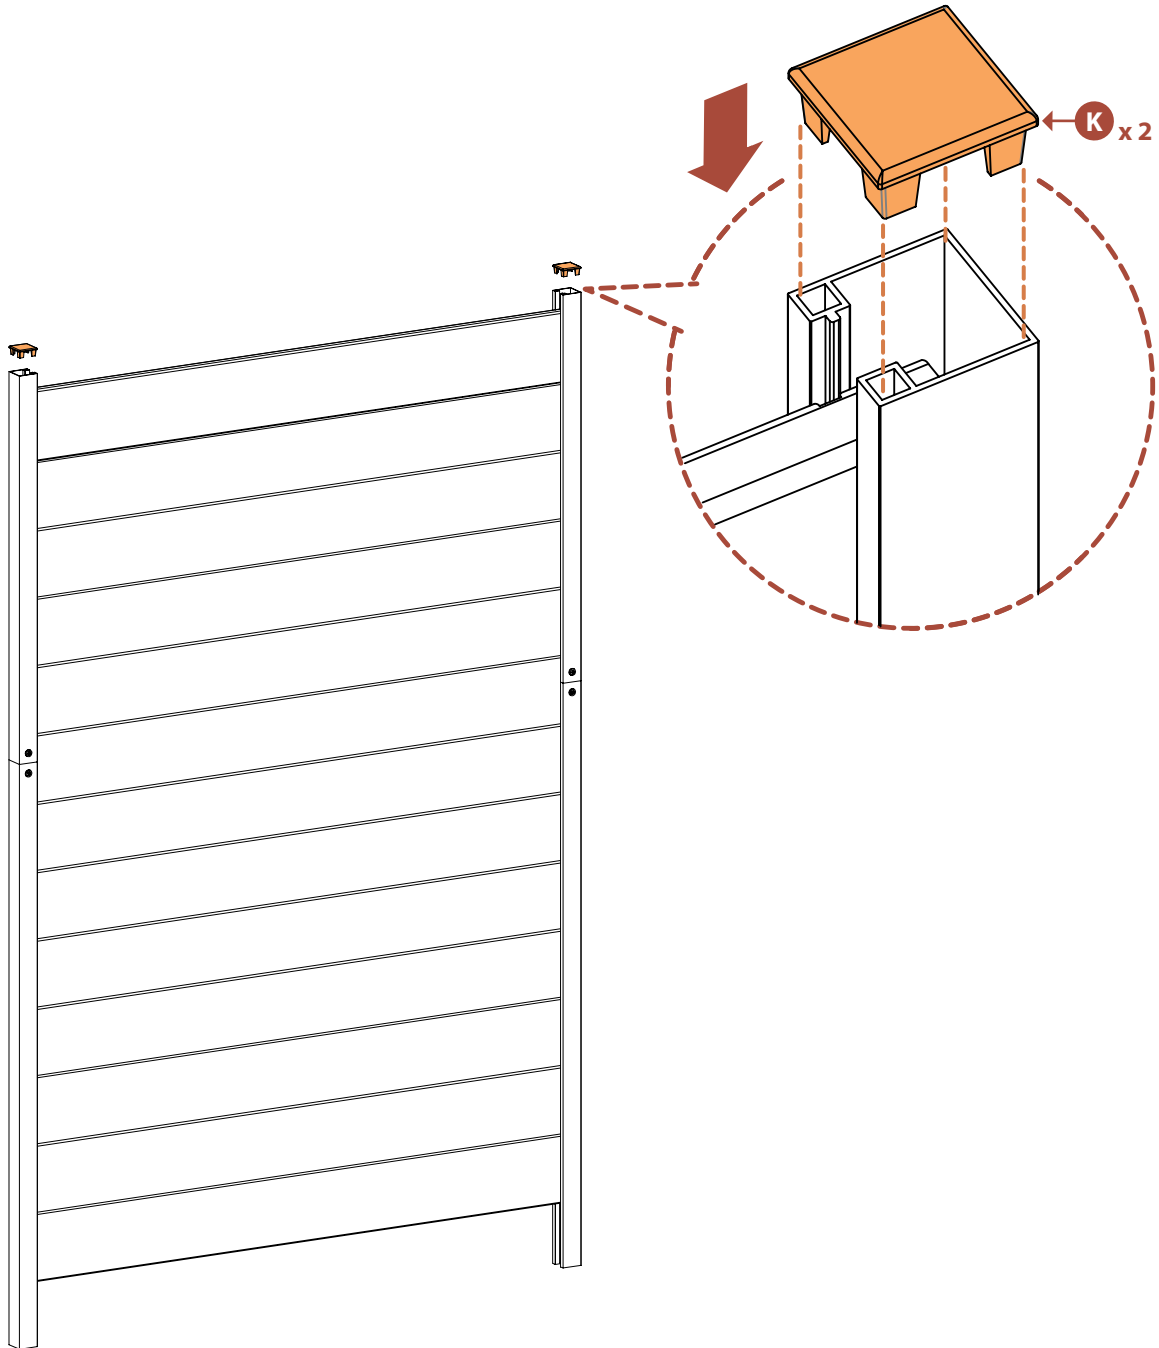



## IF INSTALLING MULTIPLE PANELS



**L** x2




**M** x4



**O** x1


► Joiner clip holes do not come pre-drilled to provide flexibility when installing. Drill holes at your chosen locations with the included drill bit - part (O).

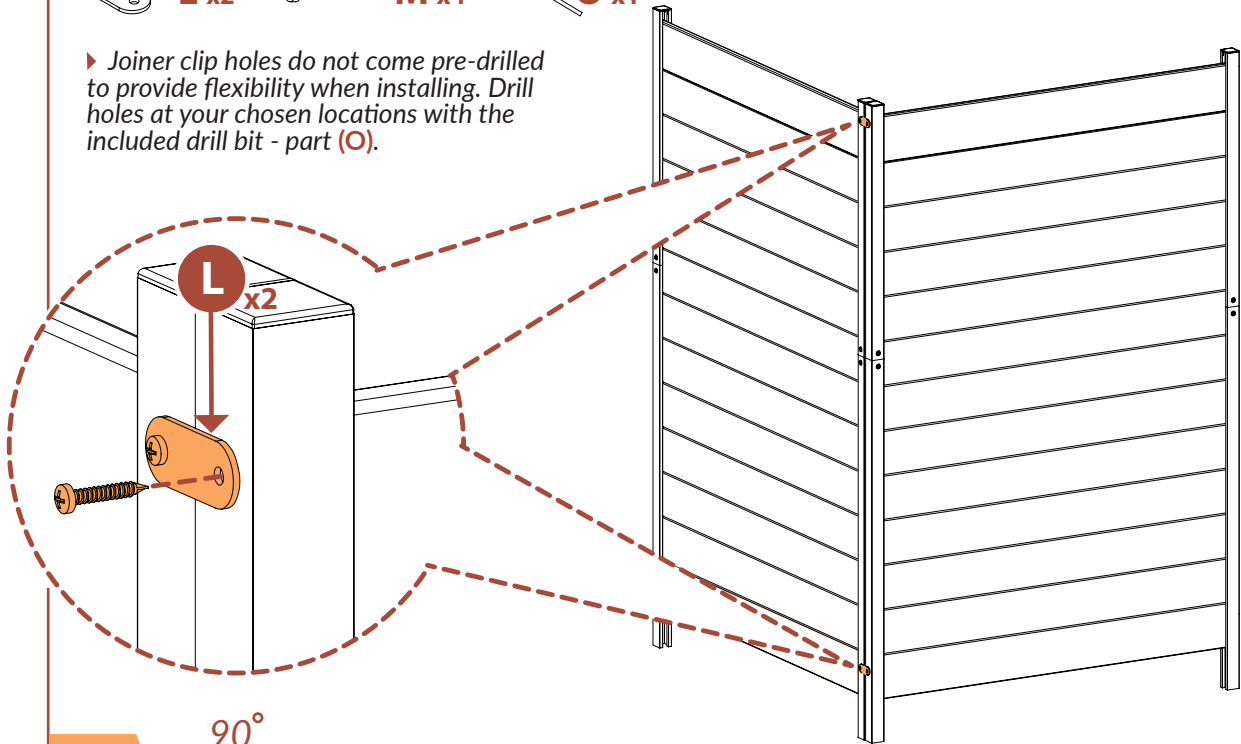

90°

OR

180°

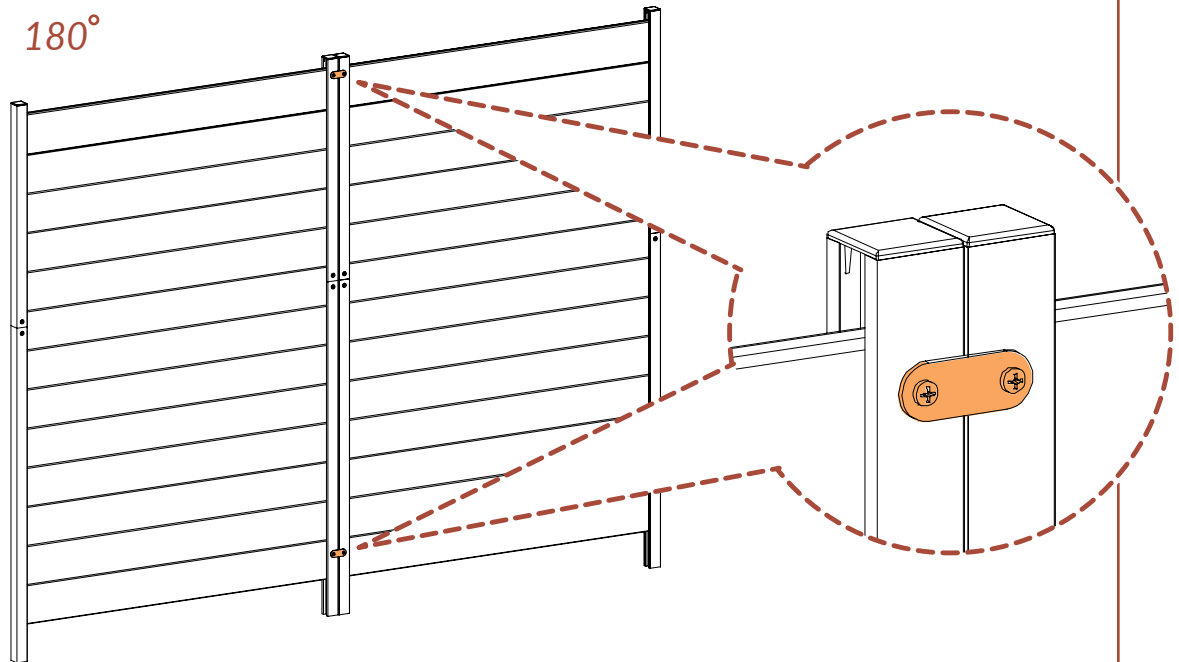



HIDE IT WITH STYLE

[www.encloscreens.com](http://www.encloscreens.com)

[support@encloscreens.com](mailto:support@encloscreens.com)



**704-892-5222**  
**877-234-6196**



*6935 Reames Rd. Ste. K.*  
*Charlotte, NC 28216*



**ASSEMBLY**  
**INSTRUCTIONS**  
**EC18043**