


ASSEMBLY INSTRUCTIONS EC18045

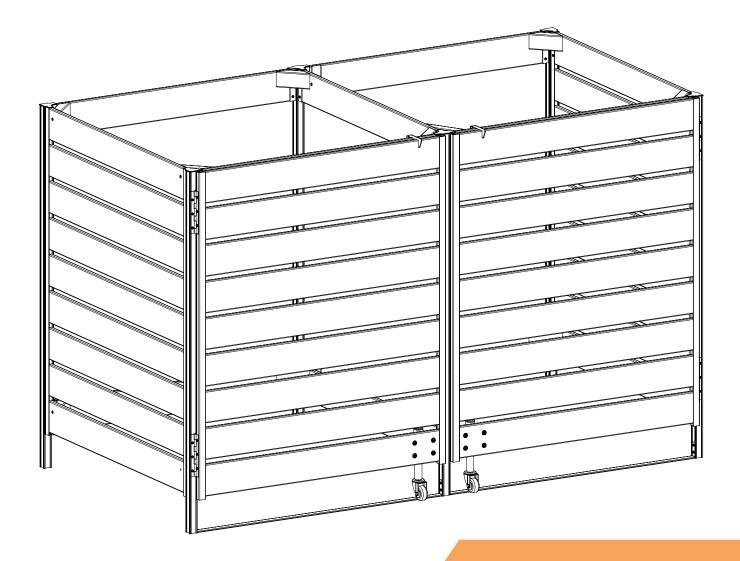

www.encloscreens.com

Dual Bin

Garbage Enclosure

80 1/4" W x 41 1/2" L x 50 7/8" H





3 hours Approximate assembly



Scan the QR code for an assembly video

INFORMAT

MISSING OR DAMAGED PARTS?



Visit Our Website so we can help you right away! parts.nychbrands.com

You can also reach us via phone or email.

Hours of Operation - Weekdays 9am-5pm EST

- To better help you, > Your product number (EC18045)

 - please have the > Your affected part letters (pages 4-7)

 - **following** > Your original product box

NEED ASSEMBLY HELP?

If you are having problems with assembly or installation of this product, please contact at:


704-892-5222 **/** 877-234-6196

☑ support@encloscreens.com

NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, you will need to initiate the return from the company you originall purchased from.


DETAILED PRODUCT DIMENSIONS & SPECIFICATIONS

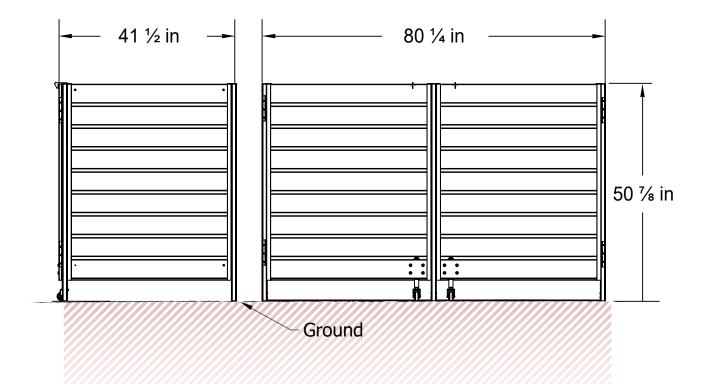




▶ Tools required for a smoother installation experience.




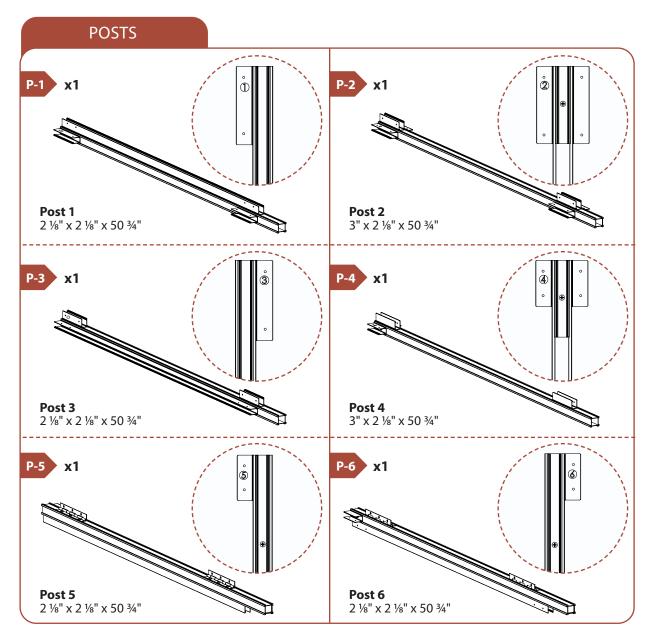




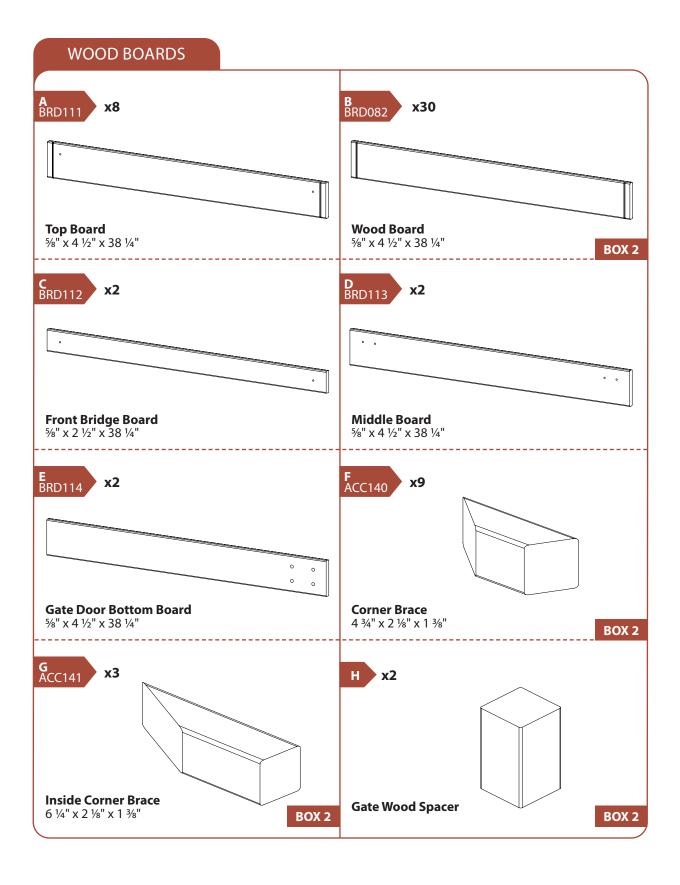




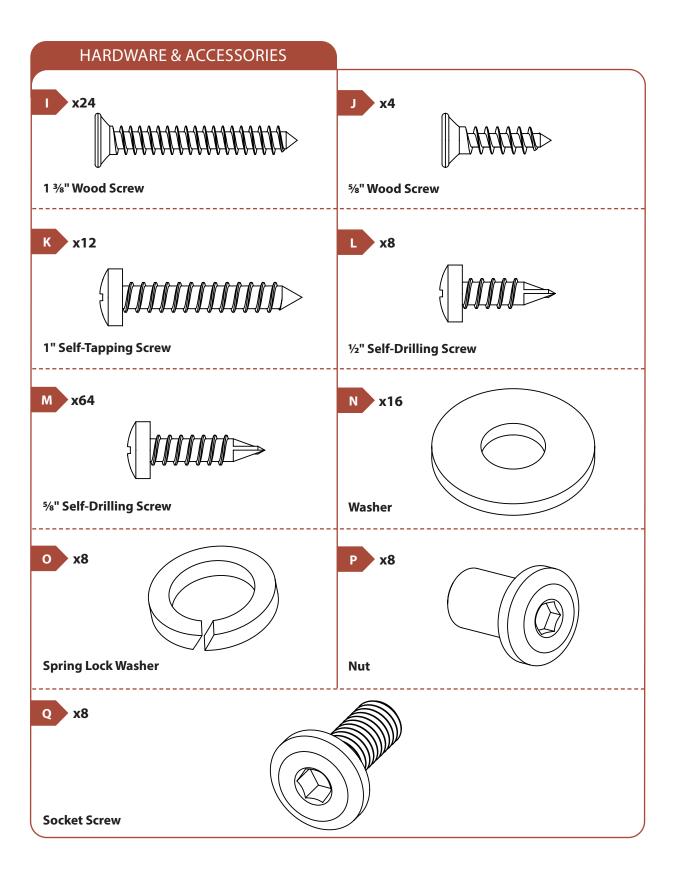





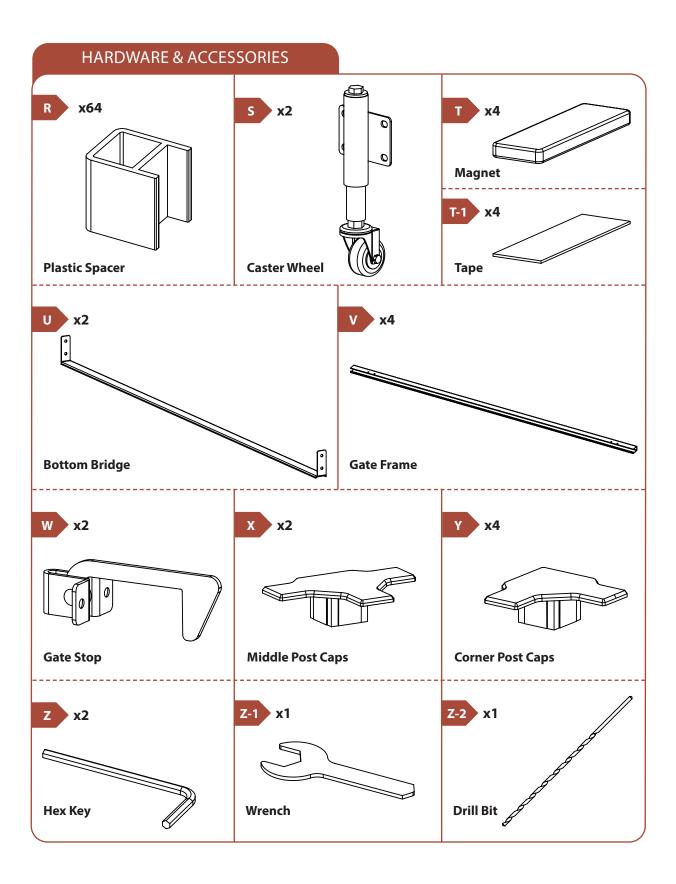



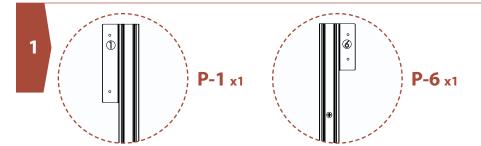

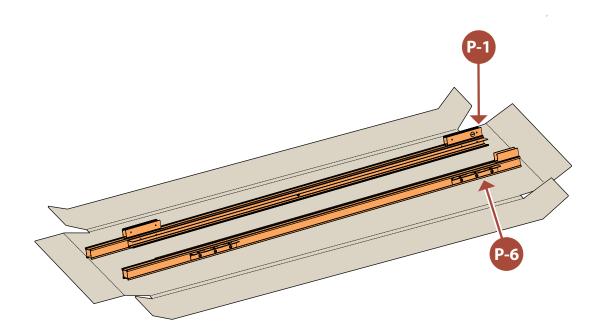


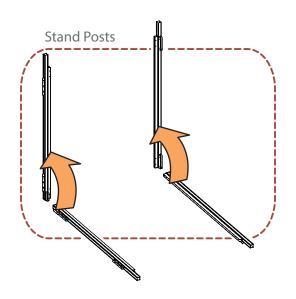







Ensure that the hole on Top Board (A) is facing down. Follow with one Plastic Spacer (R) on each side.

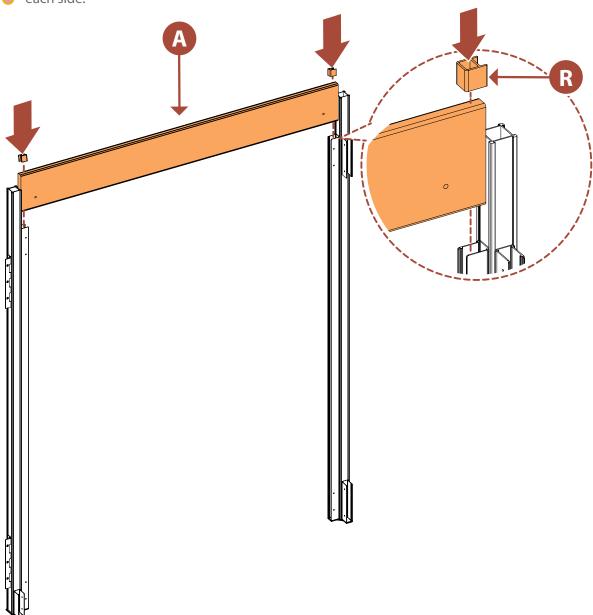


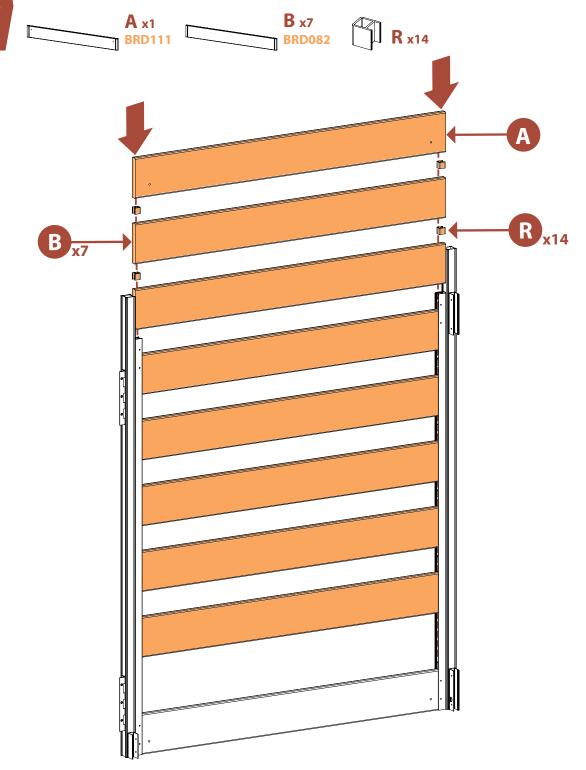





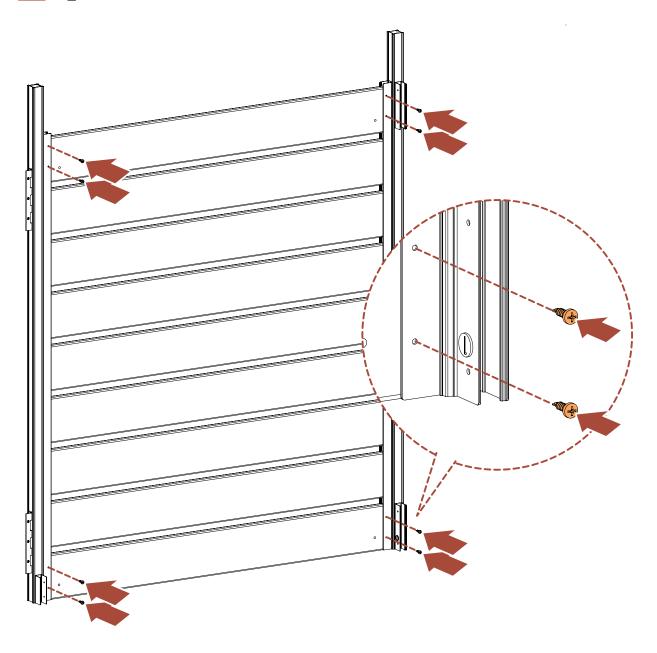





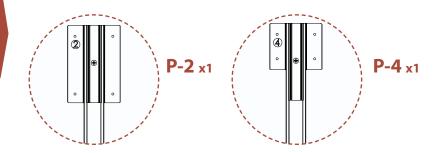


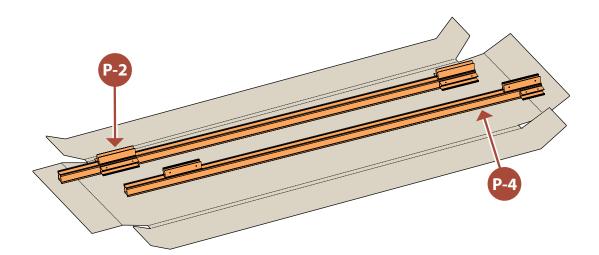


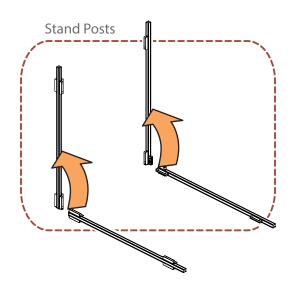


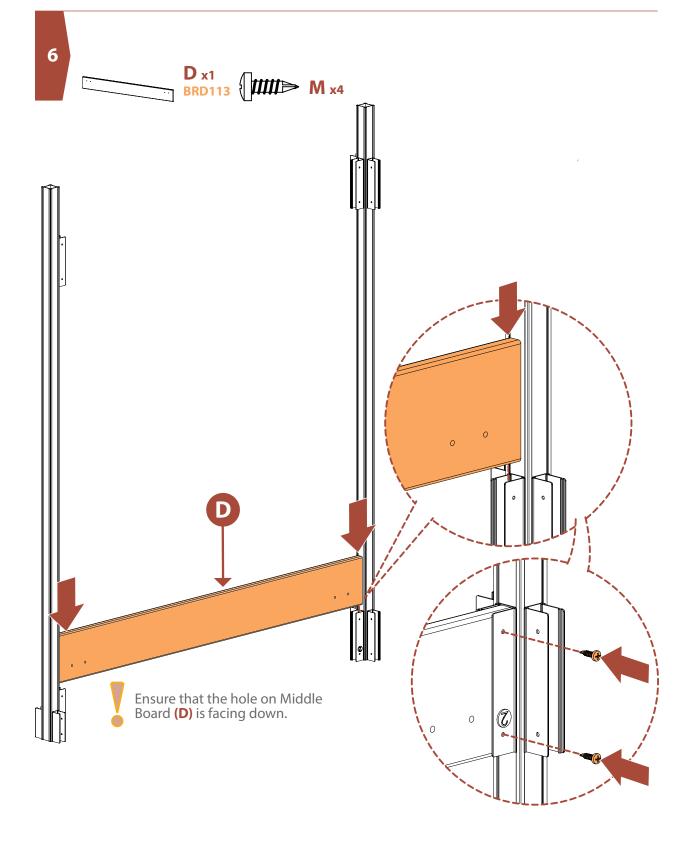

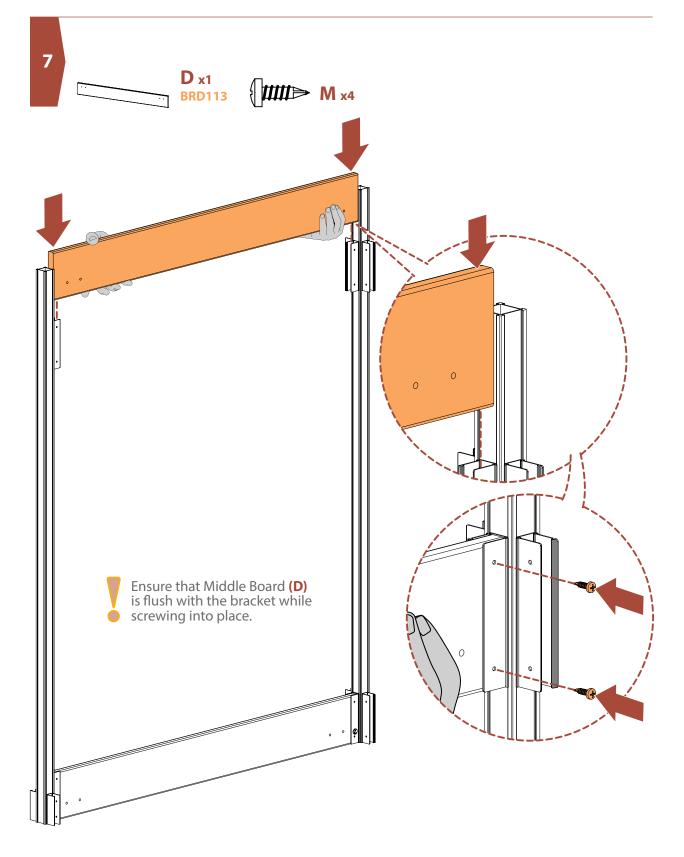

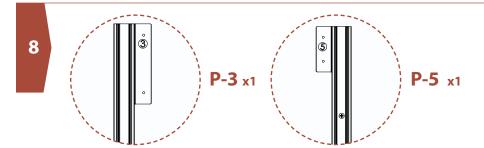


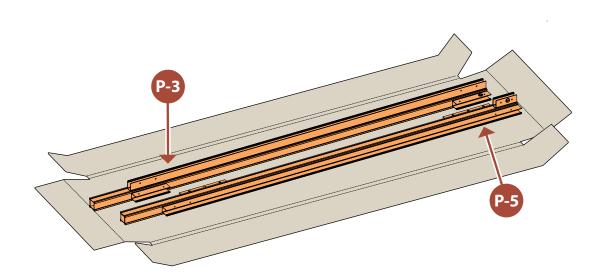

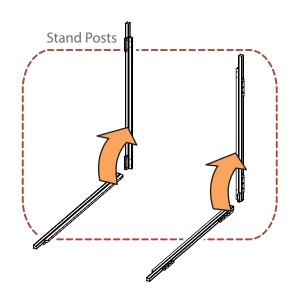







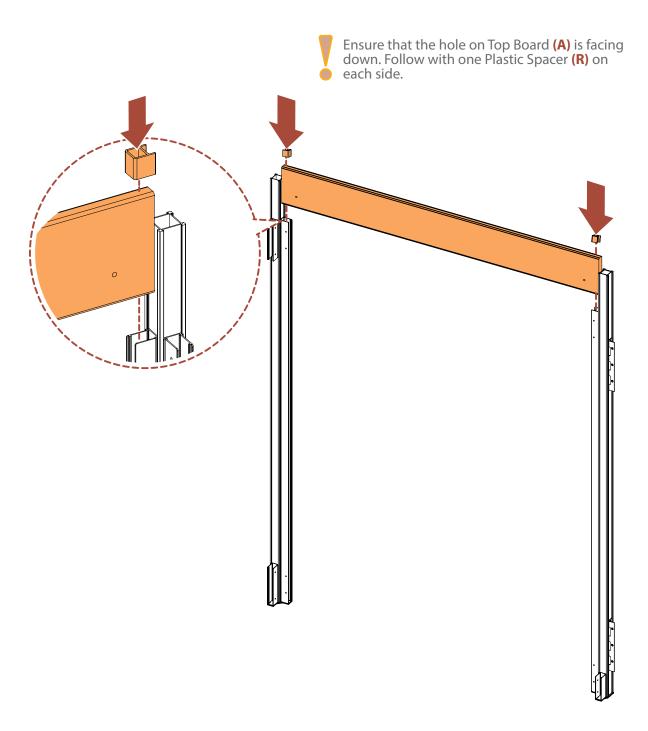





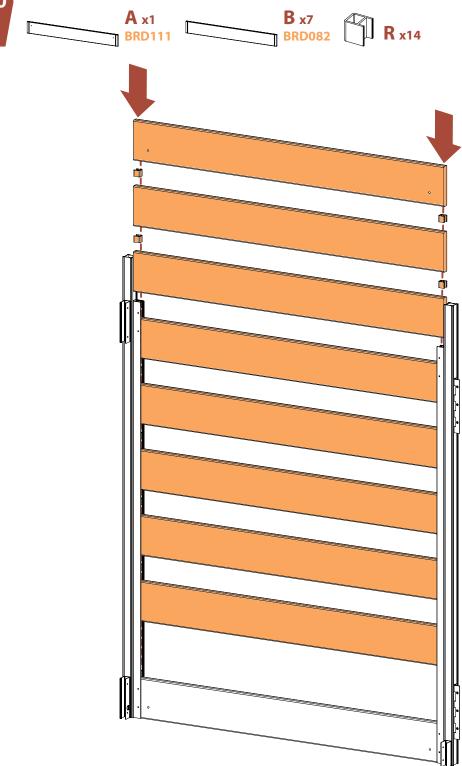


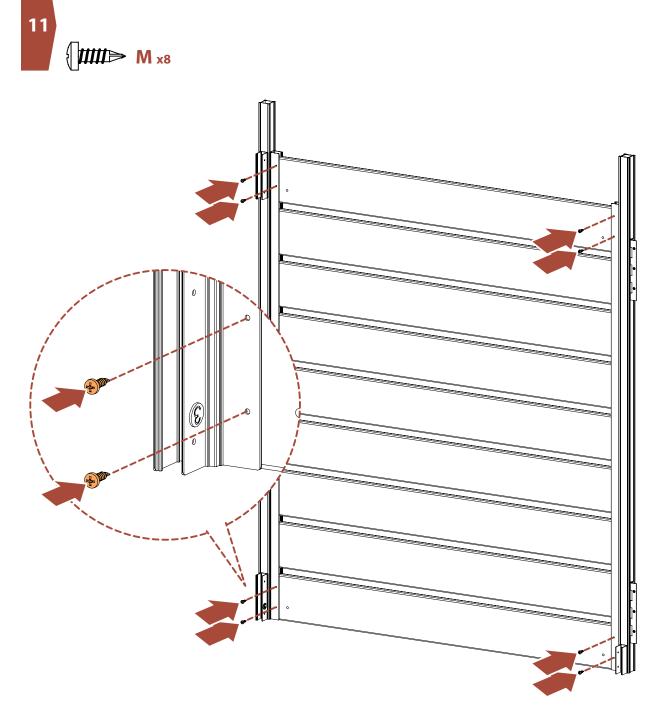





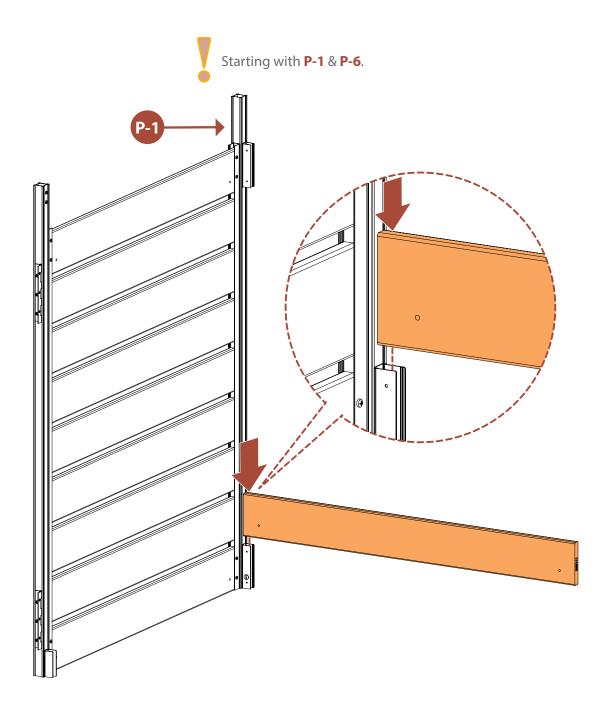

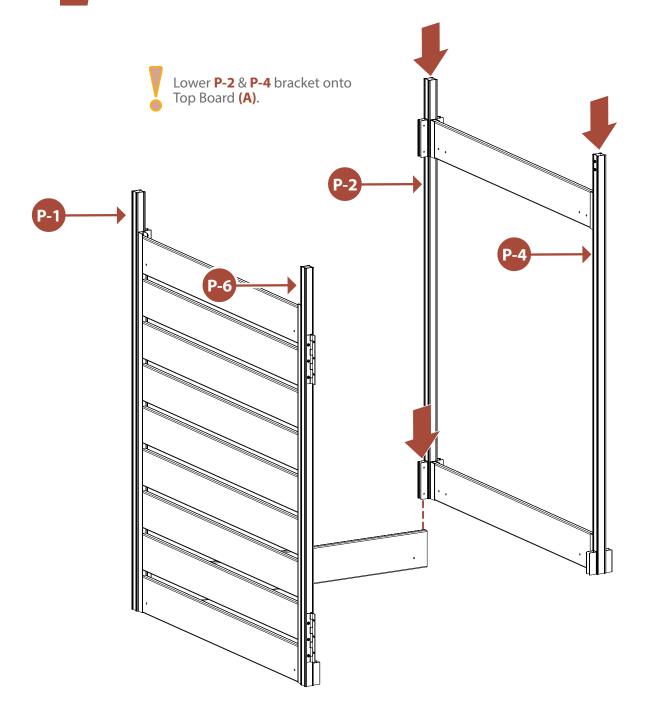


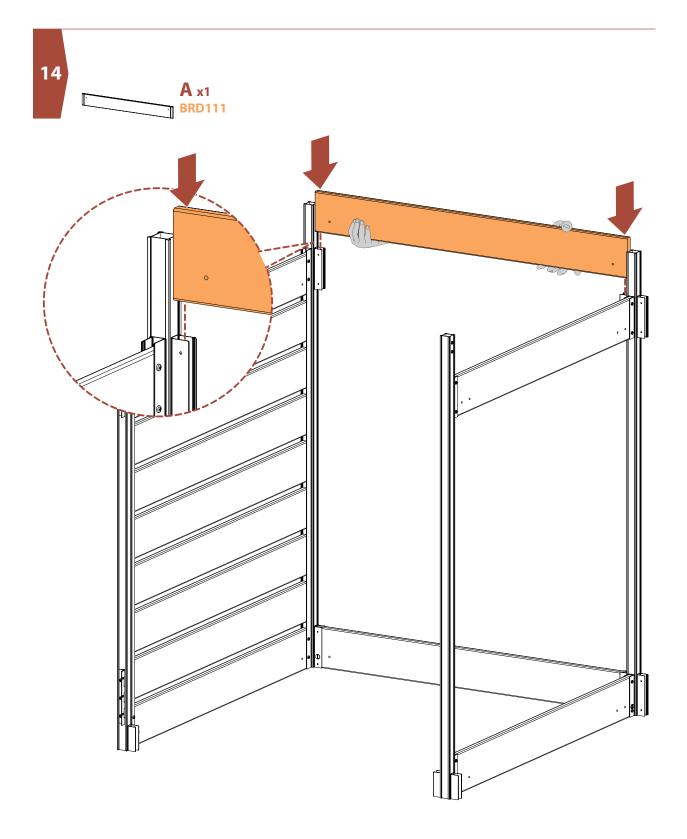


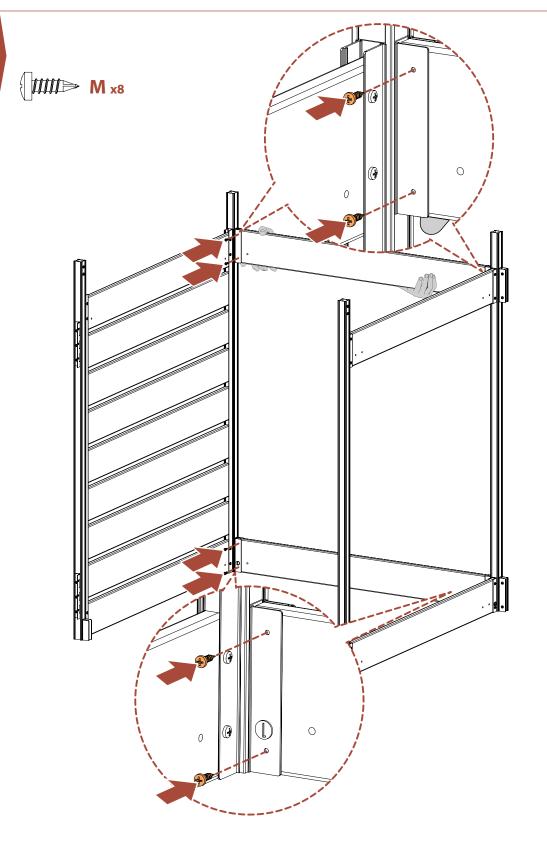


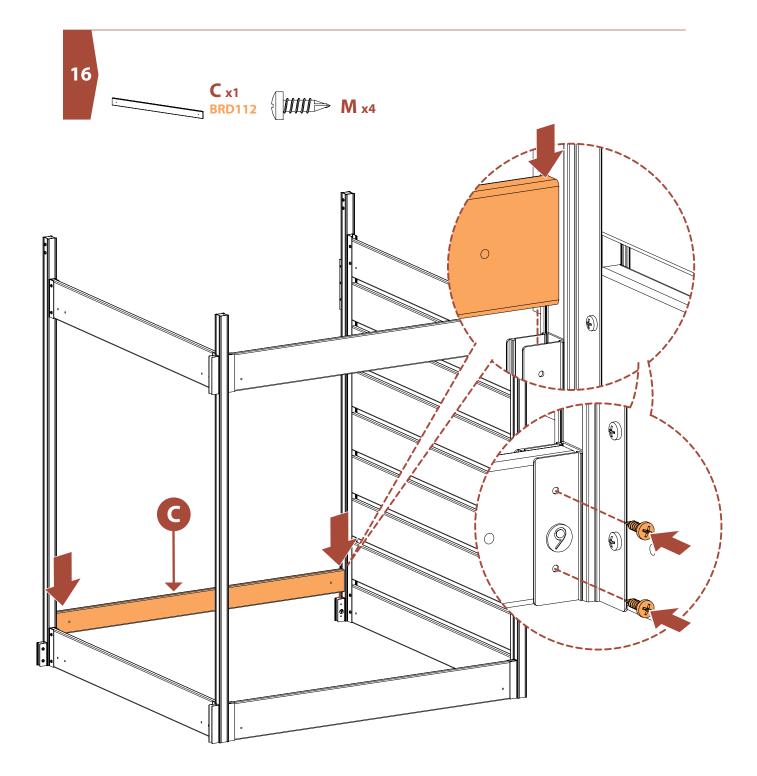




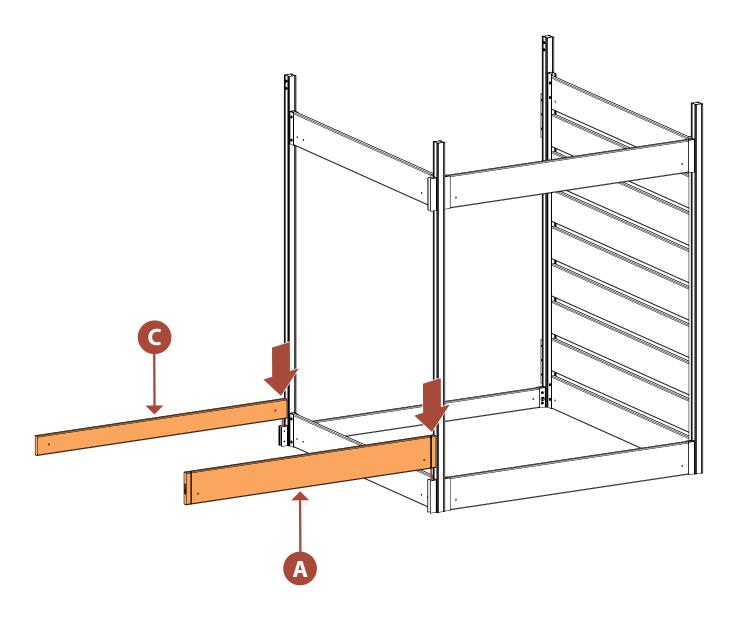


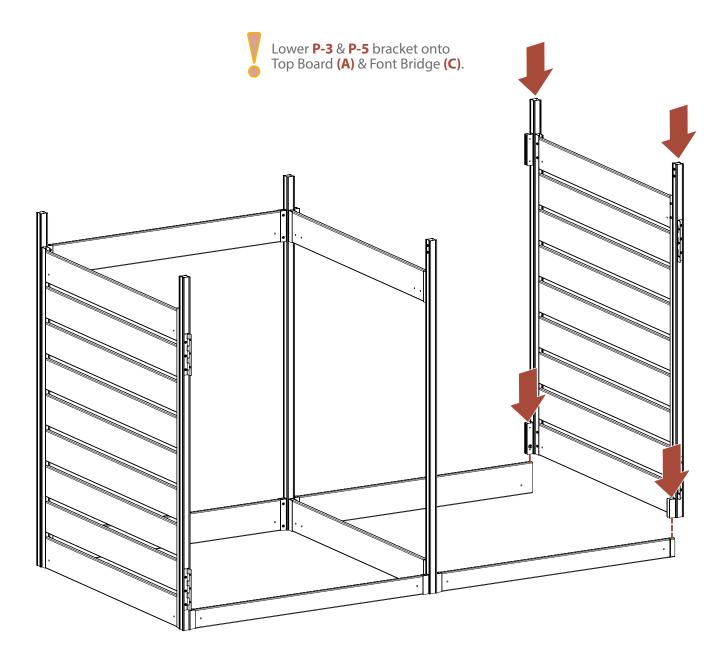


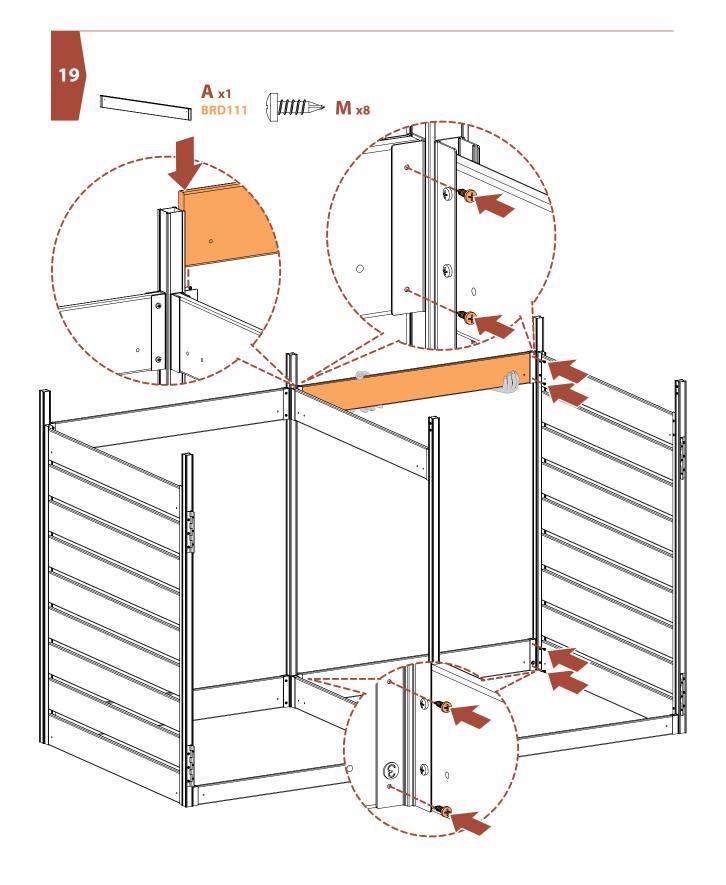





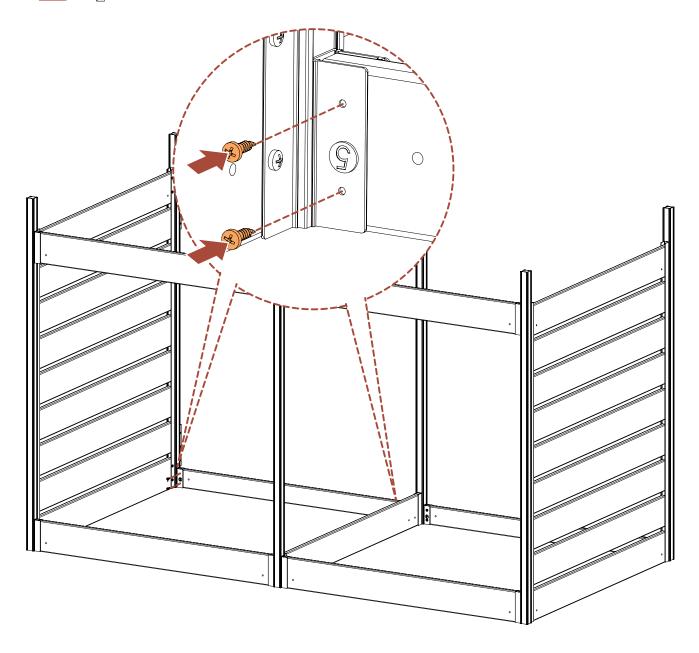


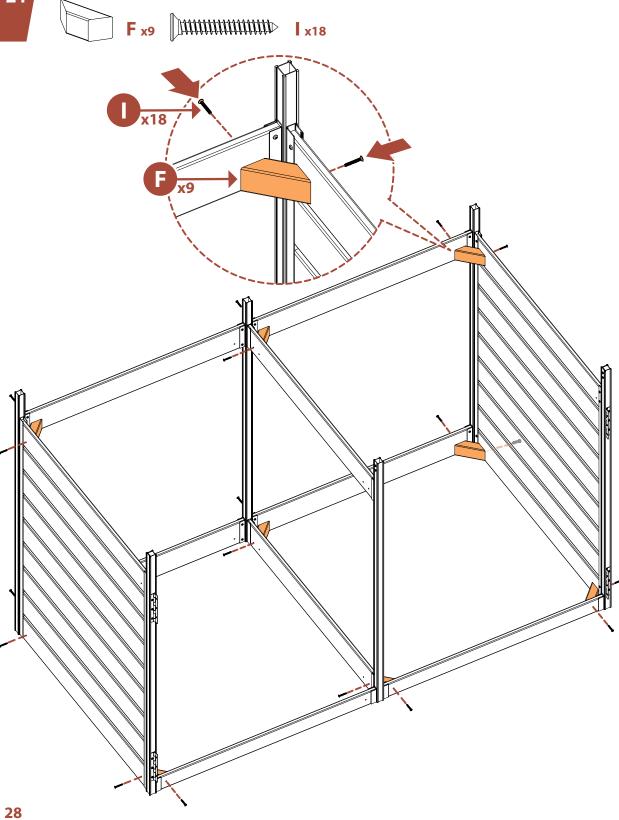

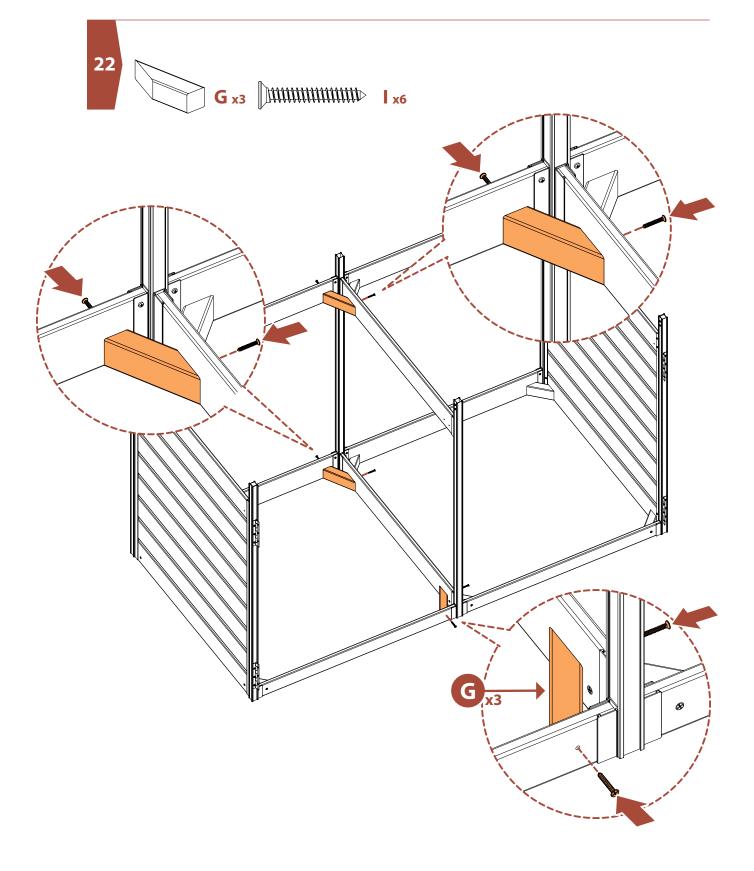


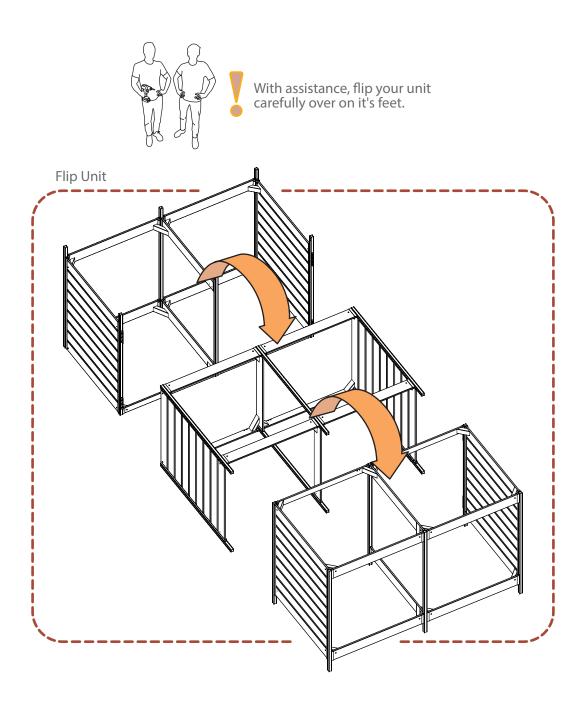

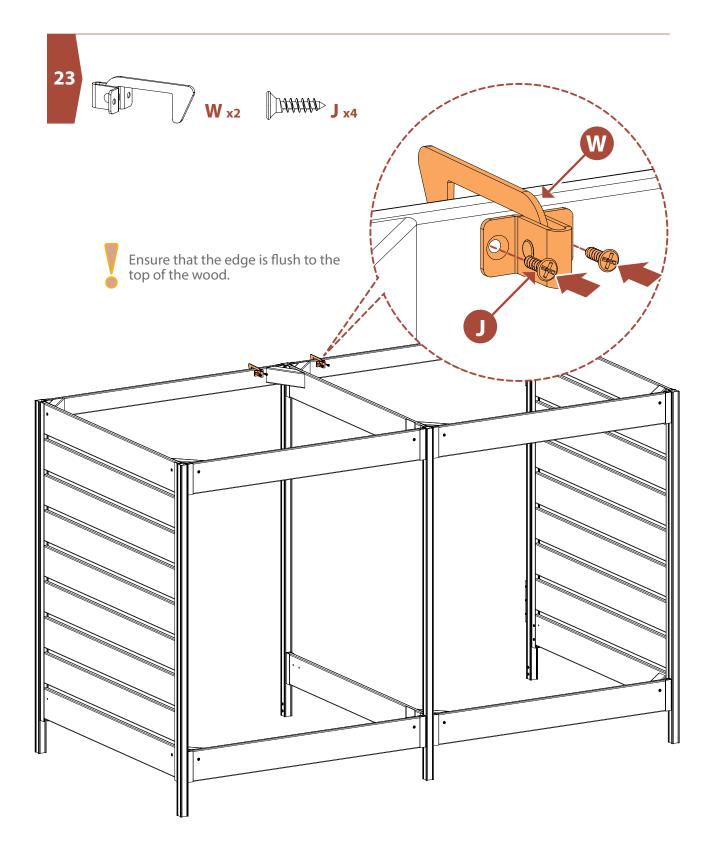


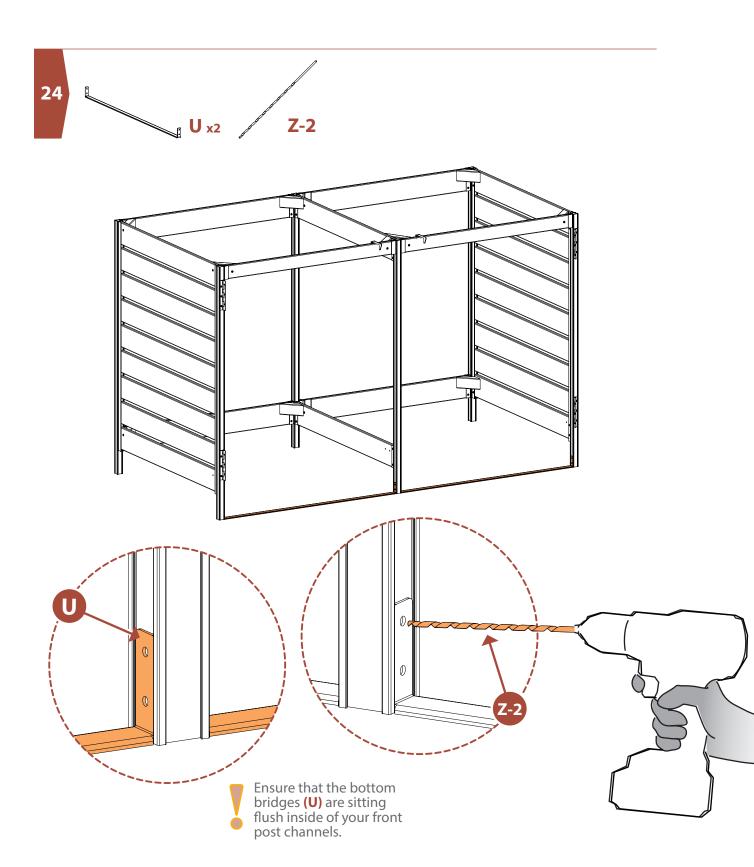




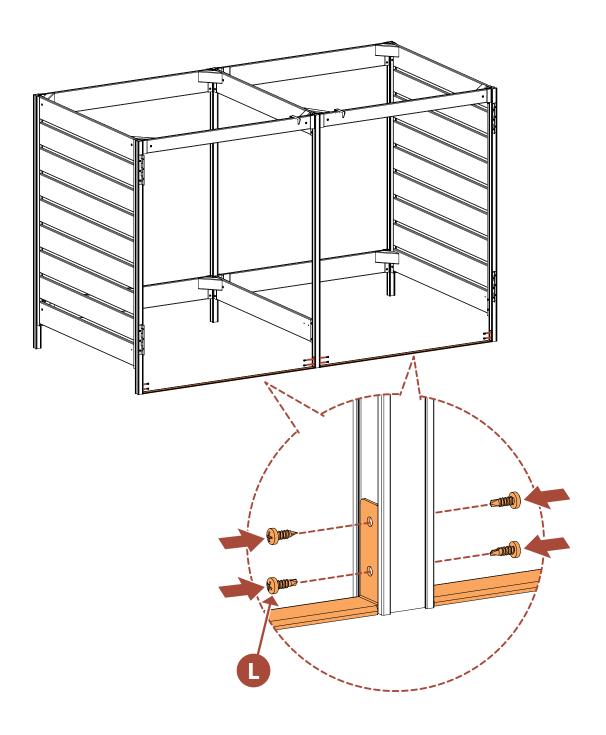





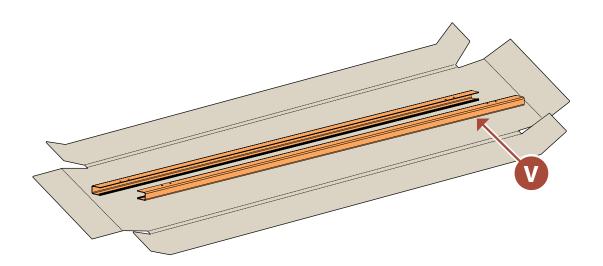


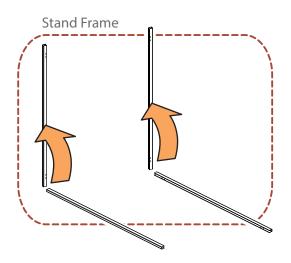


27 B x1 BRD082 R x2 Ensure that wood board **(B)** is inserted first followed by a plastic spacer **(R)** on each side. Ensure that they are slid to the bottom of the channel.

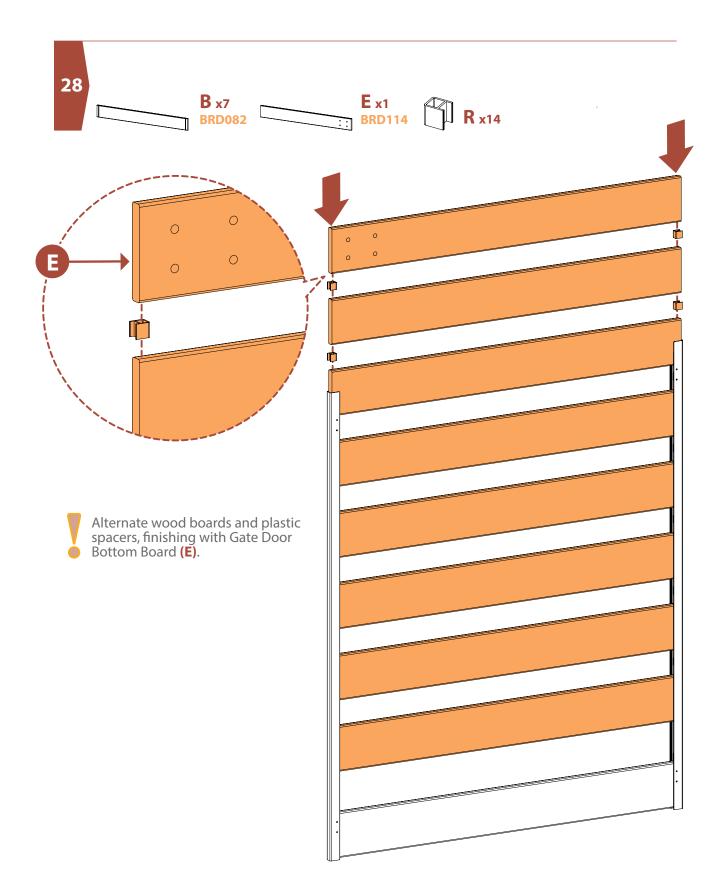


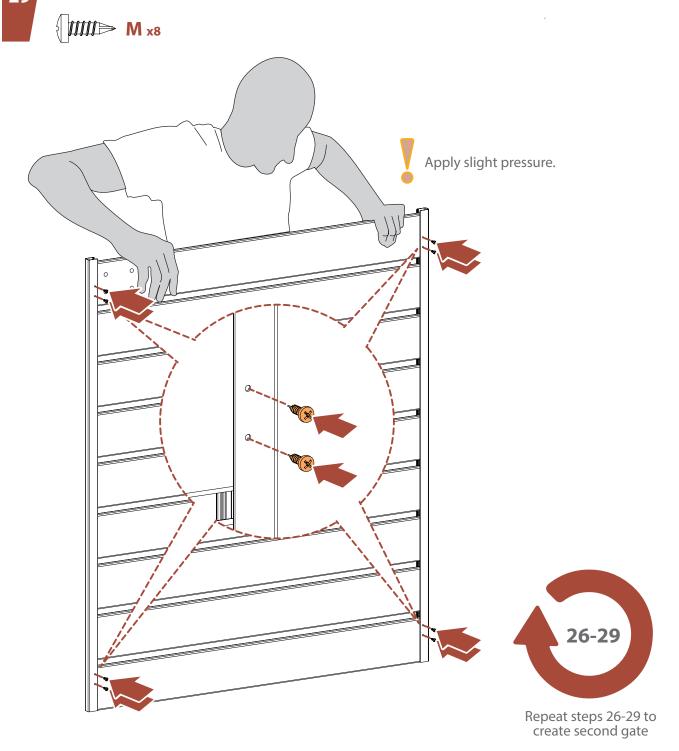


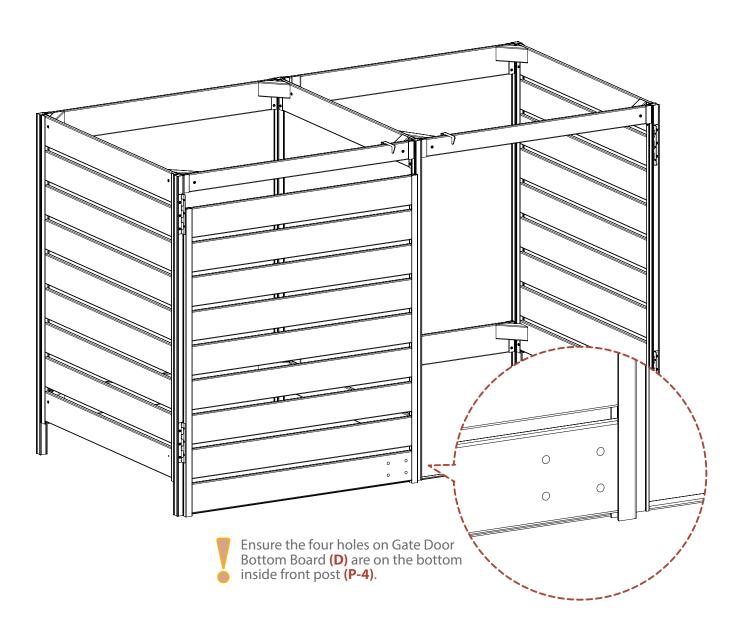


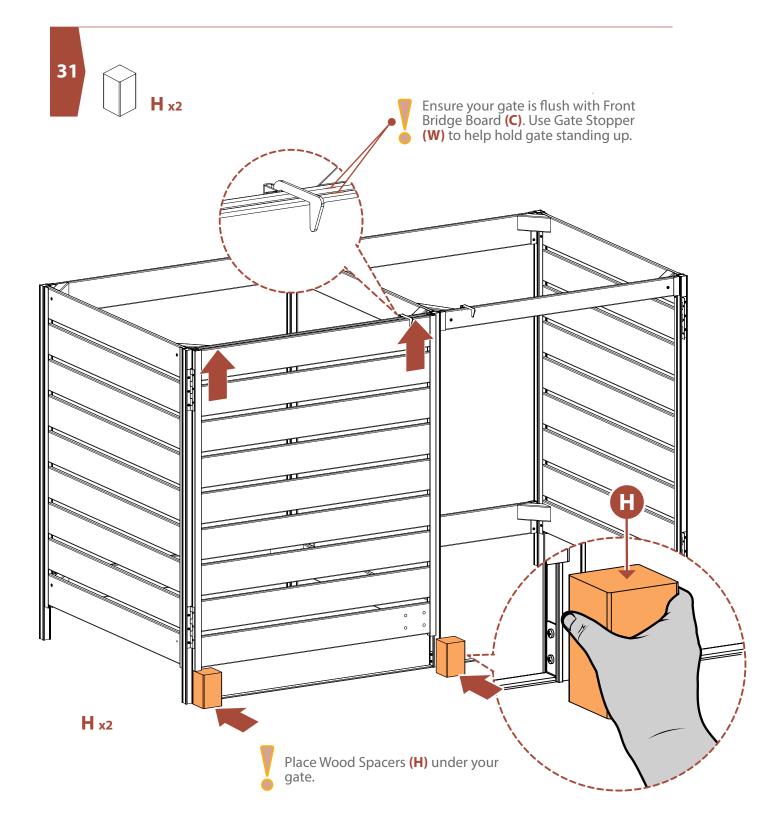


€ K x6

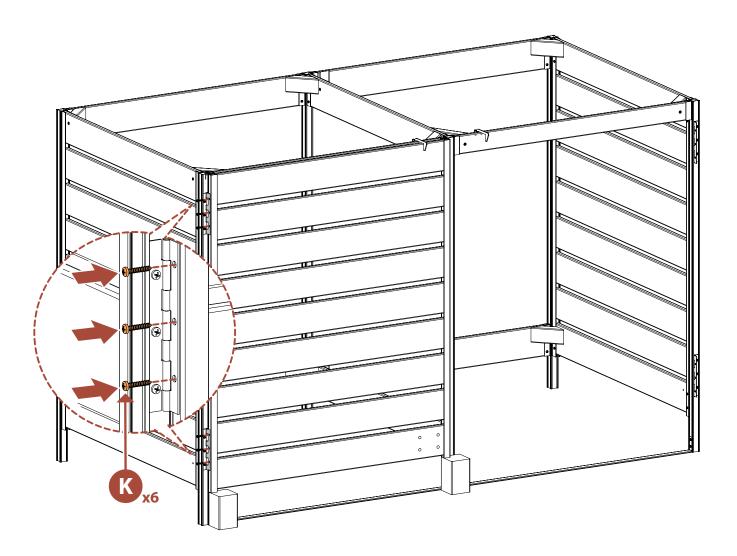


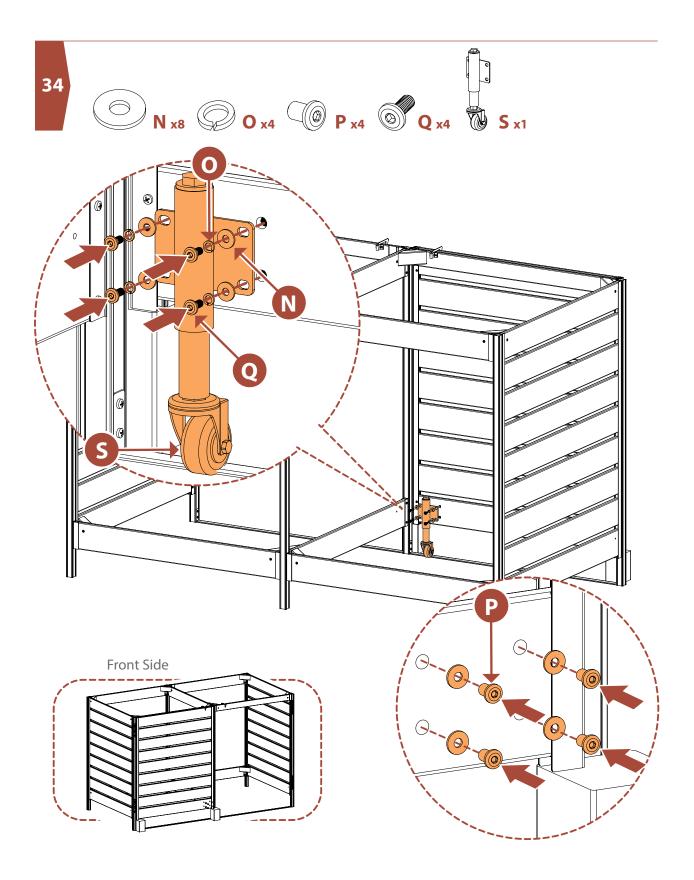

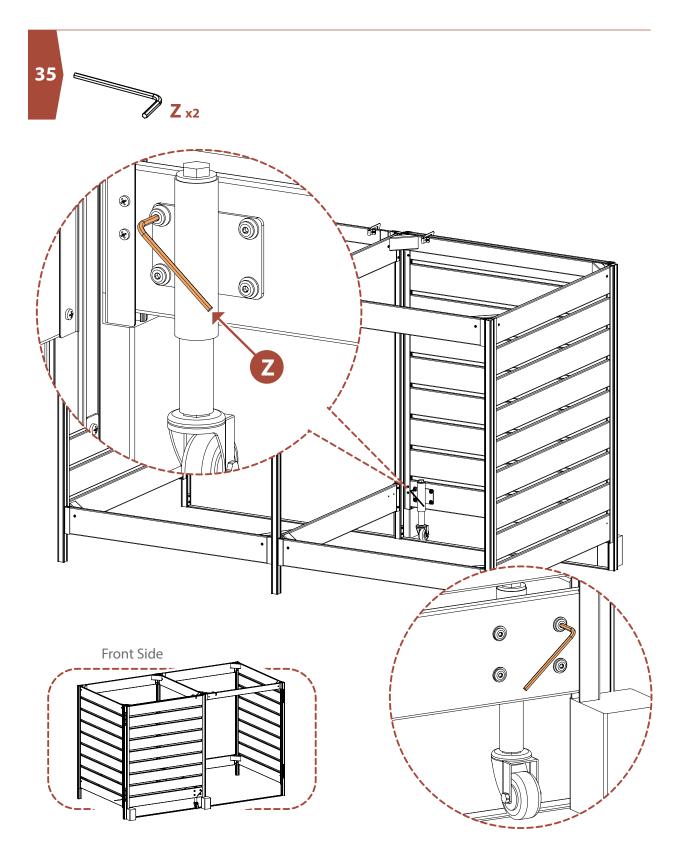


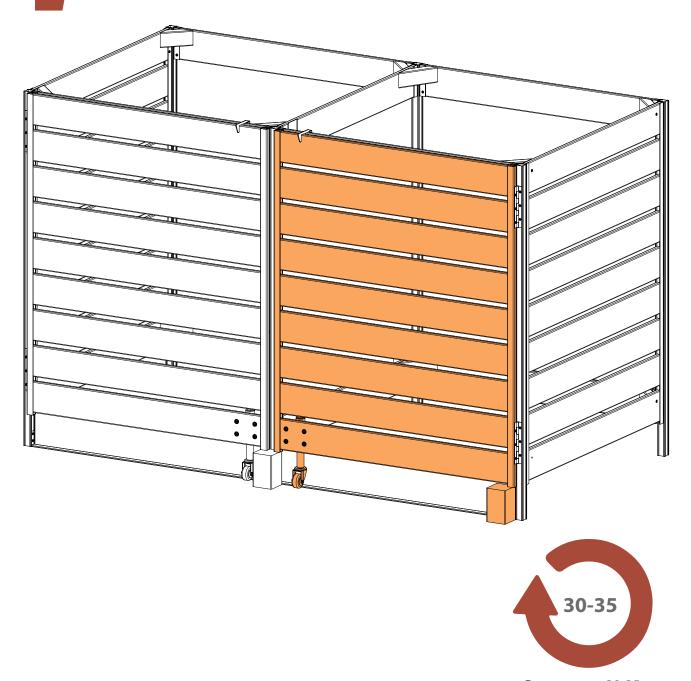

Repeat steps 30-35 to install second gate

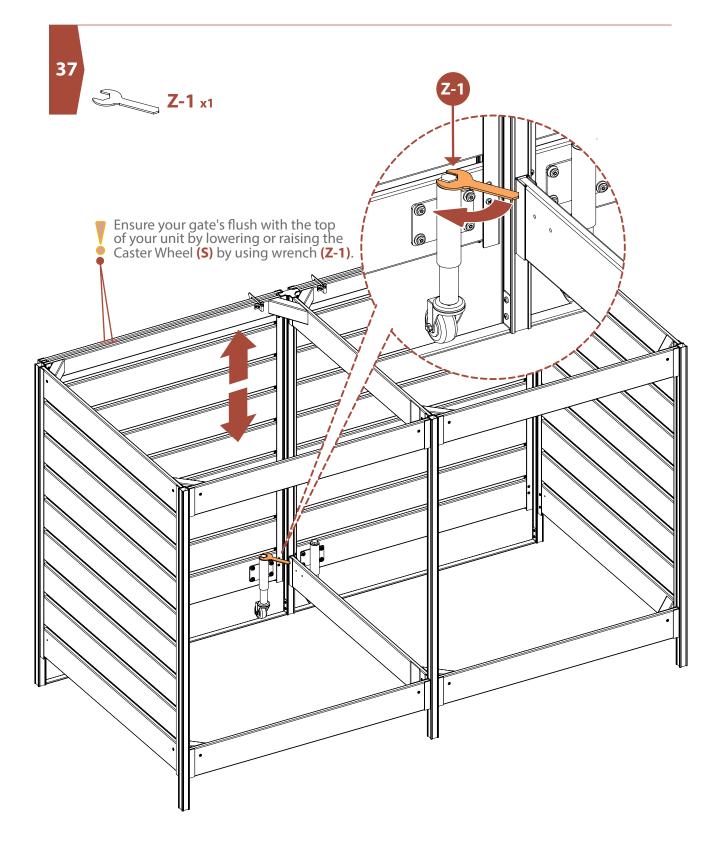



ADJUSTING CASTER WHEEL HEIGHT

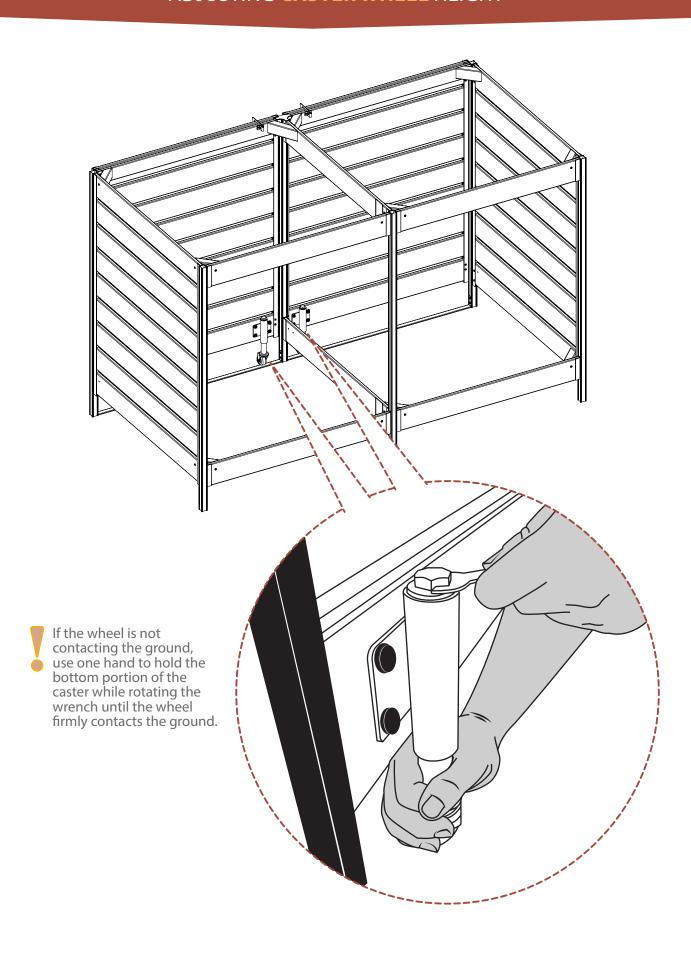






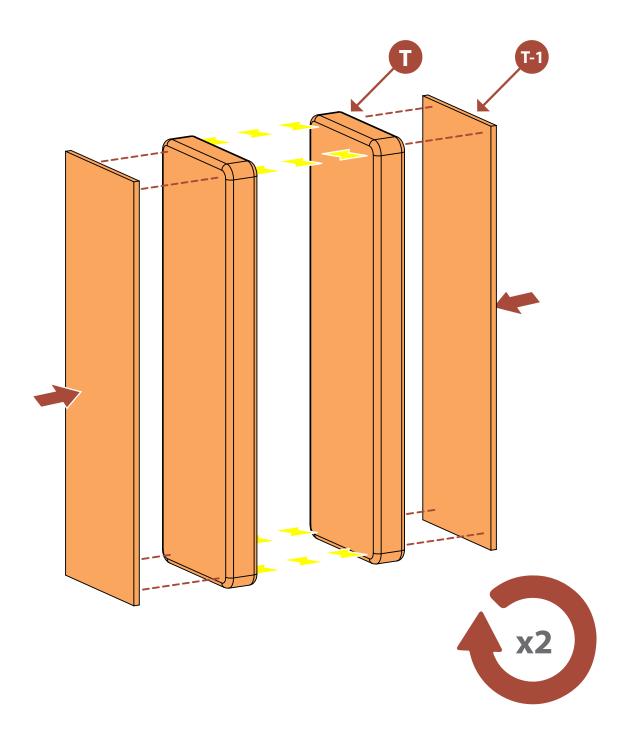

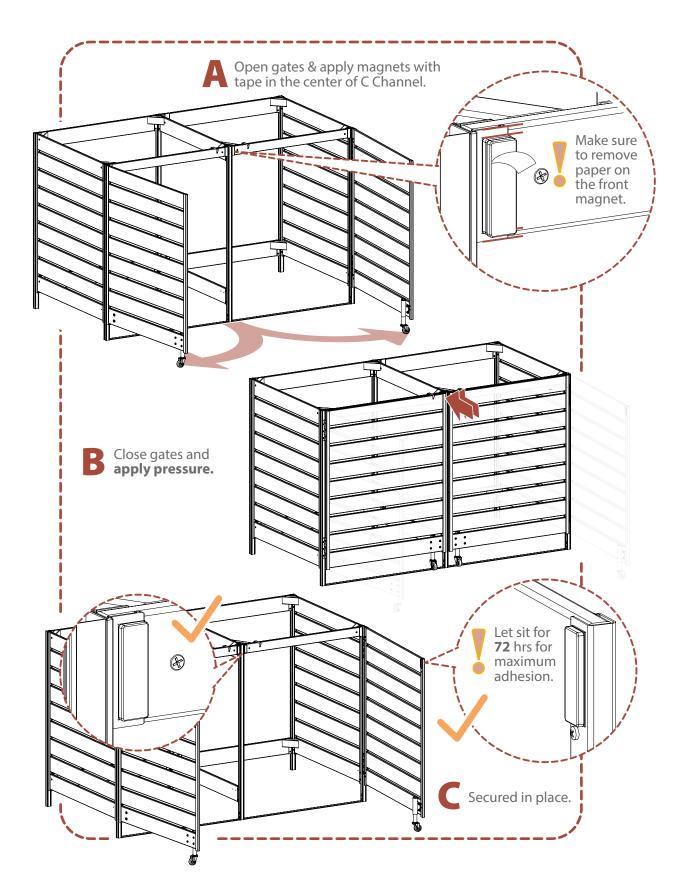





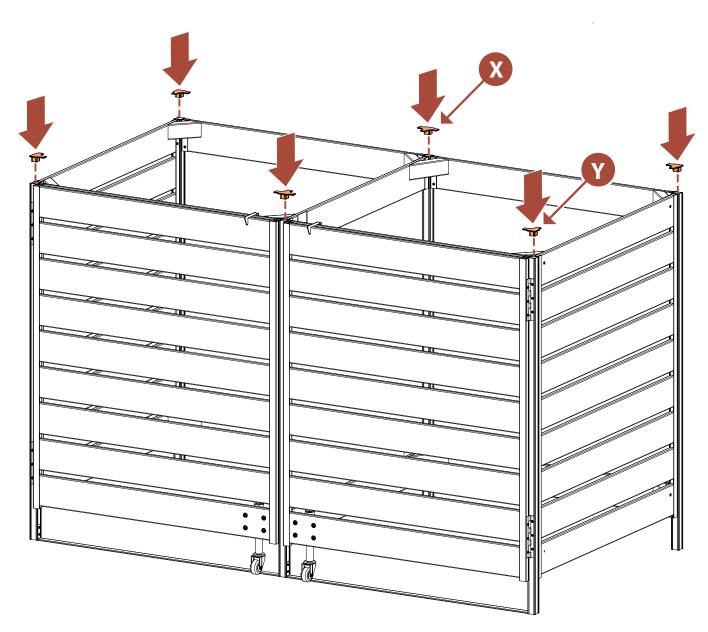

ENCLO HIDE IT WITH STYLE

www.**encloscreens**.com

support@encloscreens.com



704-892-5222 877-234-6196



6935 Reames Rd. Ste. K. Charlotte, NC 28216

