


ENCLO

HIDE IT WITH STYLE

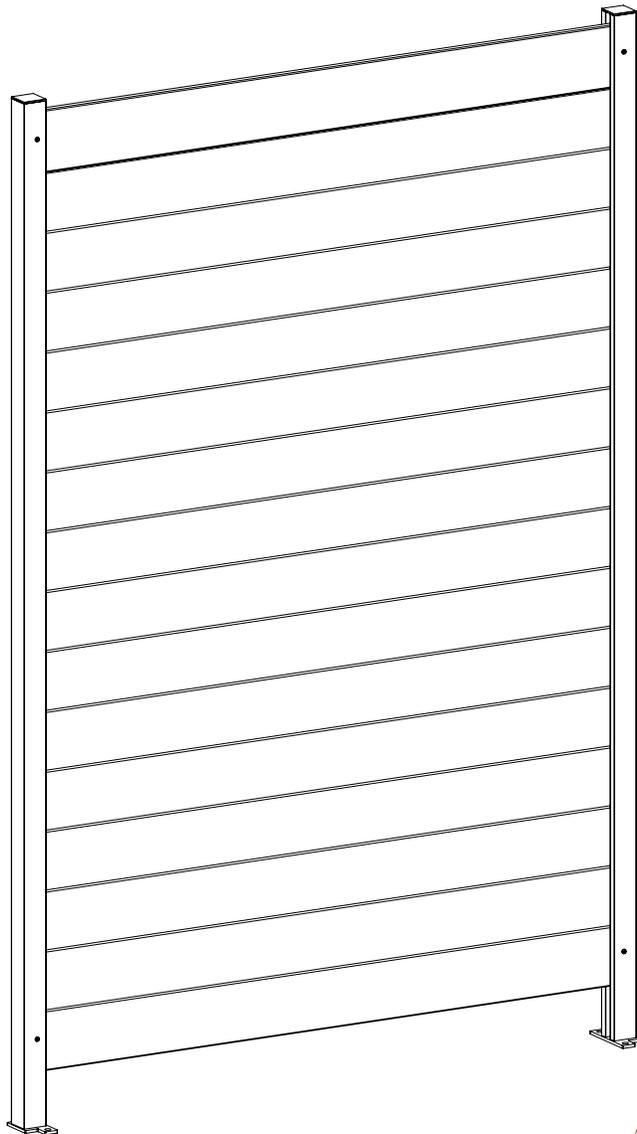

6ft Surface Mounted Privacy Wood Screen

48 1/2"W x 73"H

90 min
Assembly
Approximate time



Assembly Video
Scan the QR Code below



ASSEMBLY
INSTRUCTIONS

EC18047

www.encloscreens.com

VER. 100925

GENERAL INFORMATION

MISSING OR DAMAGED PARTS?



➤ **Visit Our Website**
so we can help you right away!
parts.nychbrands.com

* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, **please have the following**

- Your product number (**EC18047**)
- Your affected part letters (**pages 4**)
- Your original product box

NEED ASSEMBLY HELP?


If you are having problems with assembly or installation of this product,
please contact at:

📞 **704-892-5222 / 877-234-6196** ✉ **support@encloscreens.com**

NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

DETAILED **PRODUCT DIMENSIONS & SPECIFICATIONS**

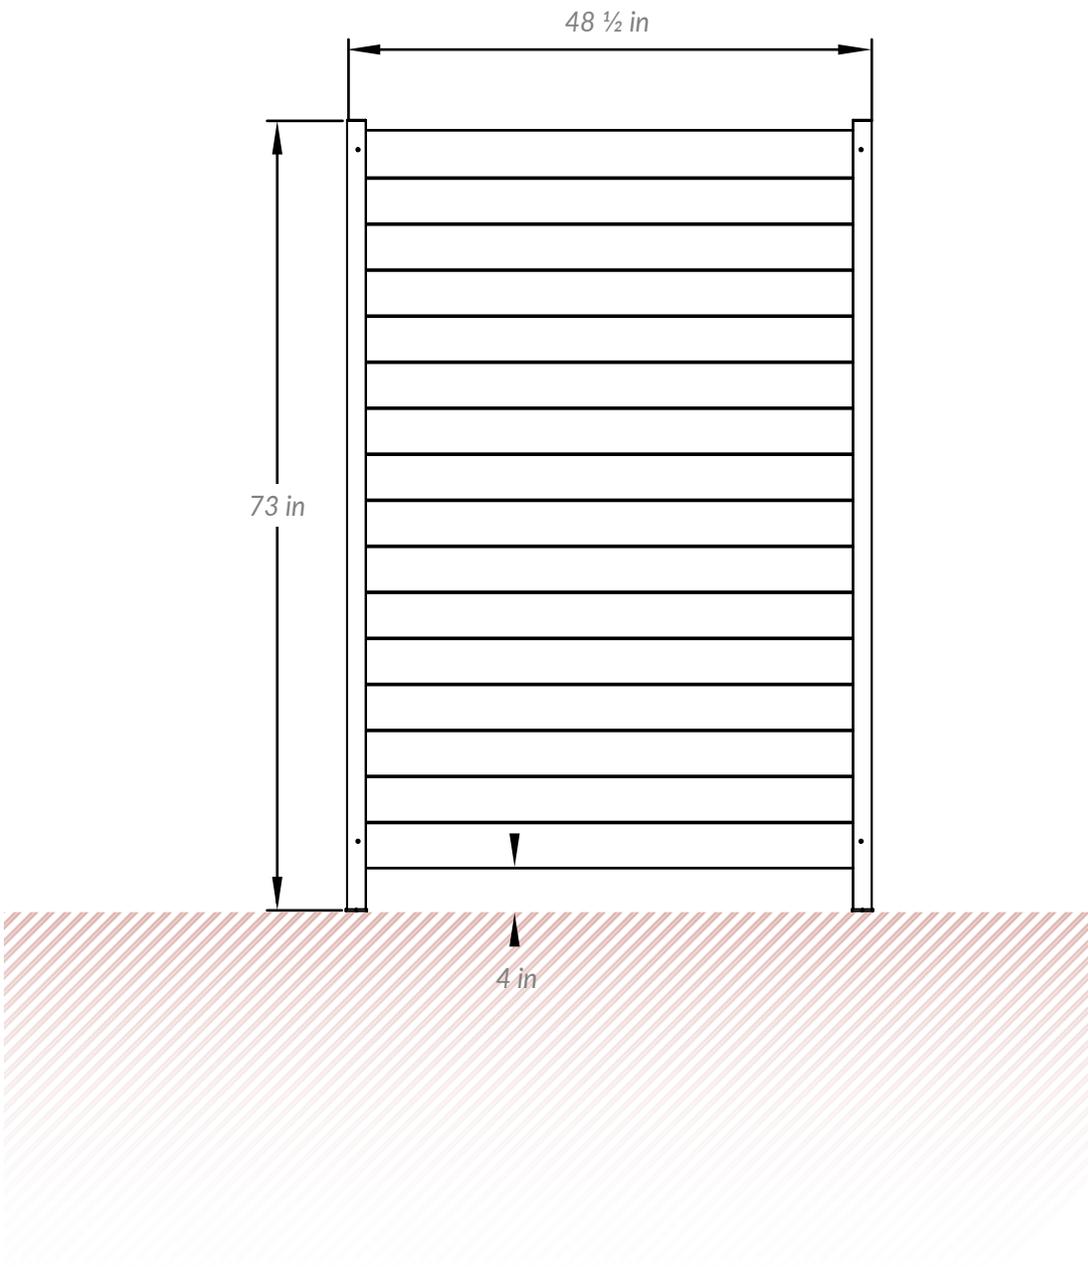


LAY OUT MATERIALS

LARGE PARTS


A

Left Post (1)
1 3/4" x 1 3/4" x 72 7/8"

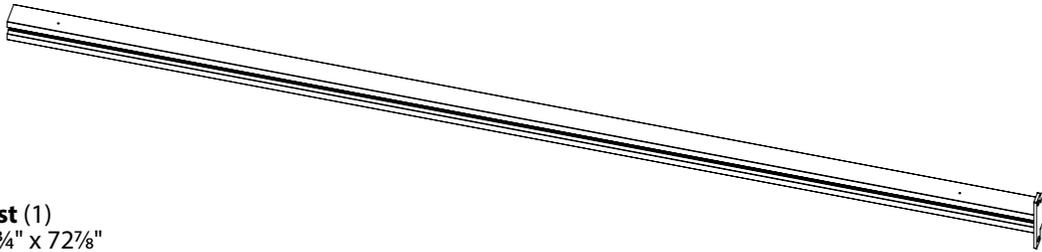

B

Right Post (1)
1 3/4" x 1 3/4" x 72 7/8"

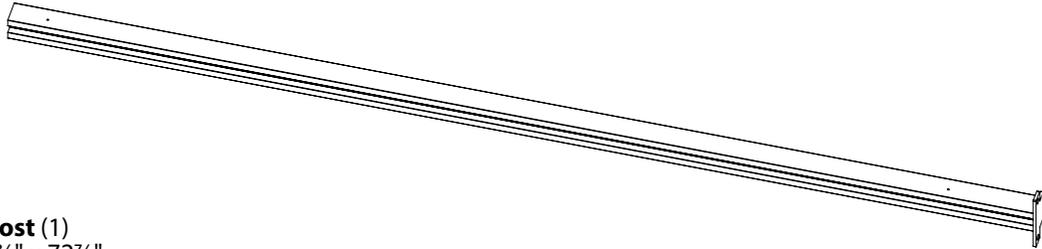

C

Wooden Slats (15)
5/8" x 4 1/2" x 47 1/4"



D


Top Board (1)
5/8" x 4 1/2" x 47 1/4"



SMALL PARTS


E

Wooden Spacer (2)



F

Post Cap (2)

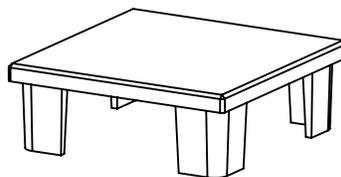

G


1" Self-Drilling Stainless Steel Screw (8)




TOOLS AND OPTIONAL HARDWARE

NOT INCLUDED

► We recommend 2 people for a smoother assembly.

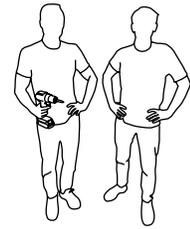

DECK MOUNT

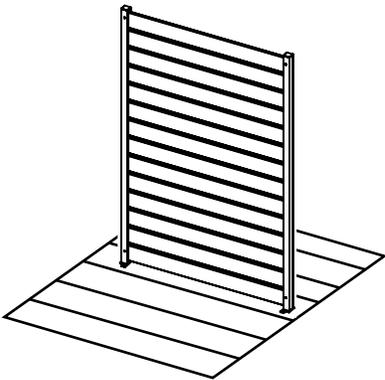


Power Drill




1/4" Wood Drill Bit




1/4" Lag Screws 3" Length (4)




Matching Driver Bit



PATIO MOUNT

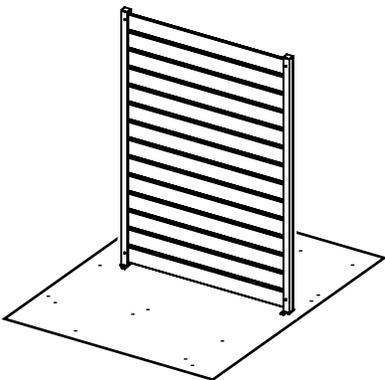


Hammer Drill

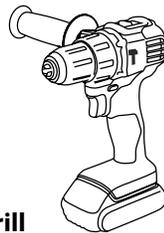


1/4" Concrete Drill Bit




Hammer




1/4" Concrete Wedge Anchor 2 1/4" Length (4)





Matching Wrench

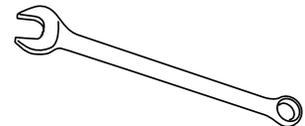


ASSEMBLING

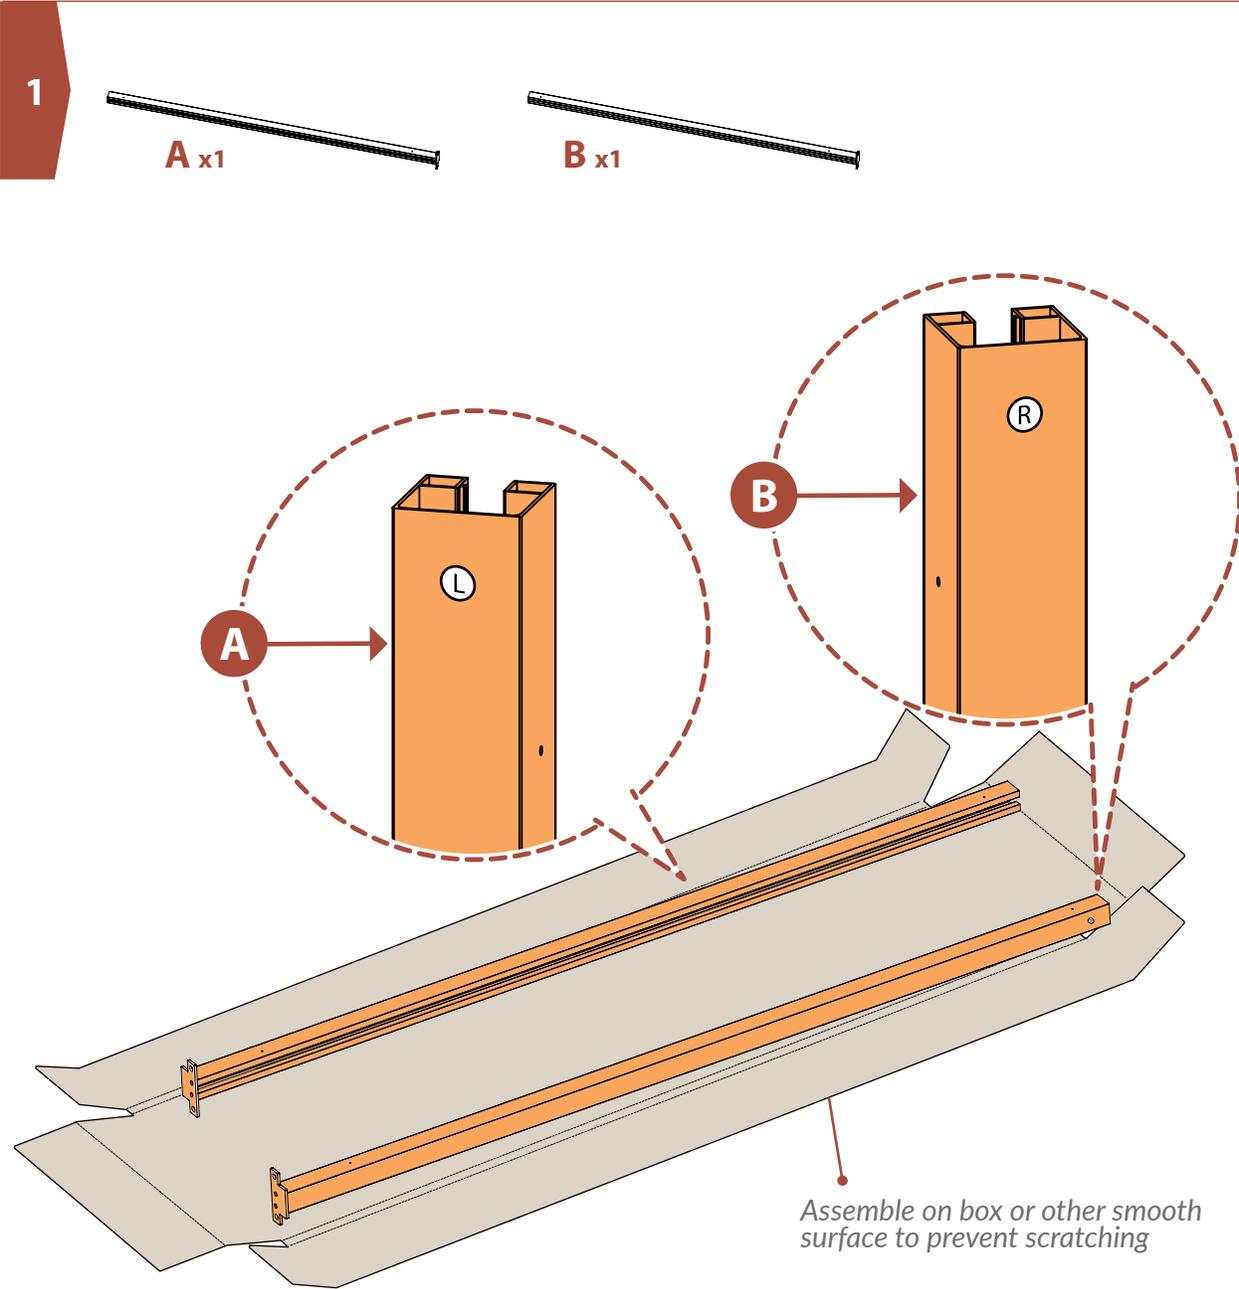


2

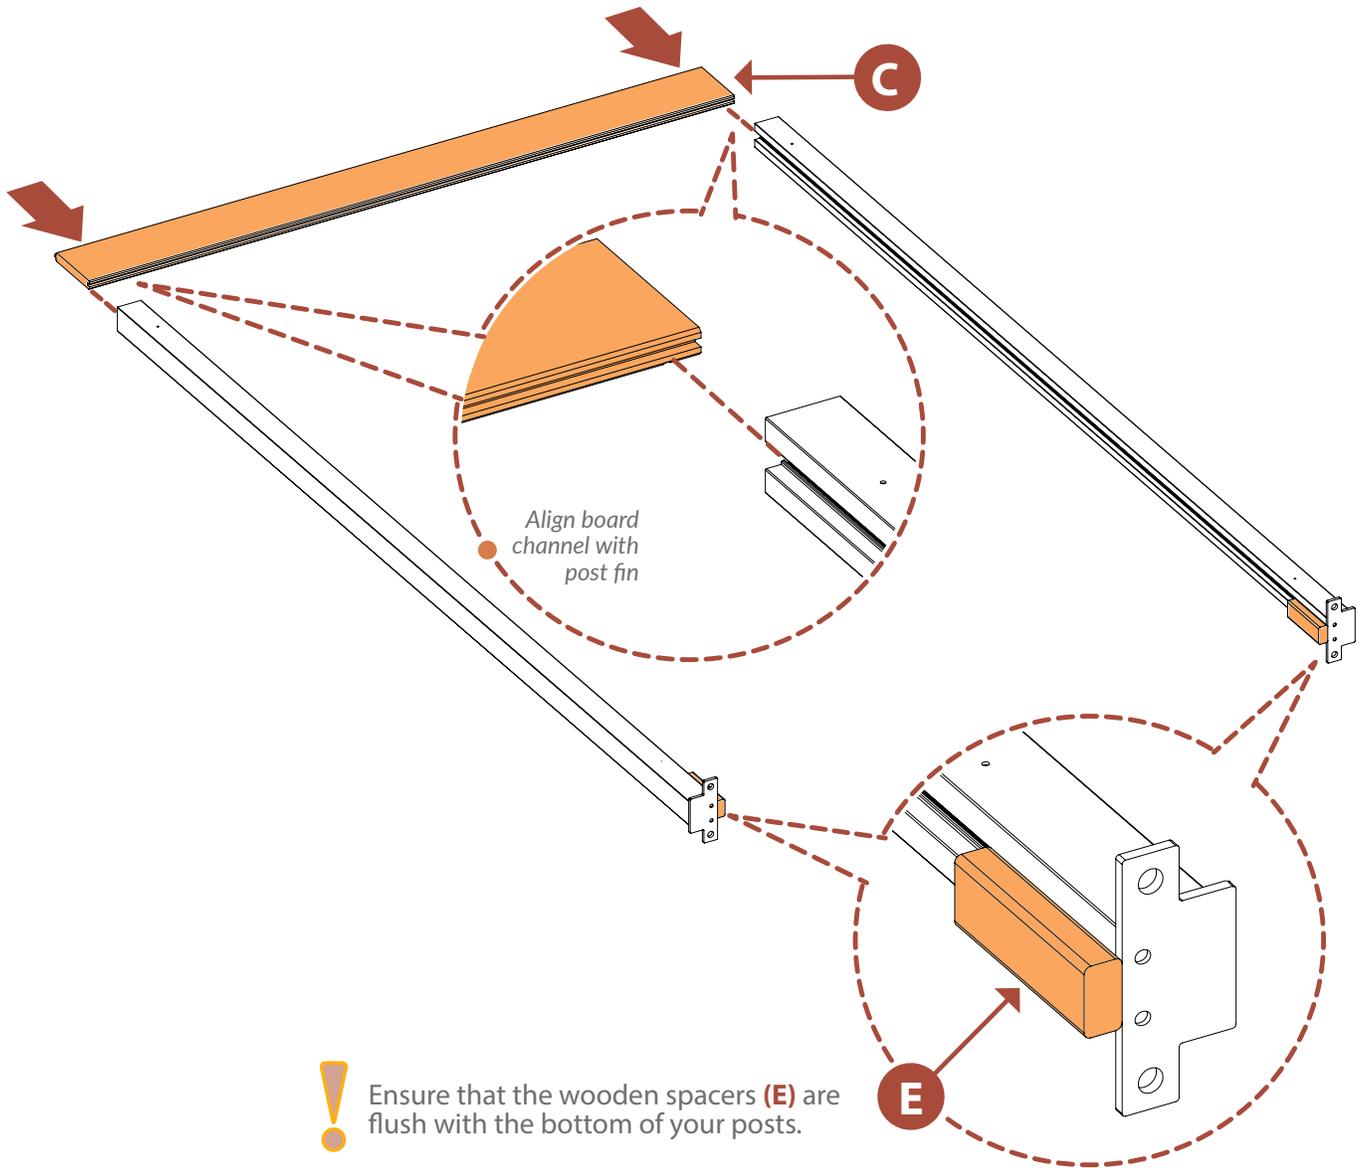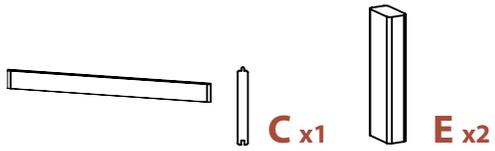

3



! Place slat (C) at the top of your screen to make square.

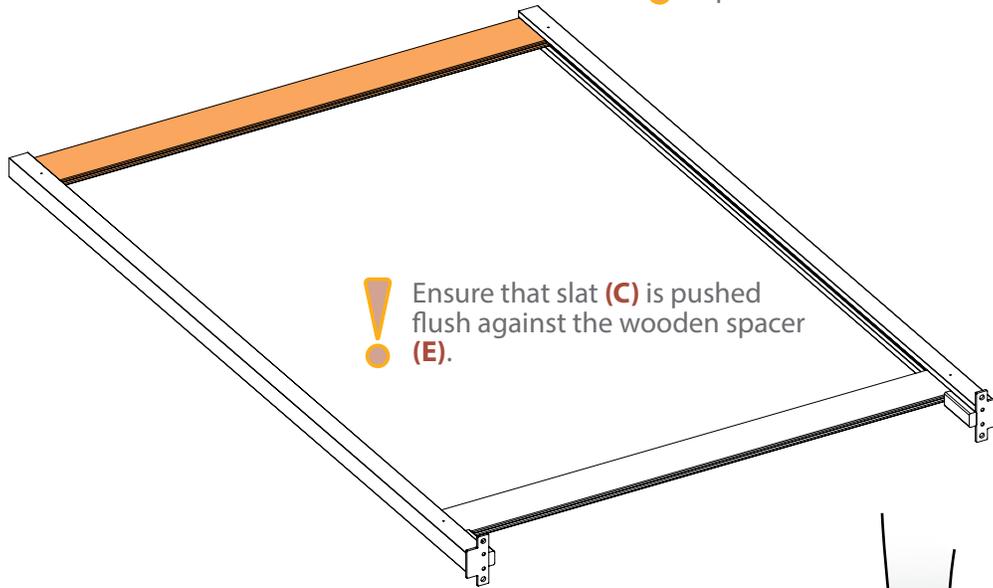


! Ensure that slat (C) is pushed flush against the wooden spacer (E).

4




! Push on the sides of your posts (A & B) to make square.

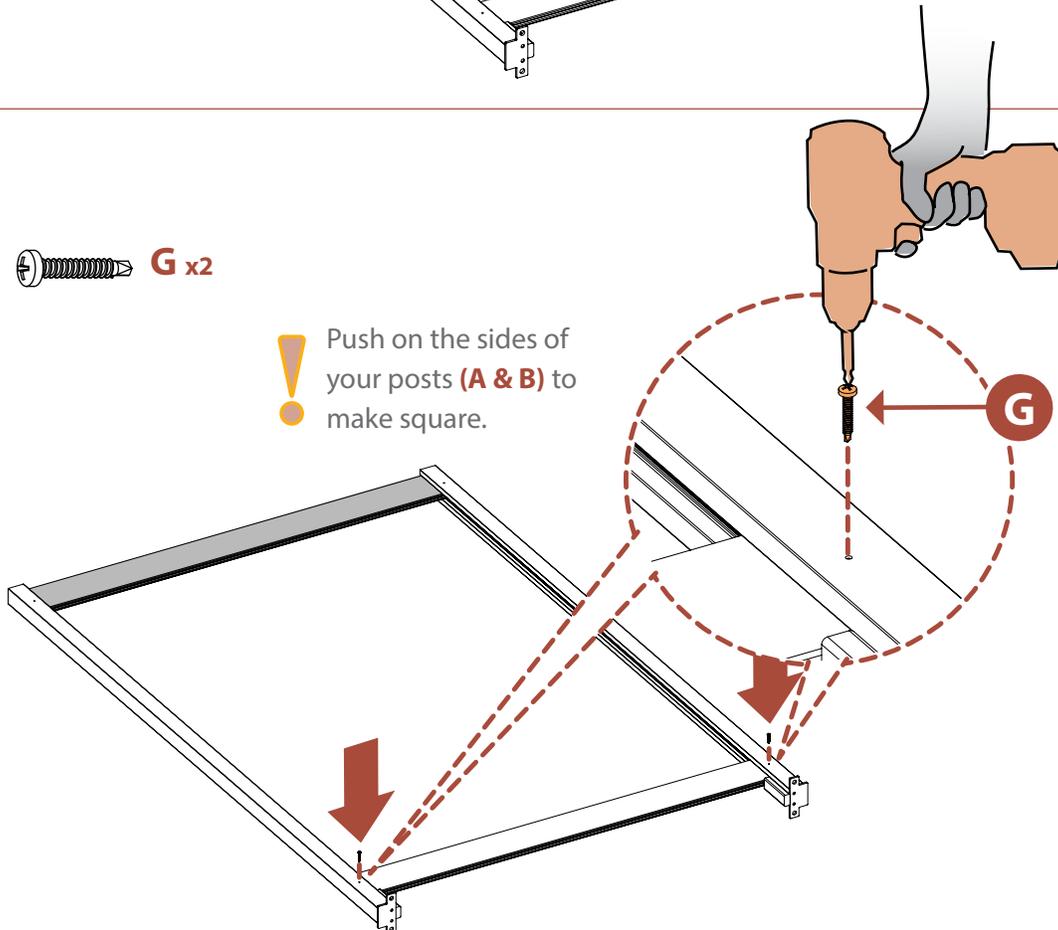


5


! Slide slat (C) down.

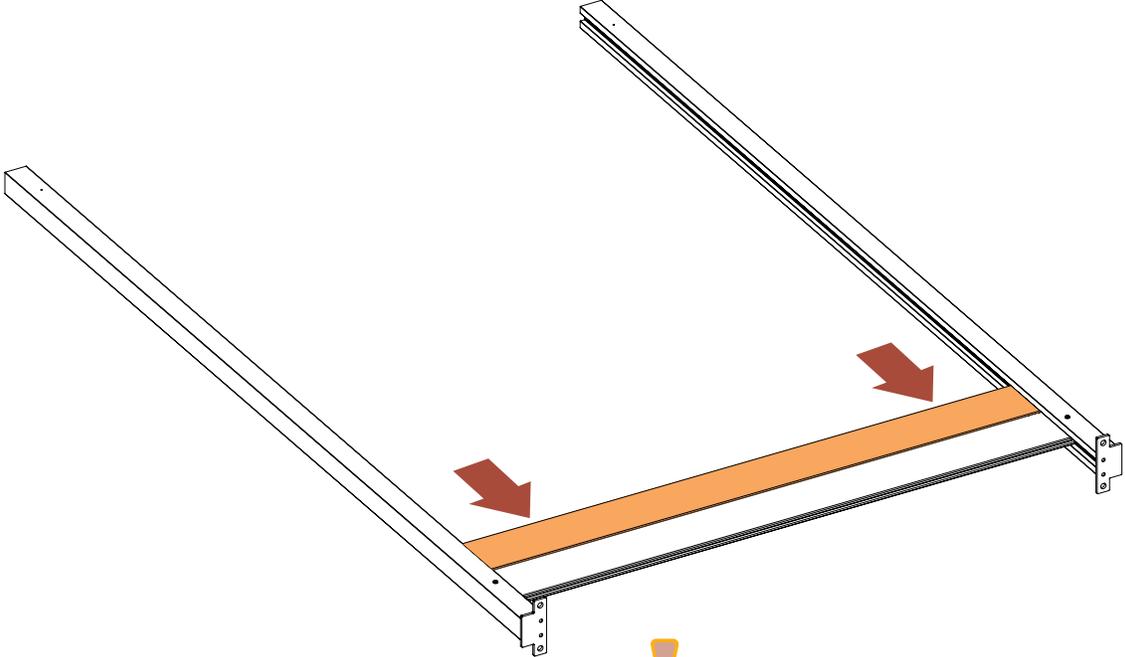


! Remove temporary Wooden Spacer (E).

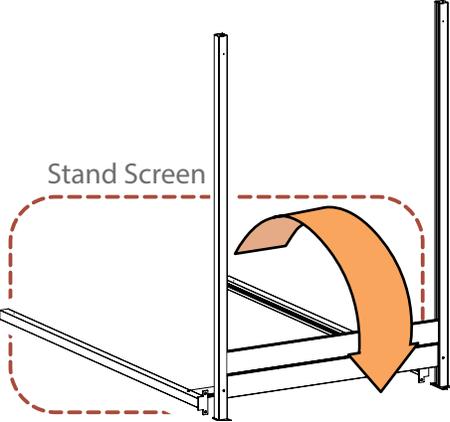


6

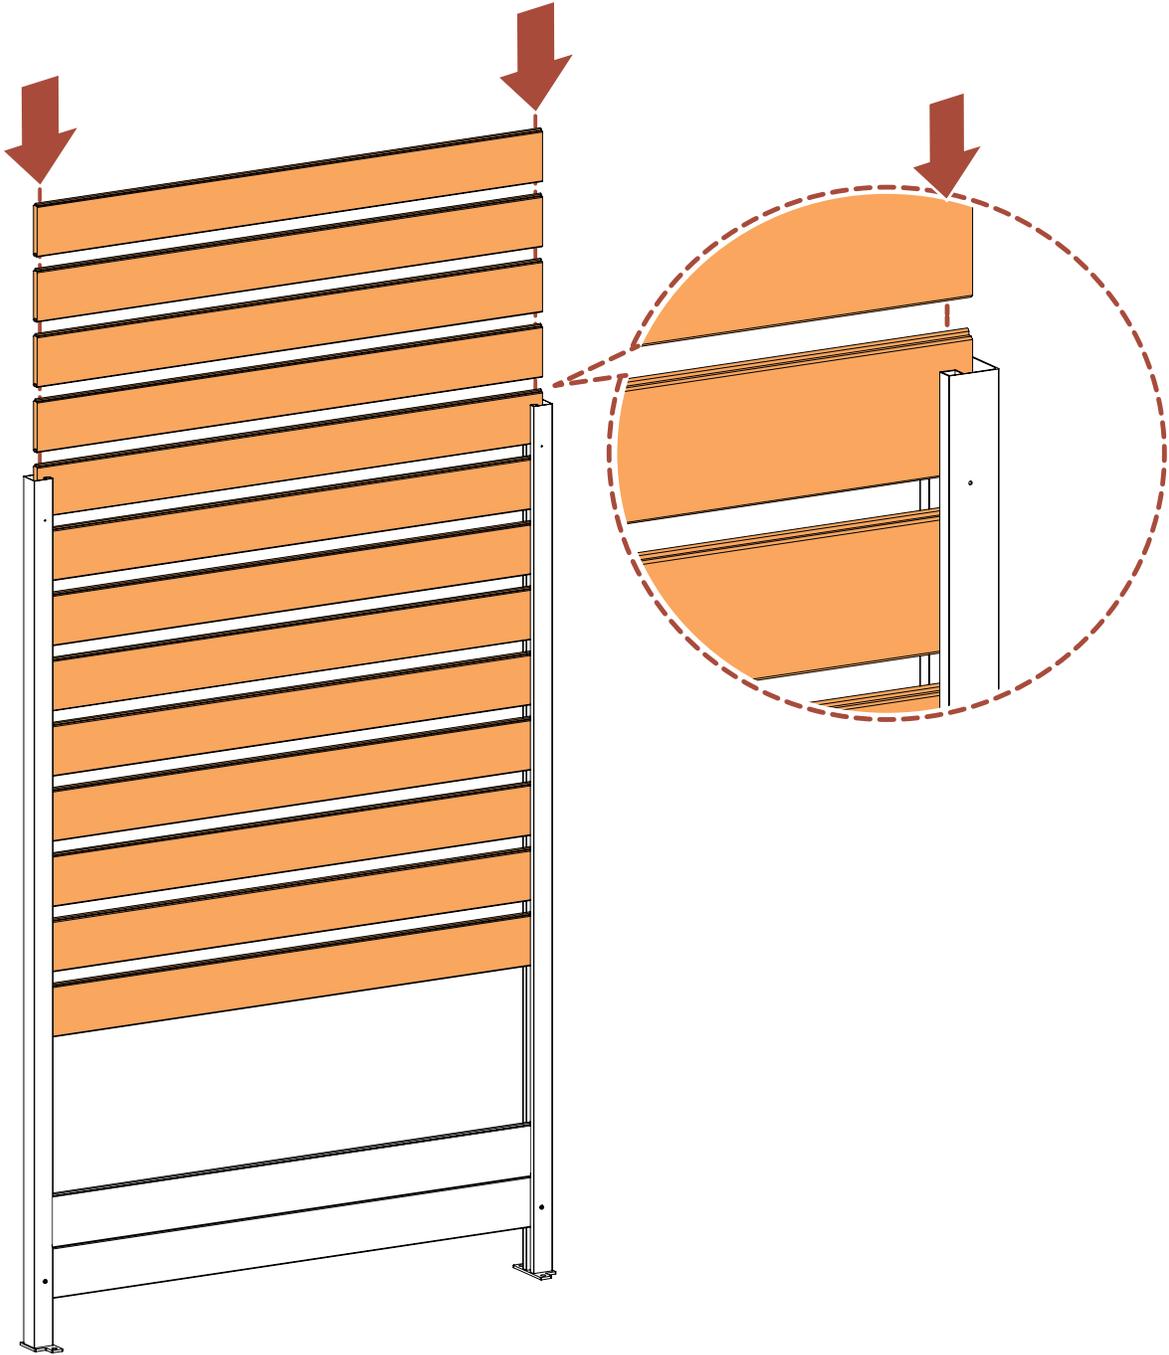

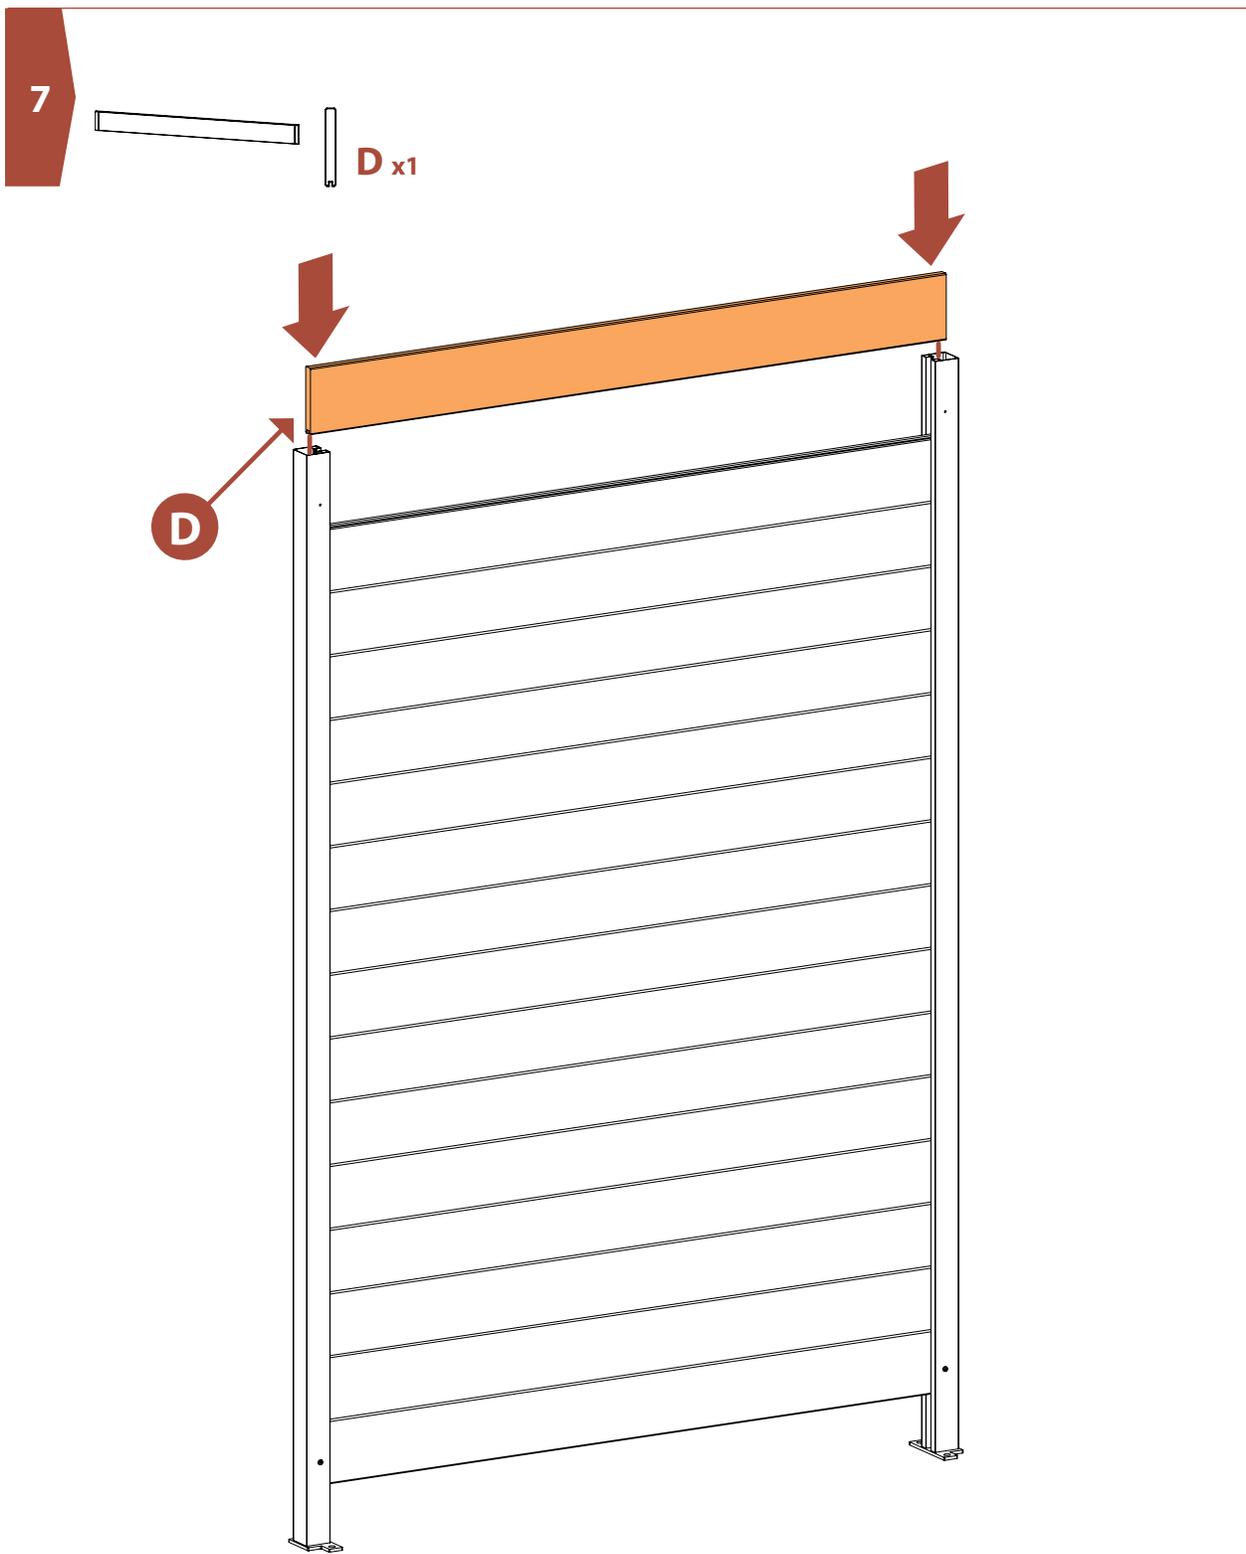


8

 **G x2**

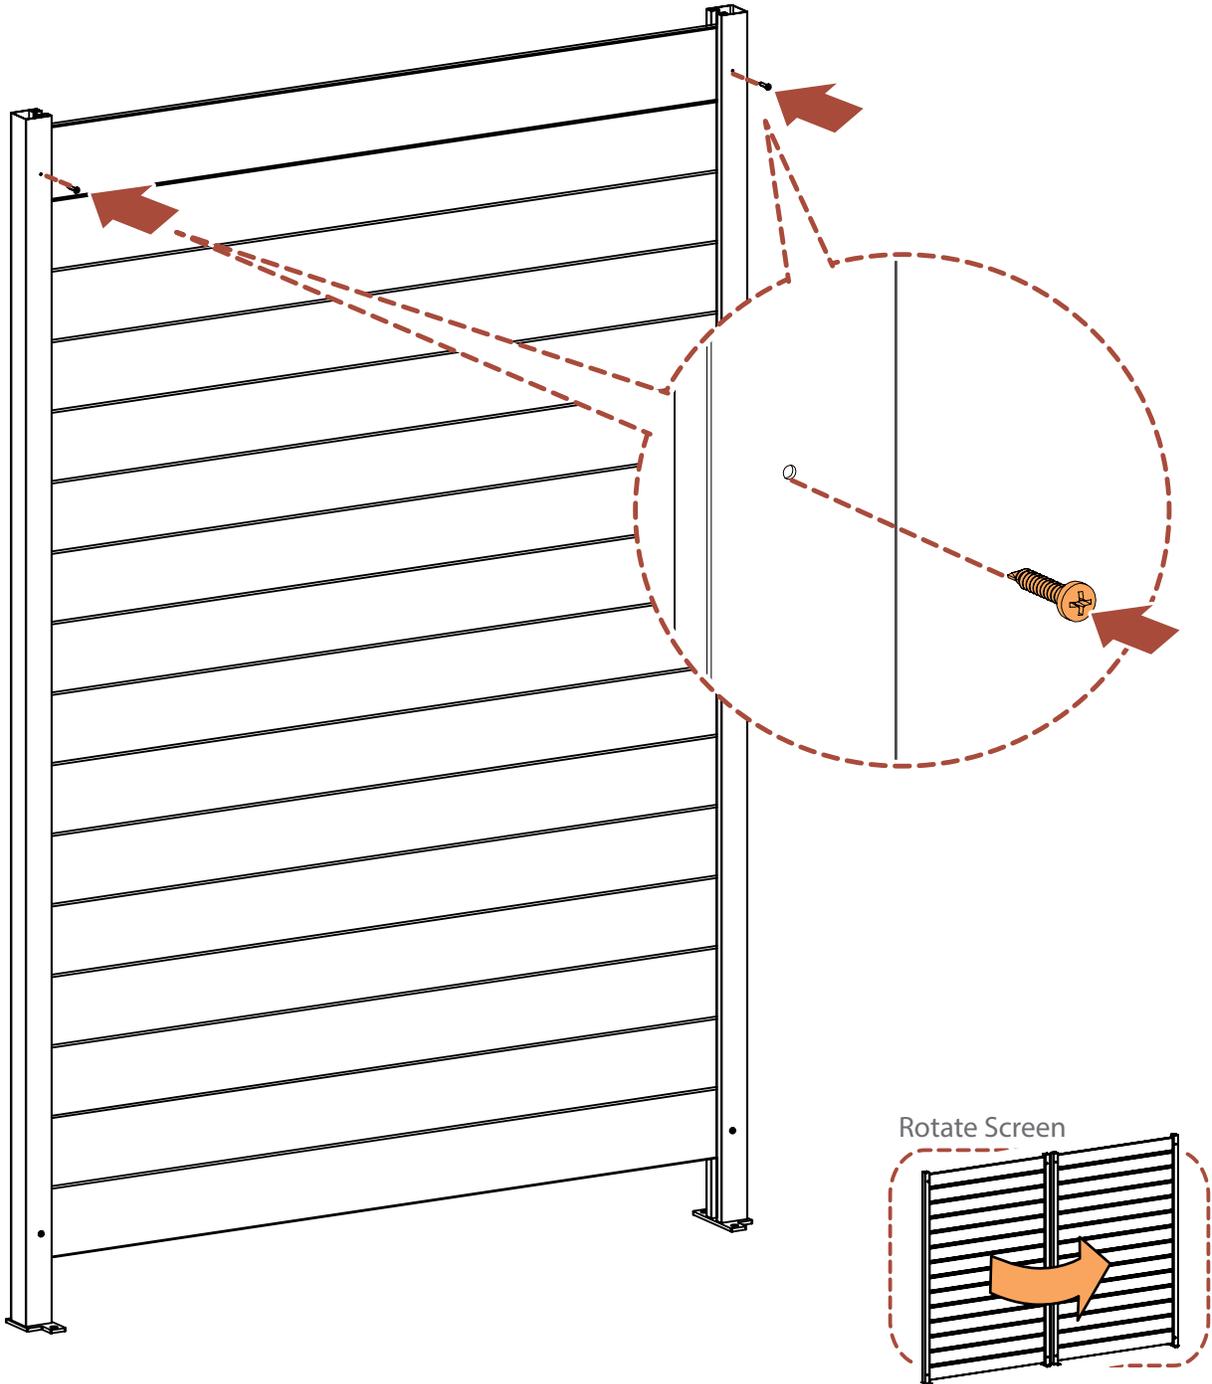

9

 G x4

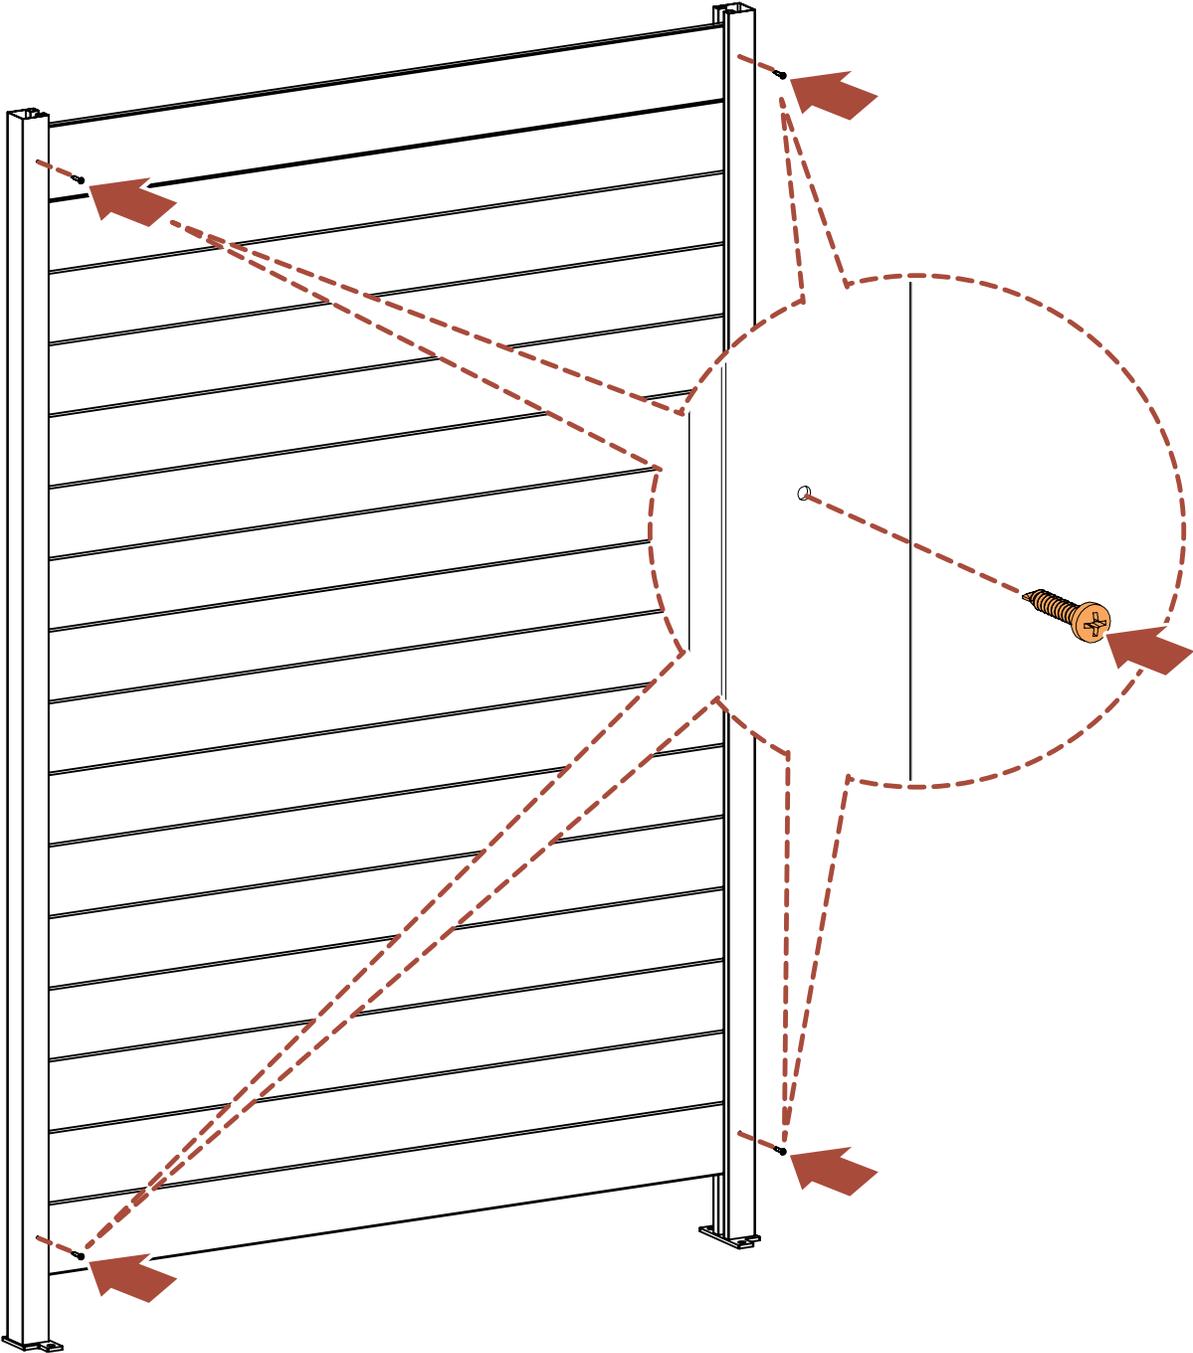


10



SURFACE MOUNTED (DECK)

MOUNTED

1

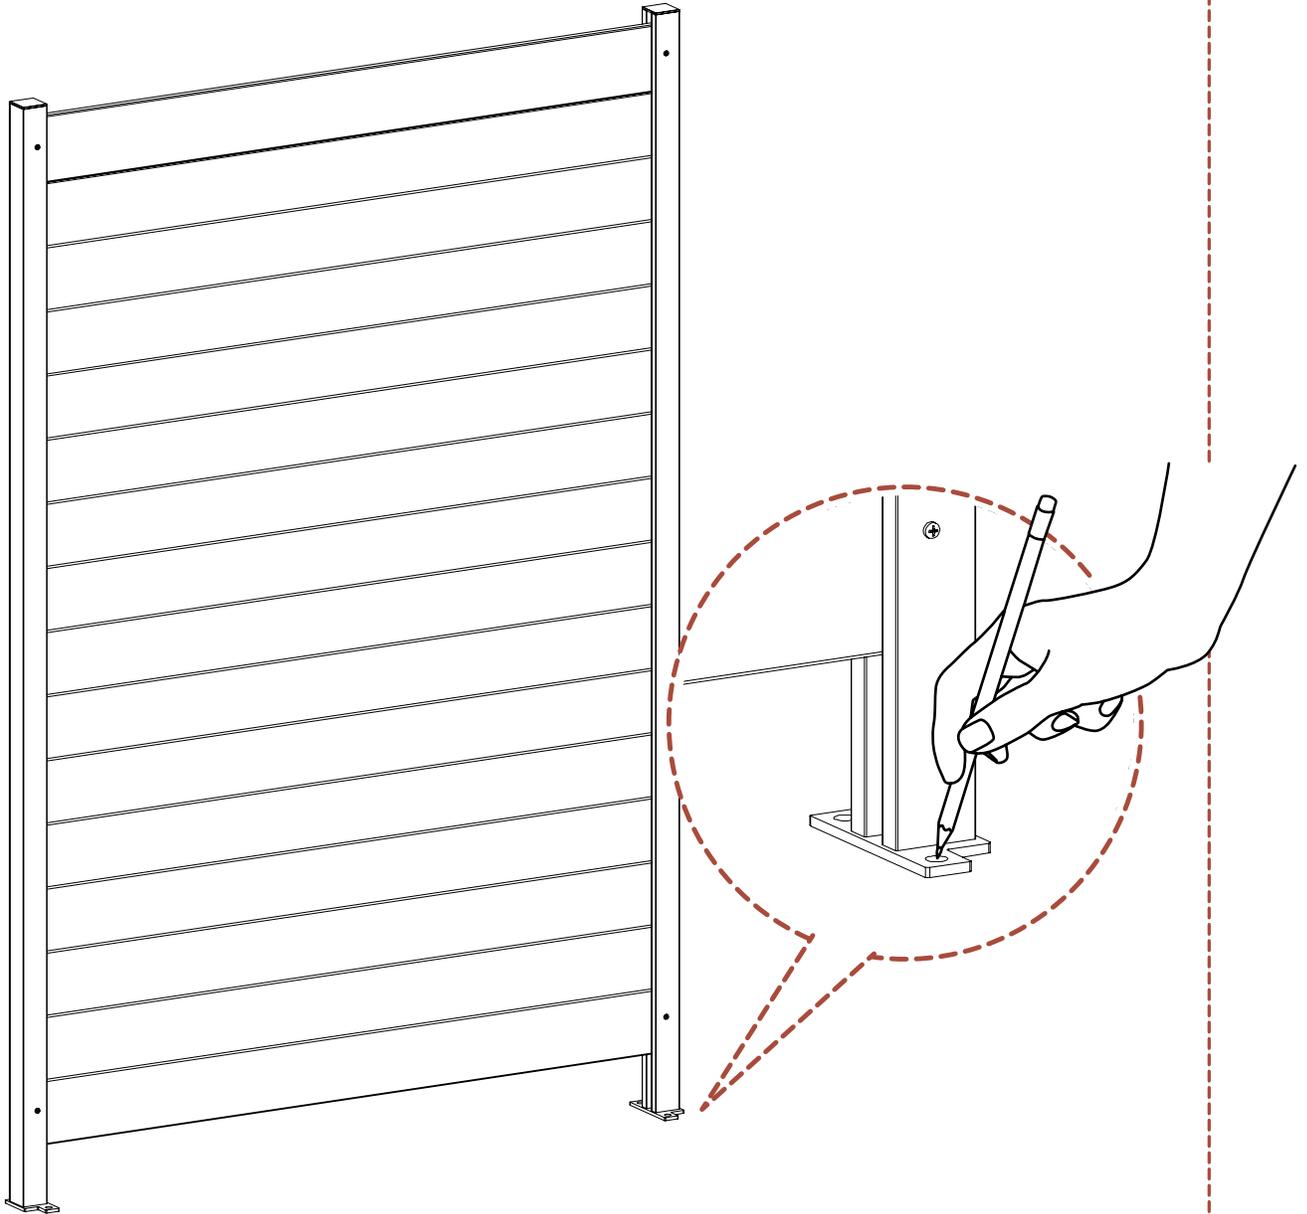


MOUNTED

2




Refer to mounting hardware instructions to ensure proper installation.

(Surface mounting hardware not included)

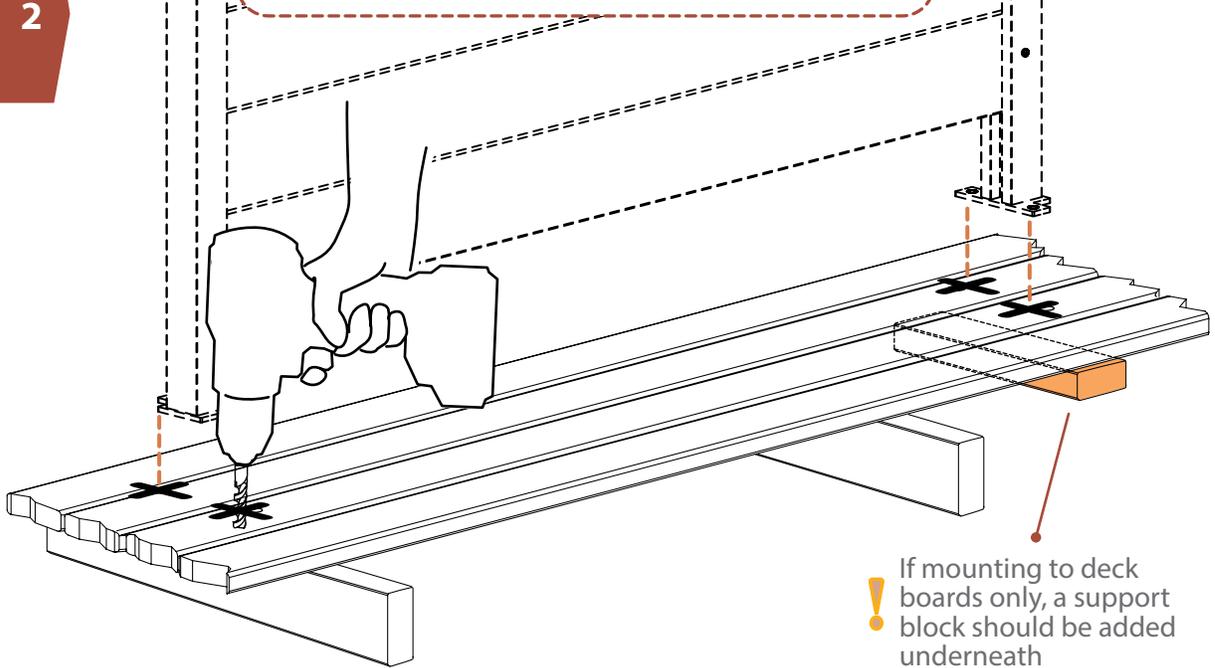

MOUNTED



3

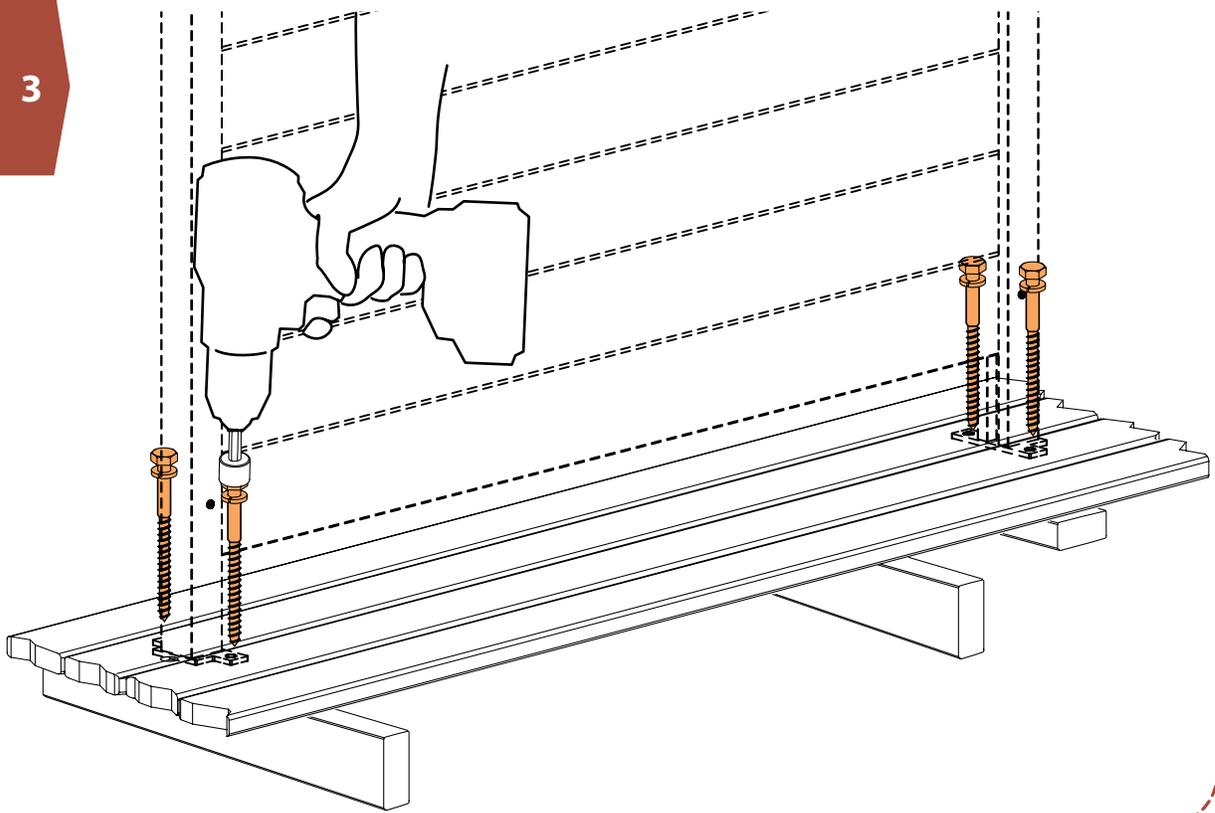


SURFACE MOUNTED (PATIO)

MOUNTED

1

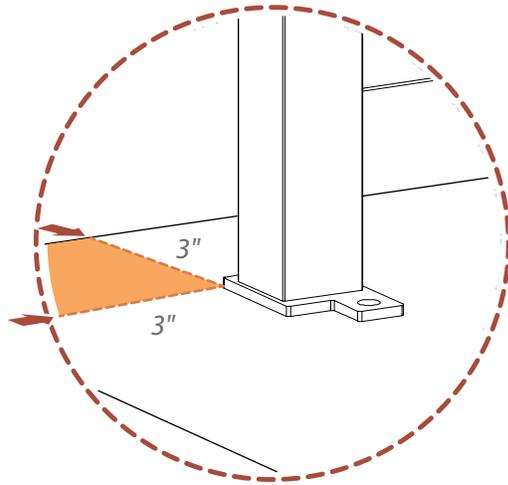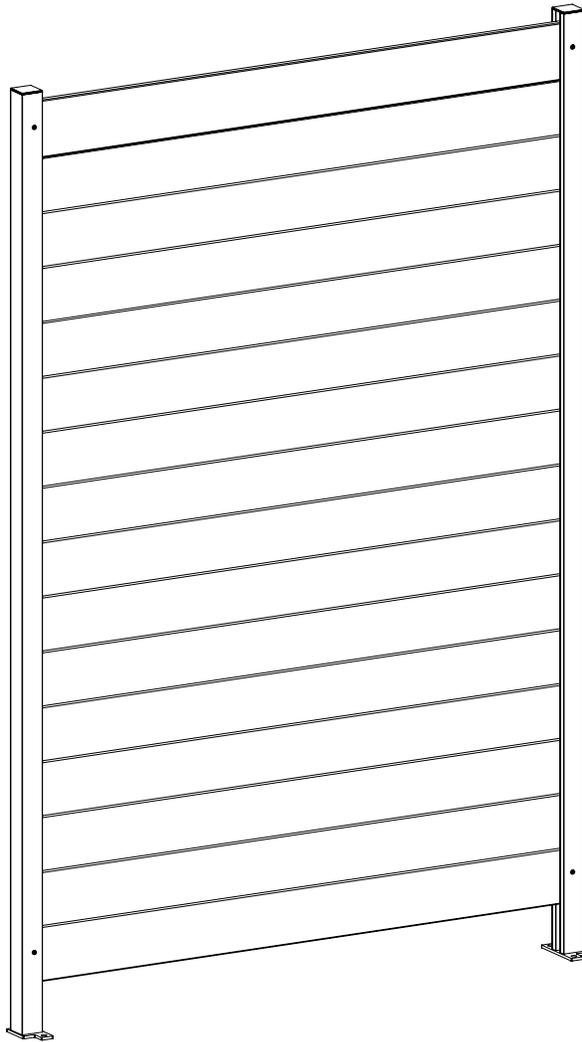

Ensure there is at least **3"** between the edge of the concrete and the surface mount.

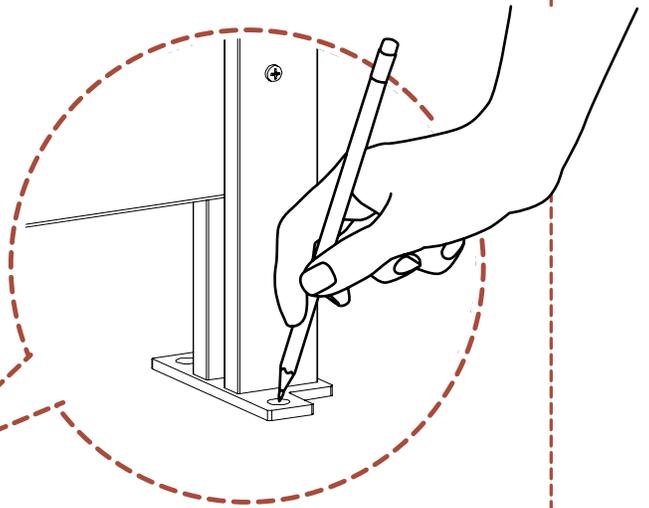


MOUNTED

2




Refer to mounting hardware instructions
to ensure proper installation.
(Surface mounting hardware not included)

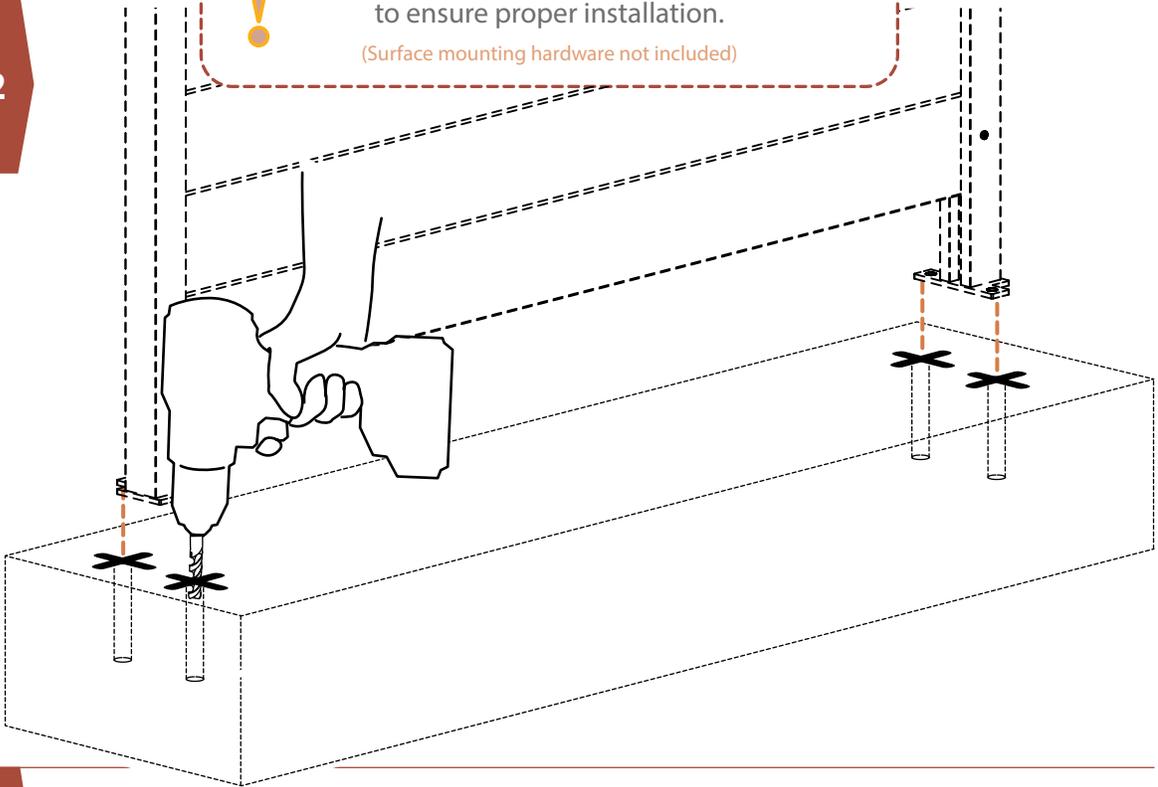

MOUNTED

3

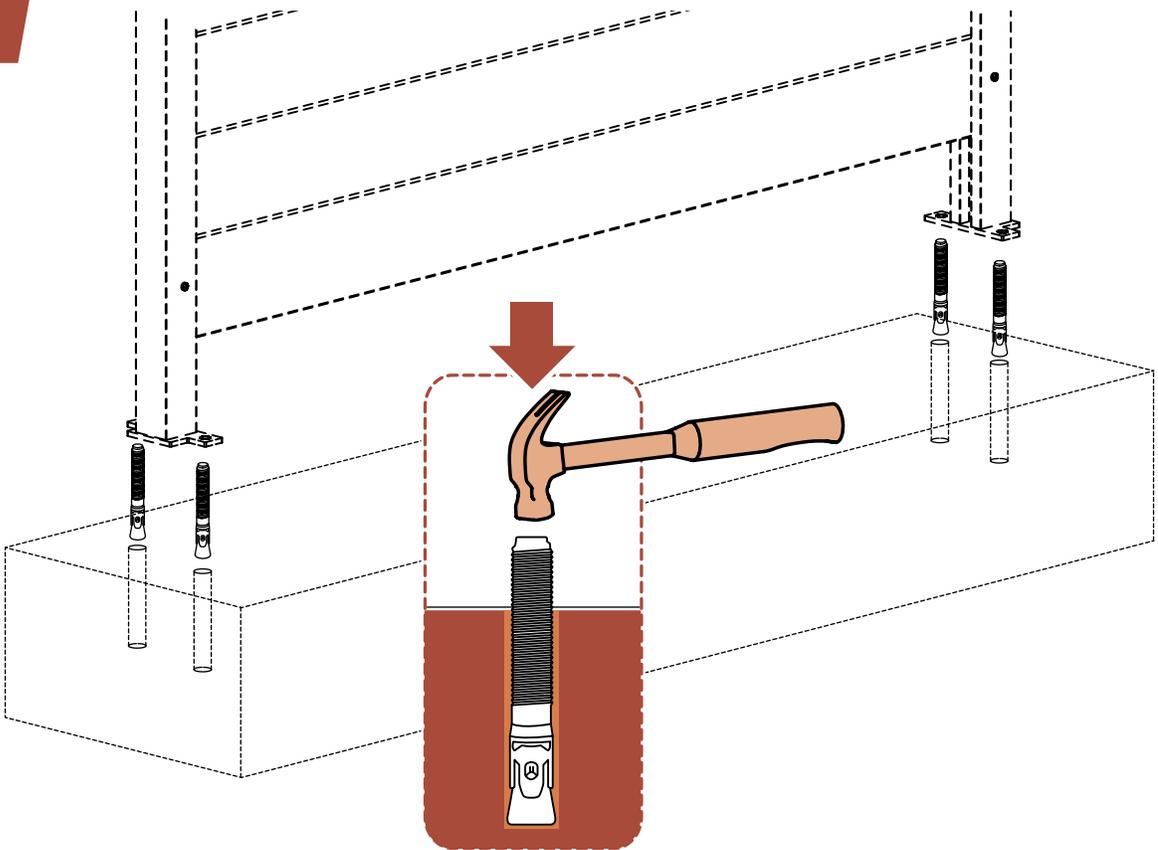


MOUNTED

4




Refer to mounting hardware instructions
to ensure proper installation.
(Surface mounting hardware not included)

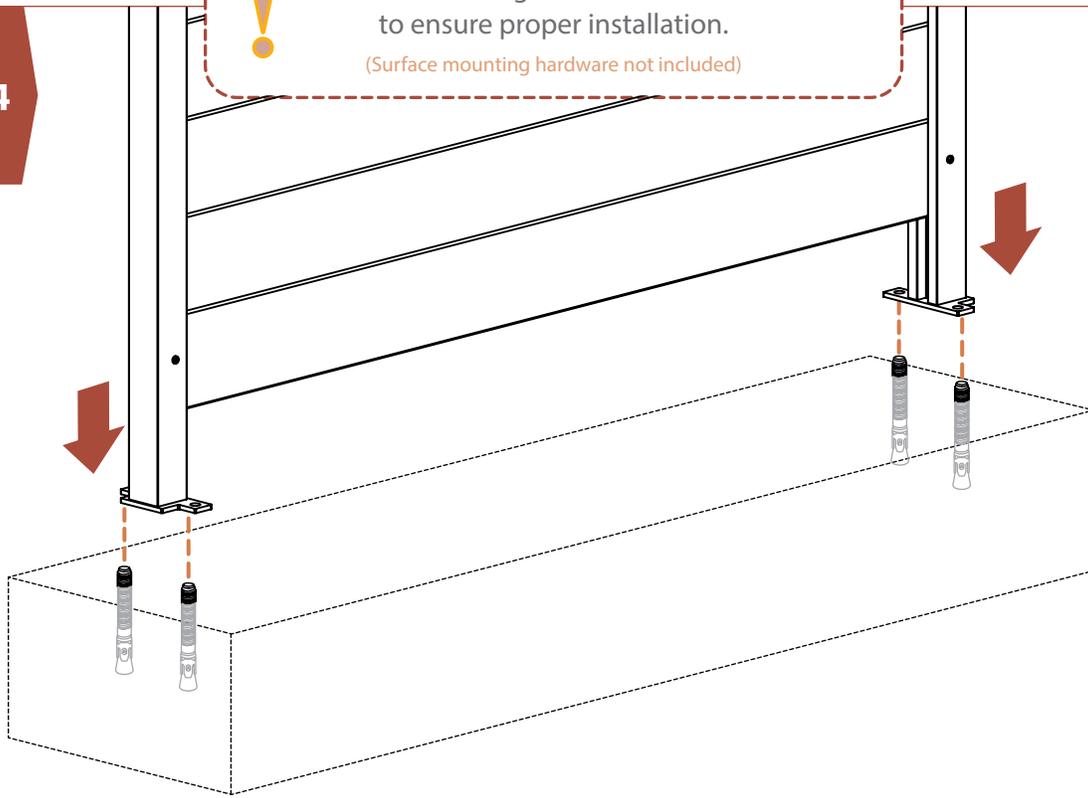

MOUNTED

5

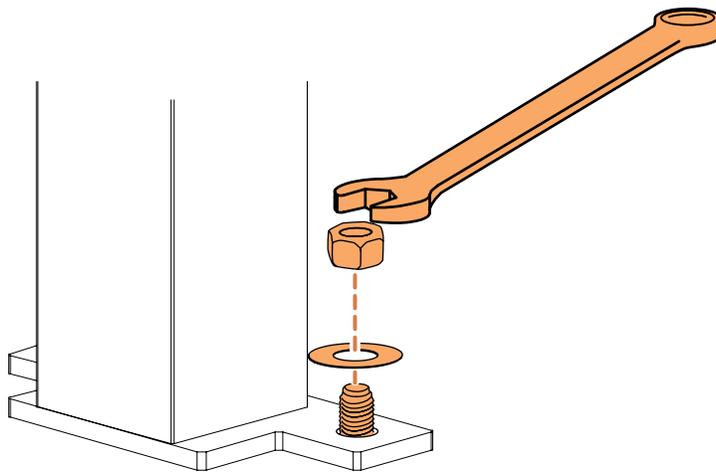

ENCLO

HIDE IT WITH STYLE

www.encloscreens.com

support@encloscreens.com



704-892-5222
877-234-6196



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



ASSEMBLY
INSTRUCTIONS
EC18047

VER. 100925