


ENCLO

HIDE IT WITH STYLE

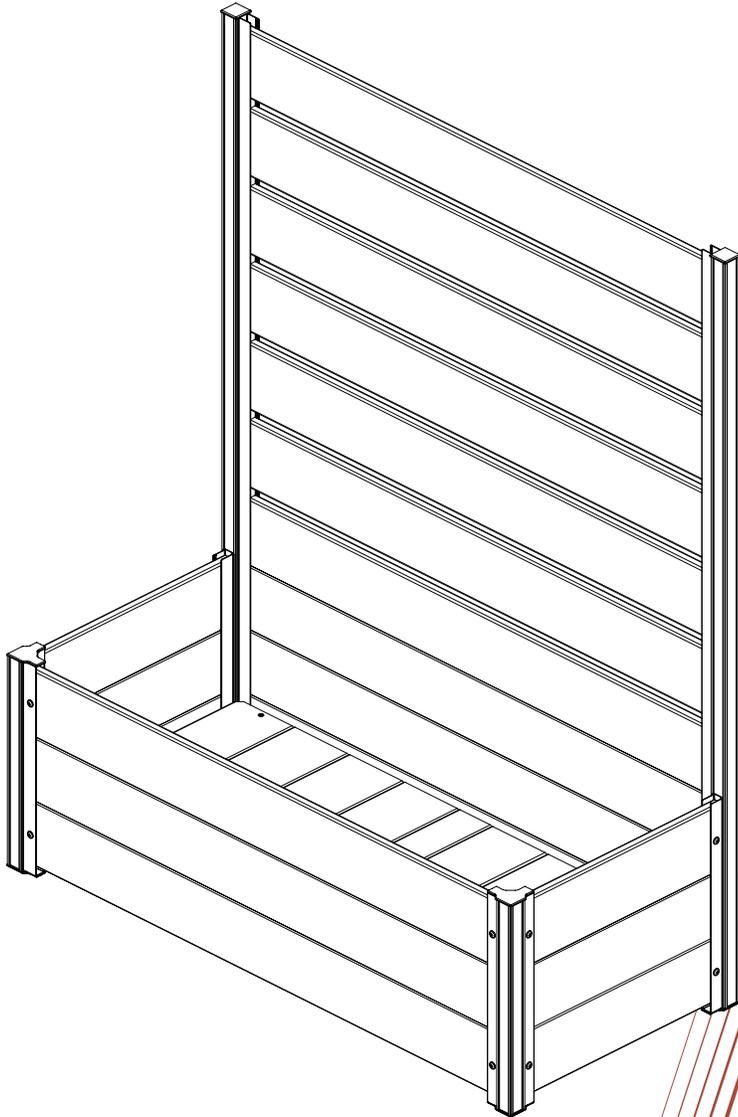

4ft Concord

Wooden Planter Screen

40³/₄" W x 49¹/₂" H

1 hr
Approximate assembly



Scan the QR code
for an assembly video



ASSEMBLY
INSTRUCTIONS
AZ18040

www.encloscreens.com

VER. 112025

GENERAL INFORMATION

MISSING OR DAMAGED PARTS?



➤ **Visit Our Website**
so we can help you right away!
parts.nychbrands.com

* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, **please have the following**

- Your product number (**EC18040**)
- Your affected part letters (**pages 4-6**)
- Your original product box

NEED ASSEMBLY HELP?


If you are having problems with assembly or installation of this product,
please contact at:

📞 **704-892-5222 / 877-234-6196** ✉ **support@encloscreens.com**

NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

DETAILED PRODUCT DIMENSIONS & SPECIFICATIONS

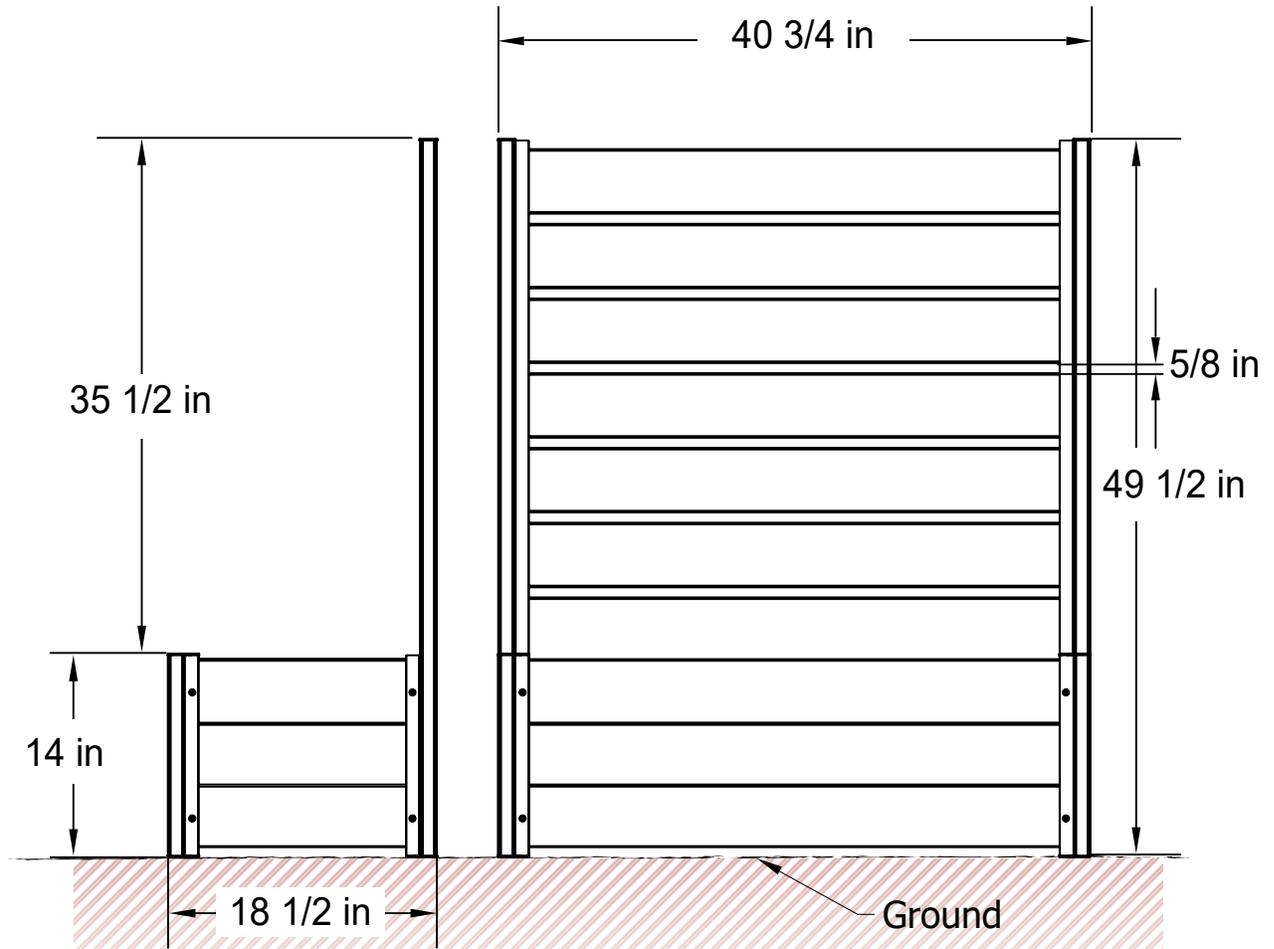


Note:


Planter Depth: 9 1/4"
Planter Volume: 3.5 cubic ft

LAY OUT MATERIALS

► Tools required for a smoother installation experience.



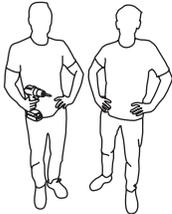


We recommend 2 people for a smoother assembly.

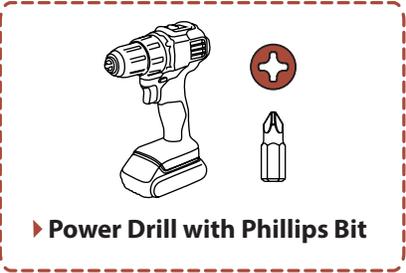









► Power Drill with Phillips Bit

PLANTER SCREEN
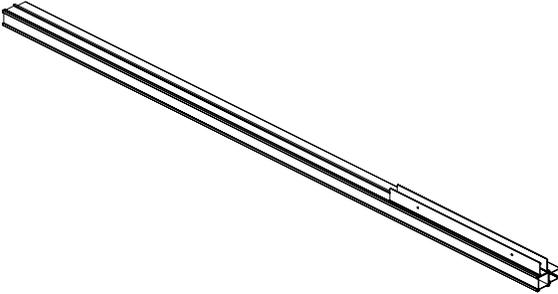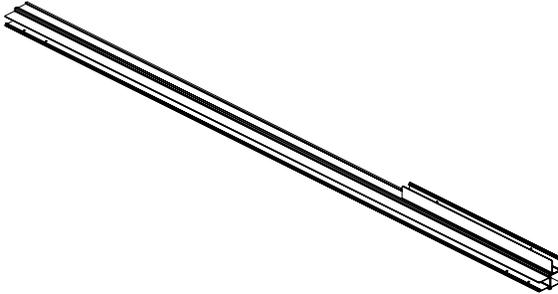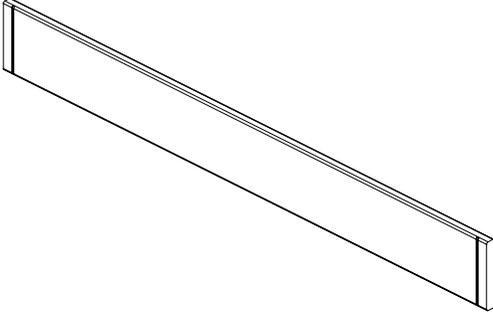
<p>A x1</p>  <p>Left Post 2 1/8" x 2 1/8" x 49 1/4"</p>	<p>B x1</p>  <p>Right Post 2 1/8" x 2 1/8" x 49 1/4"</p>
<p>C BRD082 x6</p>  <p>Board 5/8" x 4 1/2" x 38 1/4"</p> <p>BRD082</p>	








LAY OUT MATERIALS

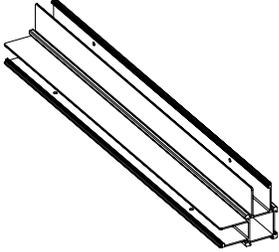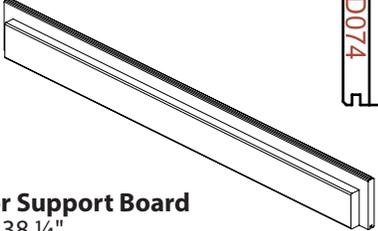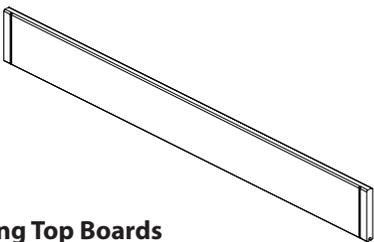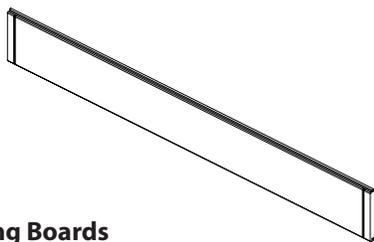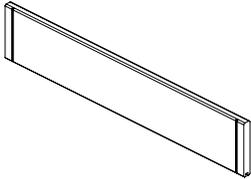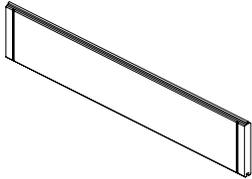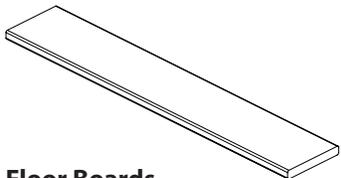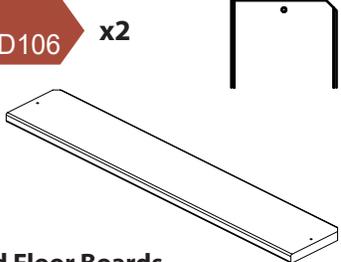PLANTER BOX		
<p>D x2</p>  <p>Corner Post 2 1/8" x 2 1/8" x 13 3/4"</p>	<p>E BRD074 x2</p>  <p>Planter Floor Support Board 1 3/4" x 4 1/2" x 38 1/4"</p>	
<p>F BRD076 x2</p>  <p>Planter Long Top Boards 5/8" x 4 1/2" x 38 1/4"</p>	<p>G BRD075 x3</p>  <p>Planter Long Boards 5/8" x 4 1/2" x 38 1/4"</p>	
<p>H BRD103 x2</p>  <p>Planter Short Top Boards 5/8" x 4 1/2" x 16"</p>	<p>I BRD102 x4</p>  <p>Planter Short Boards 5/8" x 4 1/2" x 16"</p>	
<p>J BRD104 x6</p>  <p>Floor Boards 5/8" x 4 1/2" x 16 5/8"</p>	<p>K BRD105 x1</p>  <p>Middle Floor Board 5/8" x 2 3/4" x 16 5/8"</p>	<p>L BRD106 x2</p>  <p>End Floor Boards 5/8" x 4 1/2" x 16 1/2"</p>




LAY OUT MATERIALS

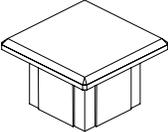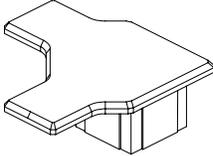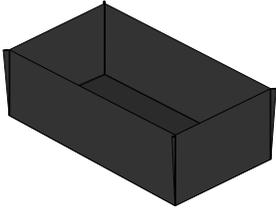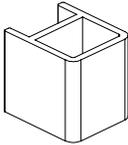HARDWARE & ACCESSORIES	
<p>M x2</p>  <p>Screen Post Cap 1 1/4" x 1 1/4" x 3/4"</p>	<p>N x6</p>  <p>Planter Post Cap 2 1/4" x 2 1/4" x 3/4"</p>
<p>O x20</p>  <p>5/8 Self Drilling Screw</p>	<p>P x4</p>  <p>1 1/2 Wood Screw</p>
<p>Q x1</p>  <p>Planter Liner</p>	<p>R x12</p>  <p>Spacers</p>




KEEP AN EYE OUT 

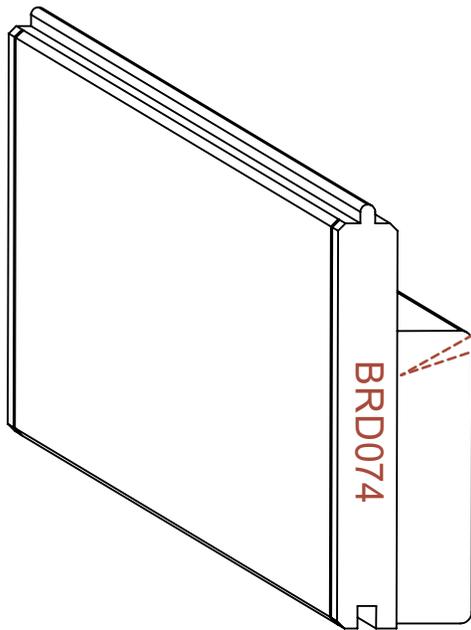



 Ensure you are using the correct part!
Each board has a unique part code stamped on the end, that corresponds with a part on the parts list.




1

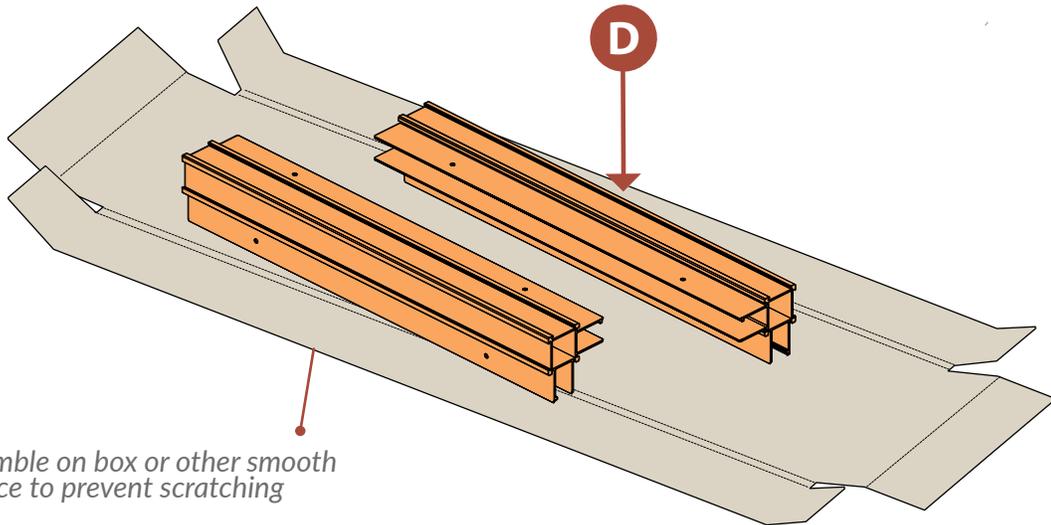


Assemble on box or other smooth surface to prevent scratching

2

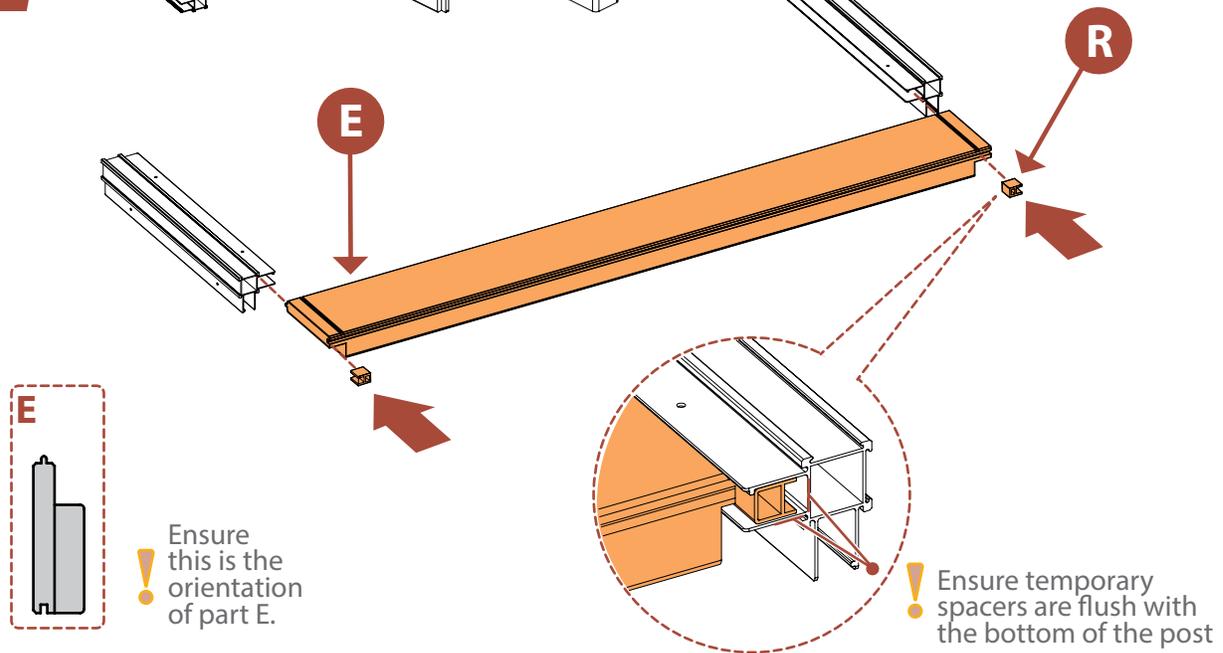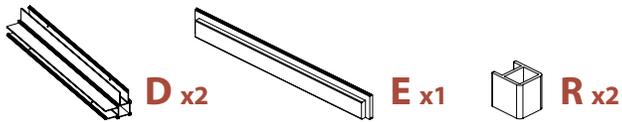

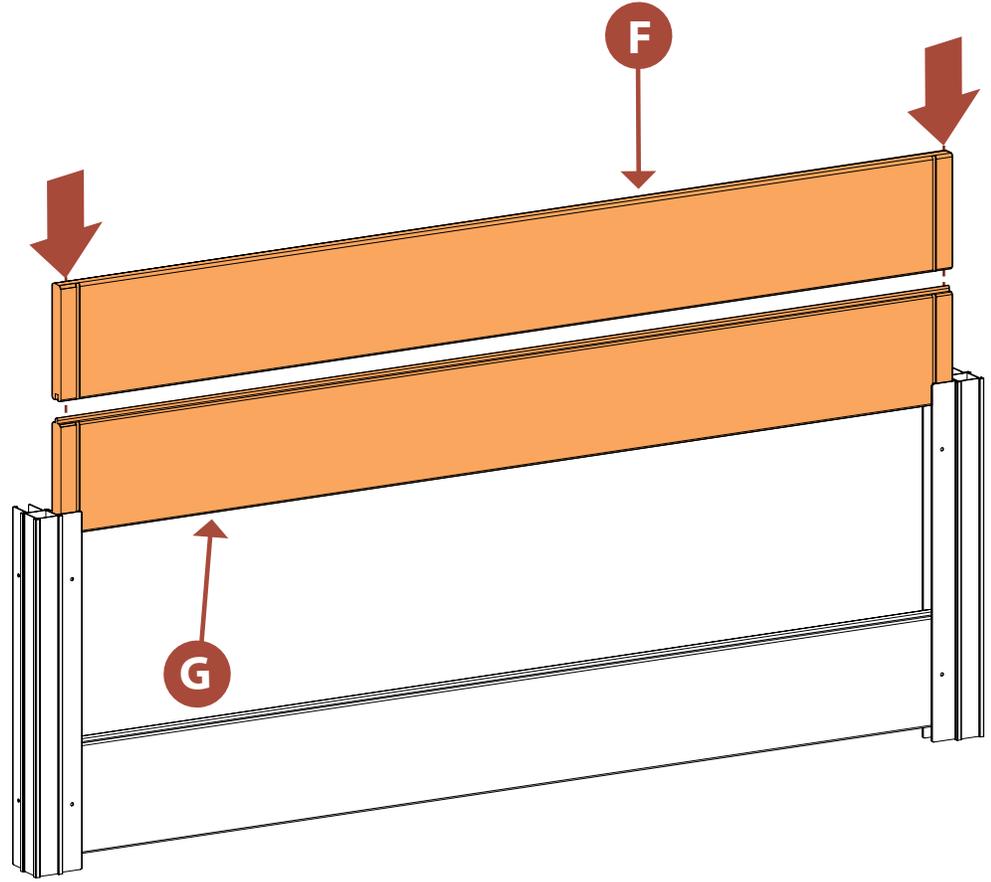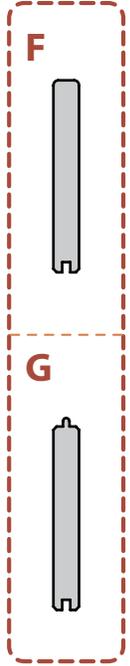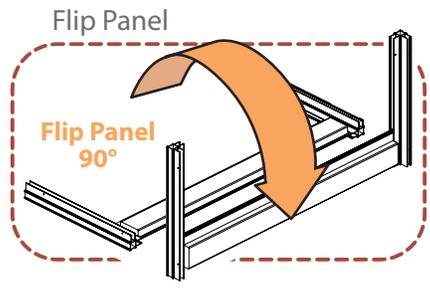

4

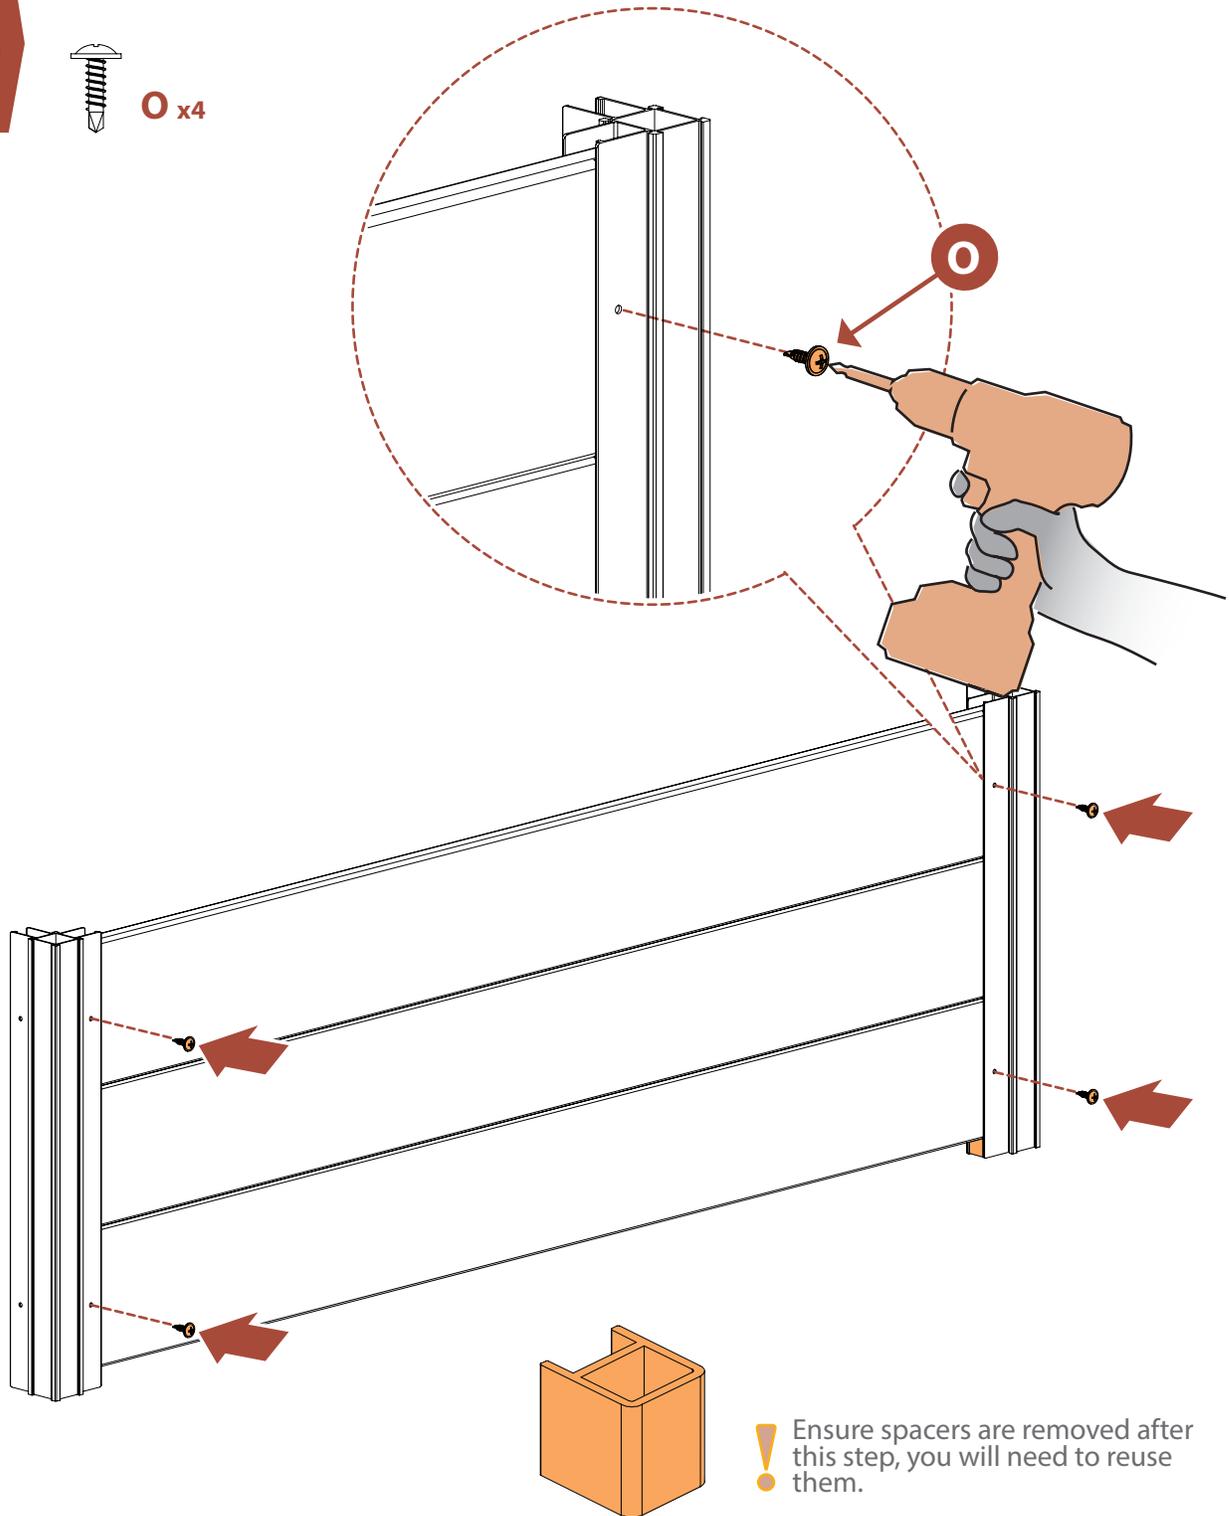


! Ensure spacers are removed after this step, you will need to reuse them.

5





R x2

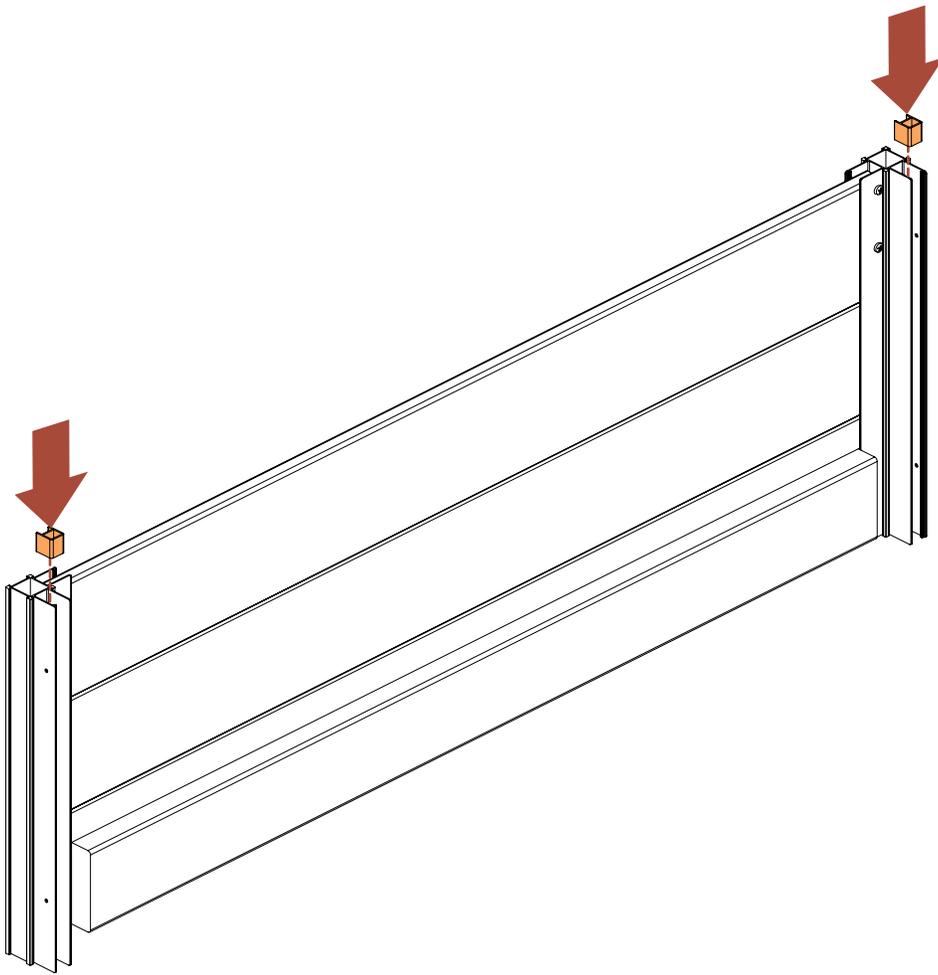


6

 **H** x2  **I** x4  **R** x2

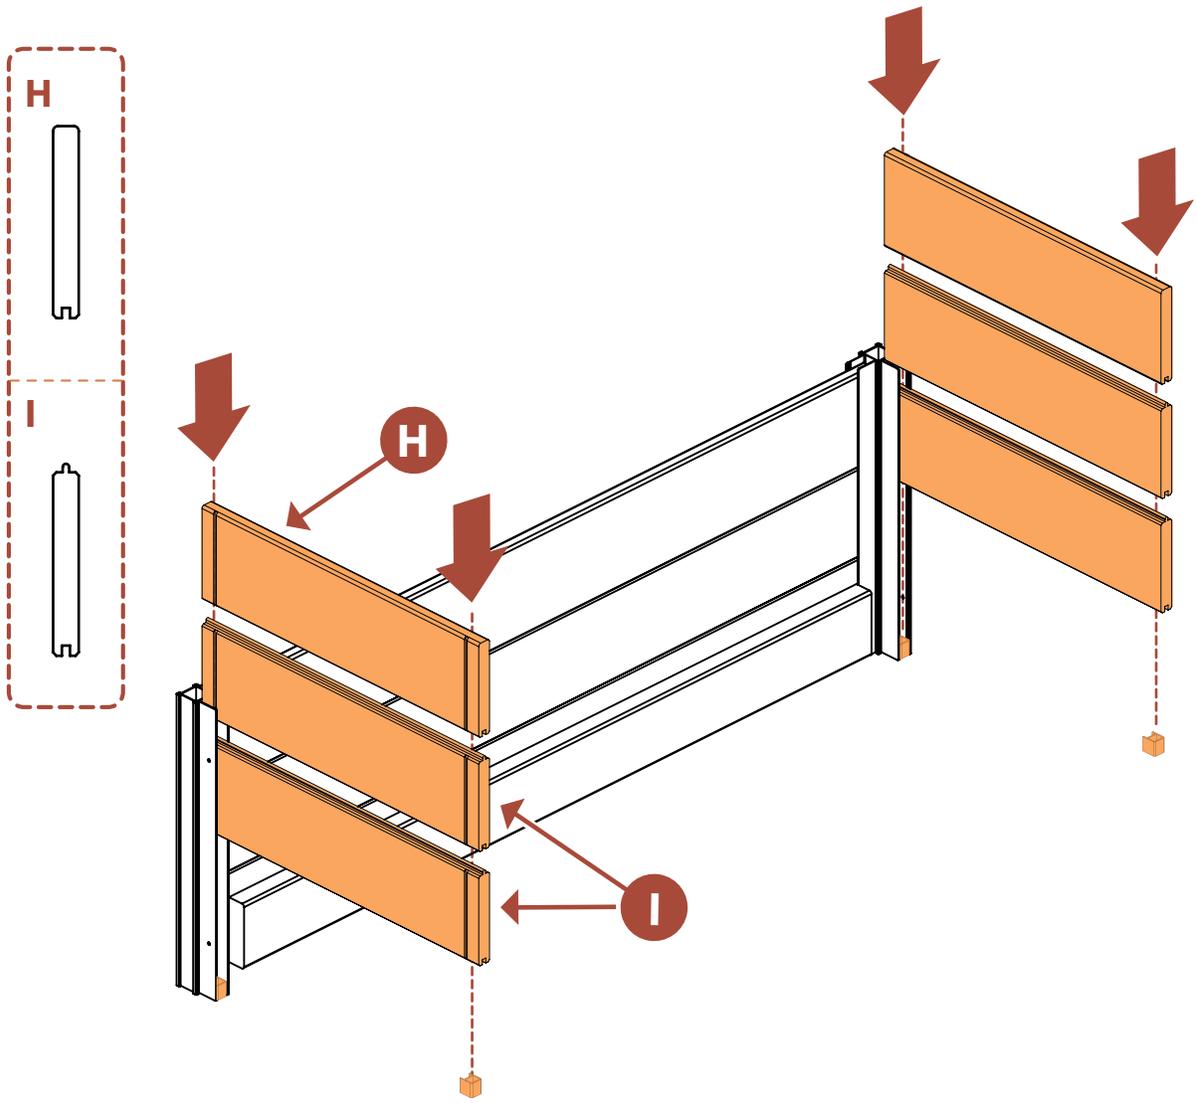




Ensure spacers are placed under each end of your short boards.

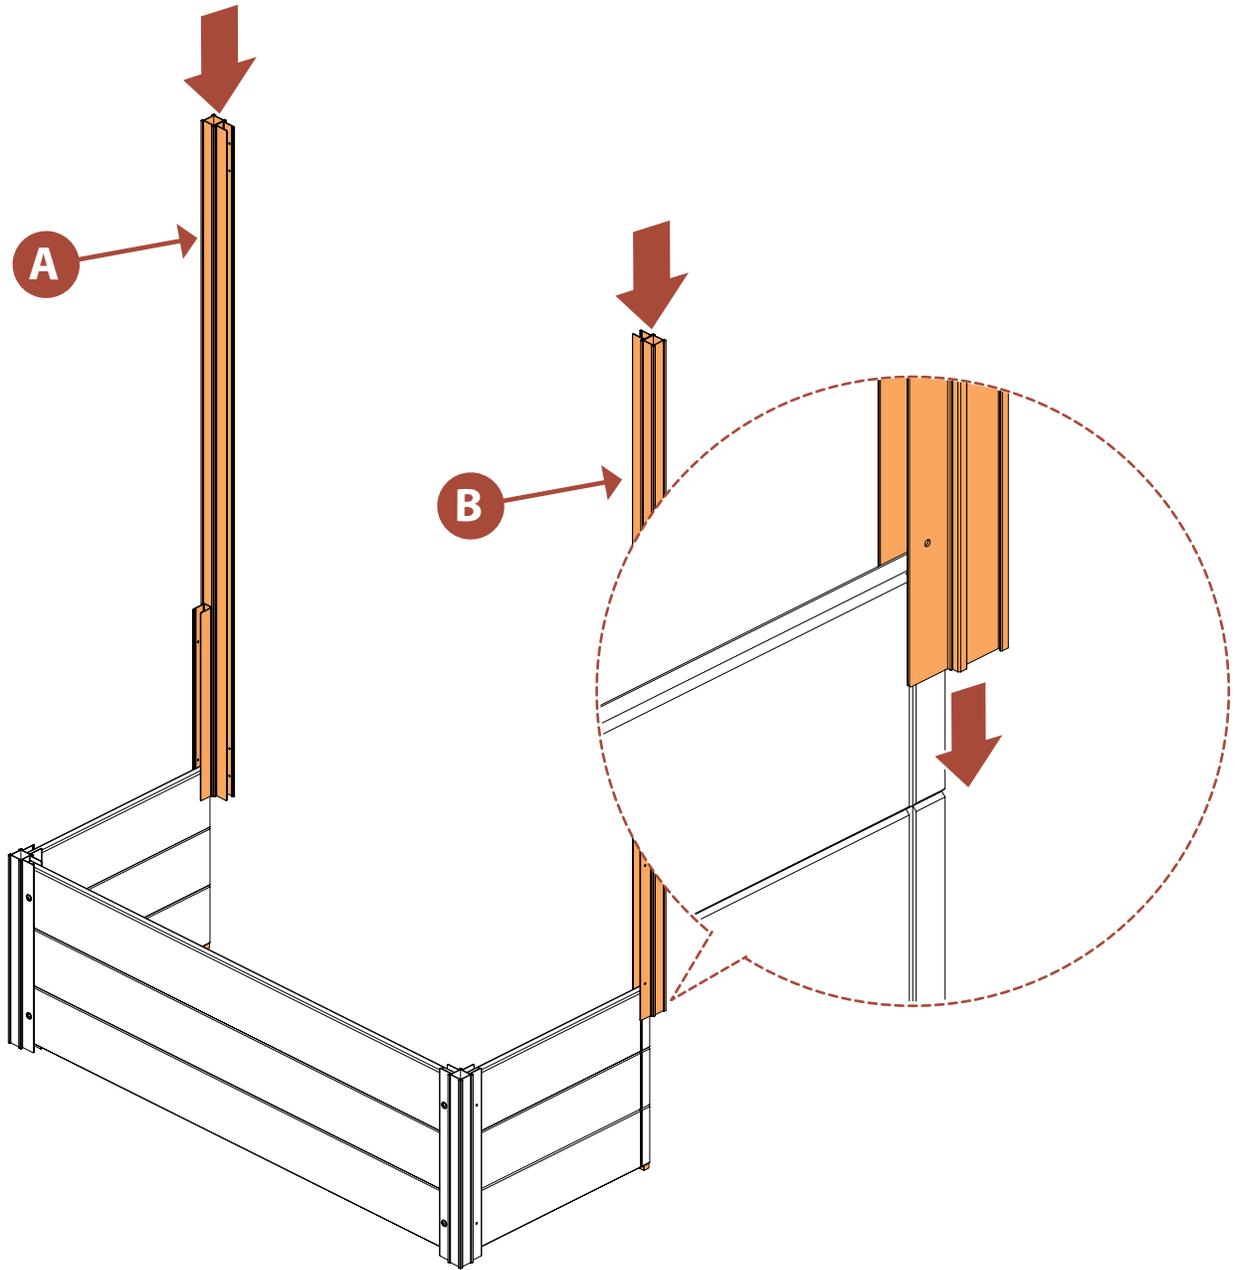

8




O x8

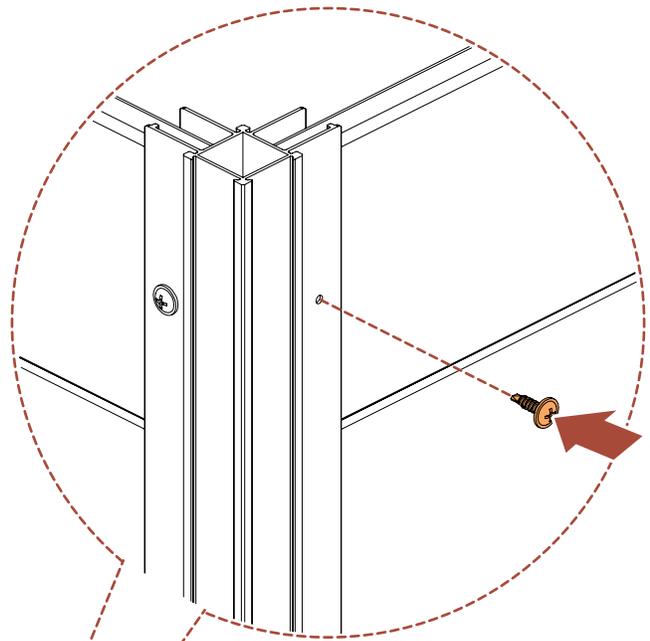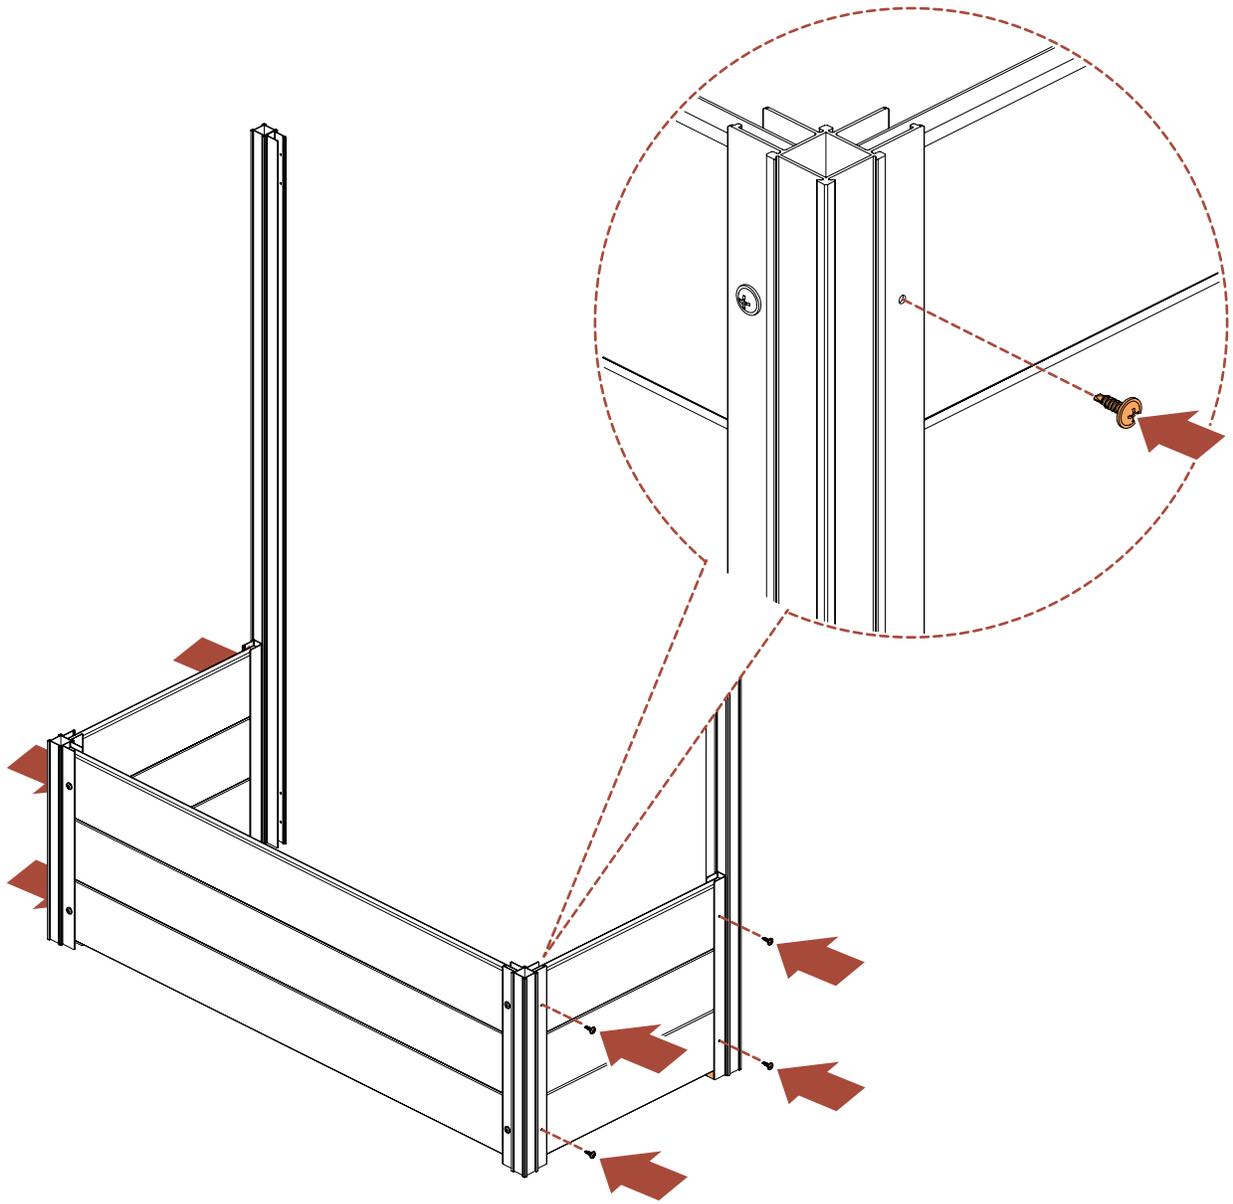

! Ensure spacers are removed after this step, you will need to reuse them.



9

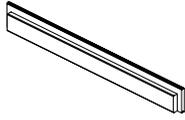

E x1




R x2

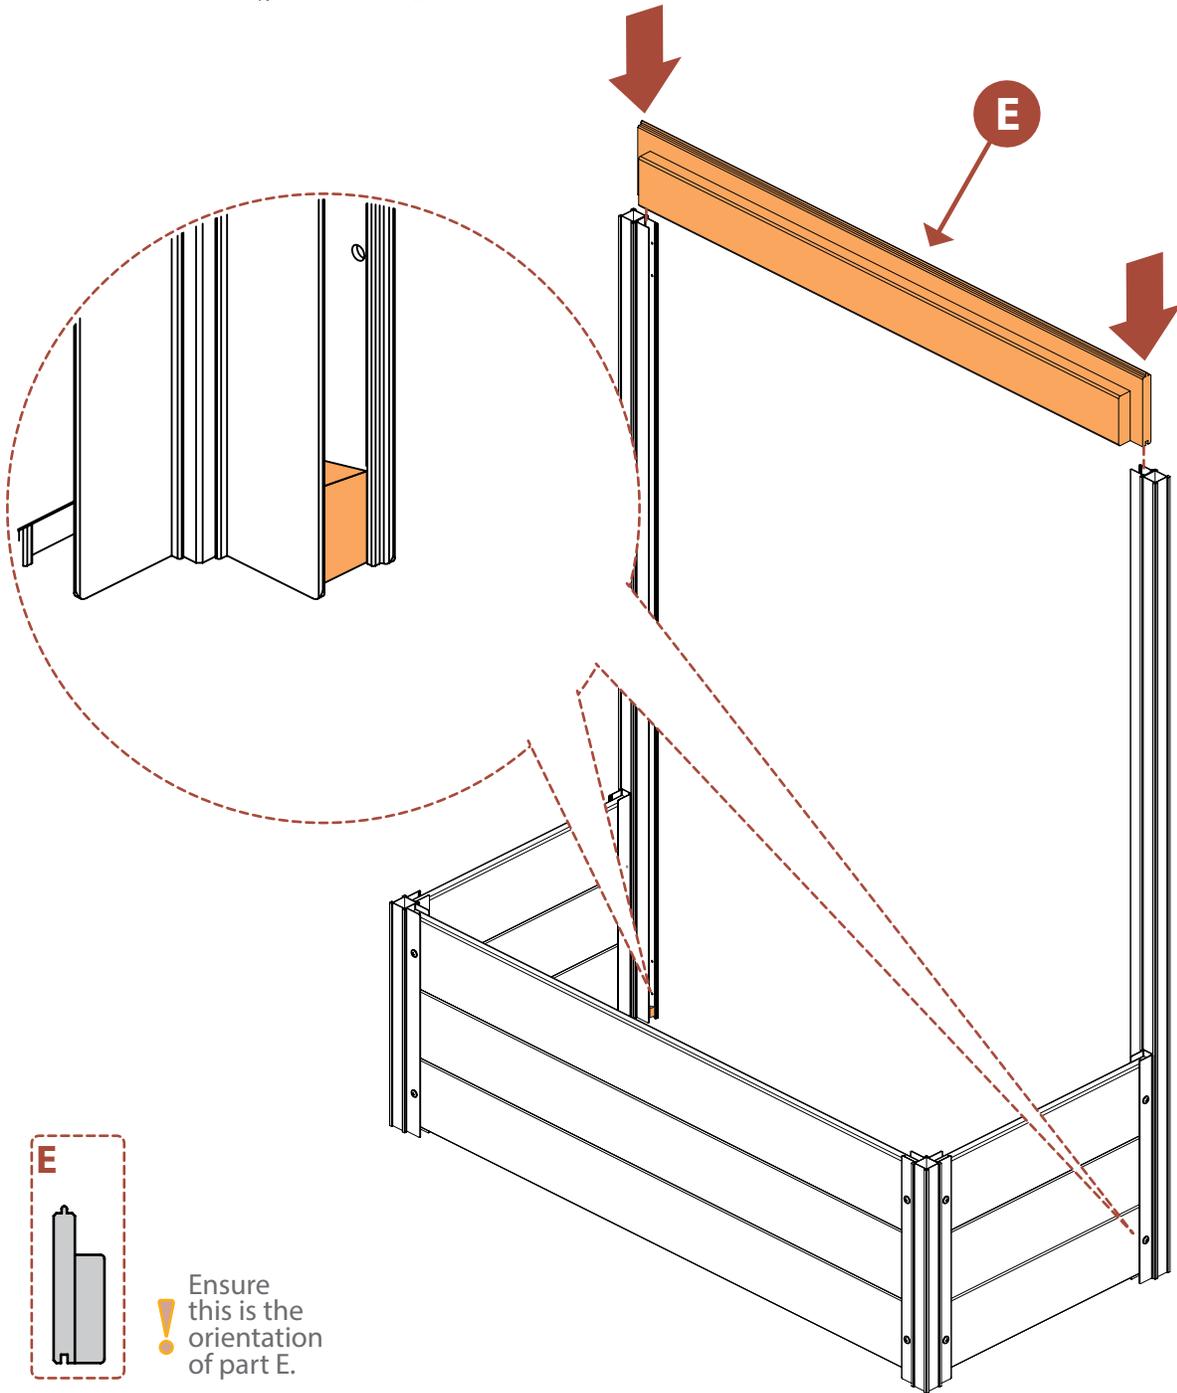


! Ensure this is the orientation of part E.

10


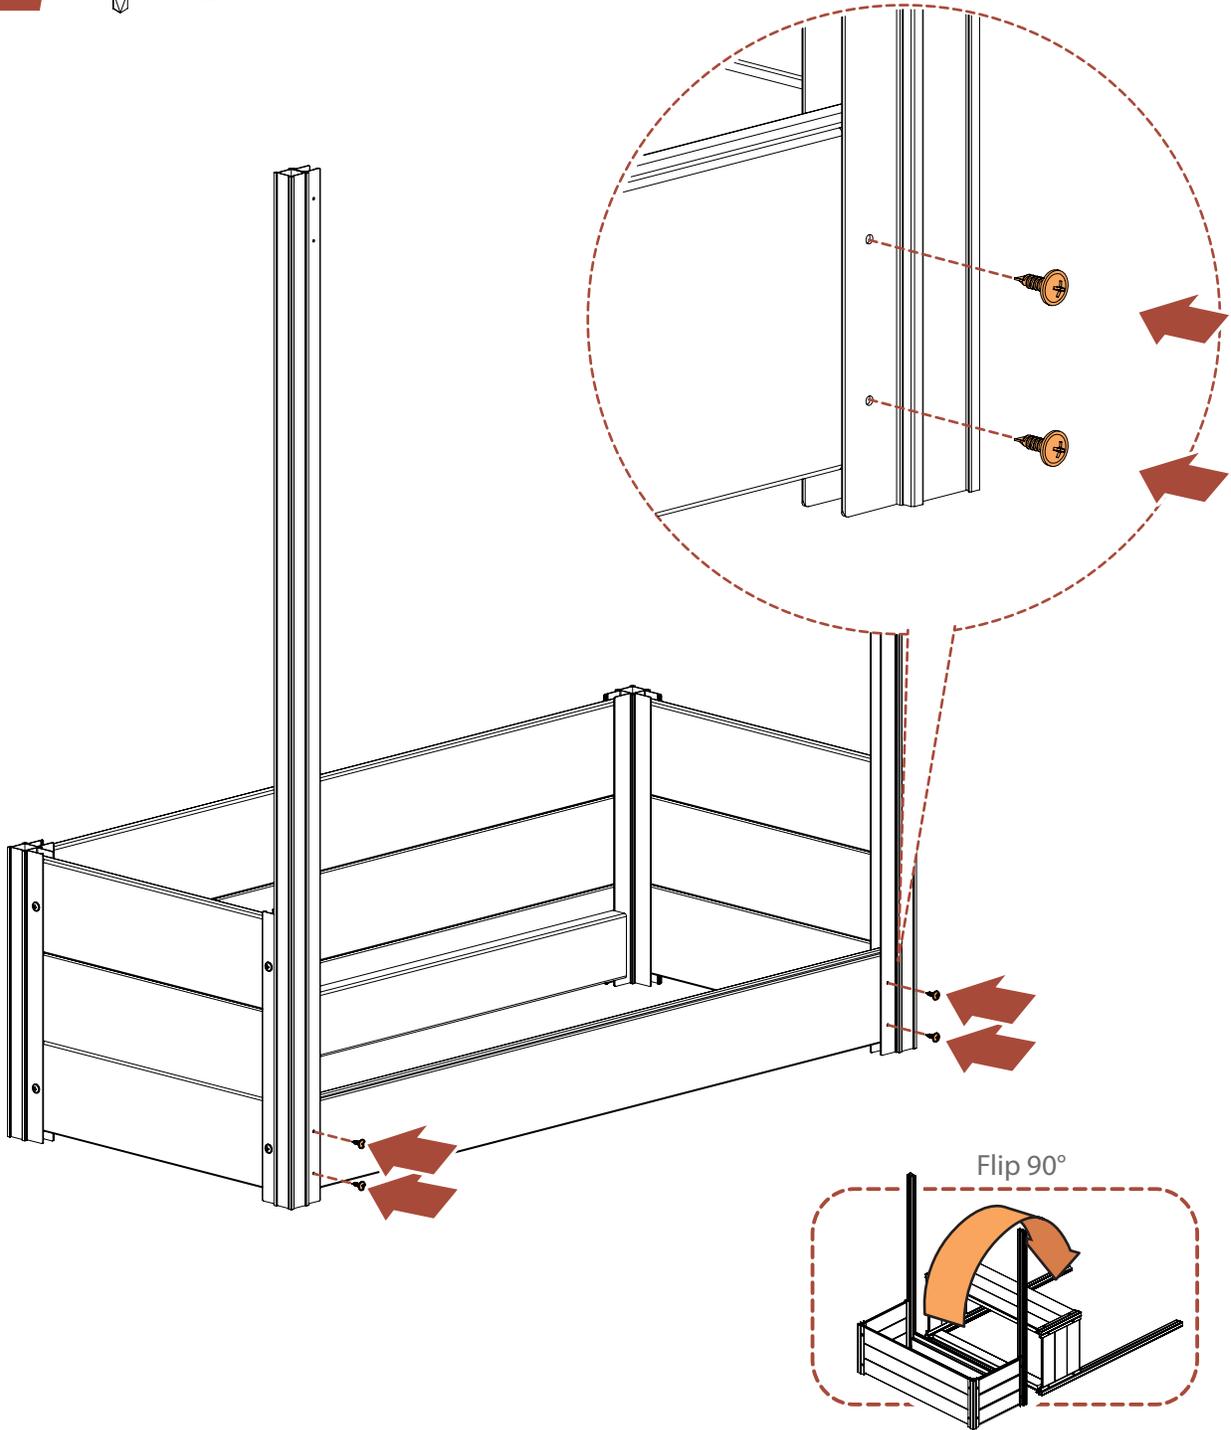


11

 **N x4**

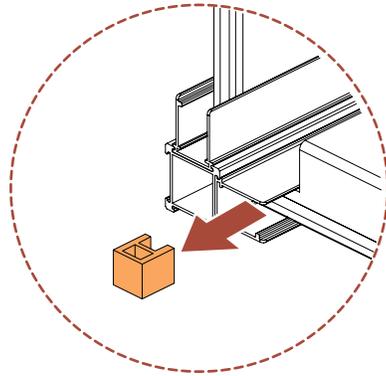

 First remove any remaining spacers from your posts.

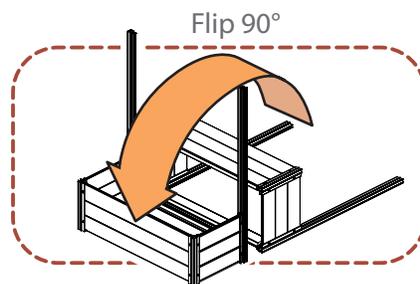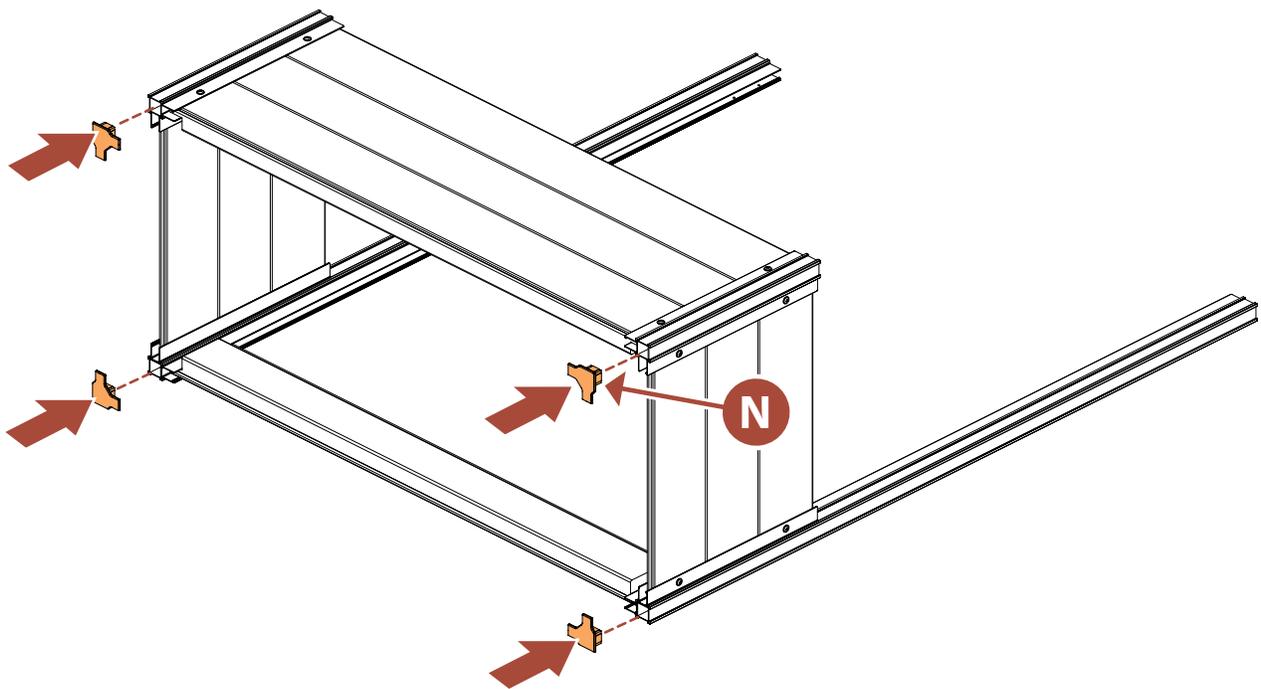



12



F x1



G x2

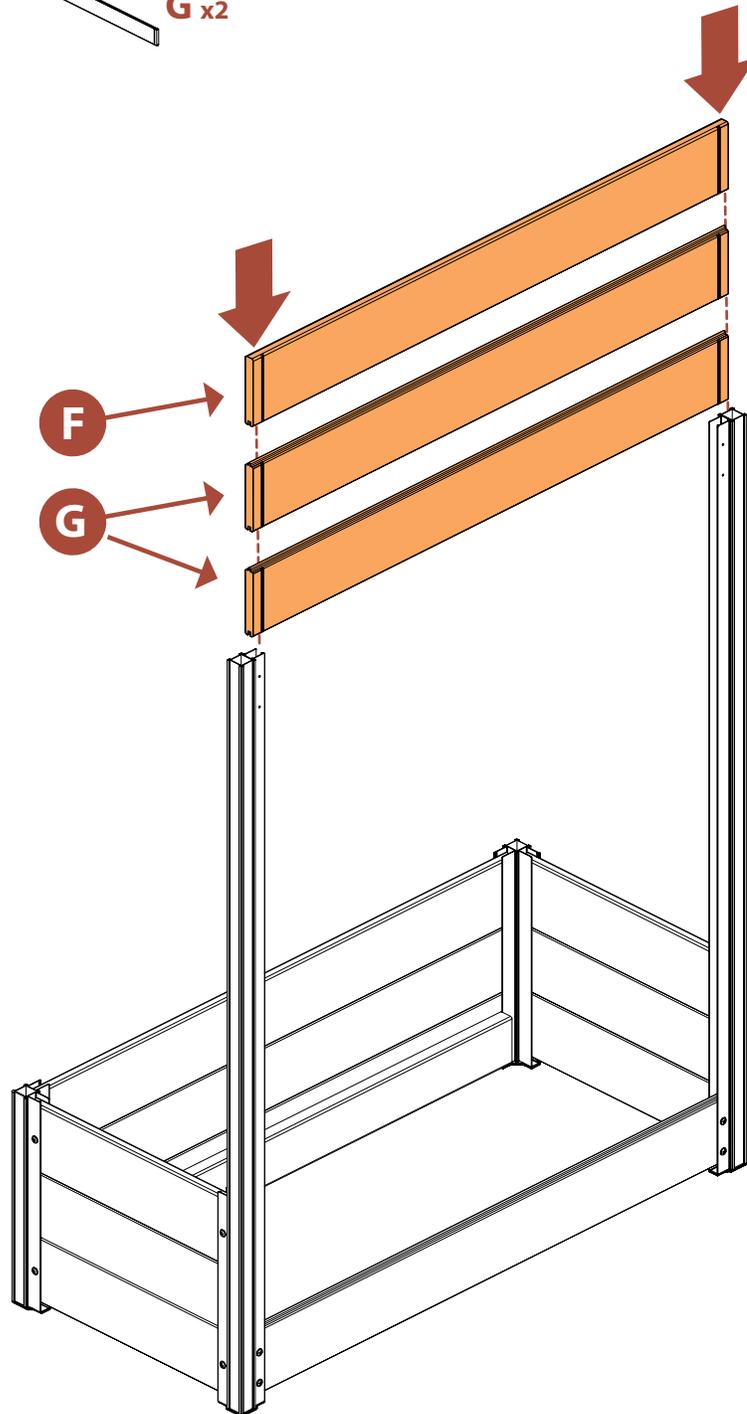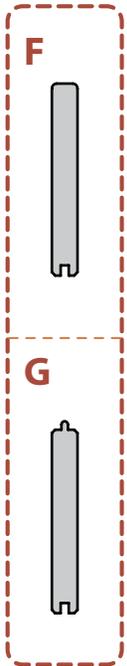


13



C x6



R x12

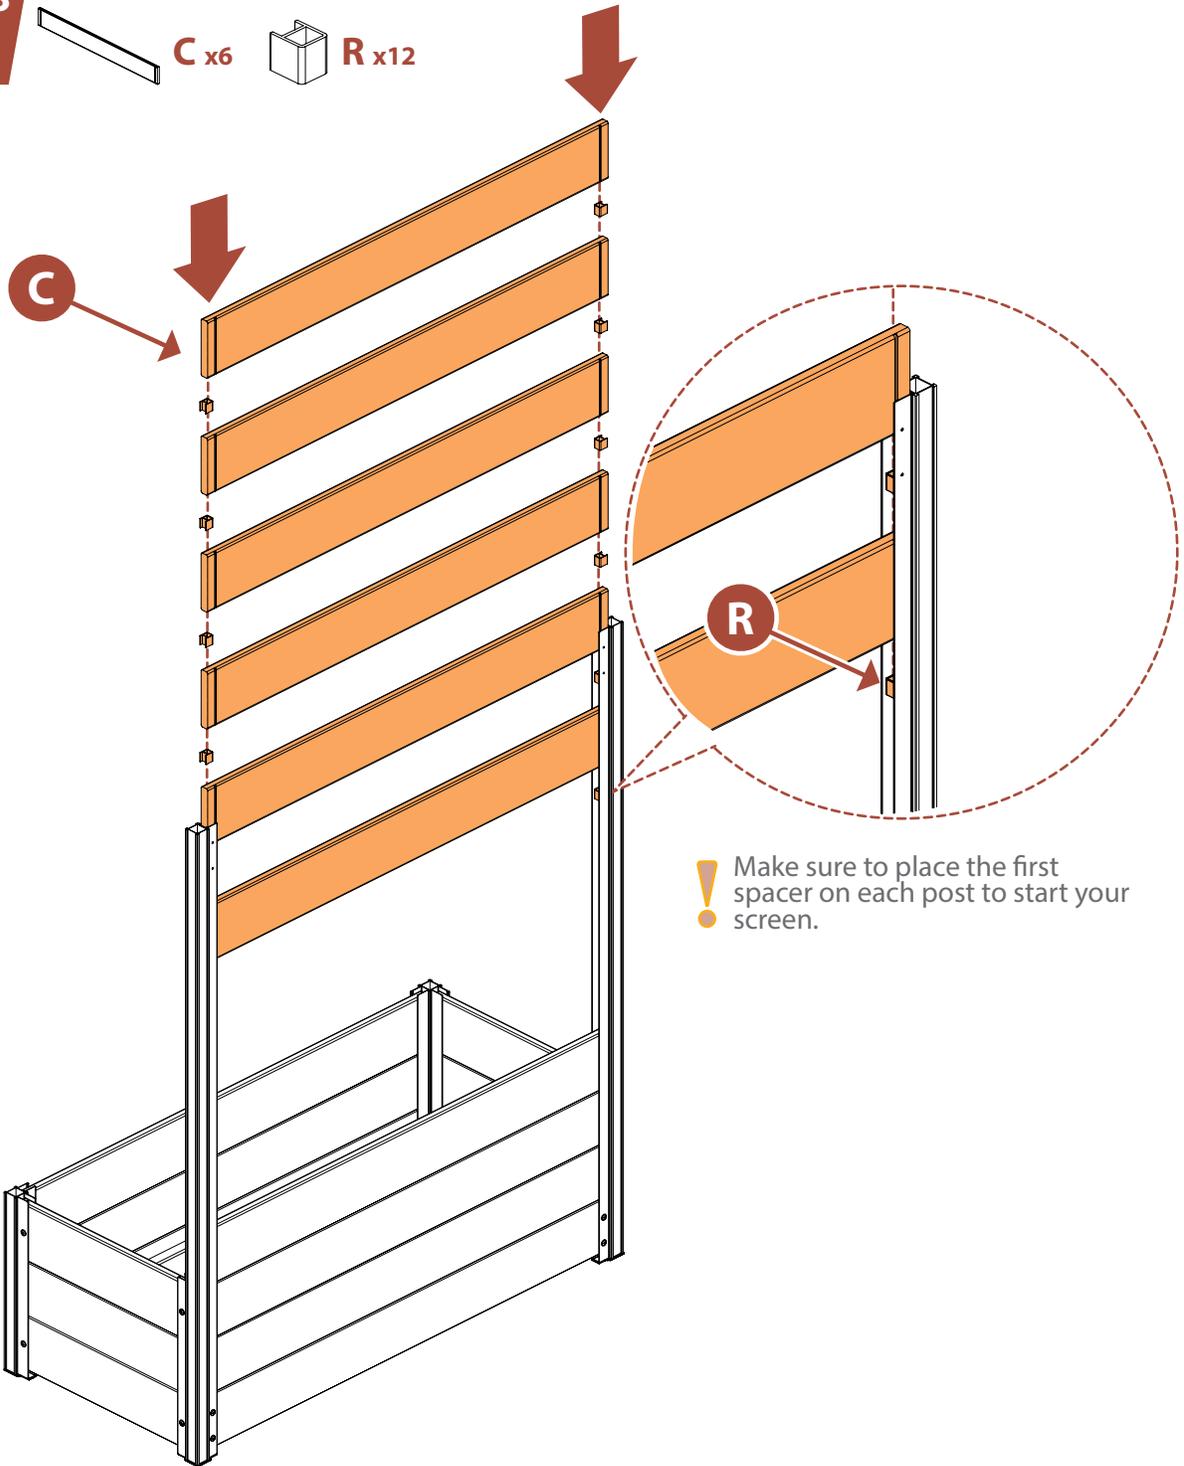


! Make sure to place the first spacer on each post to start your screen.


14




O x4

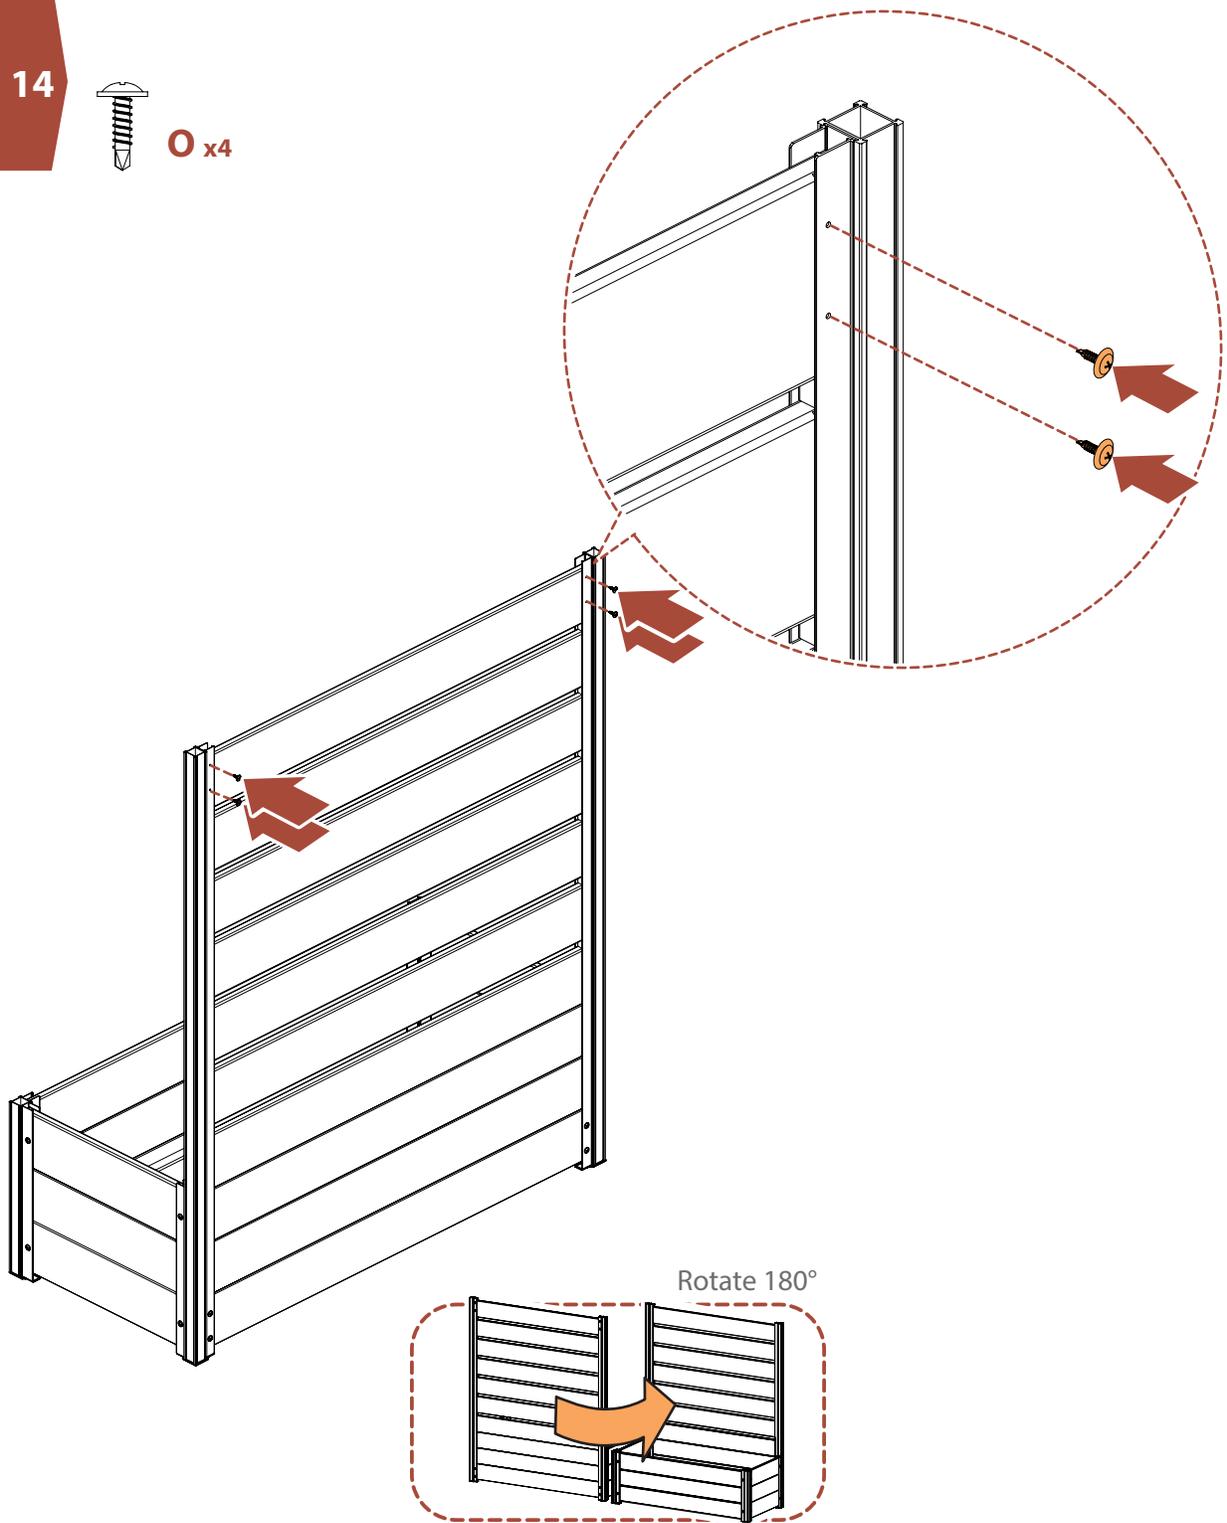


Rotate 180°

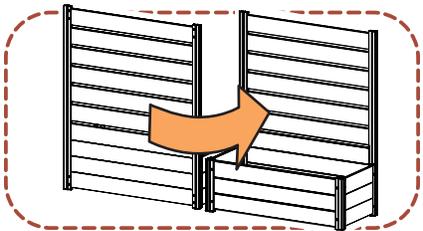

15

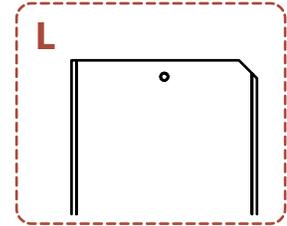

Top View


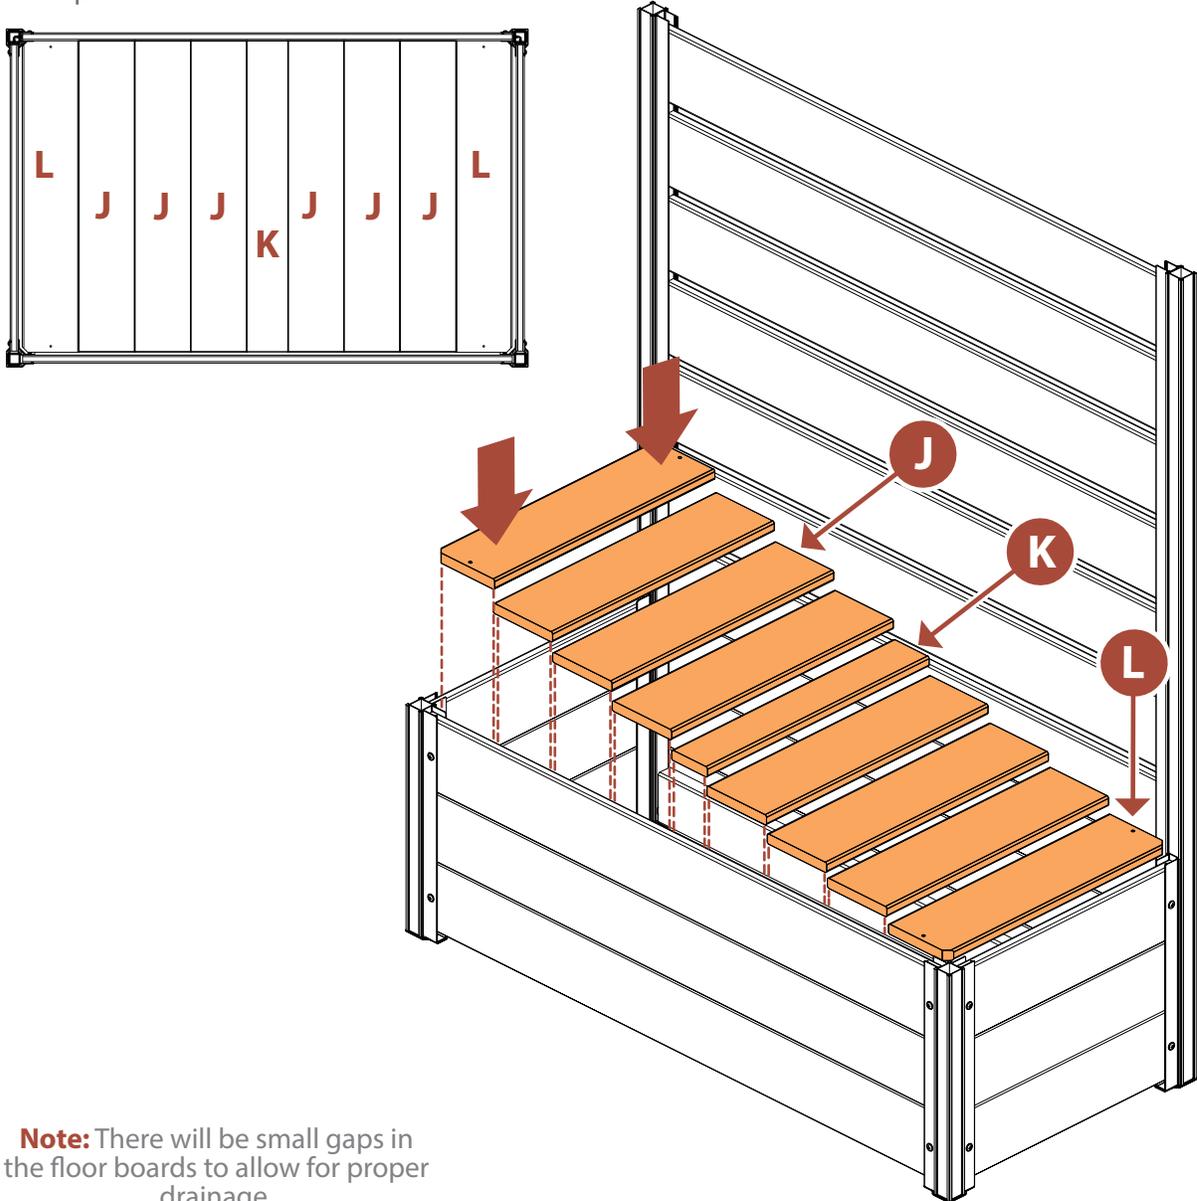


Note: There will be small gaps in the floor boards to allow for proper drainage.


17



P x4

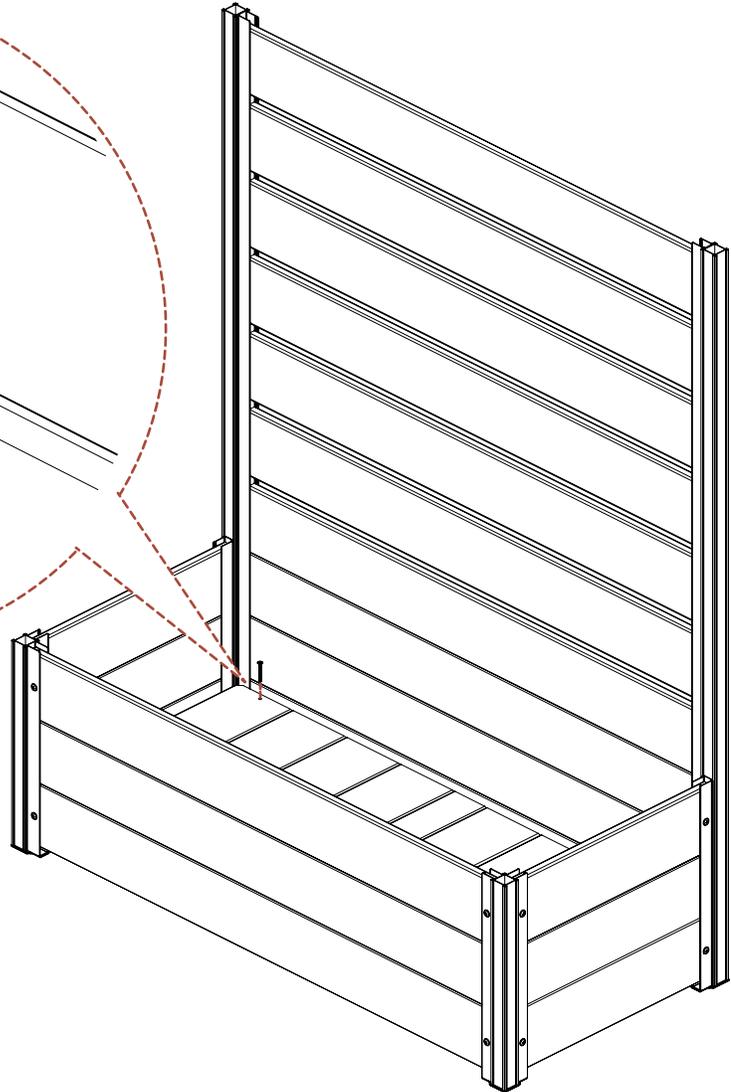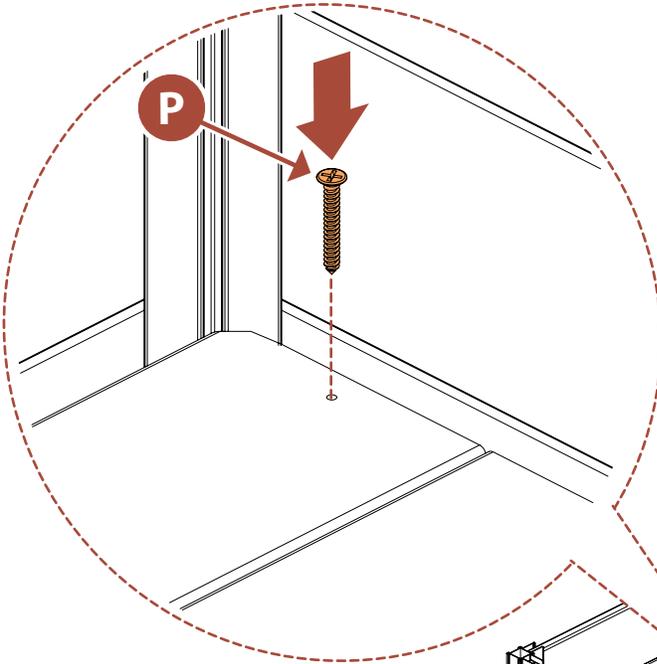

Top View

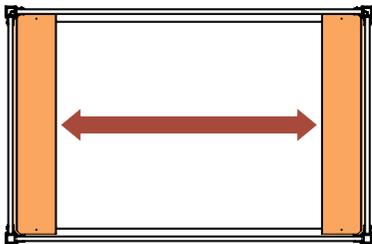

! Ensure the end floorboards (L) are flush to the sides of the planter box before securing with screws.

Note: Drive a screw into each of corner of the planter box.


17




M x2




N x2

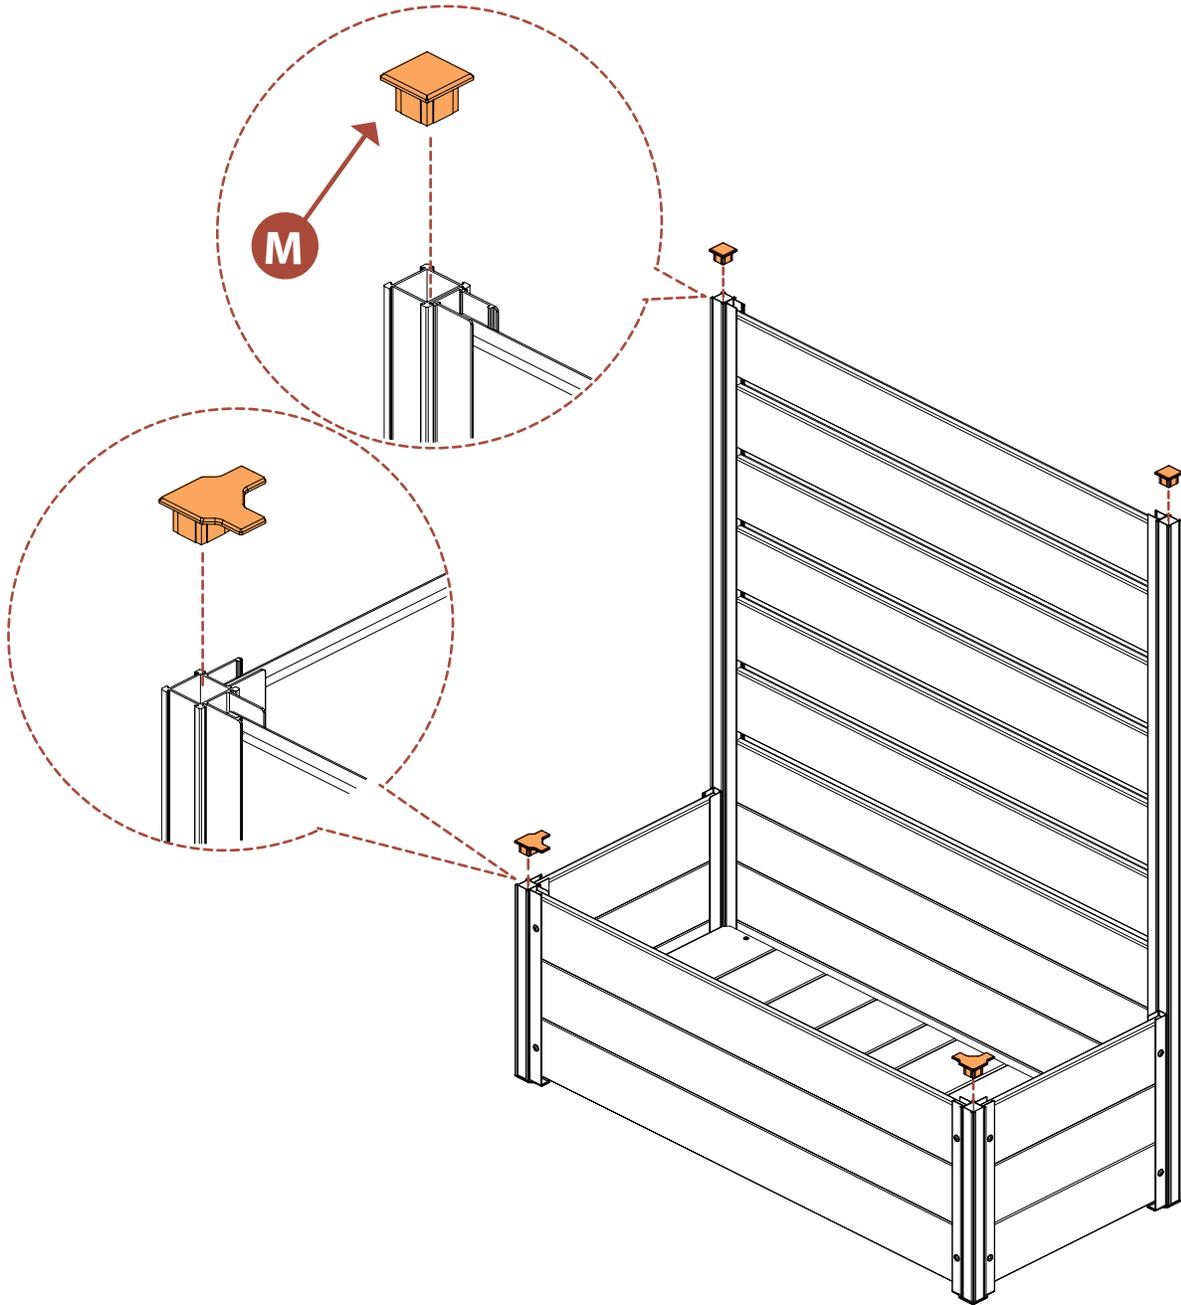

18

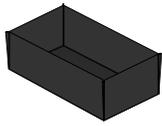

Q x1

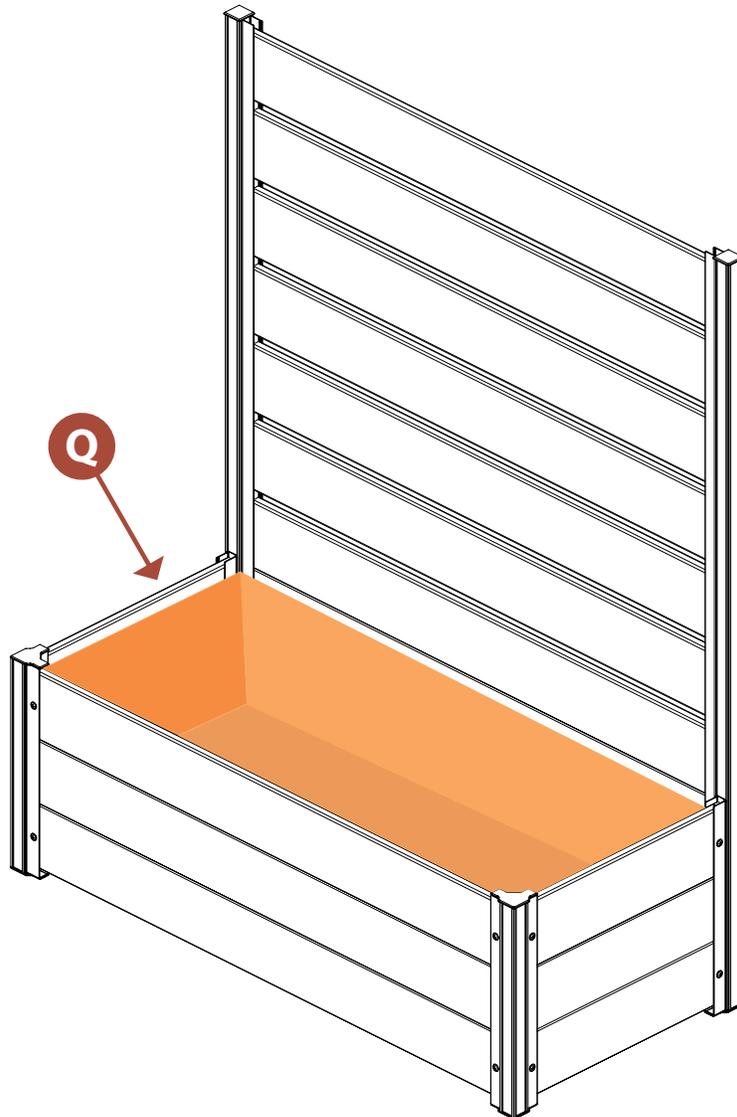

Fill with your choice of soil.

Max Soil Volume: 105 qt.
3.5 cu. ft.

ENCLO

HIDE IT WITH STYLE

www.encloscreens.com

support@encloscreens.com



704-892-5222
877-234-6196



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



ASSEMBLY
INSTRUCTIONS
AZ18040