
ENCLO

HIDE IT WITH STYLE

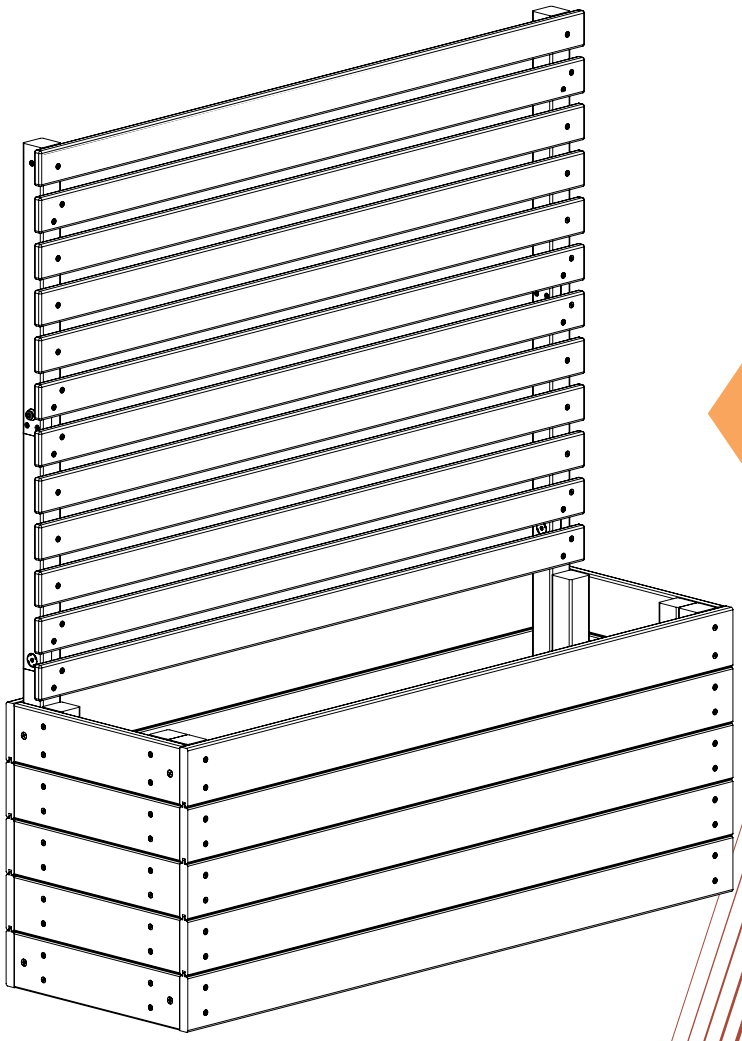

Tacoma Wood Planter Screen

42"W x 14"L x 47 ½"H

30 min Assembly
Approximate time

Assembly Video
Scan the QR Code below

ASSEMBLY INSTRUCTIONS

EC18048

www.encloscreens.com

VER. **100725**

GENERAL INFORMATION

MISSING OR DAMAGED PARTS?

› Visit Our Website
so we can help you right away!
parts.nychbrands.com

* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, **please have the following**

- Your product number (**EC18048**)
- Your affected part letters (**pages 4-5**)
- Your original product box

NEED ASSEMBLY HELP?


If you are having problems with assembly or installation of this product, **please contact at:**

704-892-5222 / 877-234-6196 **support@encloscreens.com**

NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

DETAILED **PRODUCT DIMENSIONS** & **SPECIFICATIONS**

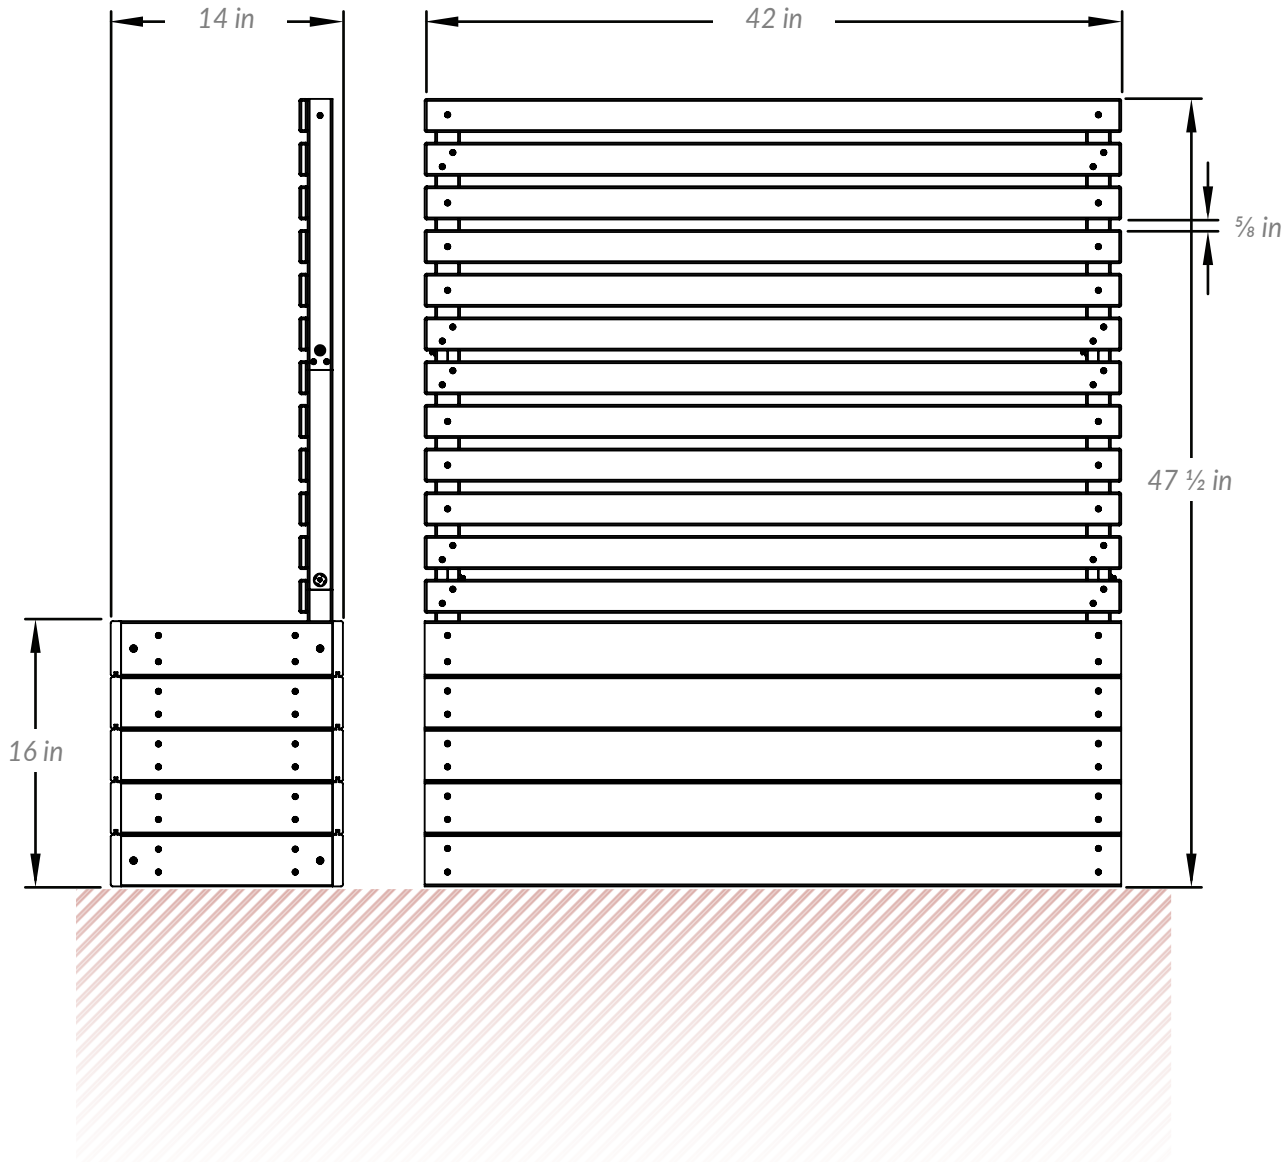




Touch up paint is included *if your product has any small scratches impacting the stain. If your product is heavily damaged in shipping, contact our customer care team and we will help resolve your issues and get replacement parts sent your way.*

parts.nychbrands.com
support@encloscreens.com
704-892-5222 / 877-234-6196


LAY OUT MATERIALS

PLANTER PANELS

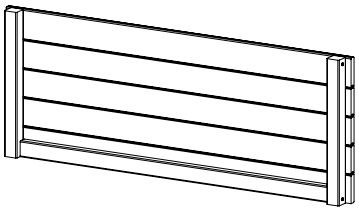


A

Front Panel (1)
2 ⅛" x 16" x 42"

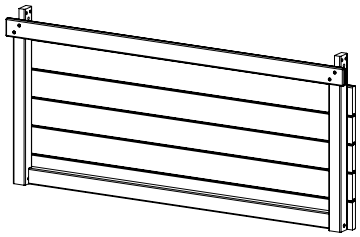

B


Back Panel (1)
2 ⅝" x 19 ¾" x 42"

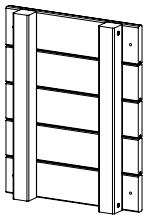

C


Side Panel (2)
2 ⅛" x 12 ¾" x 16"

PLANTER SCREEN

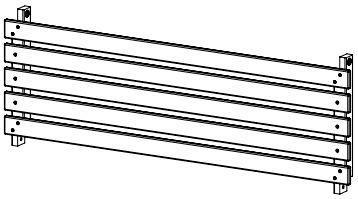

D

Middle Screen Panel (1)
2" x 15" x 42"

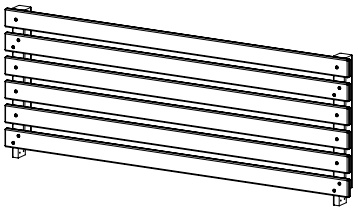


E

Top Screen Panel (1)
2" x 16 ⅜" x 42"


LAY OUT MATERIALS

FLOORBOARDS

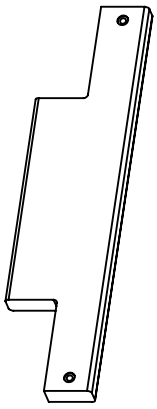


F

End Floor Board (2)
⅝" x 3" x 12 ⅝"

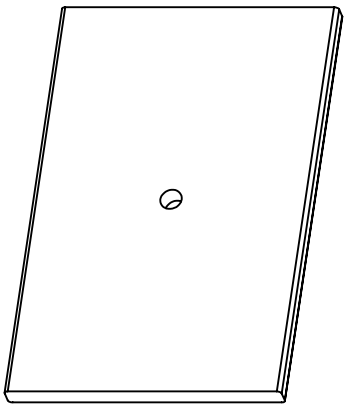

G

Floor Board Panel (4)
⅝" x 8 ⅛" x 12 ⅝"

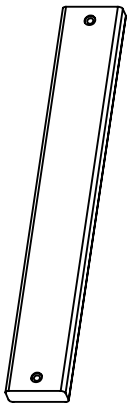


H

Middle Floor Bridge (1)
⅝" x 1 ¾" x 12 ⅝"

HARDWARE

I



1 ⅜" Wood Screw (14)

J



1 ⅝" Wood Screw (8)

K




1 ⅝" Bolt (4)

L




Lock Washer (4)

M




Washer (4)

N

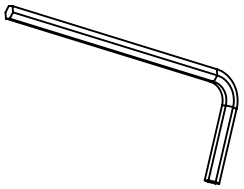


Hex Key (1)

O



Phillips Bit (1)


P

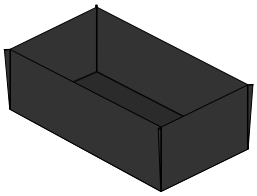


Planter Liner (1)

ASSEMBLING

1

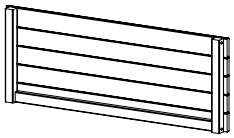


A x1

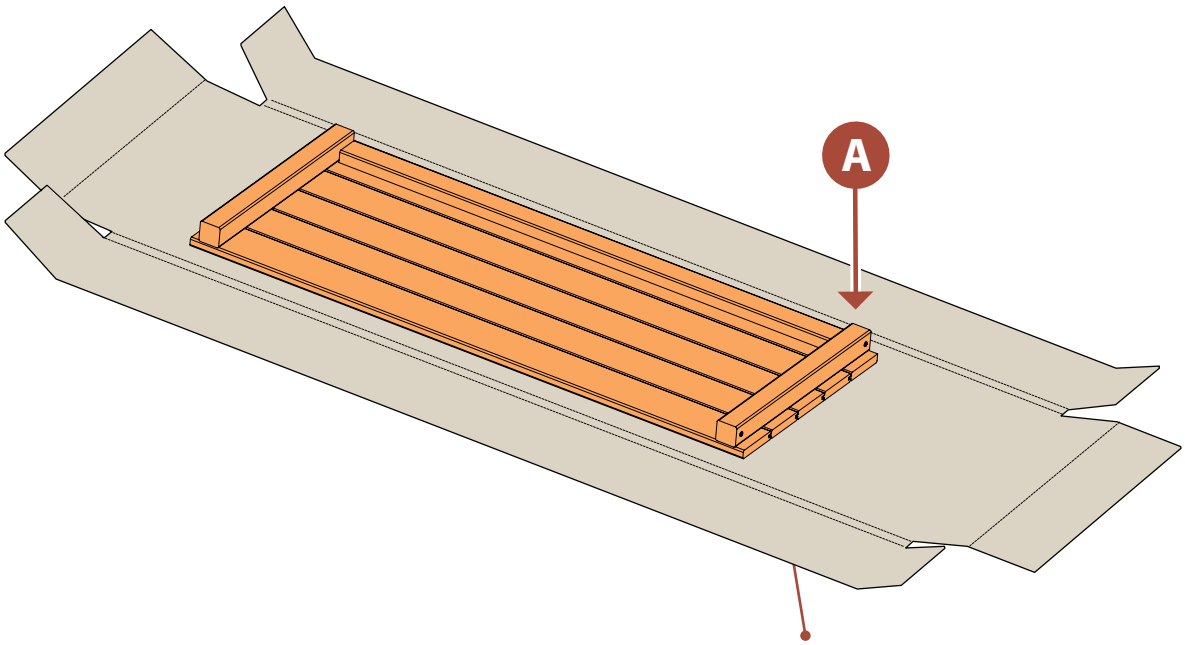


Assemble on box or other smooth surface to prevent scratching


Stand Panel

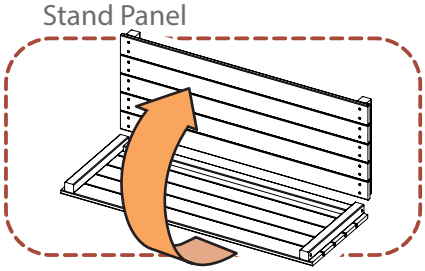


2

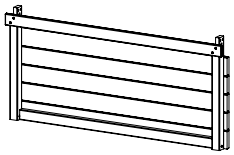


B x1

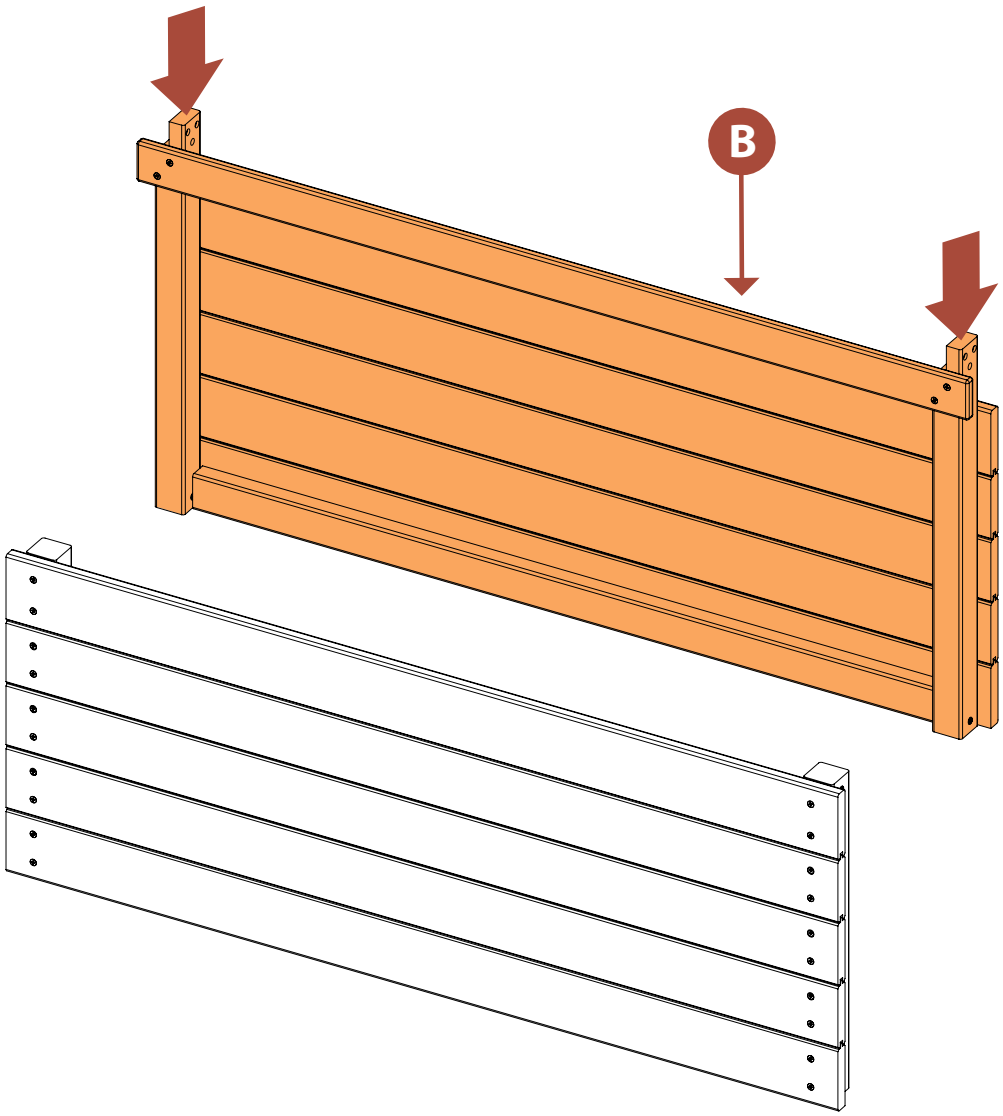


3




C x2

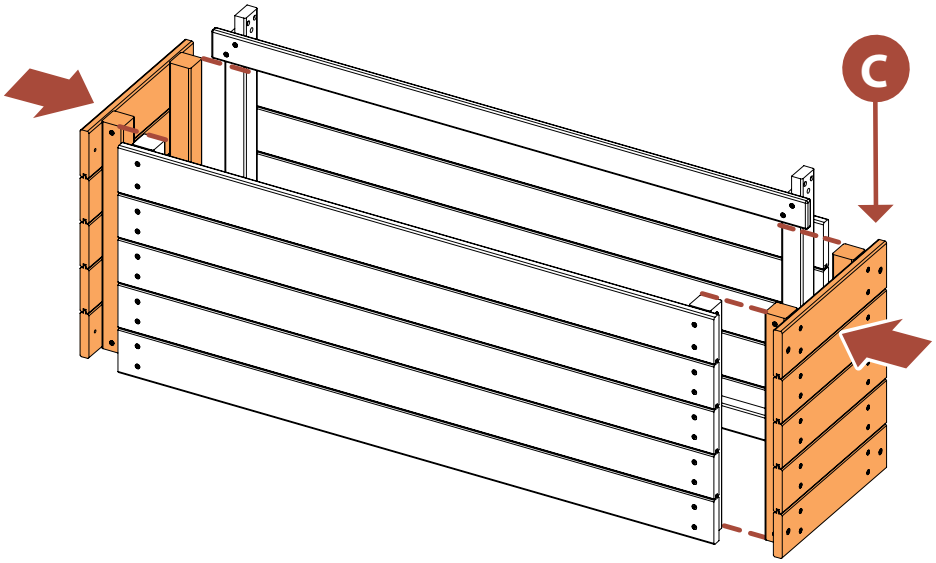

4




J x8

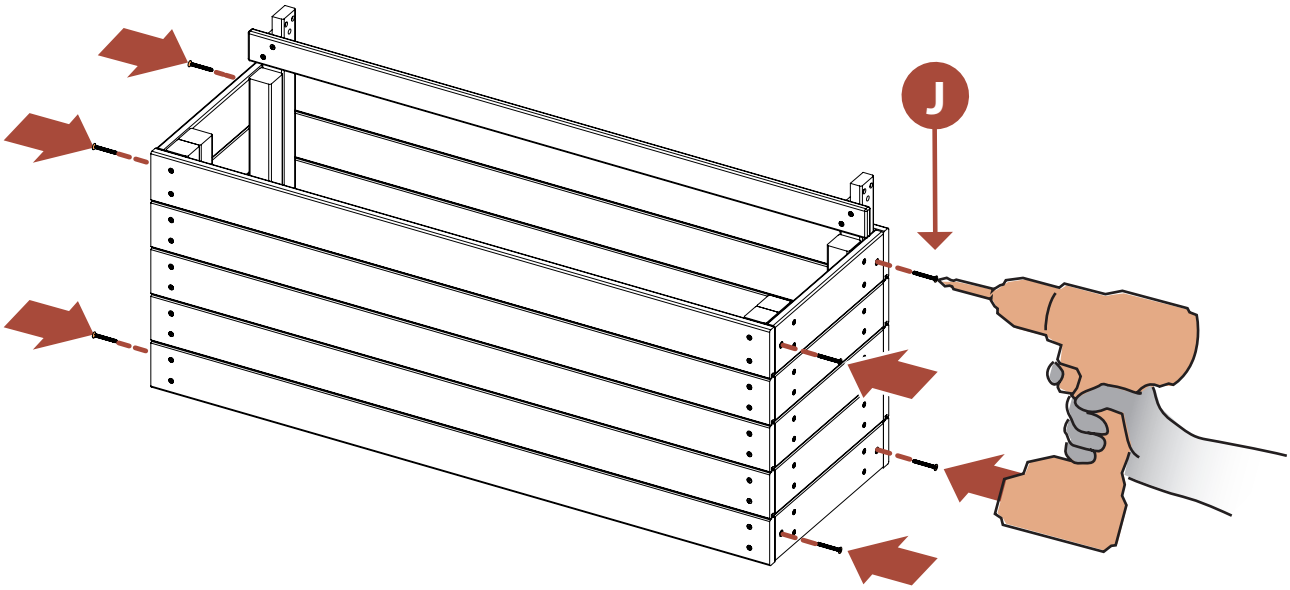

5



D x1

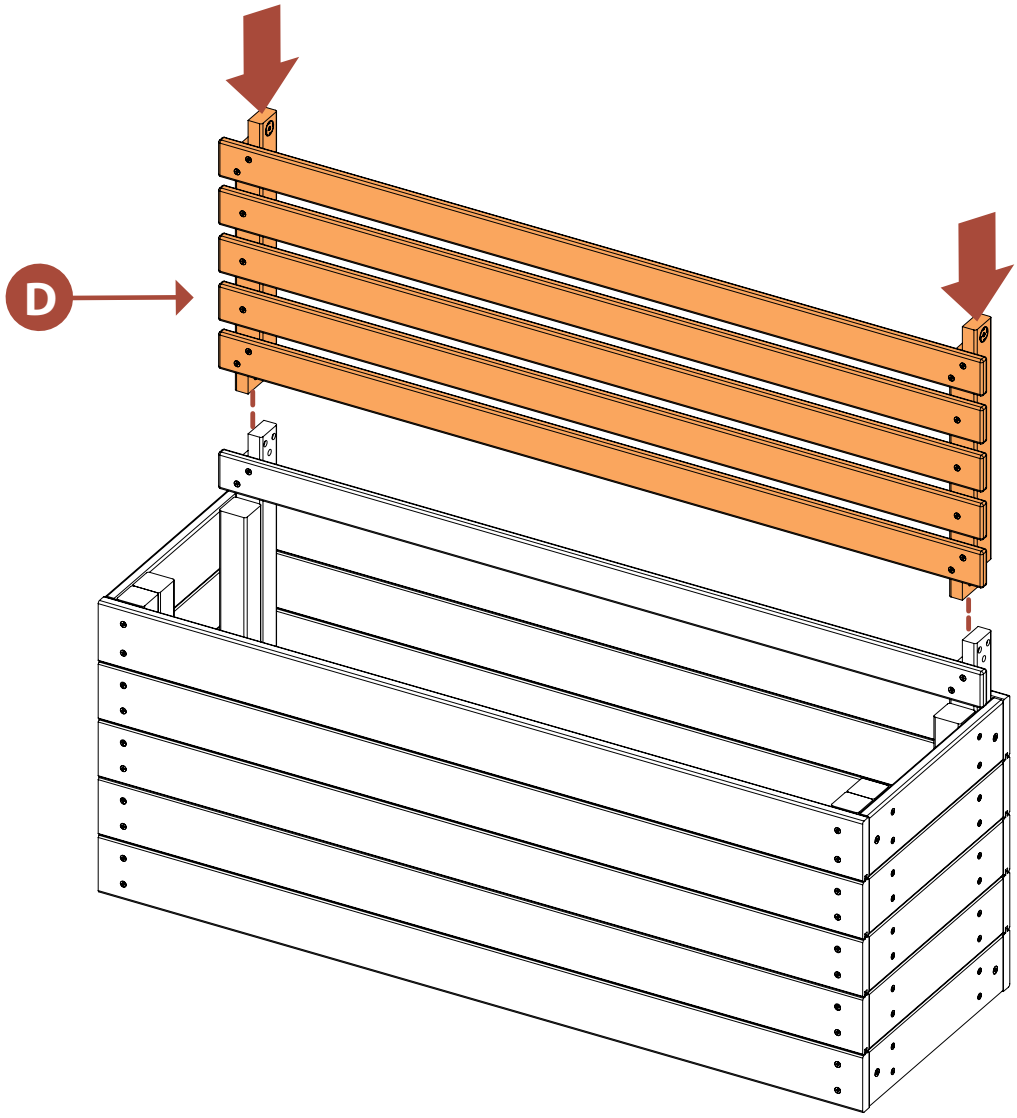

6




K x2




L x2



M x2

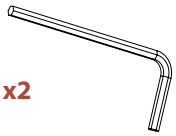

N x1

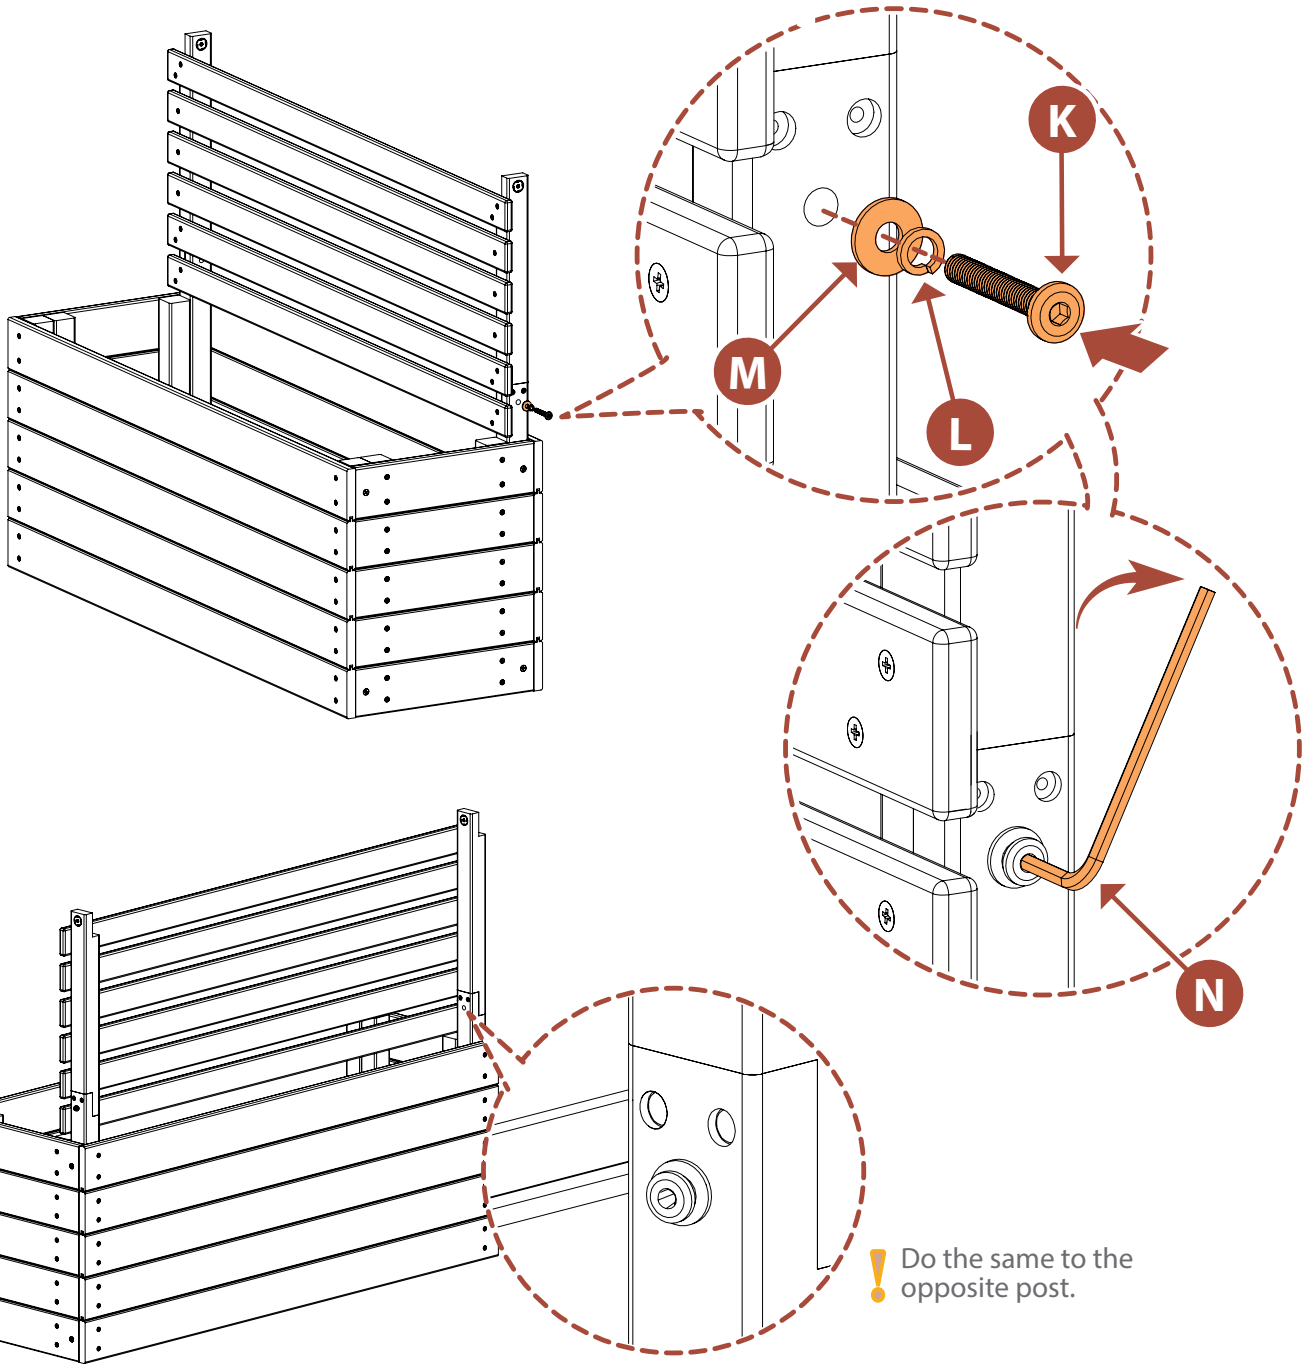



! Do the same to the opposite post.

7

I x4

O x1

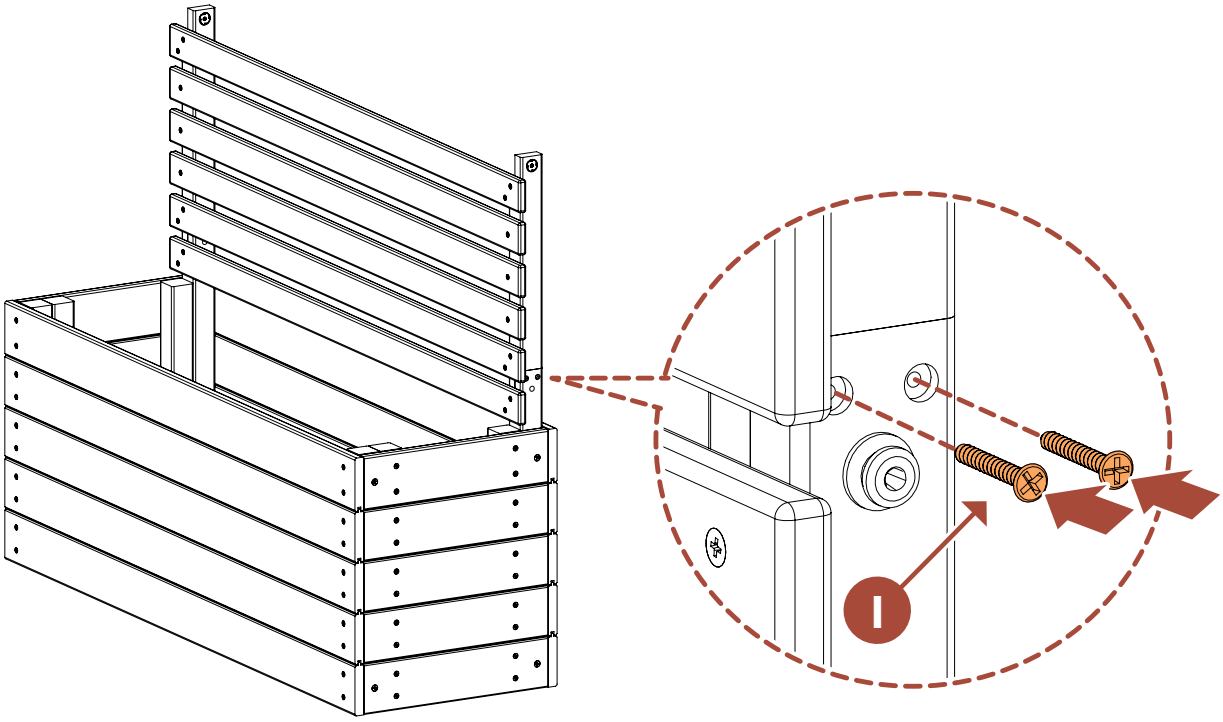

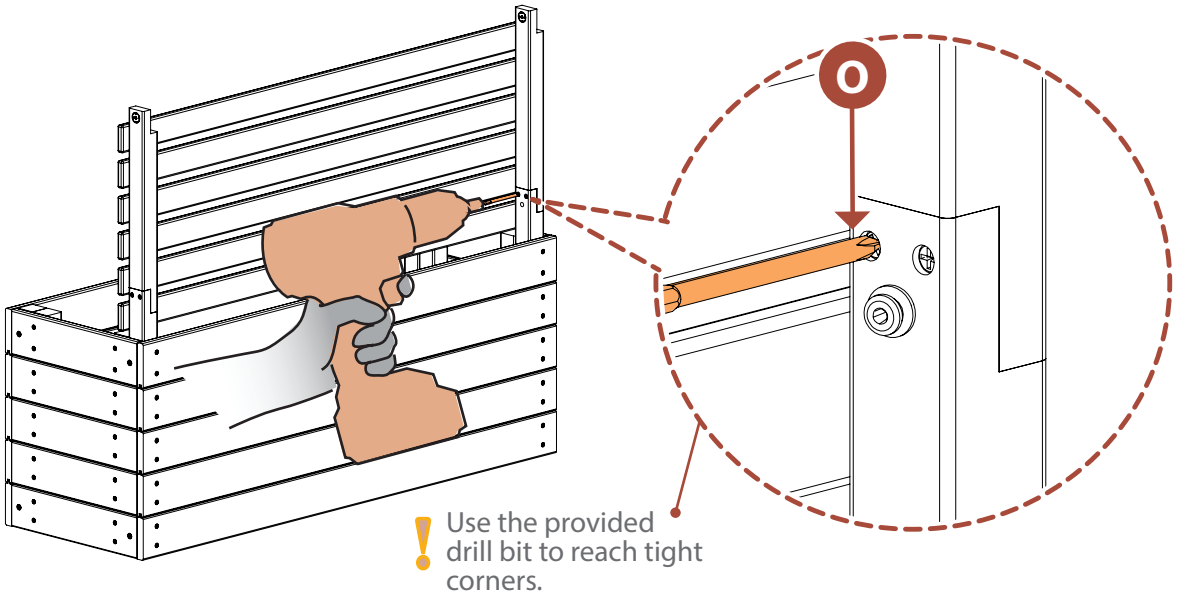


! Use the provided drill bit to reach tight corners.

8



E x1

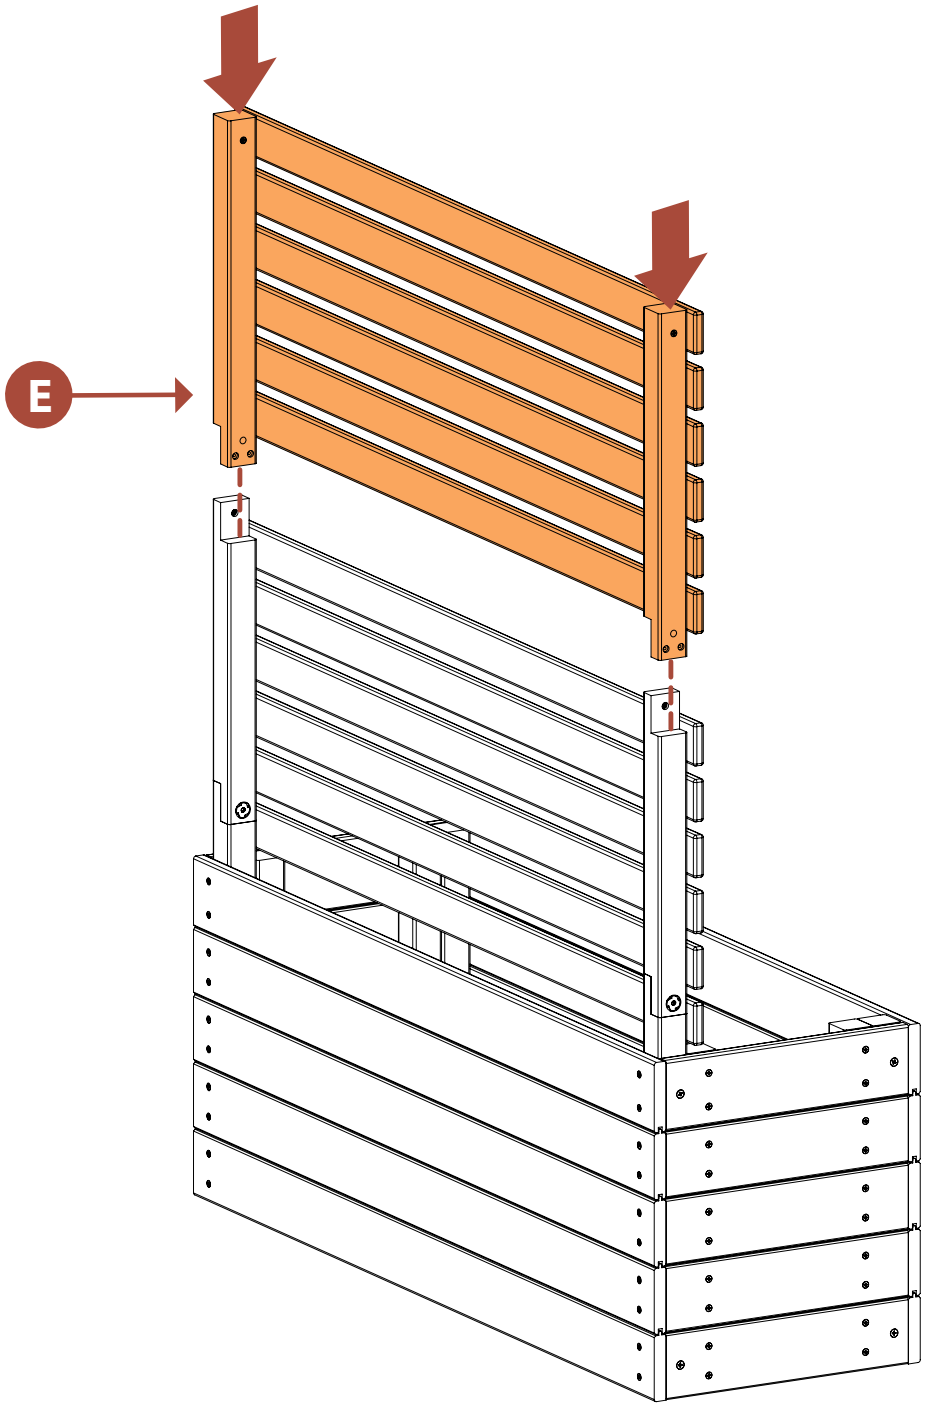

9



I x4




K x2



L x2




M x2

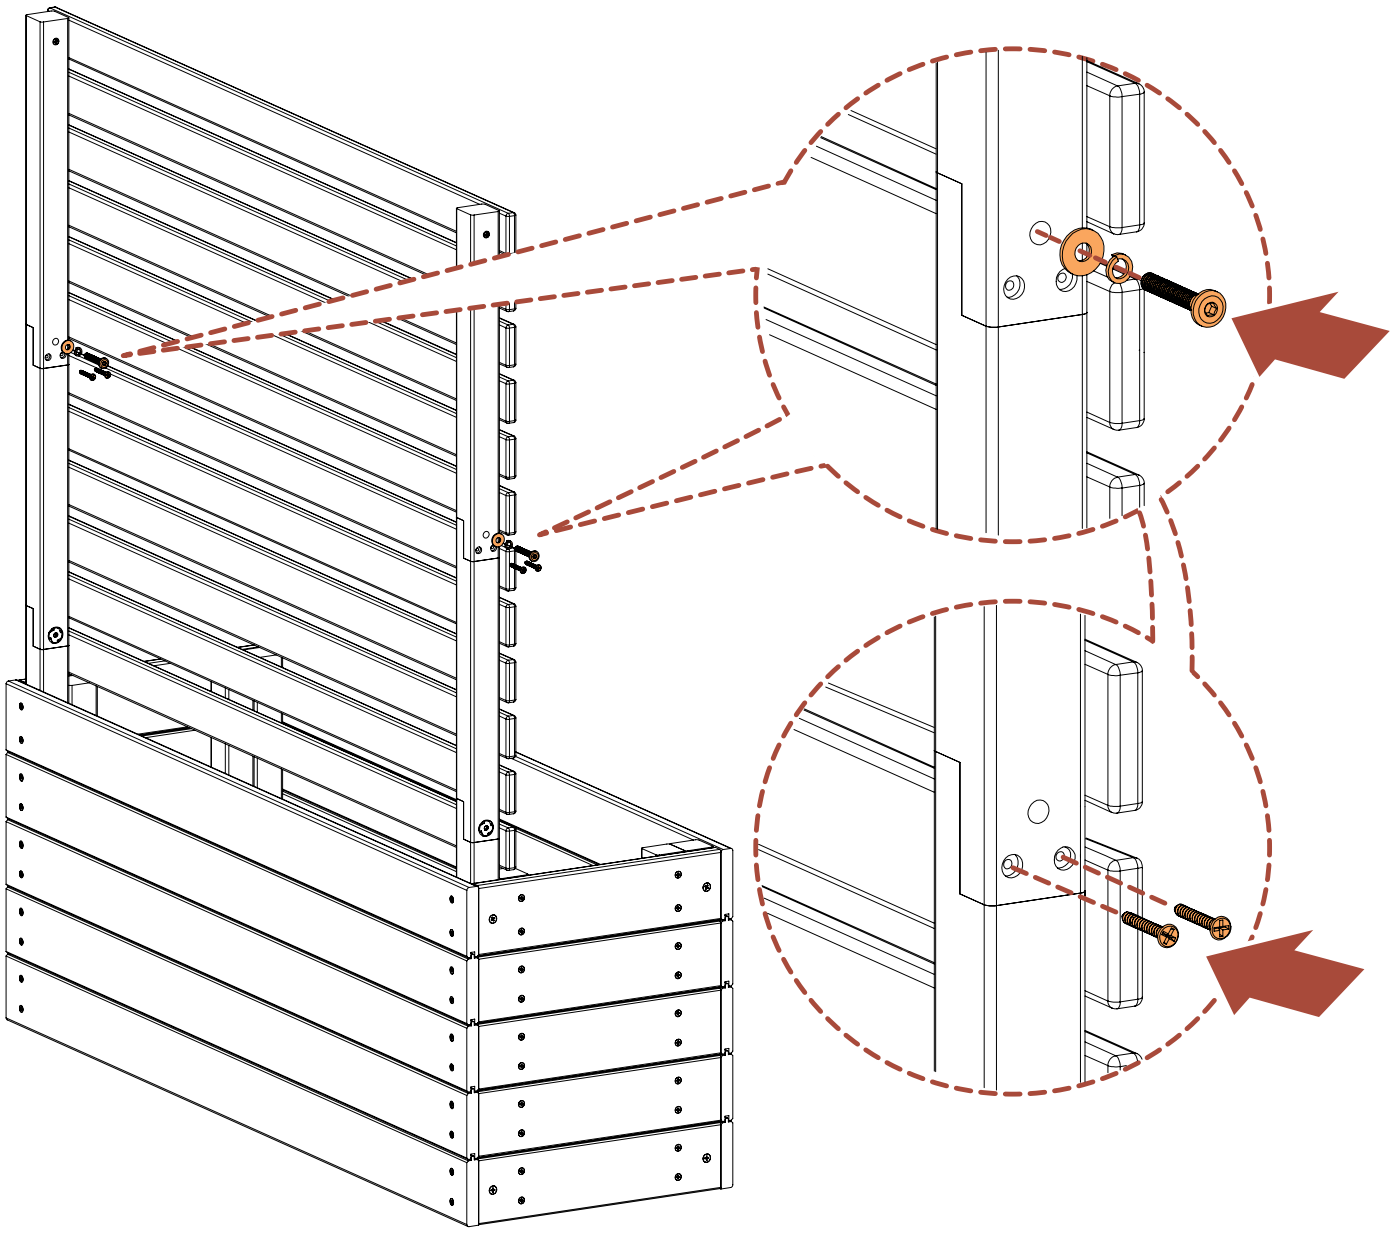

10




F x2

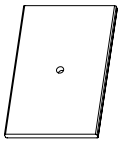

G x4




H x1

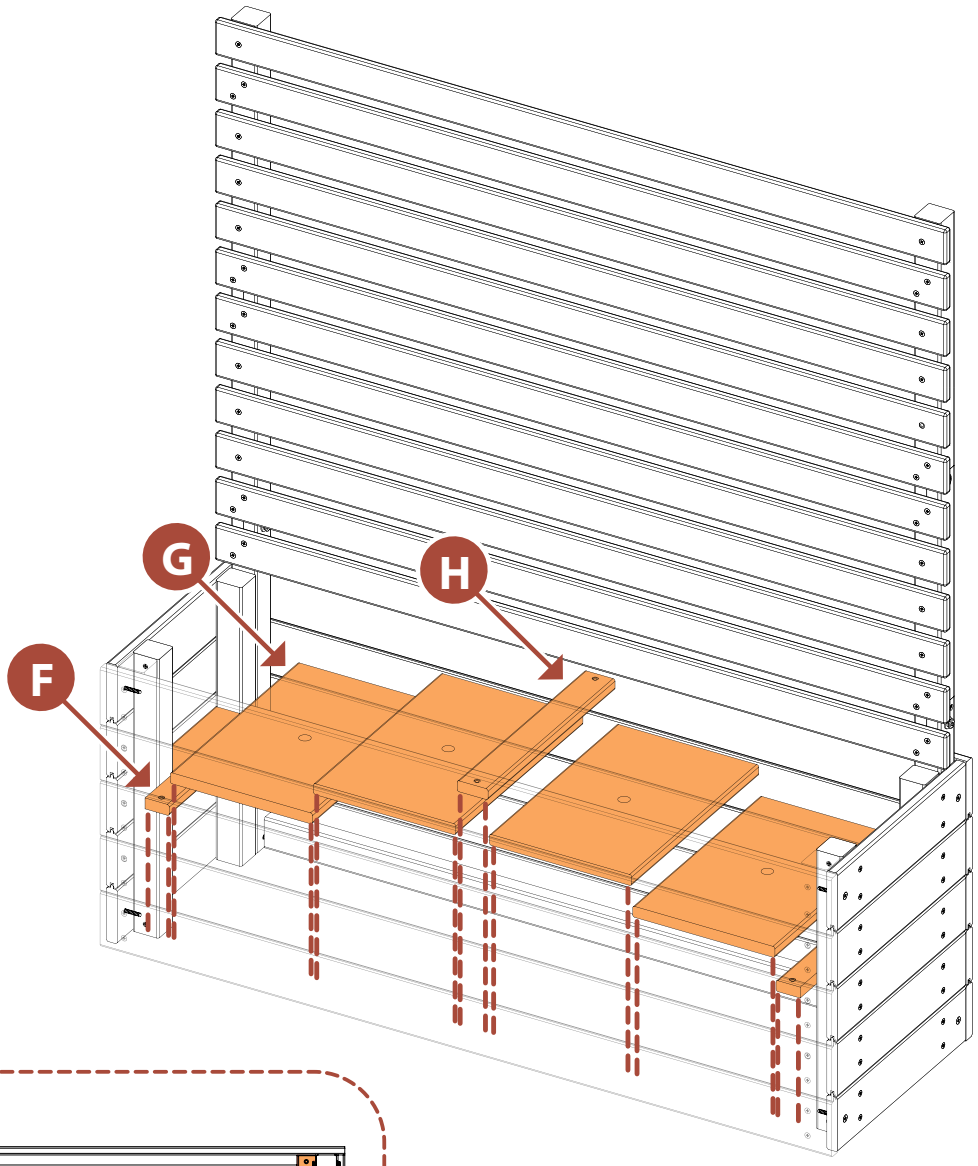


Top View



11



I x6

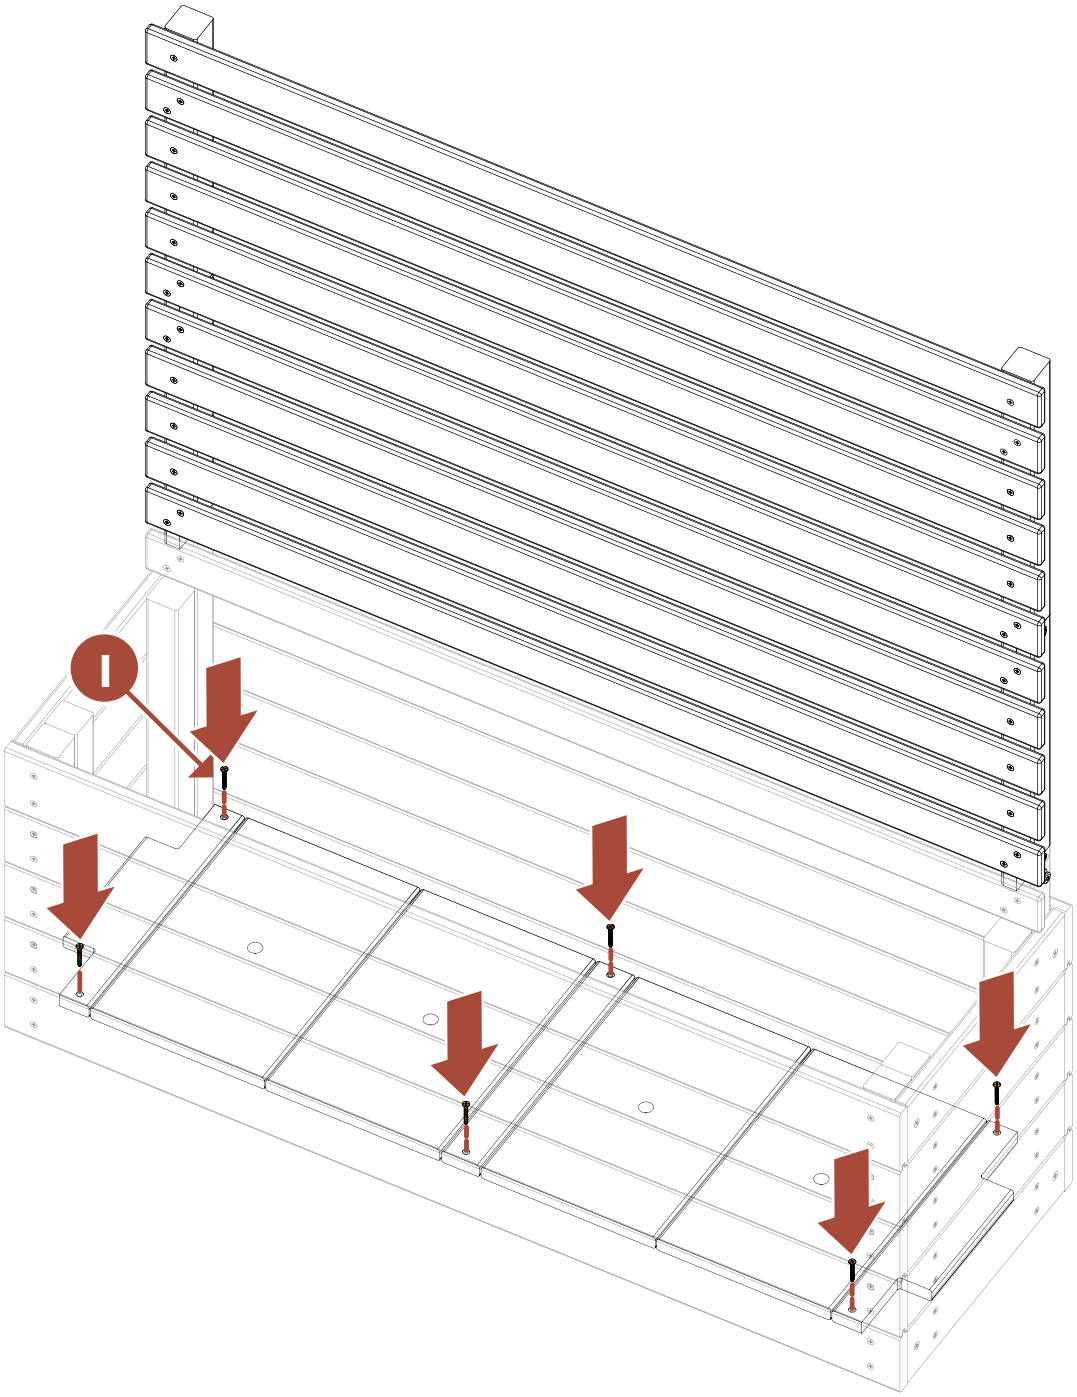

ENCLO

HIDE IT WITH STYLE

www.encloscreens.com

support@encloscreens.com

704-892-5222
877-234-6196

6935 Reames Rd. Ste. K.
Charlotte, NC 28216

ASSEMBLY INSTRUCTIONS

EC18048

VER. **100725**