
ENCLO

HIDE IT WITH STYLE

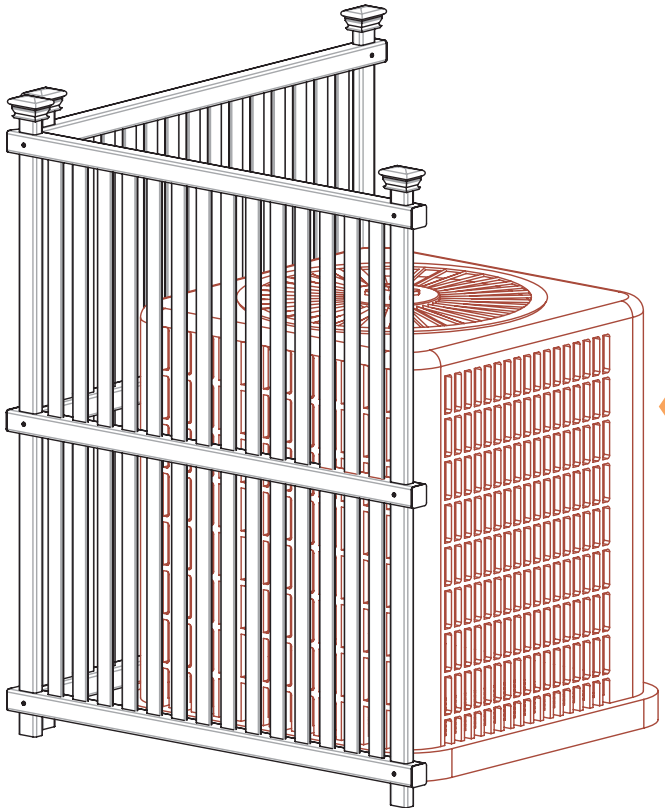

Wilmington Screen Kit

36" W x 45" H

45 min Assembly
Approximate time

Assembly Video
Scan the QR Code below

ASSEMBLY INSTRUCTIONS

ZP19008

www.encloscreens.com

VER. 021026

GENERAL INFORMATION

MISSING OR DAMAGED PARTS?

Visit Our Website
so we can help you right away!
parts.nychbrands.com

* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, **please have the following**

- Your product number (**ZP19008**)
- Your affected part letters (**page 5**)
- Your original product box

NEED ASSEMBLY HELP?

If you are having problems with assembly or installation of this product, **please contact at:**


704-892-5222 / 877-234-6196 **support@encloscreens.com**

NEED TO RETURN?


If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

PREPARATION

Tools required for a smoother installation experience.

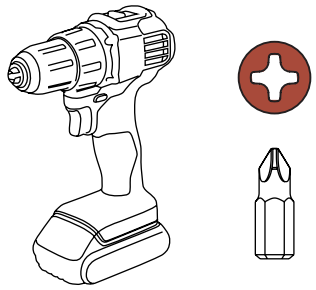

Power Drill with Phillips Bit

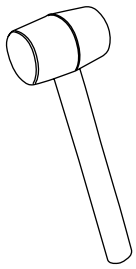


Mallet




Wood Block*

** May be needed depending on soil condition*

OPTIONAL

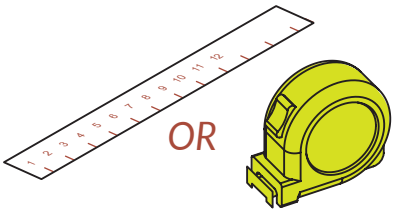


Measurements tools

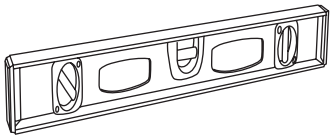



Level


We recommend 2 people for a smoother assembly.

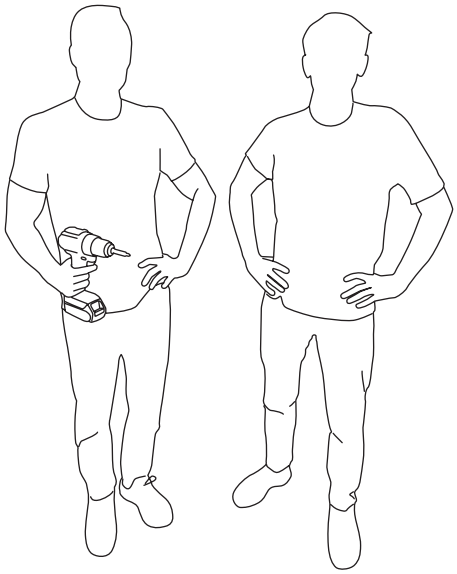

DETAILED PRODUCT DIMENSIONS & SPECIFICATIONS

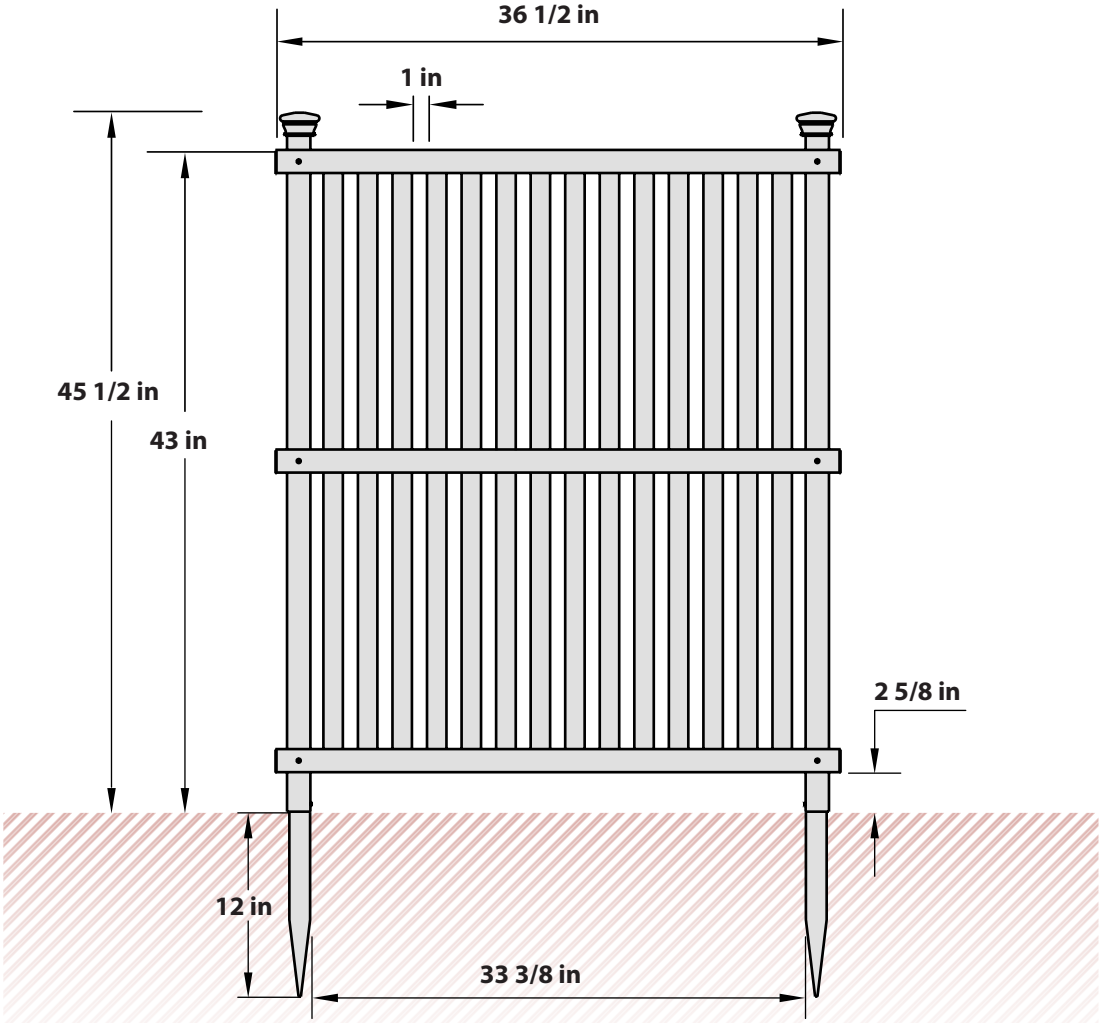

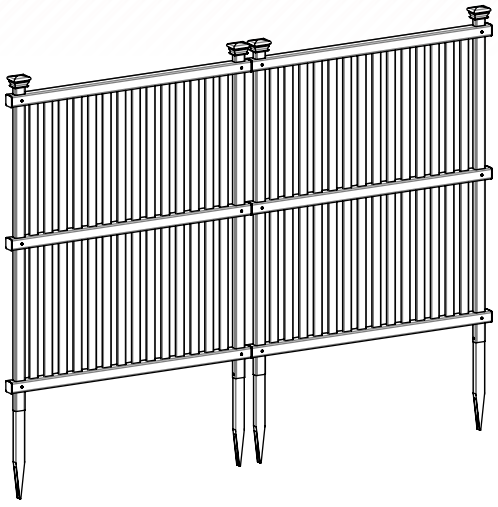

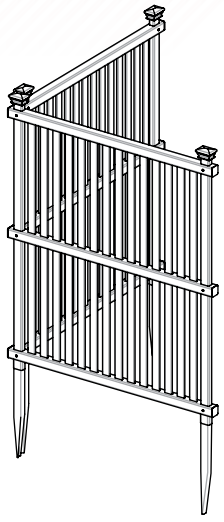

LAY OUT MATERIALS

SCREEN FRAME




A

Post (4)
⅞" x 1½" x 45"




B

Picket (28)
¼" x 1¼" x 40"

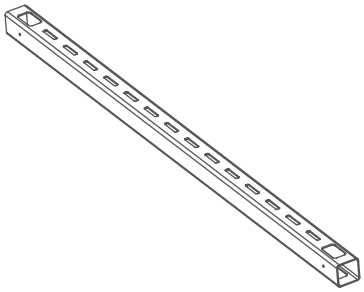


C

Top and Bottom Rail (4) 1½" x ½" x 36½"

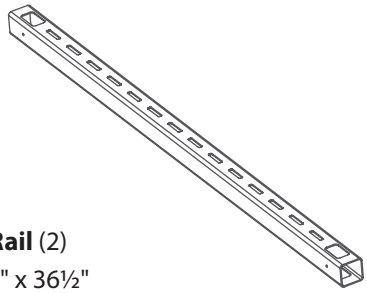

D


Middle Rail (2)
1½" x 1½" x 36½"

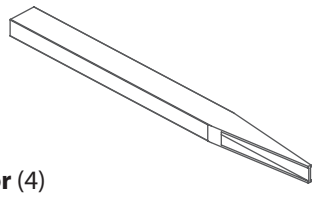

E


Post Anchor (4)
¾" x 1¼" x 16"

CAPS

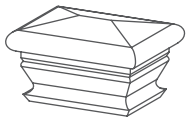

F

Post Cap (4)



G

Rail Cap (12) (6 installed, 6 loose)


BIT



H

1/8" Steel Drill Bit (1)

HARDWARE



I

Joiner Clip (4)




J

¾" Self-Drilling Stainless Steel Screw (36)
› Bag A


ASSEMBLING

1

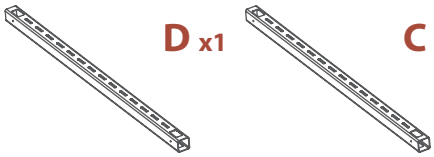

D x1

C x1

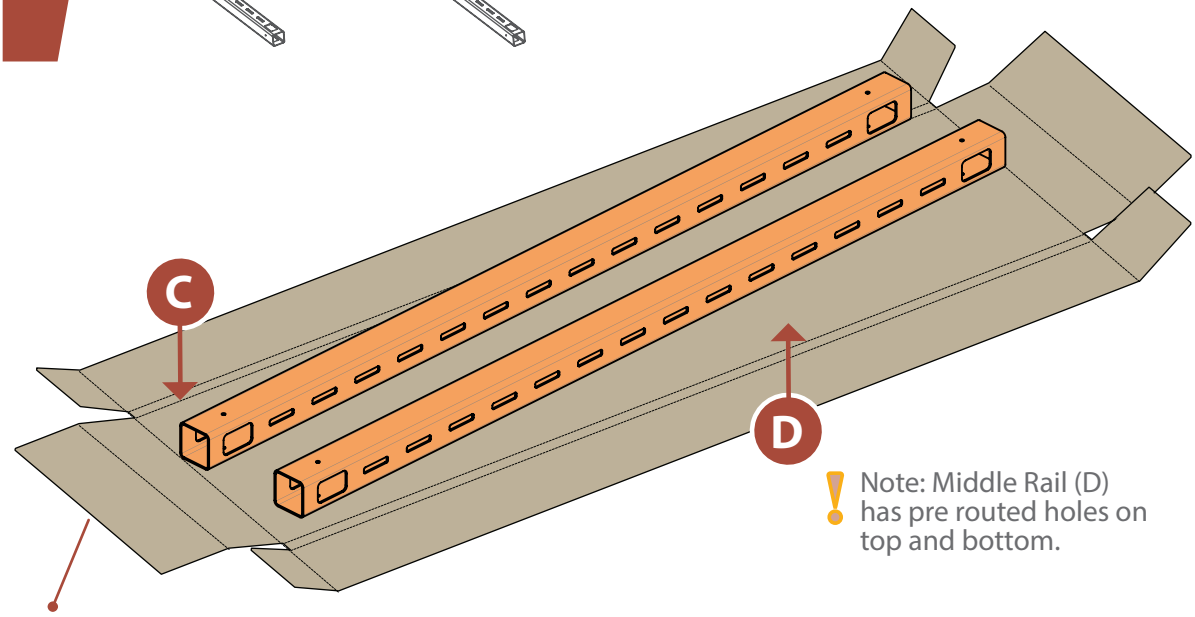

Note: Middle Rail (D) has pre routed holes on top and bottom.

Assemble on box or other smooth surface.

2




A x2

3




J x8

Flip Panel and Repeat

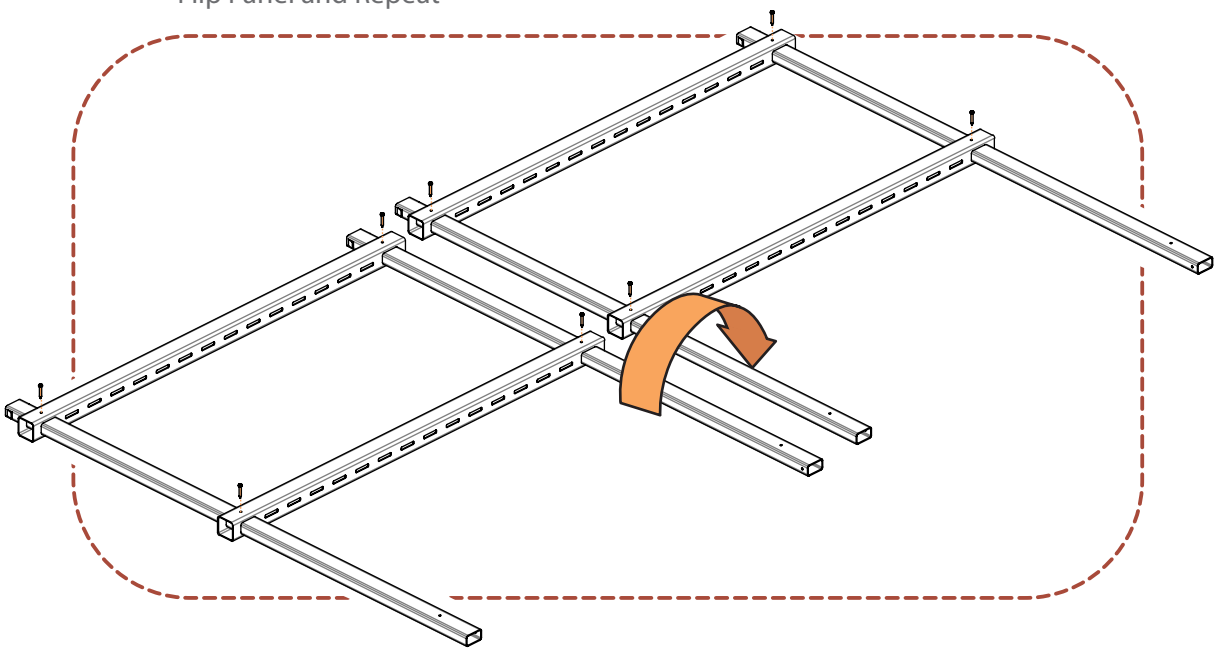


4

B x14

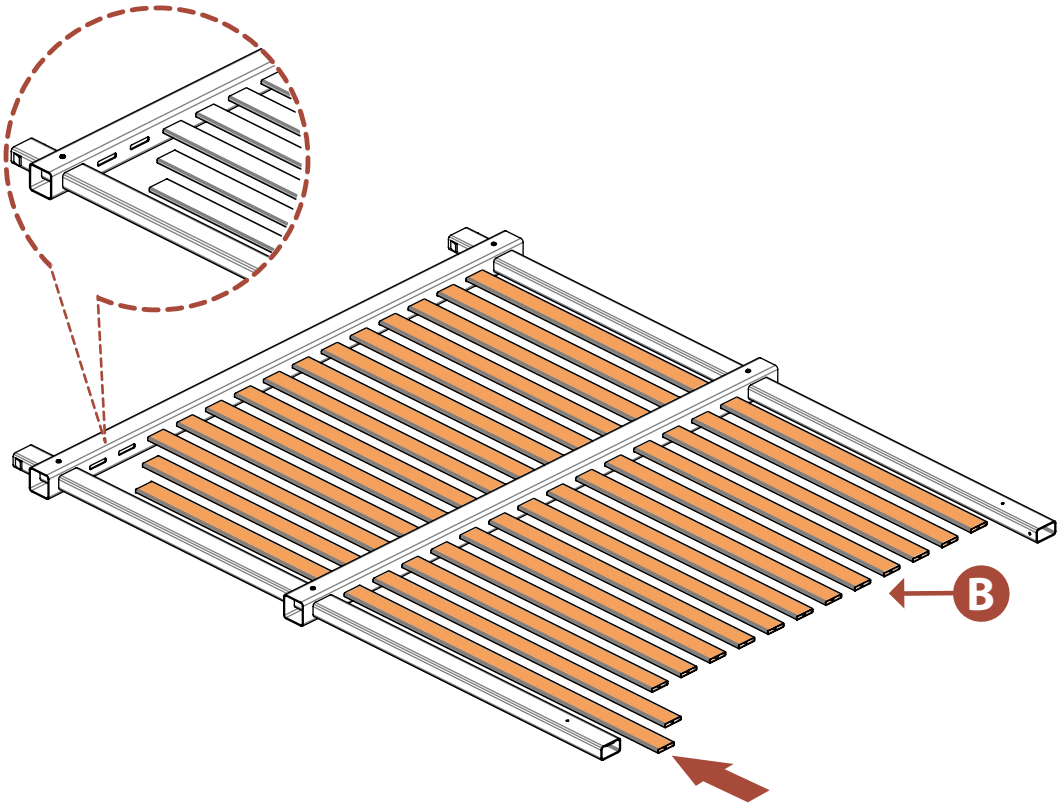


5

D x1

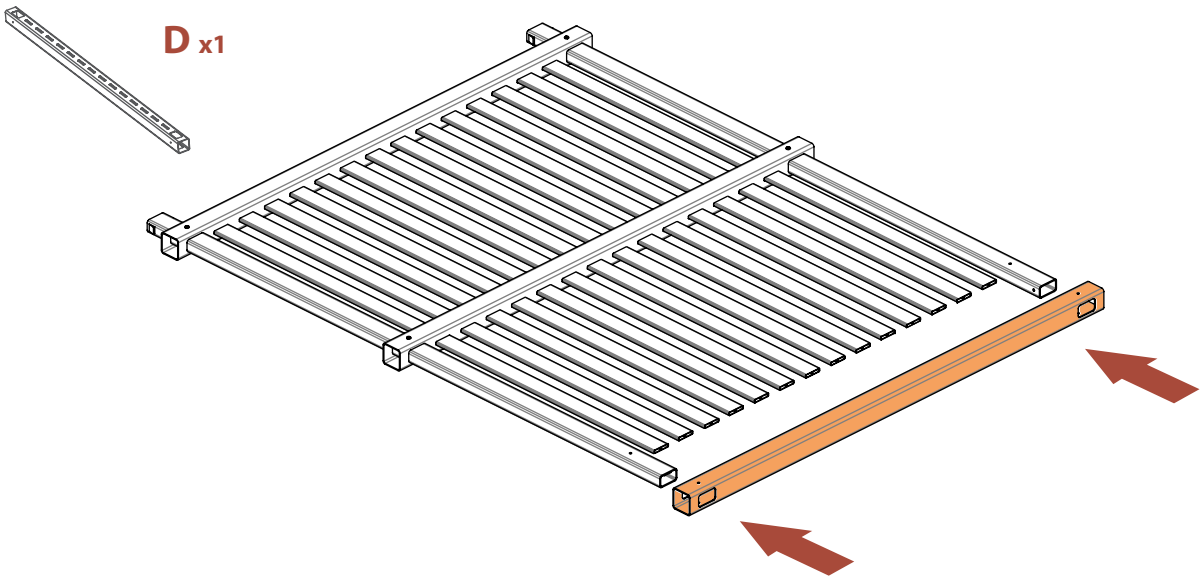

6



E x2

7



J x2


8

H x1




J x4

(Optional): Use the 1/8" Drill Bit (H) to pre-drill through the post anchor.

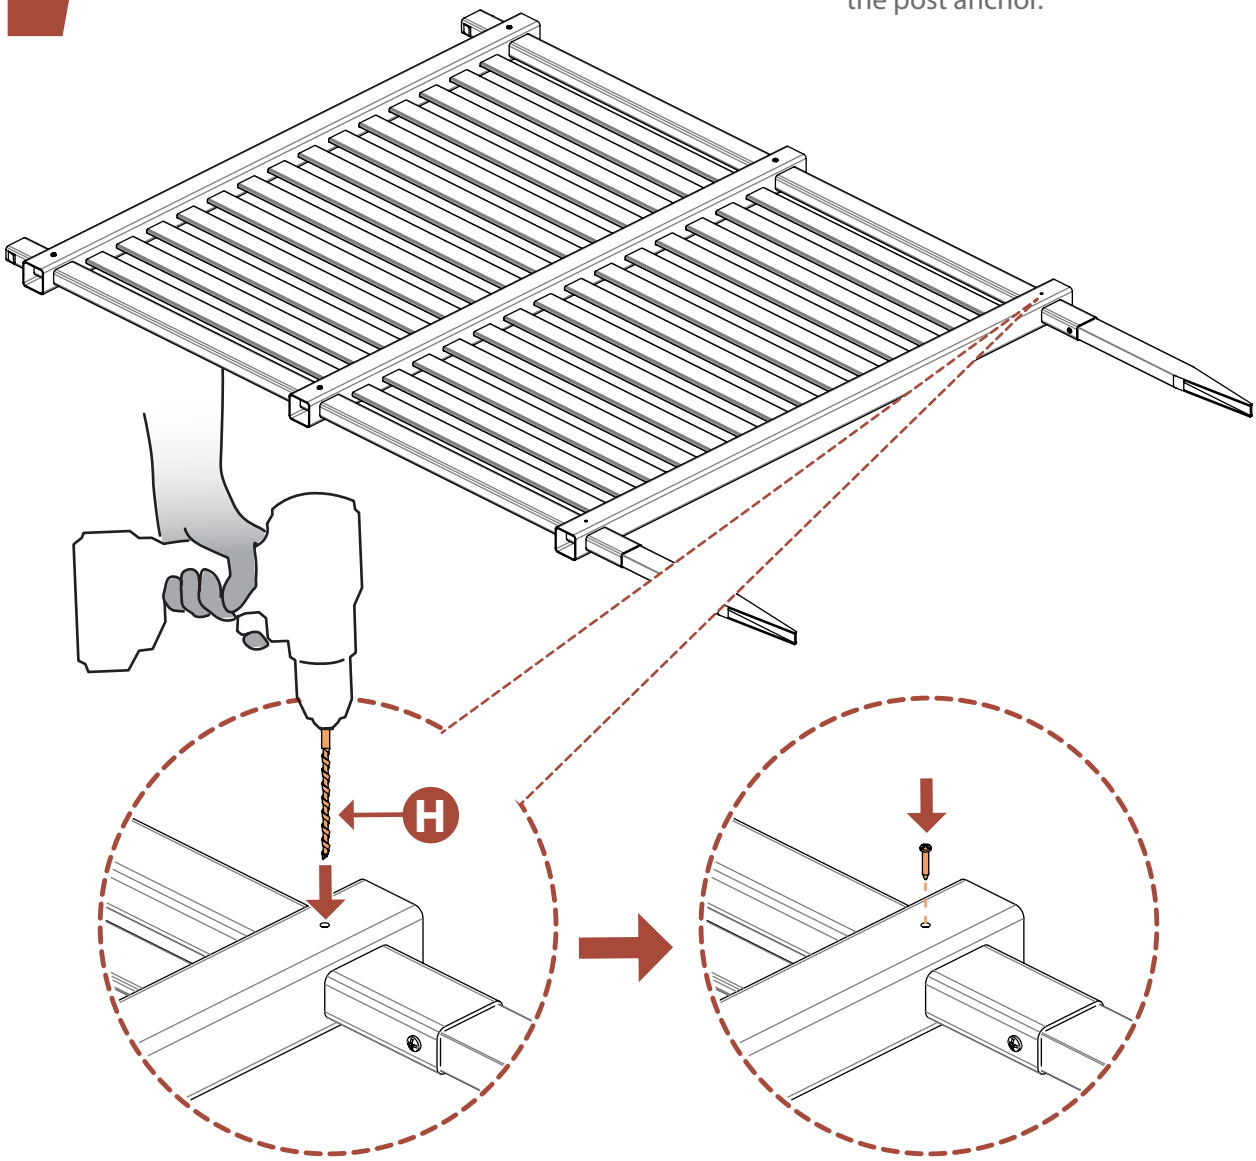


Flip Panel and Repeat

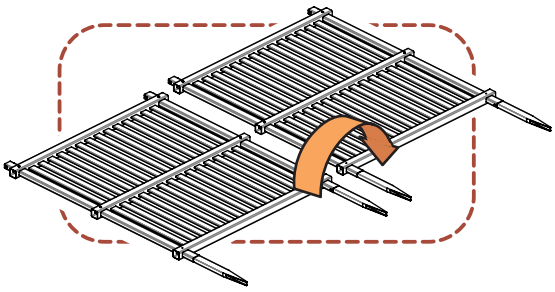

9




G x3

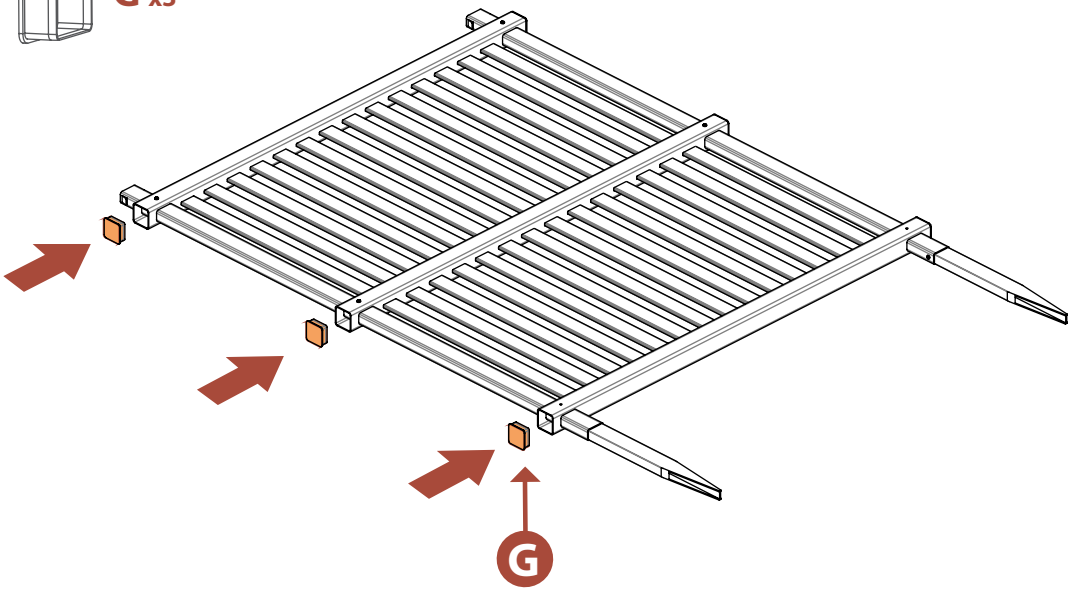


10




A x2

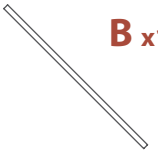


B x14

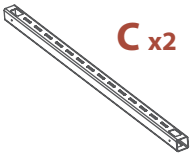

C x2

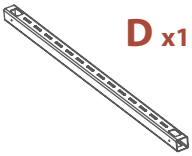

D x1




E x2





G x3



J x2

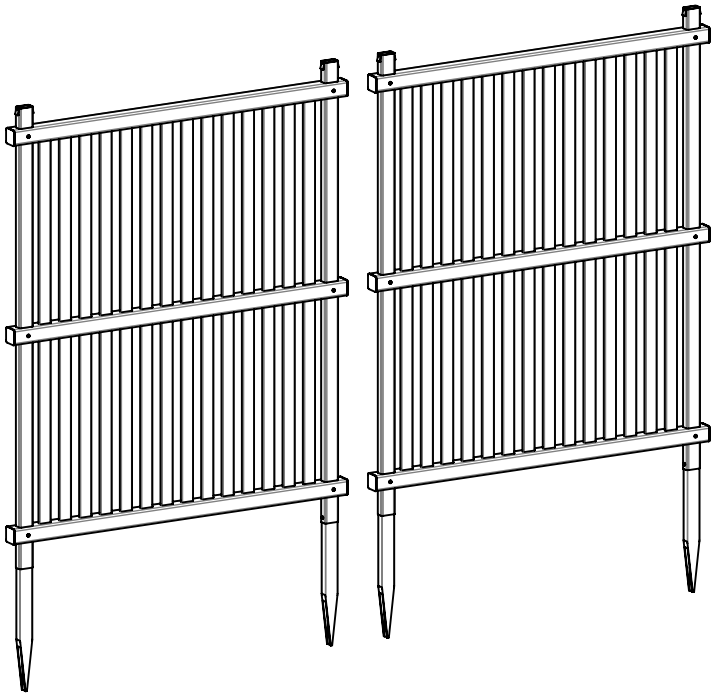


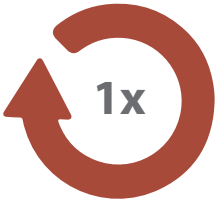

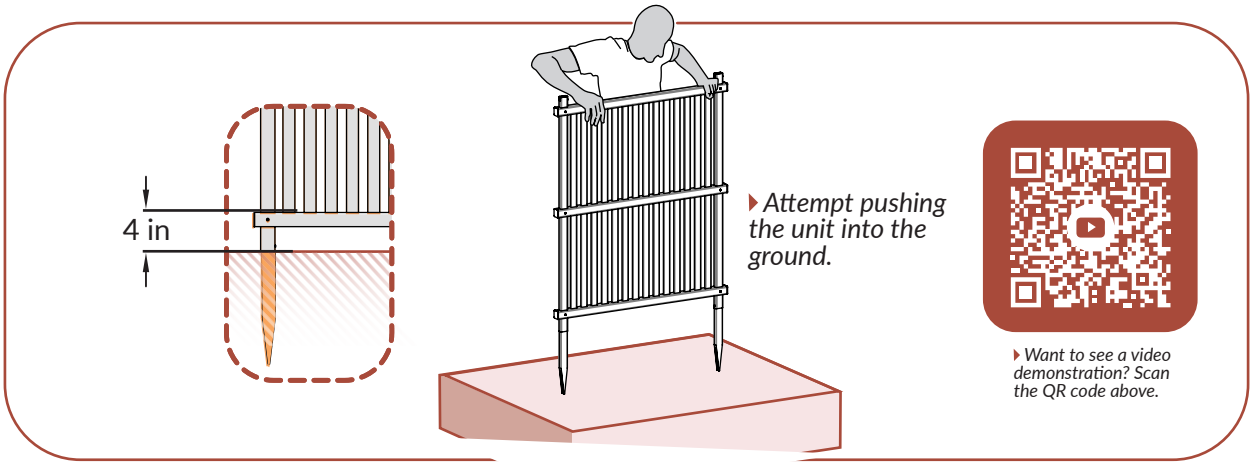

Attempt pushing the unit into the ground.


Want to see a video demonstration? Scan the QR code above.

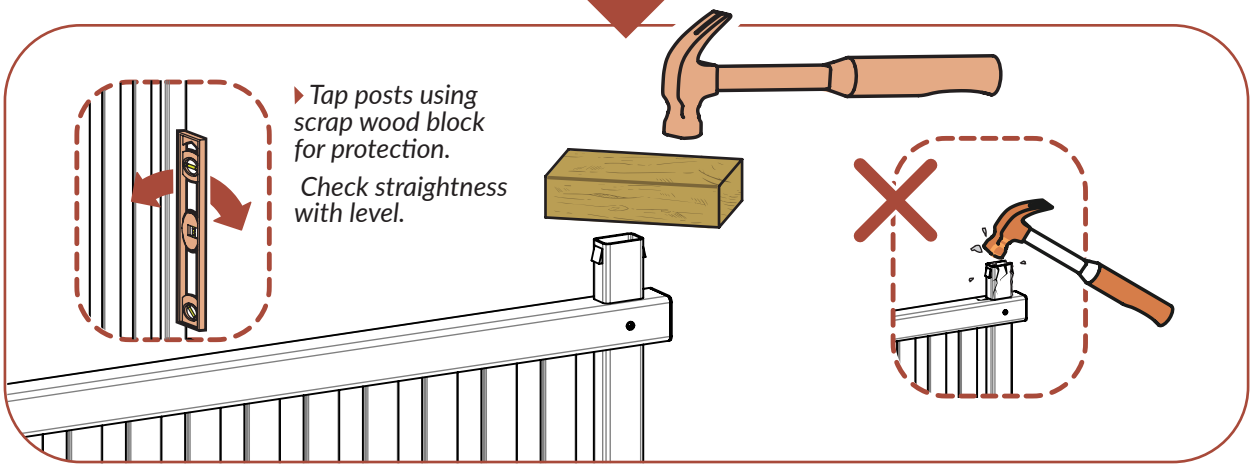

Tap posts using scrap wood block for protection.


Check straightness with level.

IF GROUND IS TOO HARD

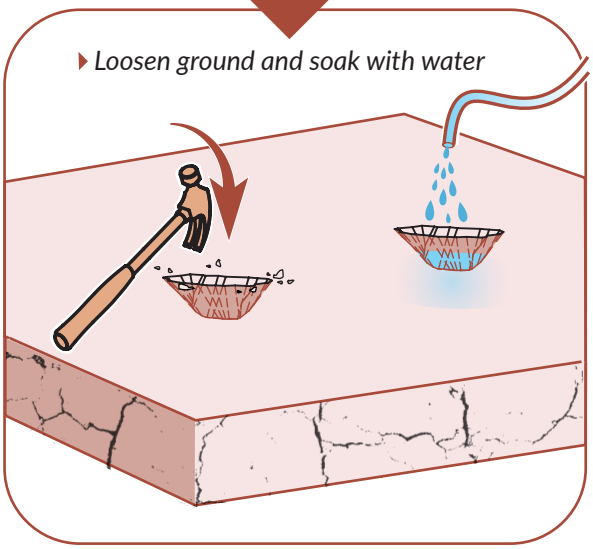


Loosen ground and soak with water

OR

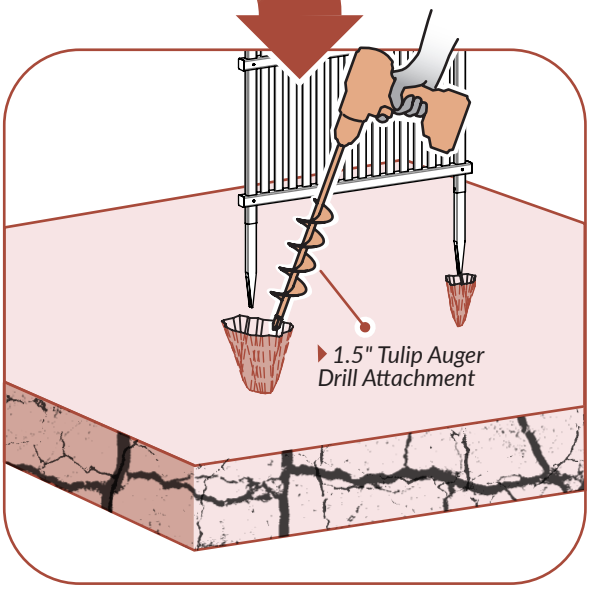


1.5" Tulip Auger Drill Attachment


11 I x2 K x4

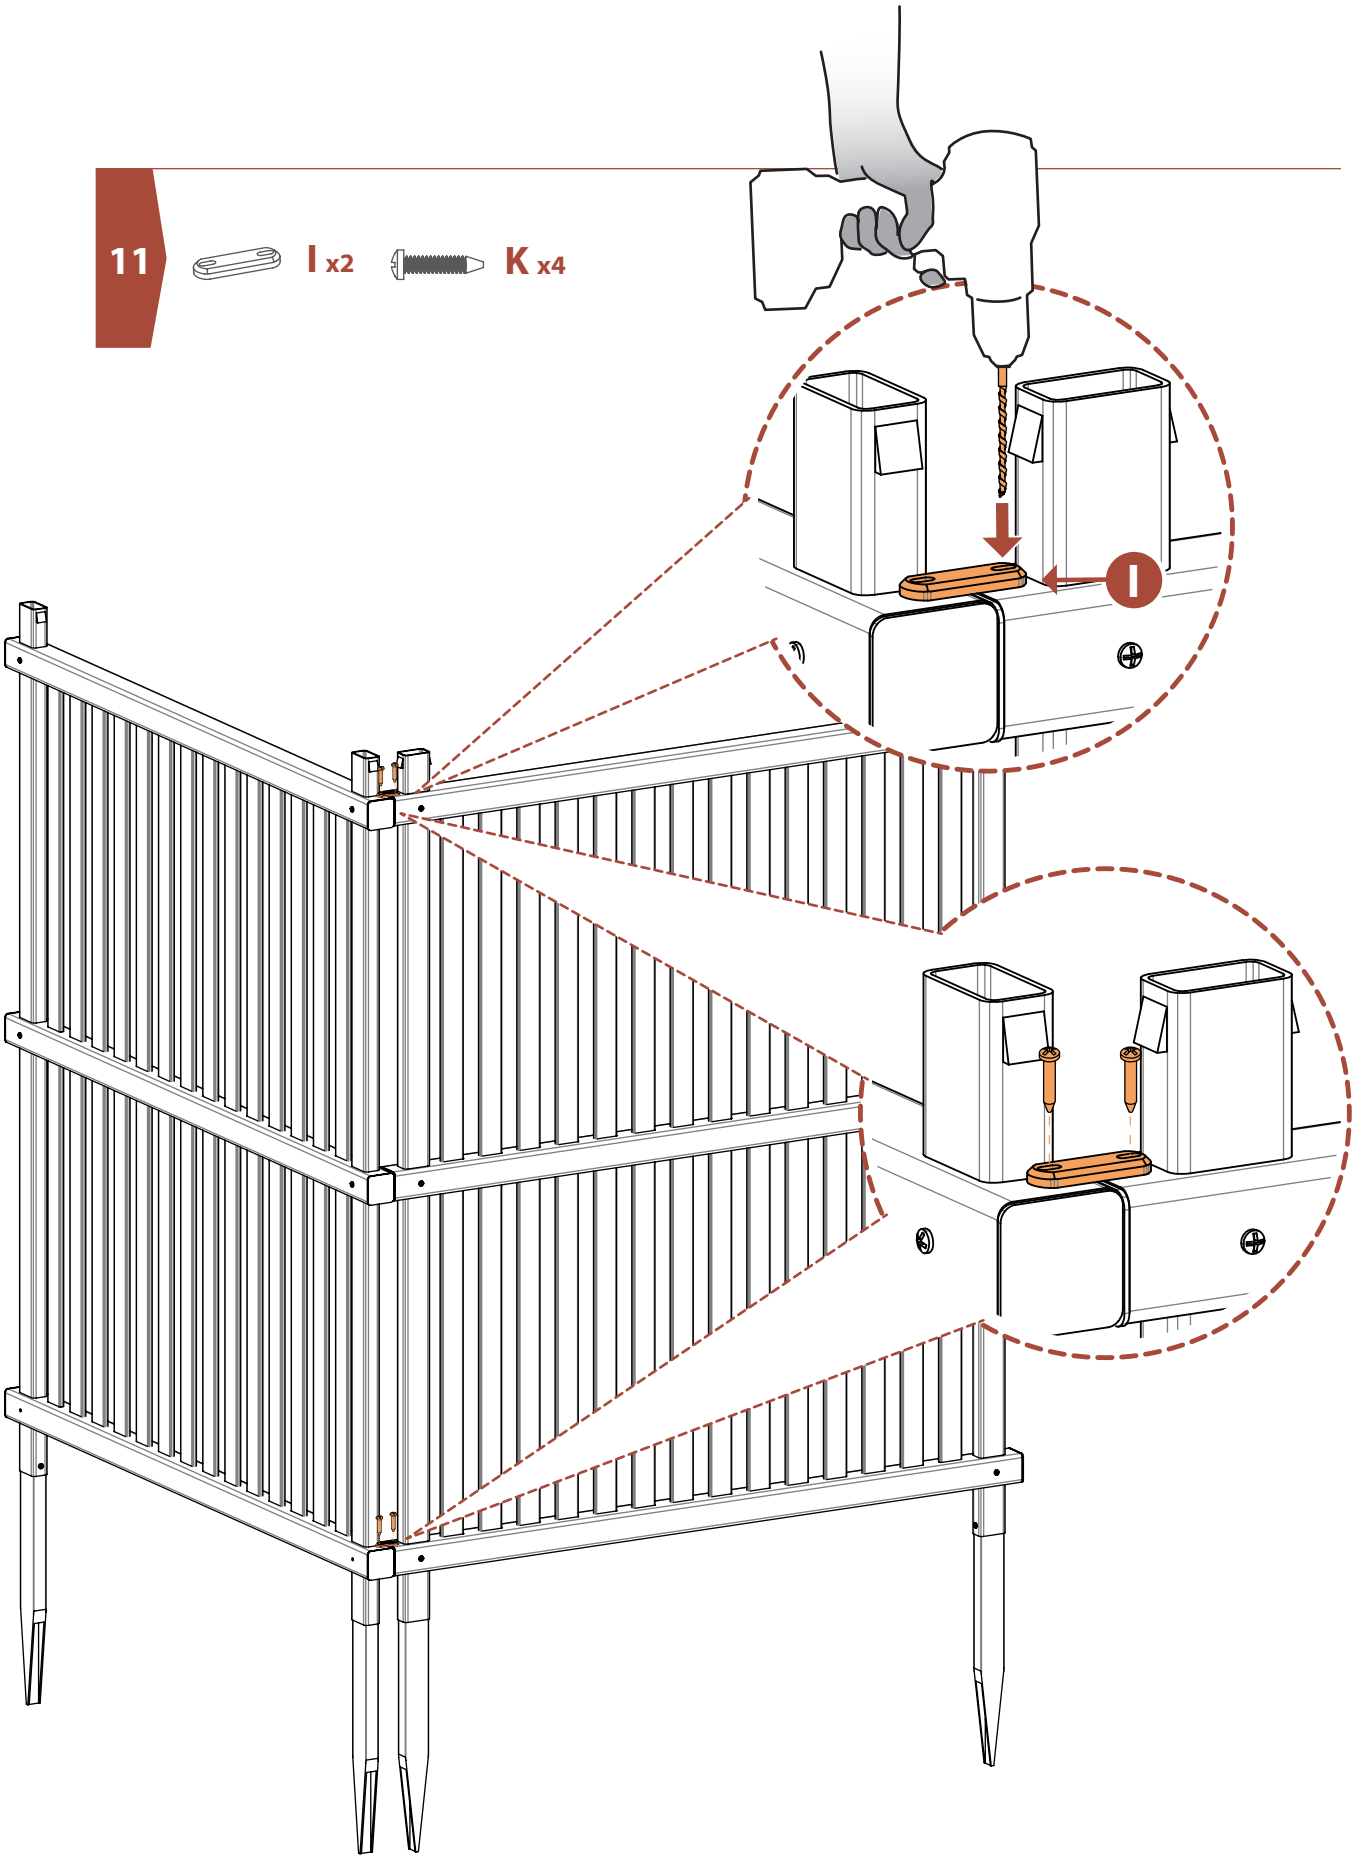

12



F x4

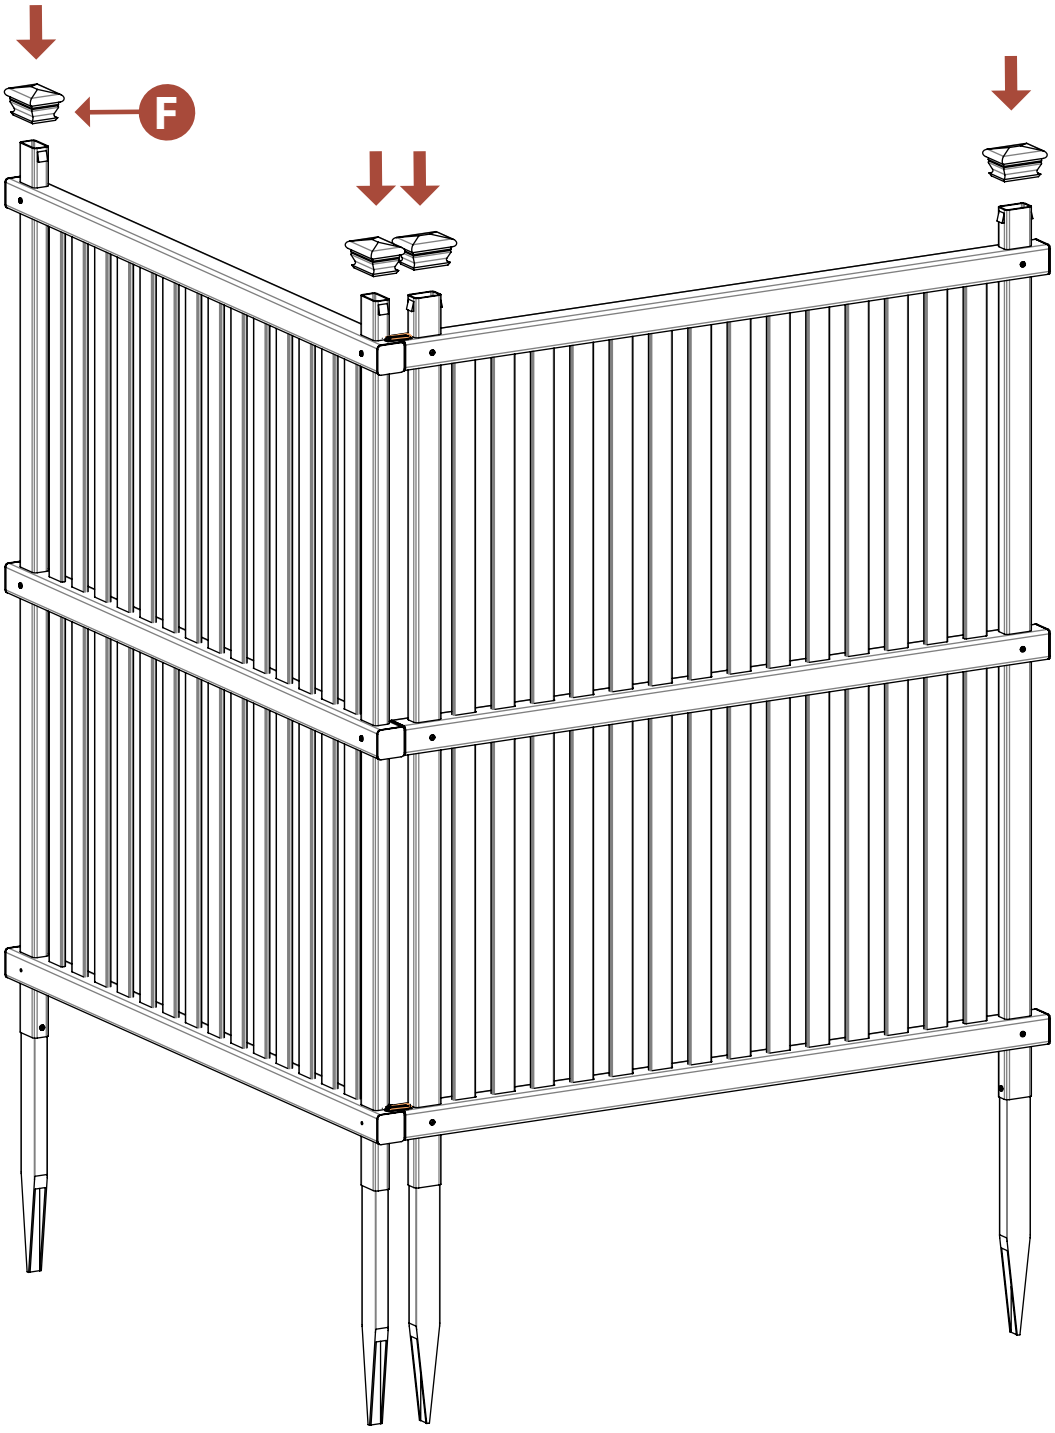

ENCLO

HIDE IT WITH STYLE

www.**encloscreens**.com

support@**encloscreens**.com

704-892-5222
877-234-6196

6935 Reames Rd. Ste. K.
Charlotte, NC 28216

ASSEMBLY INSTRUCTIONS

ZP19008

VER. **021026**