



# ZIPPITY

*Easy Does It!*

## OASIS

PRIVACY POOLSIDE ORGANIZER  
(48" W X 30" L X 75 1/2" H)



## ASSEMBLY INSTRUCTIONS


ZP19080



**90 MIN**

*Approximate assembly time*

Want to see a video on how to  
assemble this product?  
**Scan the QR code**

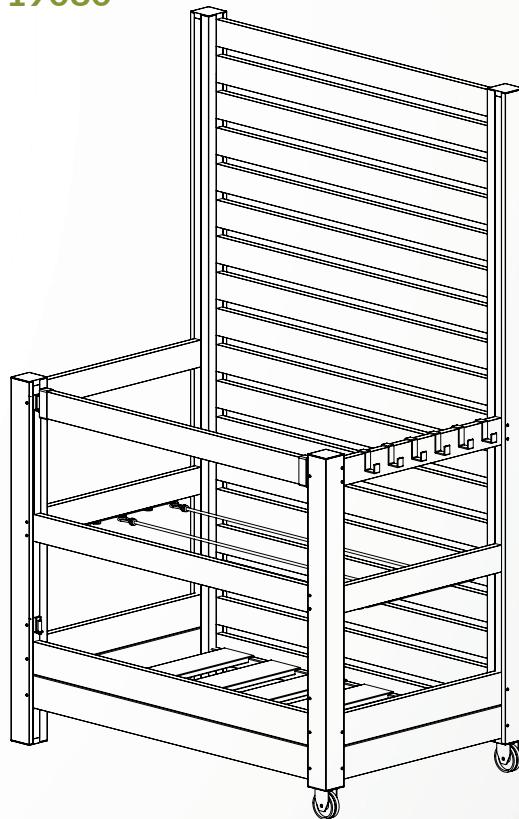

## GENERAL INFORMATION

### MISSING OR DAMAGED PARTS?



➤ **Visit Our Website**  
so we can help you right away!  
**parts.nychbrands.com**

\* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, ➤ Your product number (**ZP19080**)  
**please have the ➤ Your affected part letters (**Pages 4-9**)**  
**following ➤ Your original product box**

### NEED ASSEMBLY HELP?


If you are having problems with assembly or installation of this product,  
**please contact at:**

📞 **704-892-5222 / 877-234-6196**     📩 **support@zippity-outdoor.com**

### NEED TO RETURN?


If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

## Detailed Product Dimensions & Specifications

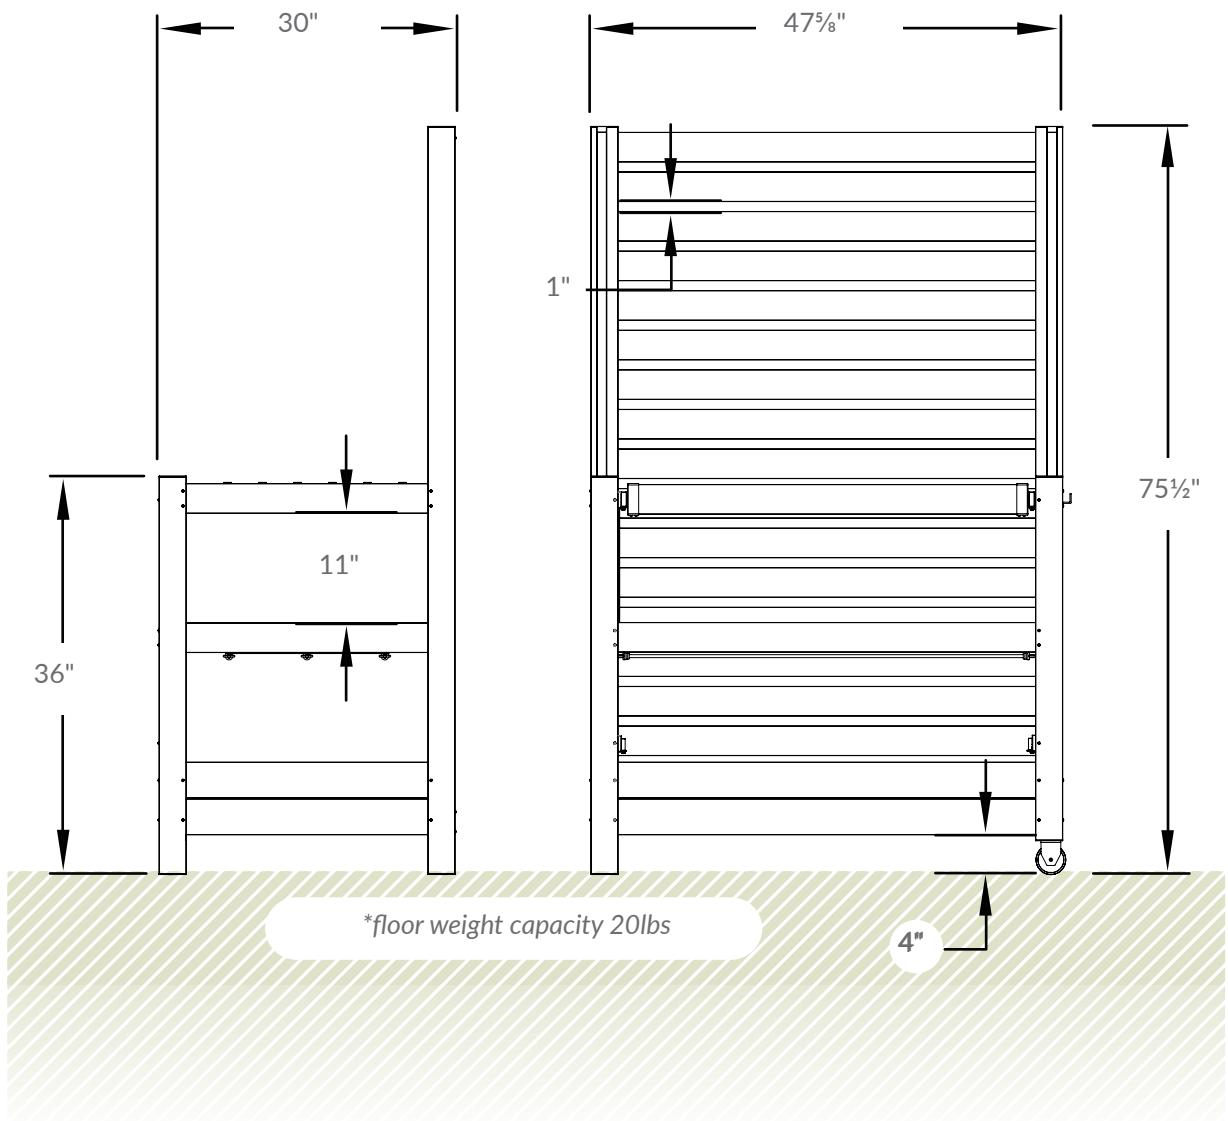



# LAYOUT MATERIALS

- Tools required for a smoother installation experience.

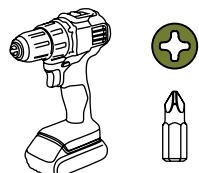



- Drill with Phillips bit

## POSTS

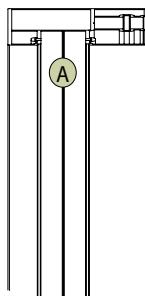

A

**Post A (1)**  
2<sup>3</sup>/<sub>4</sub>" x 2<sup>3</sup>/<sub>4</sub>" x 40"

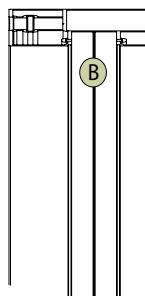


B

**Post B (1)**  
2<sup>3</sup>/<sub>4</sub>" x 2<sup>3</sup>/<sub>4</sub>" x 40"


# AYOUT MATERIALS

## POSTS




**C**

**Post C (1)**  
 $2\frac{3}{4}'' \times 2\frac{3}{4}'' \times 75\frac{3}{8}''$

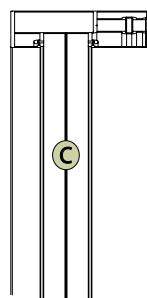


**D**

**Post D (1)**  
 $2\frac{3}{4}'' \times 2\frac{3}{4}'' \times 75\frac{3}{8}''$

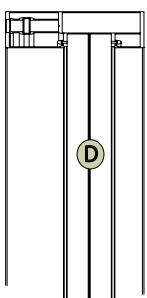


# LAYOUT MATERIALS

## WALLS

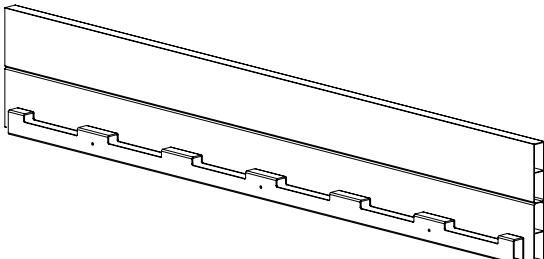


**E**

**Bottom Board Long - Front (1)**  
 $44\frac{1}{4}'' \times 7\frac{3}{8}'' \times \frac{7}{8}''$

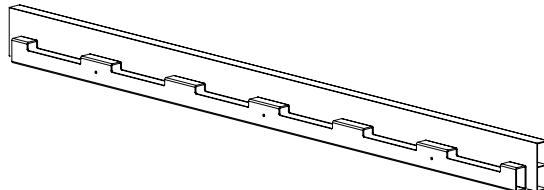


**F**

**Bottom Board Long - Back (1)**  
 $44\frac{1}{4}'' \times 3'' \times \frac{7}{8}''$

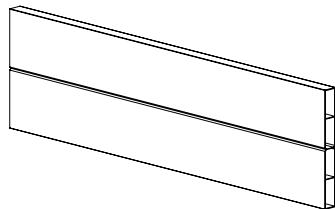


**G**

**Short Bottom Board (2)**  
 $26\frac{3}{8}'' \times 7\frac{3}{8}'' \times \frac{7}{8}''$

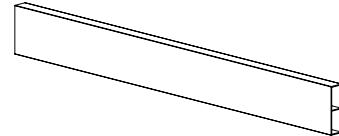


**H**

**Short Slat (4)**  
 $26\frac{3}{8}'' \times 3'' \times \frac{7}{8}''$

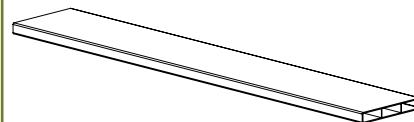


**I**

**Floor Boards (6)**  
 $26\frac{3}{8}'' \times 4\frac{1}{2}'' \times \frac{7}{8}''$

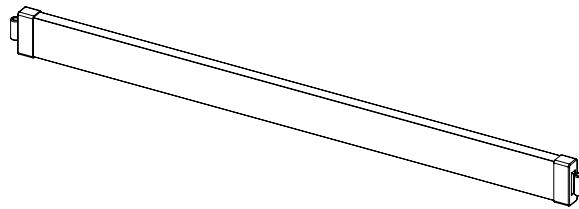

**J**

**Long Adjustable Slat (1)**  
 $42'' \times 3'' \times \frac{7}{8}''$

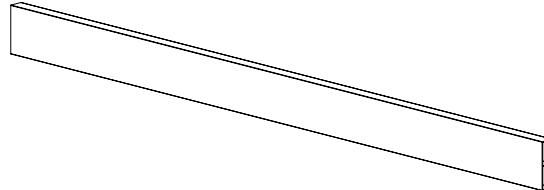

**K**

**Long Slats (18)**  
 $44\frac{1}{4}'' \times 3'' \times \frac{7}{8}''$

# LAYOUT MATERIALS

## FILLERS

**Note:** Refer to bag labels during installation

**L**

**Post Filler (38)**  
 $1" \times 1" \times \frac{3}{8}"$



**M**

**Post Filler (4)**  
 $3\frac{3}{8}" \times 1" \times \frac{3}{8}"$




**N**

**Post Filler (2)**  
 $8\frac{1}{2}" \times 1" \times \frac{3}{8}"$




**O**

**Post Filler (8)**  
 $11\frac{1}{8}" \times 1" \times \frac{3}{8}"$

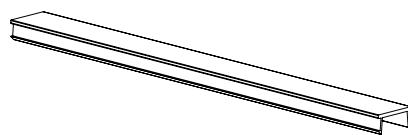


**P**

**Post Filler (2)**  
 $11\frac{1}{2}" \times 1" \times \frac{3}{8}"$

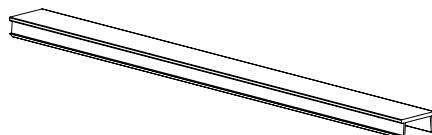


**Q**

**Post Filler (2)**  
 $35\frac{1}{2}" \times 1" \times \frac{3}{8}"$

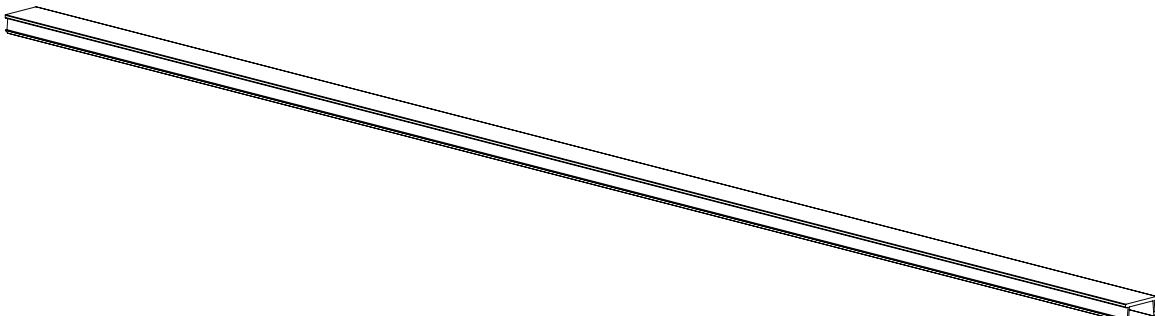


# LAYOUT MATERIALS

## HARDWARE & ACCESSORIES

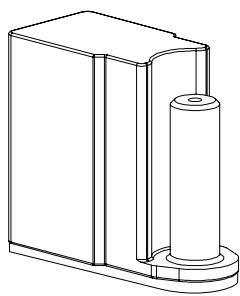


**R**

Post Hinge (4)

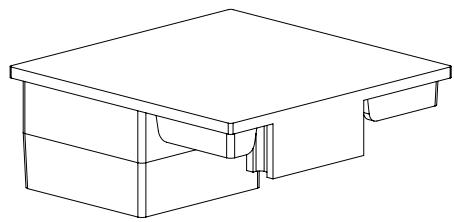

**S**

Post Cap (4)

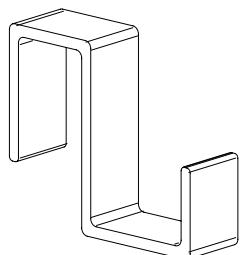

**T**

Towel Hook (6)




**U**

Long Self-Drilling Screws (40)  
2.5"

# LAYOUT MATERIALS

## HARDWARE & ACCESSORIES

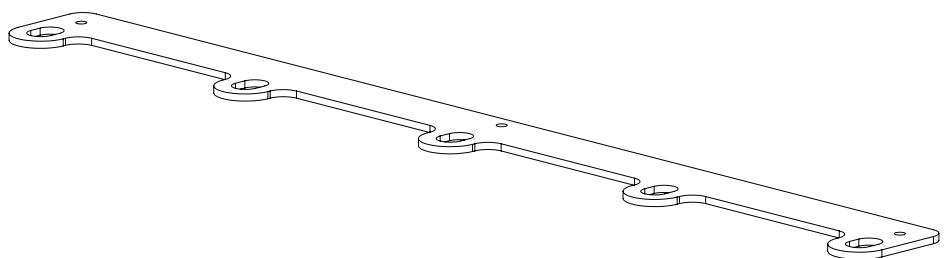


V

Bungee Connector (2)



W

Bungee (3)

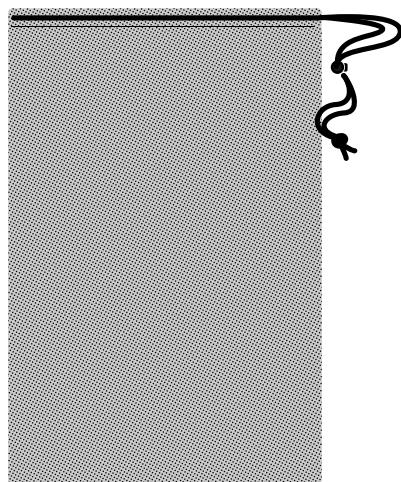


X

Mesh Bags (2)

## ASSEMBLE UNIT


1




**C** x1




**M** x2

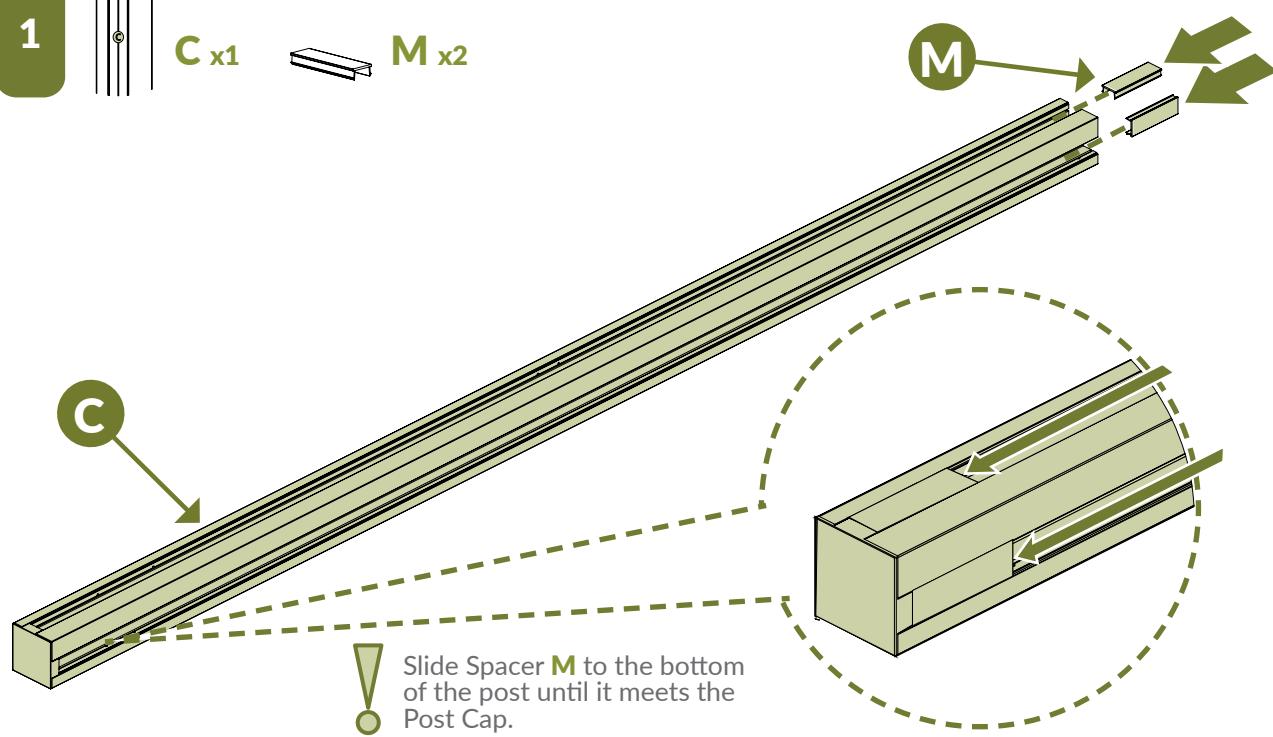


2



**D** x1

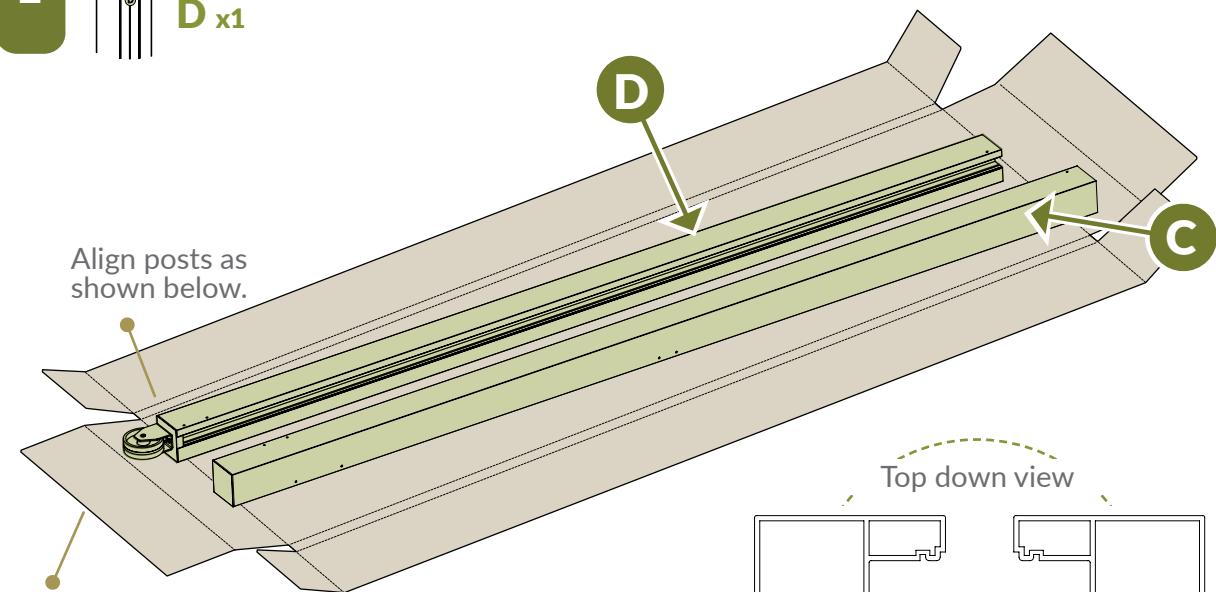


Assemble on box or other smooth surface to prevent scratching

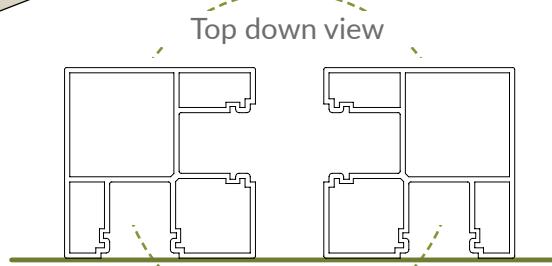


3



**F x1**

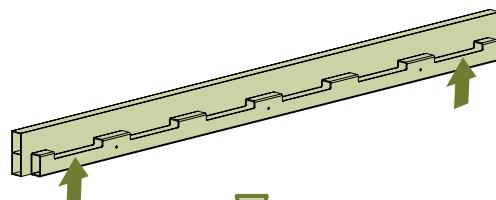

Ensure that the floor supports are facing upwards.

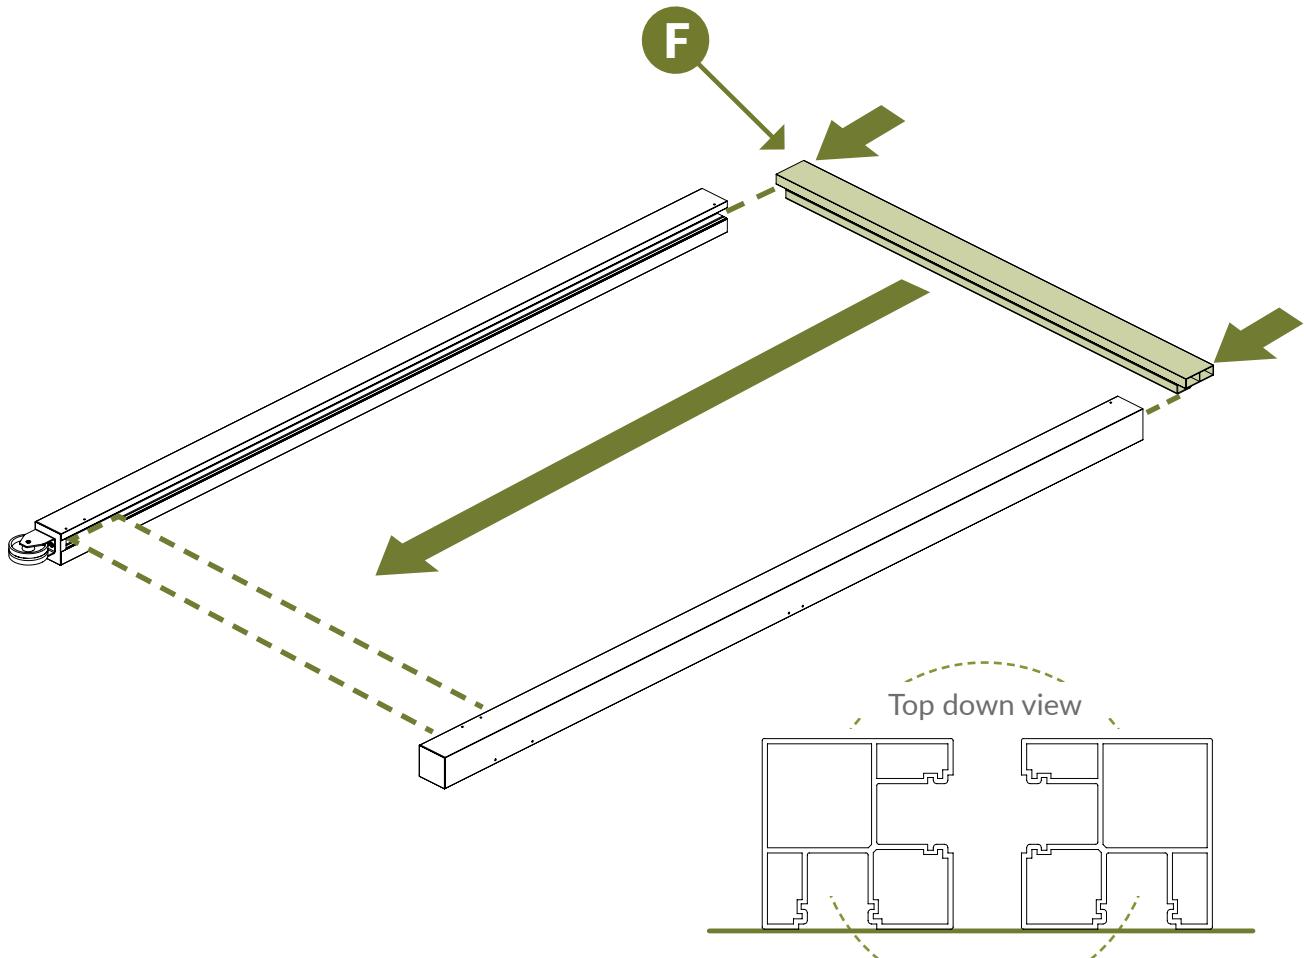


4




**K x1**

Temporarily place one **K** slat to keep the panel square. Remove after step 5.

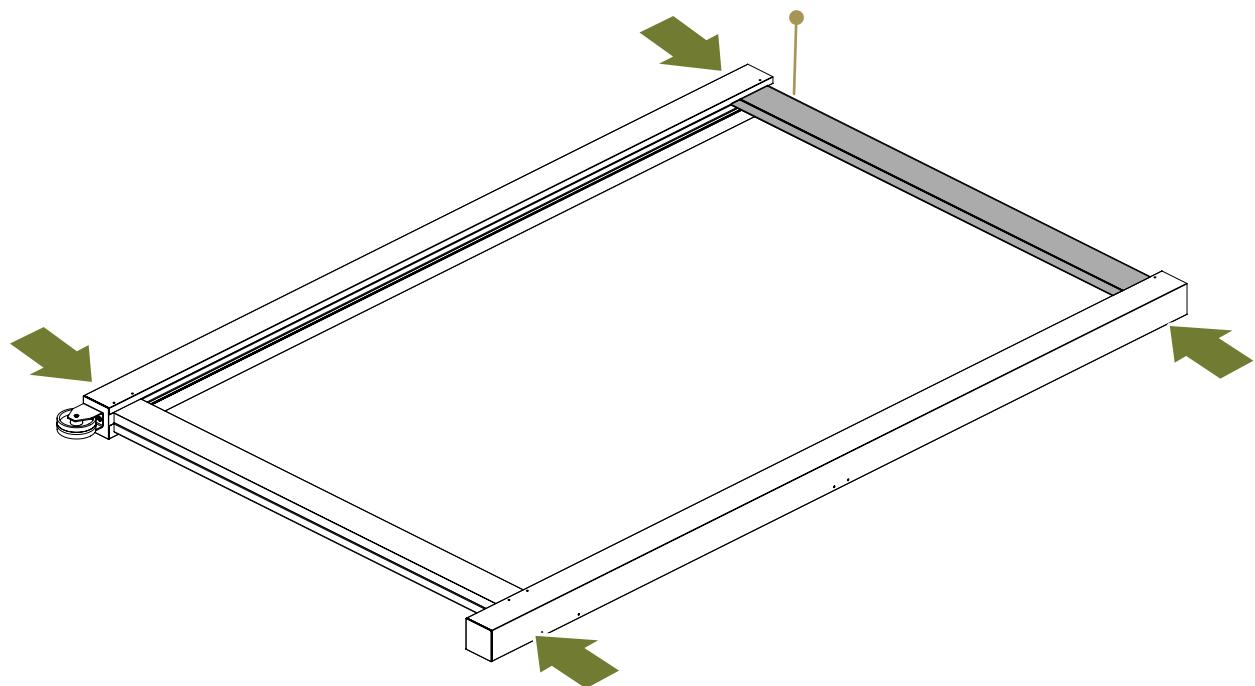

5

U x4

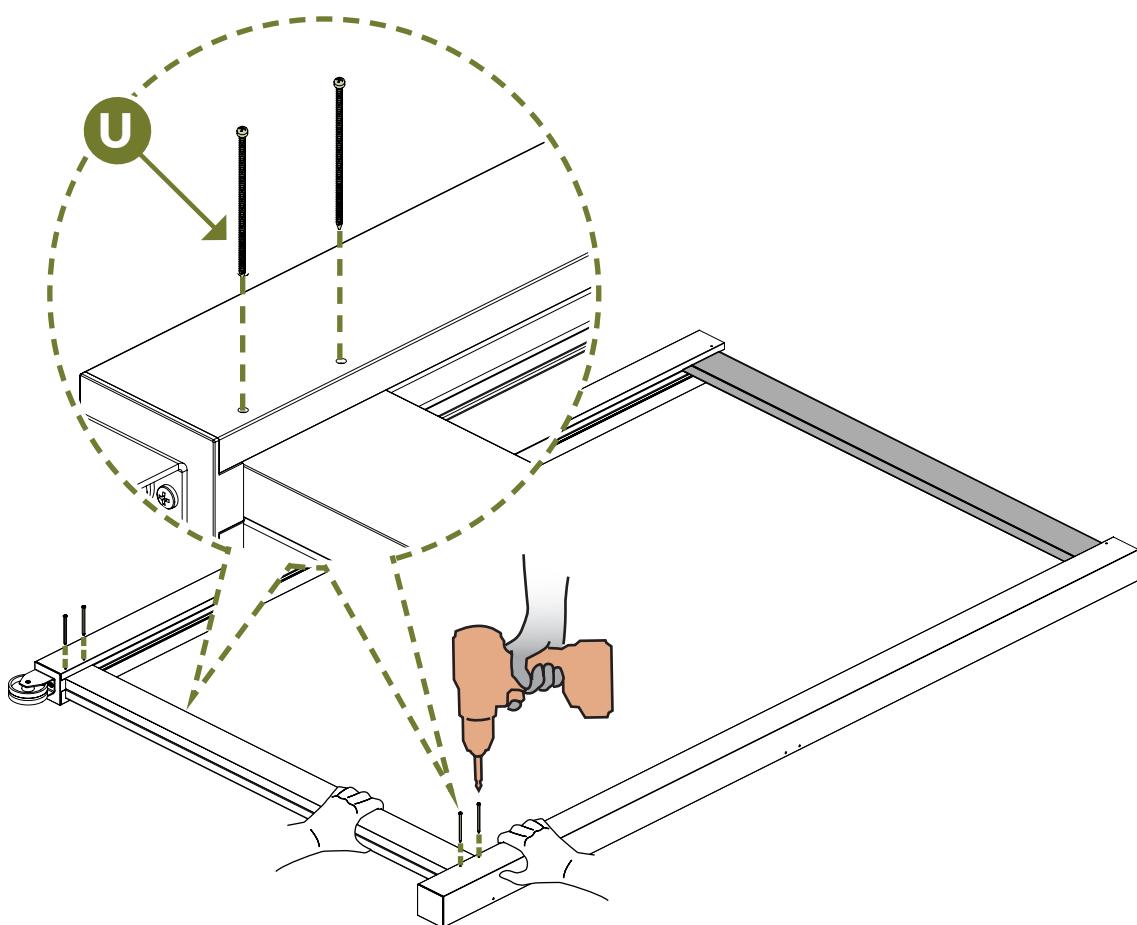

**Tip:** Ensure the bottom board is pushed to the back of the post channels before driving your screws.


6




**K x17**




**L x34**

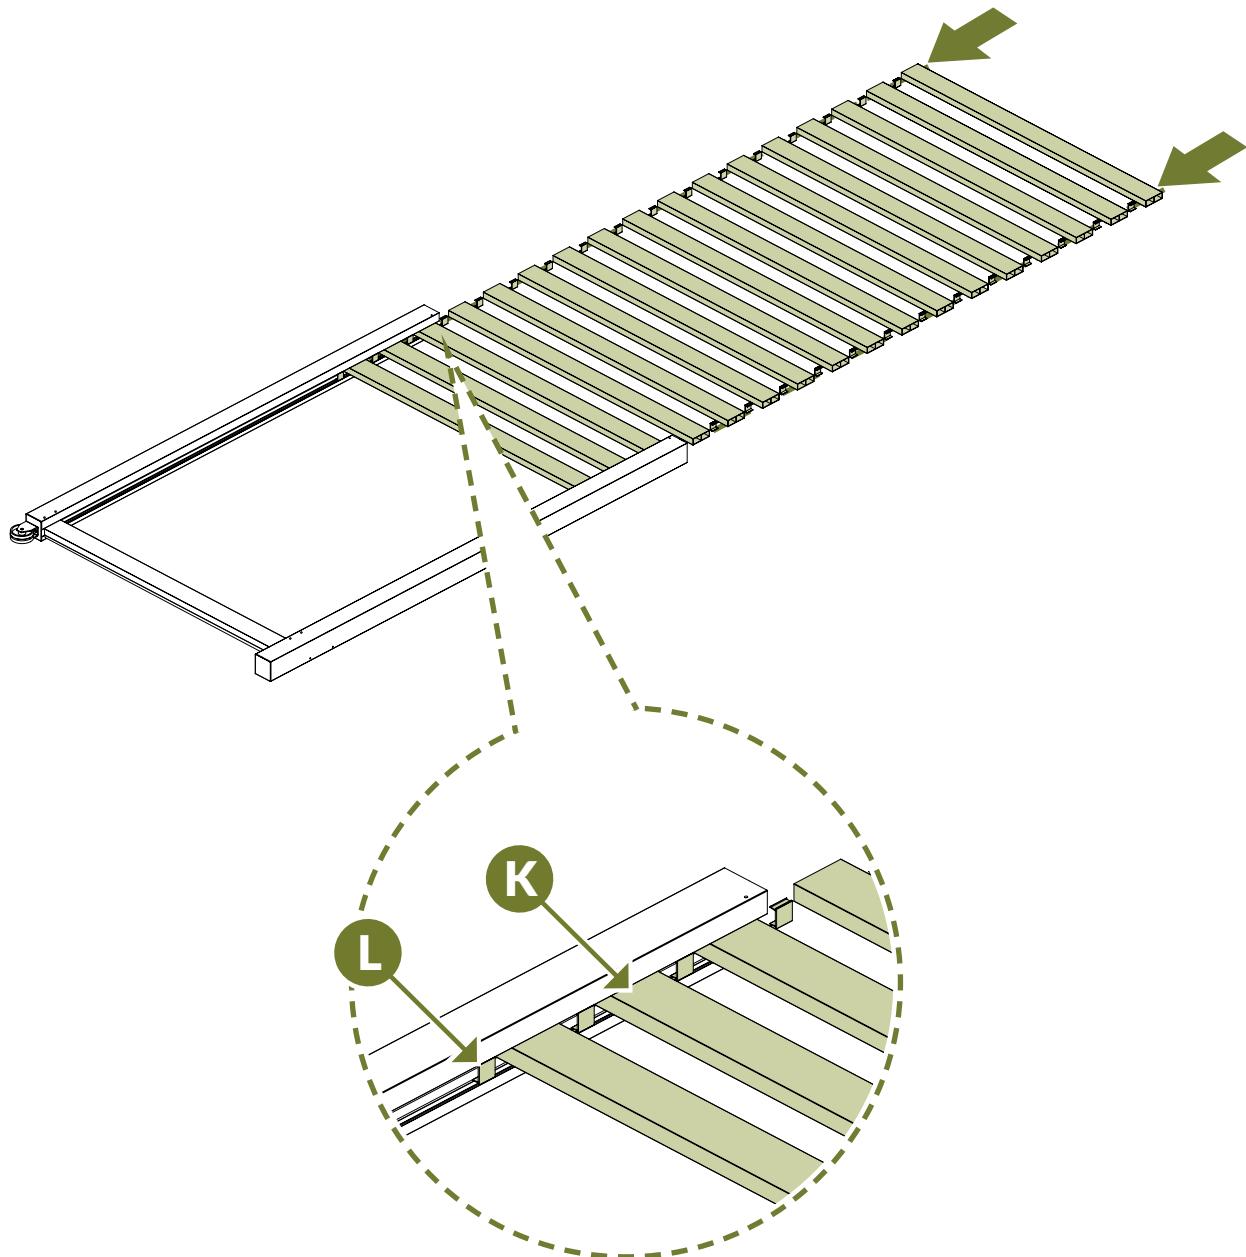

7

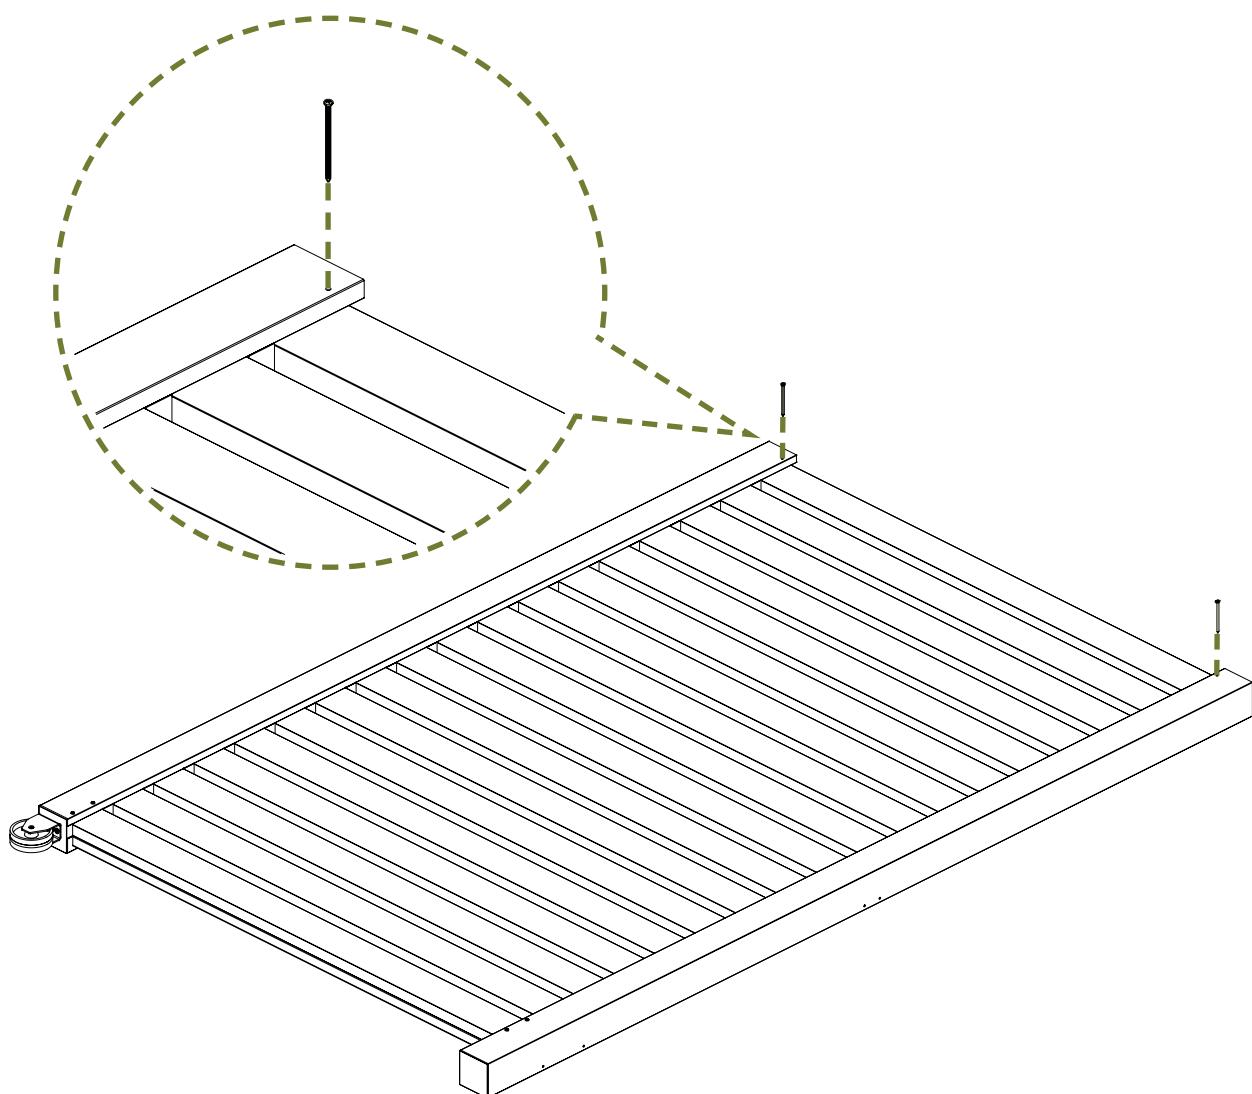


Flip Panel

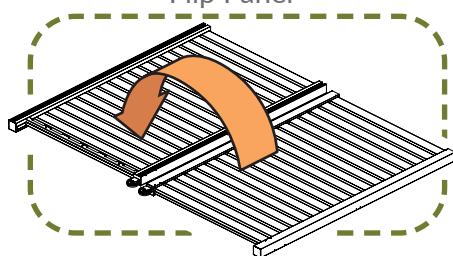


8




**G x2**

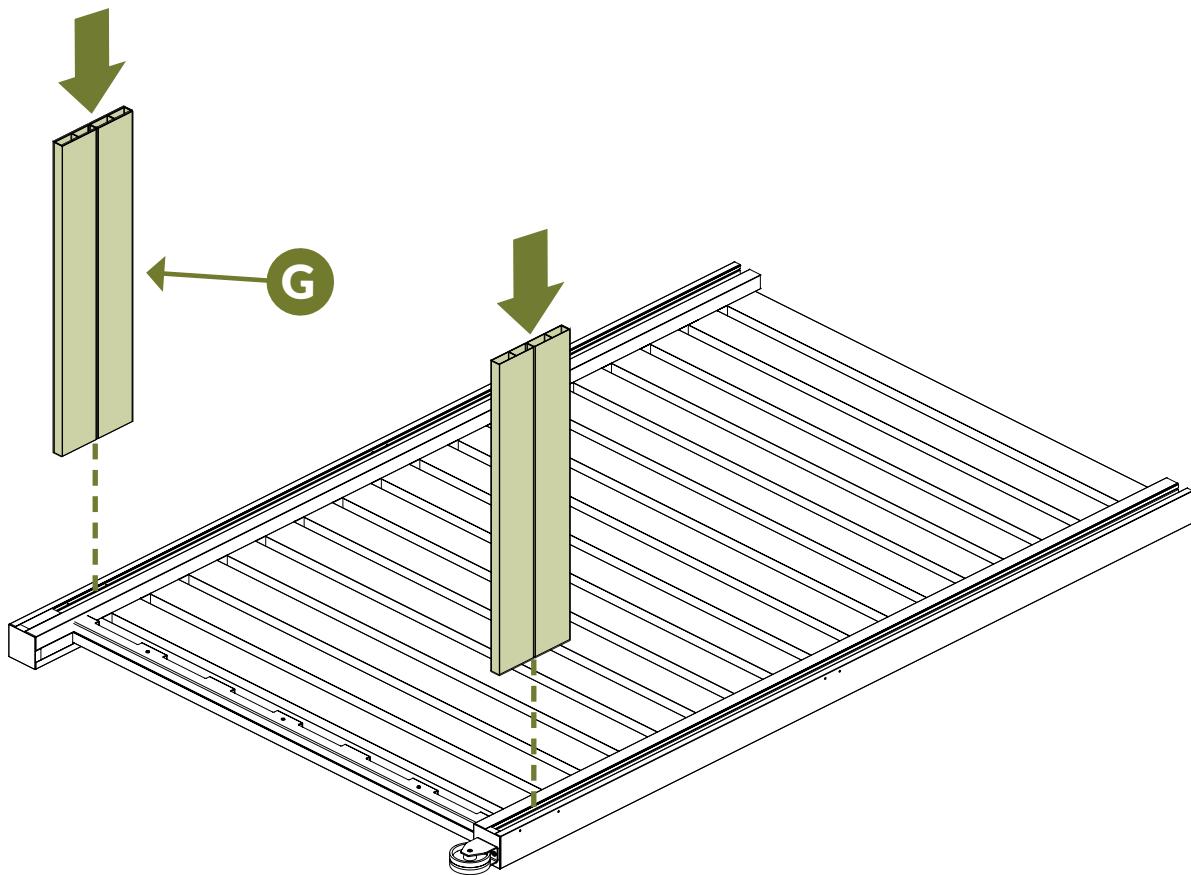


9

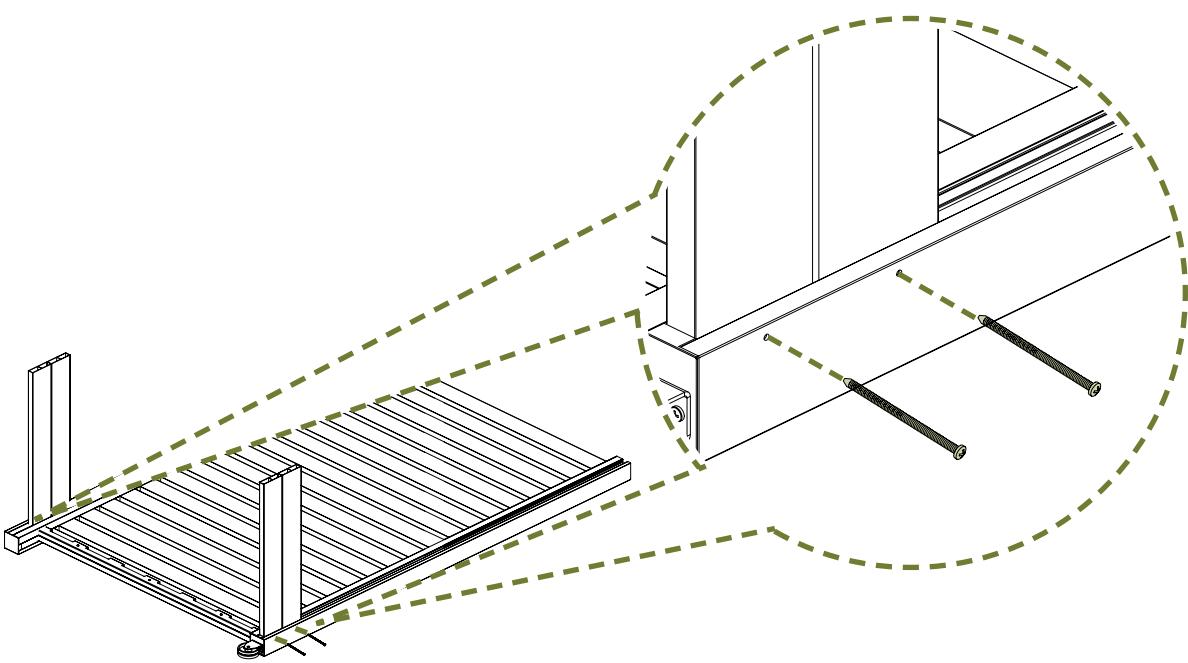

10

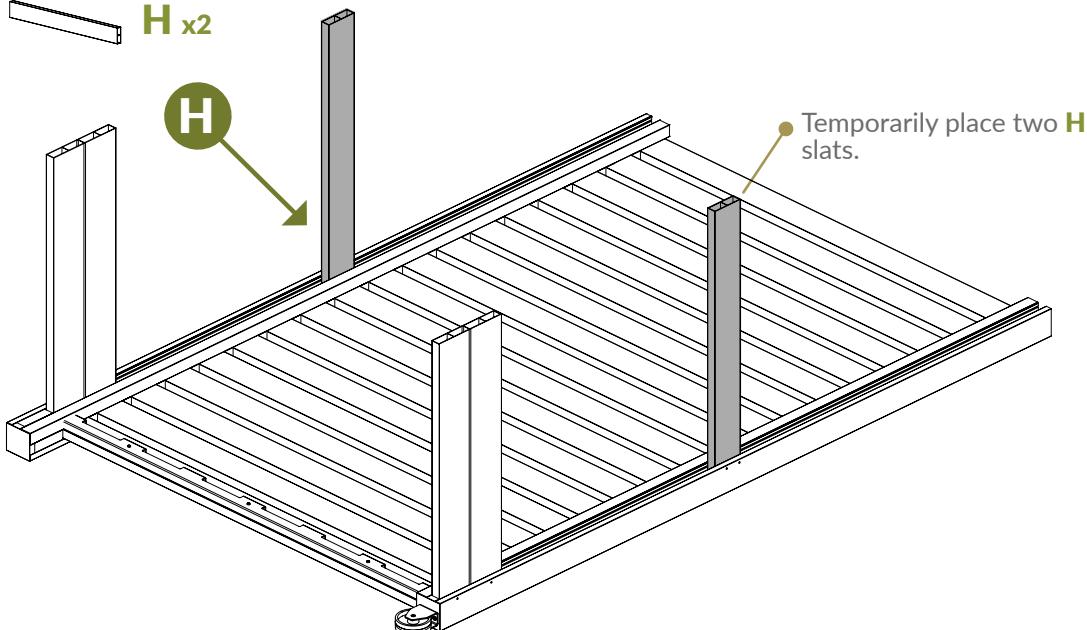


11



**A x1**




**M x2**

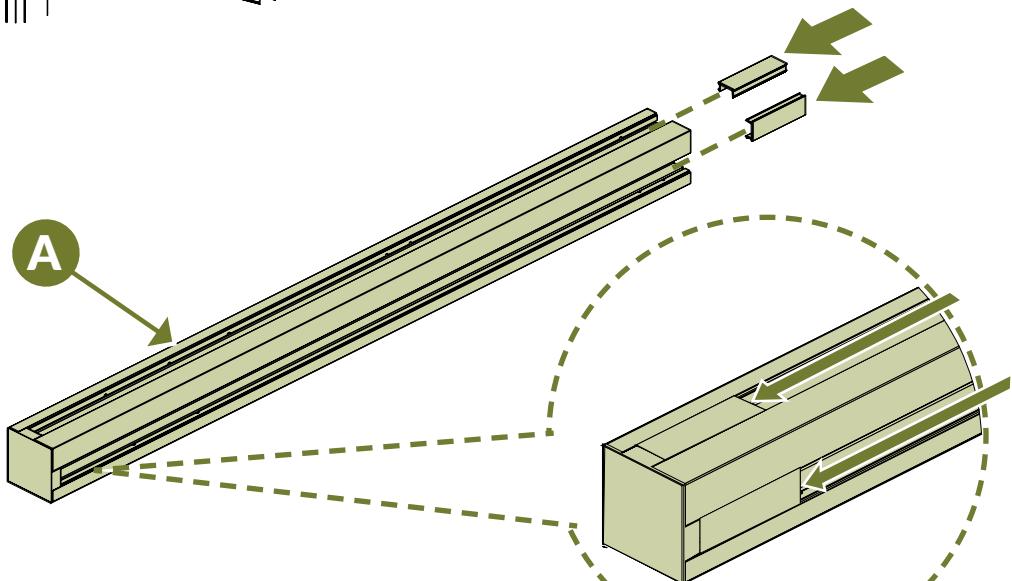


Slide Spacer **M** to the bottom of the post until it meets the Post Cap.

12




**A x1**




**B x1**


**Note:** Make sure your wheel is in-line with the back wheel.

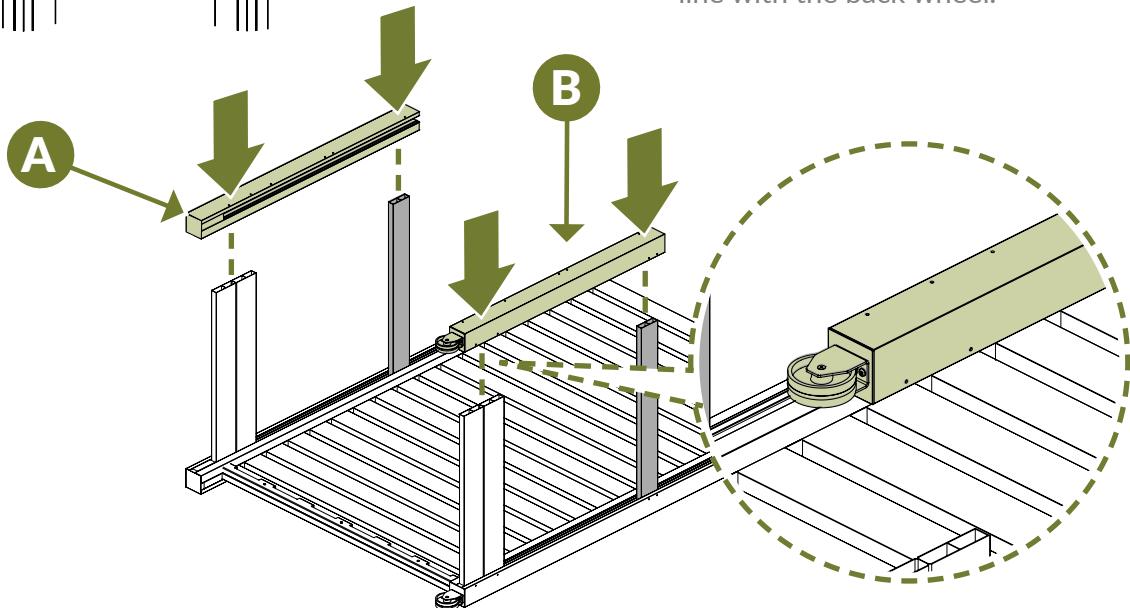


13

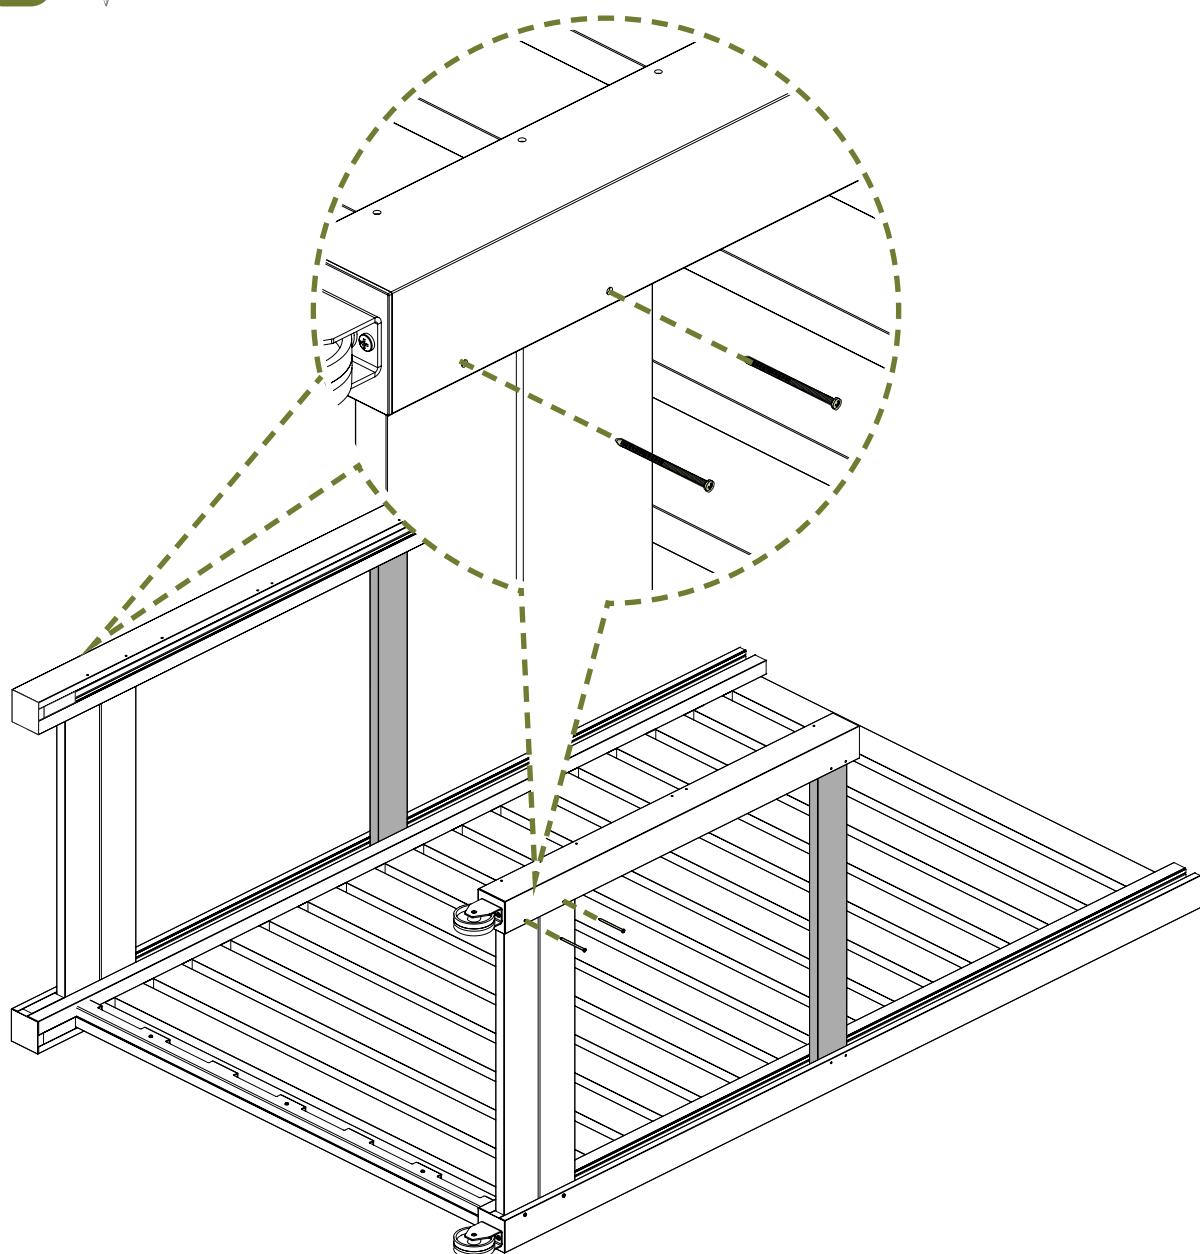


14



**Note:** Ensure pre-installed floor support is at the bottom of Part E when inserted into the posts.


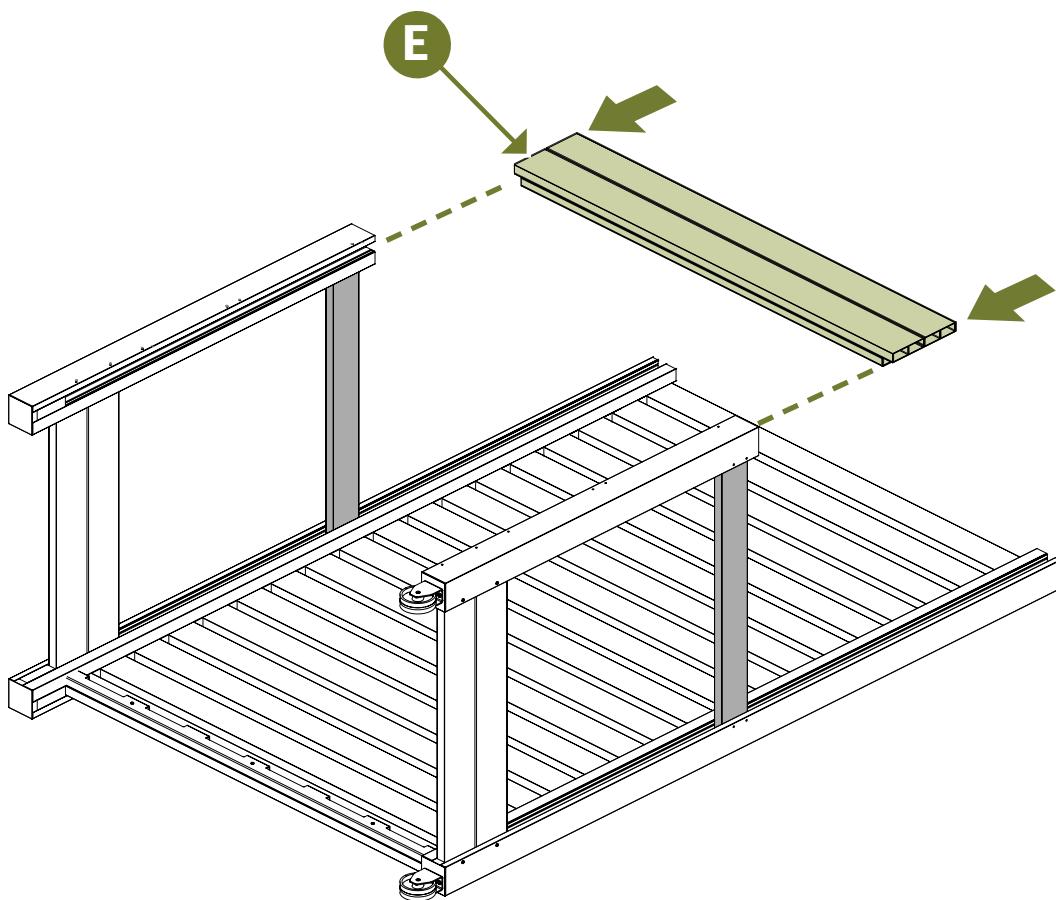


15

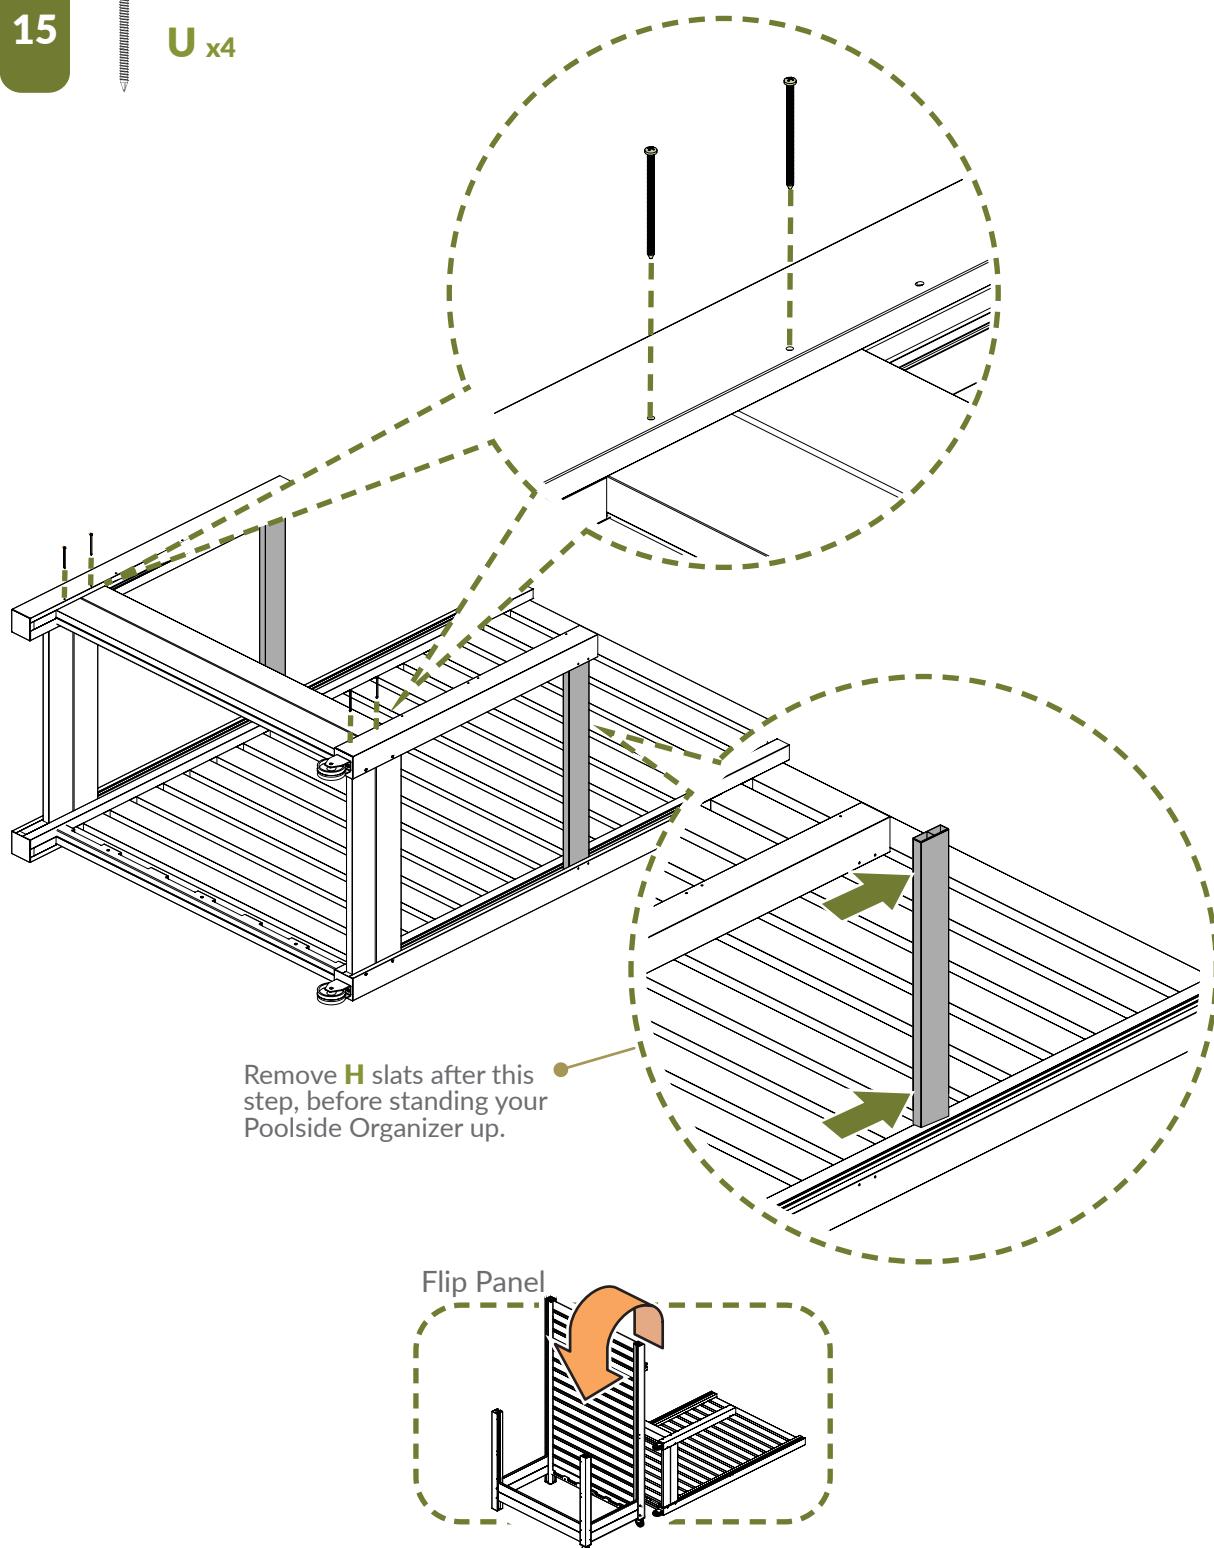

## ASSEMBLE BUNGEE CONNECTOR


16

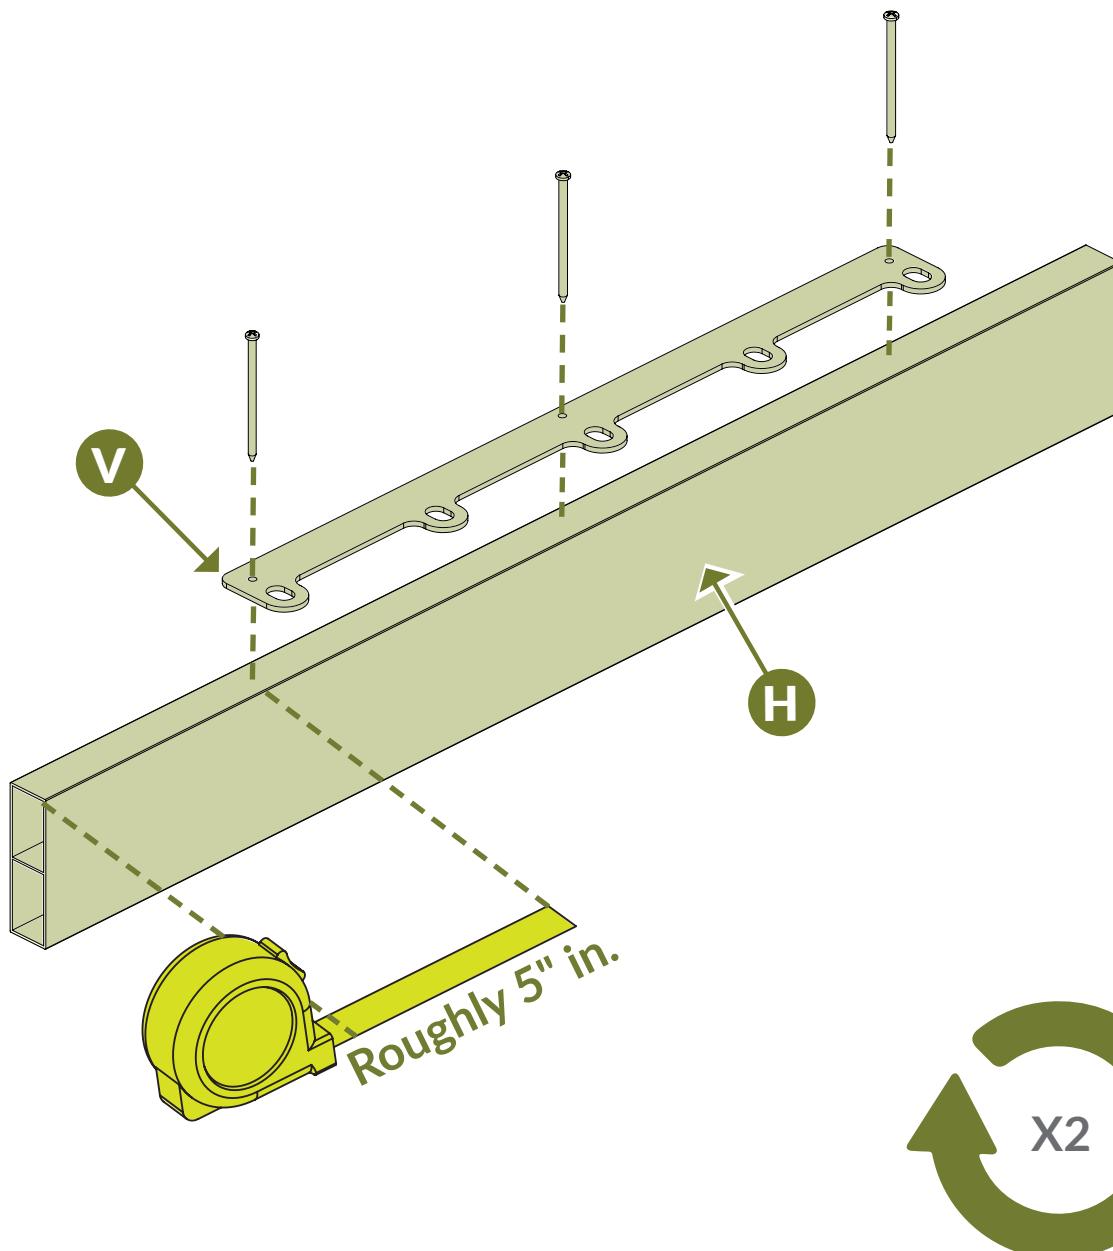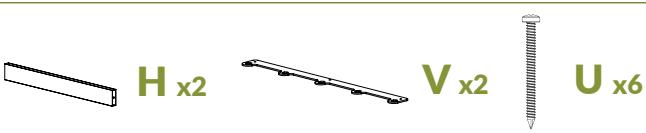

17




Ø x4

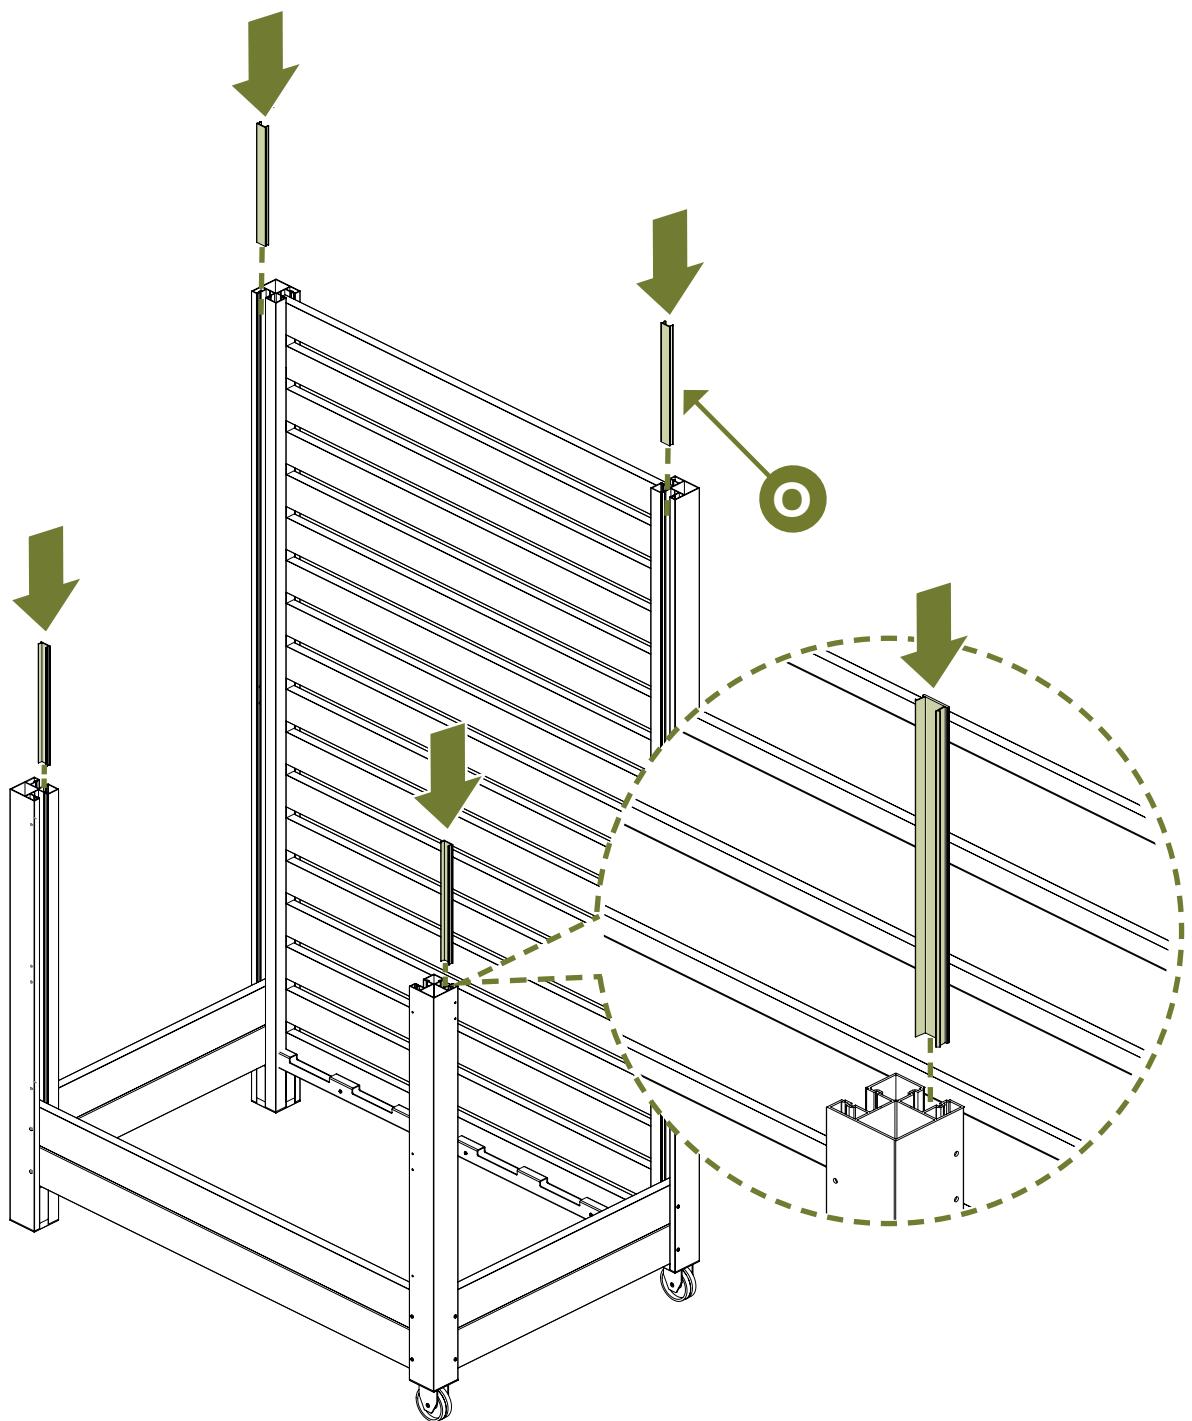

18




**H x2**

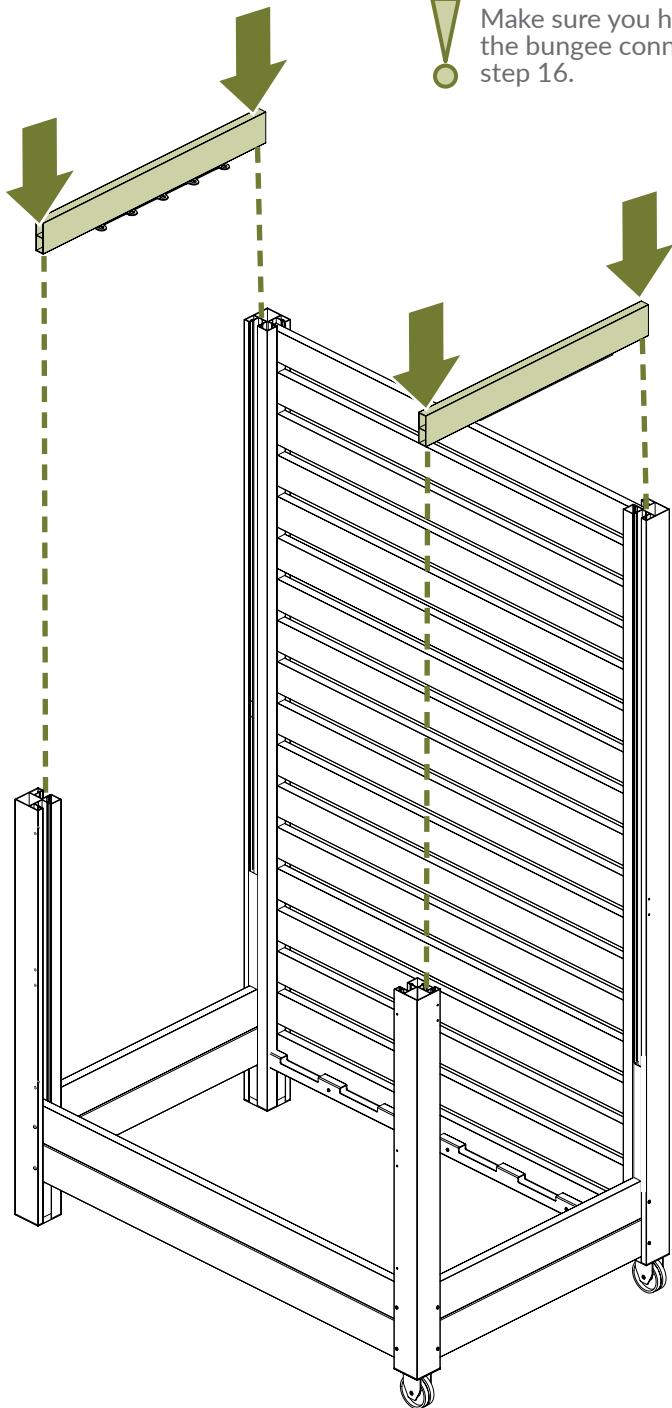


19

H x2      O x4

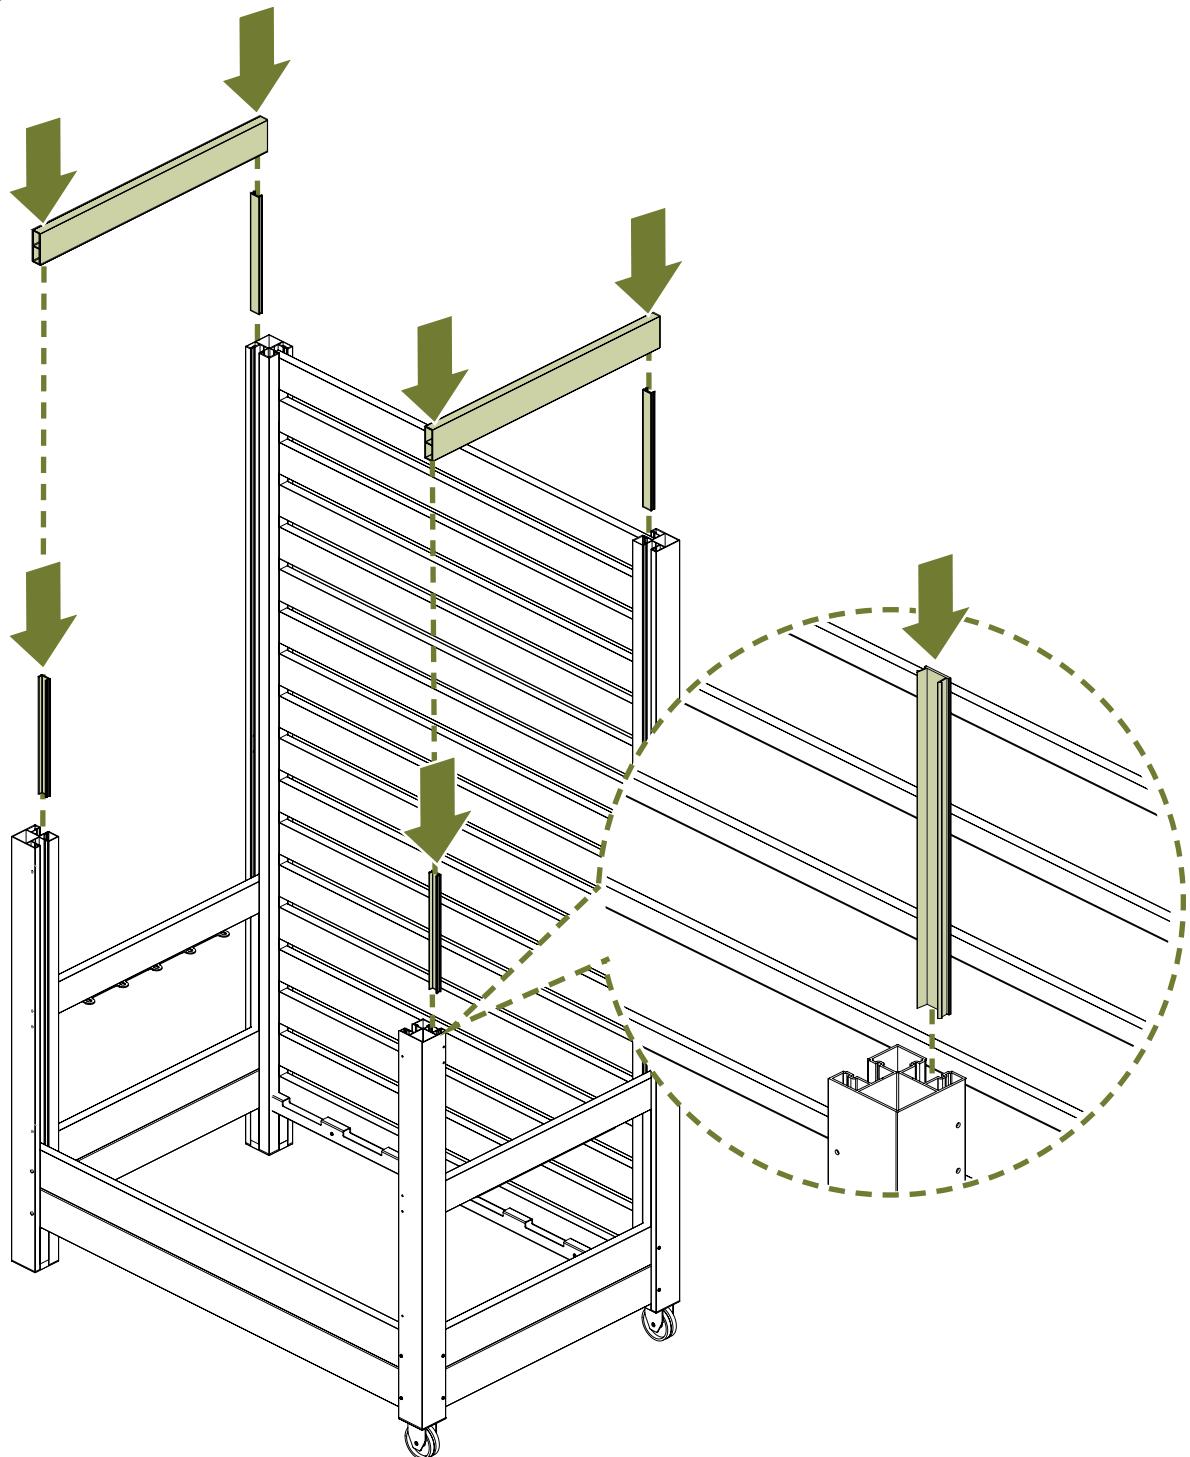

20


U x8

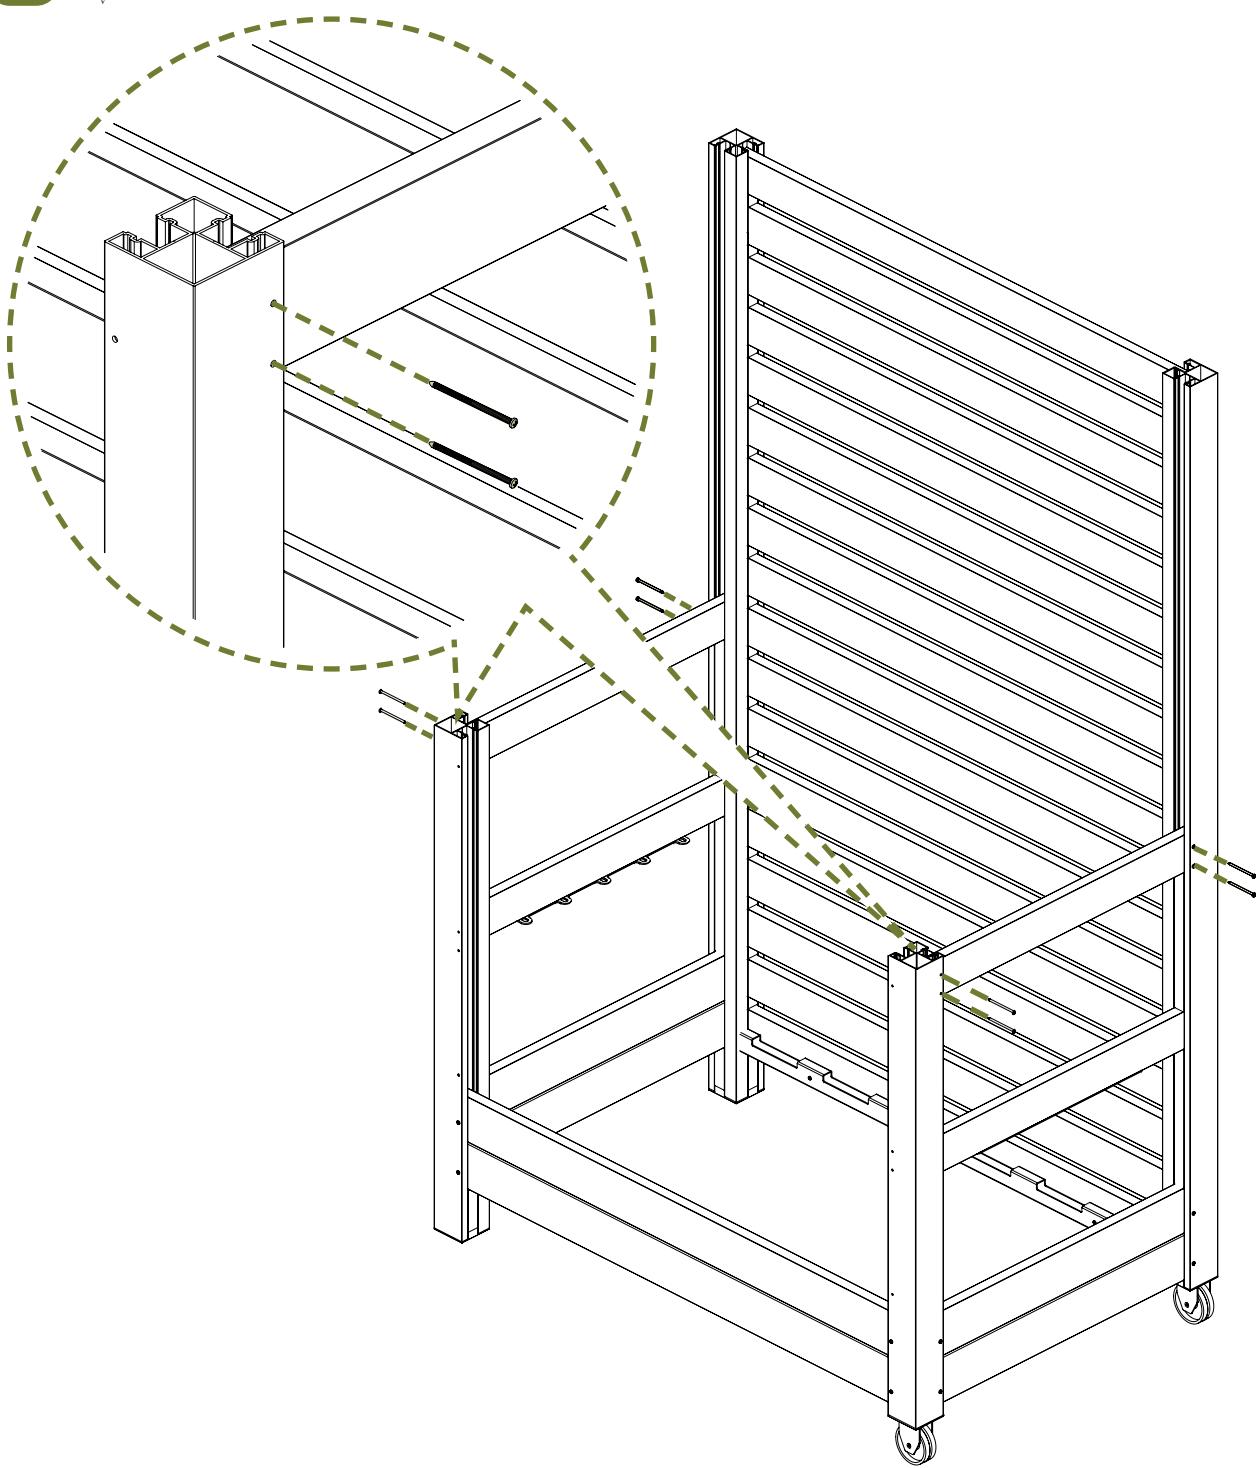

21



1x6

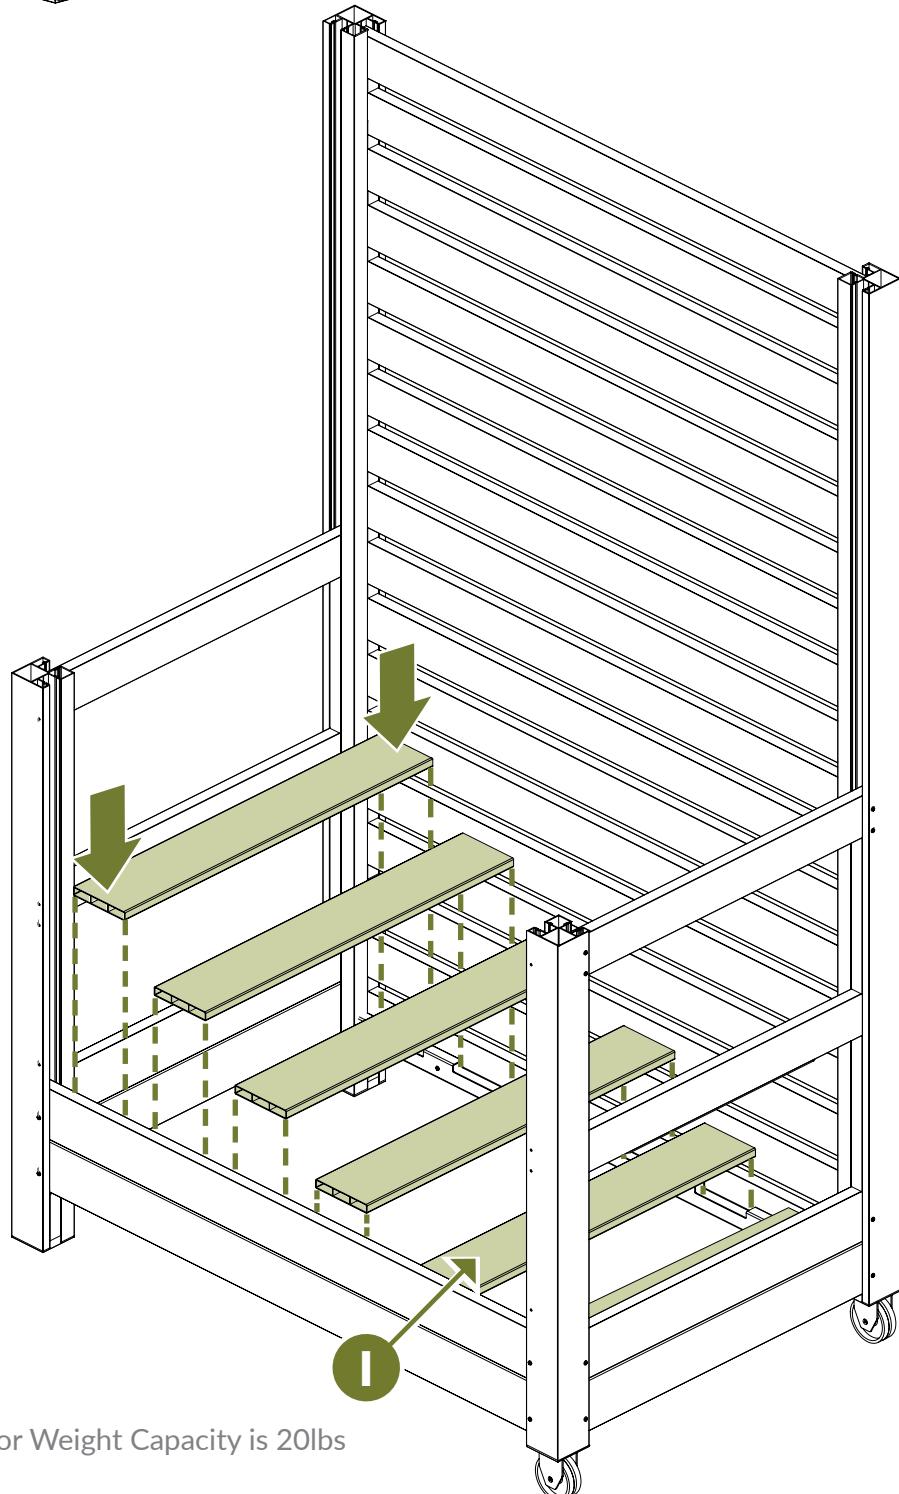

**Note:** Floor Weight Capacity is 20lbs

22




**N**<sub>x2</sub>



**R**<sub>x2</sub>




**L**<sub>x2</sub>

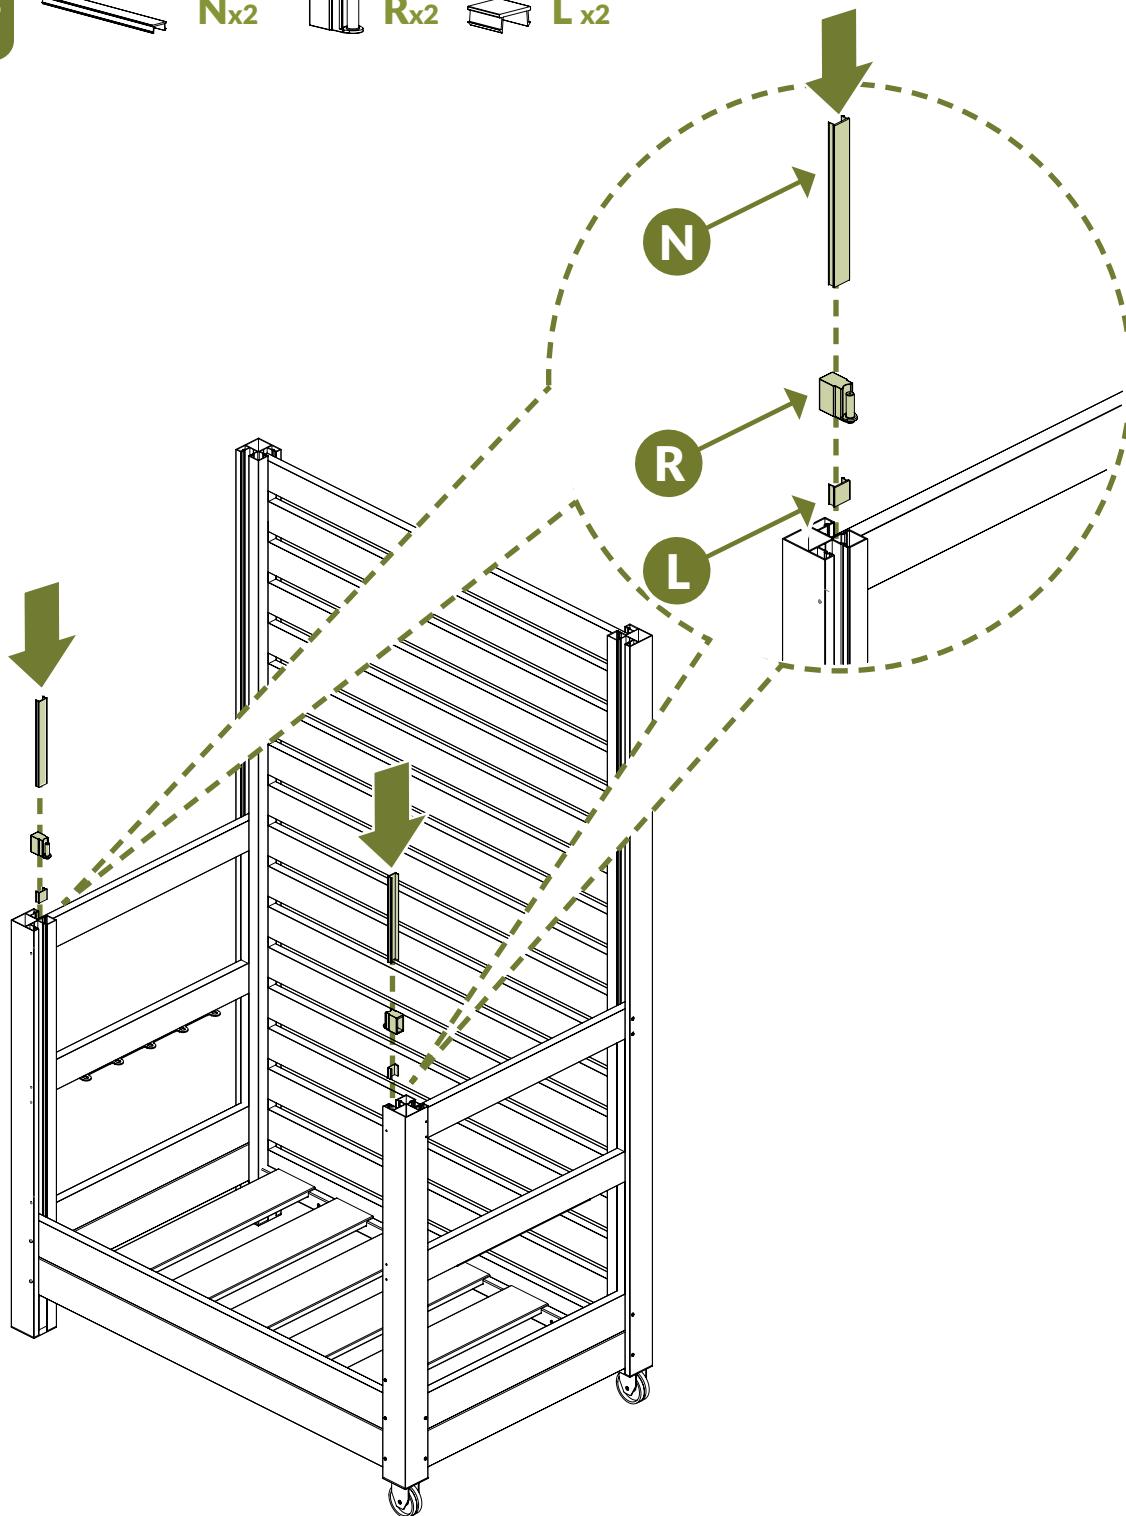



23



U x2

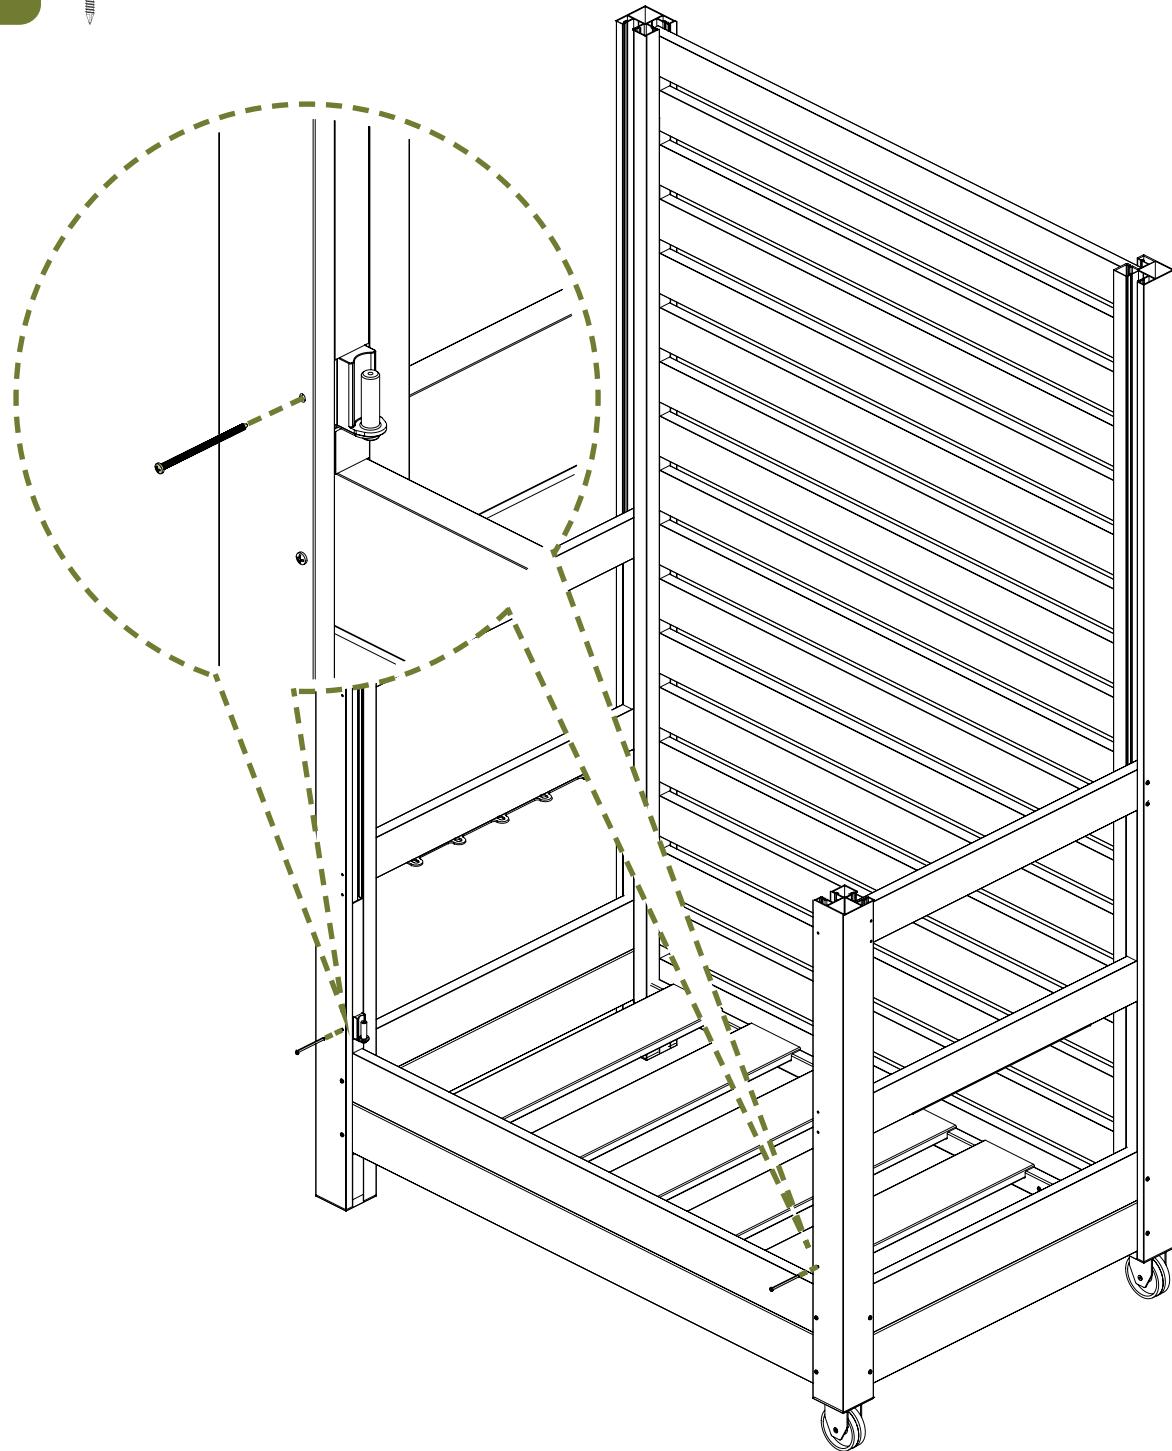


24

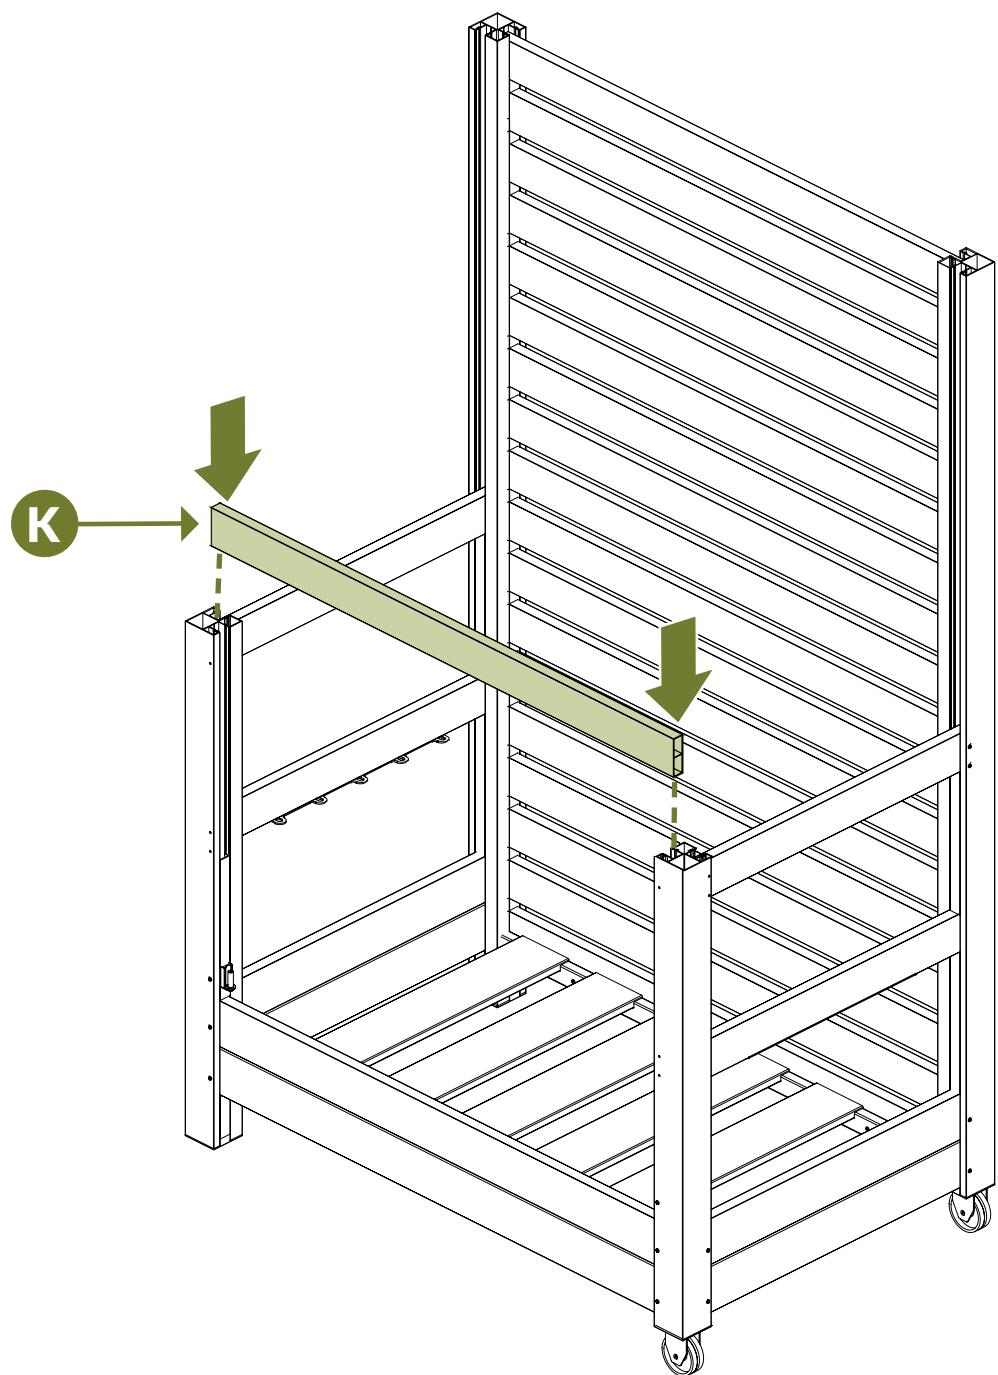

25




U x4

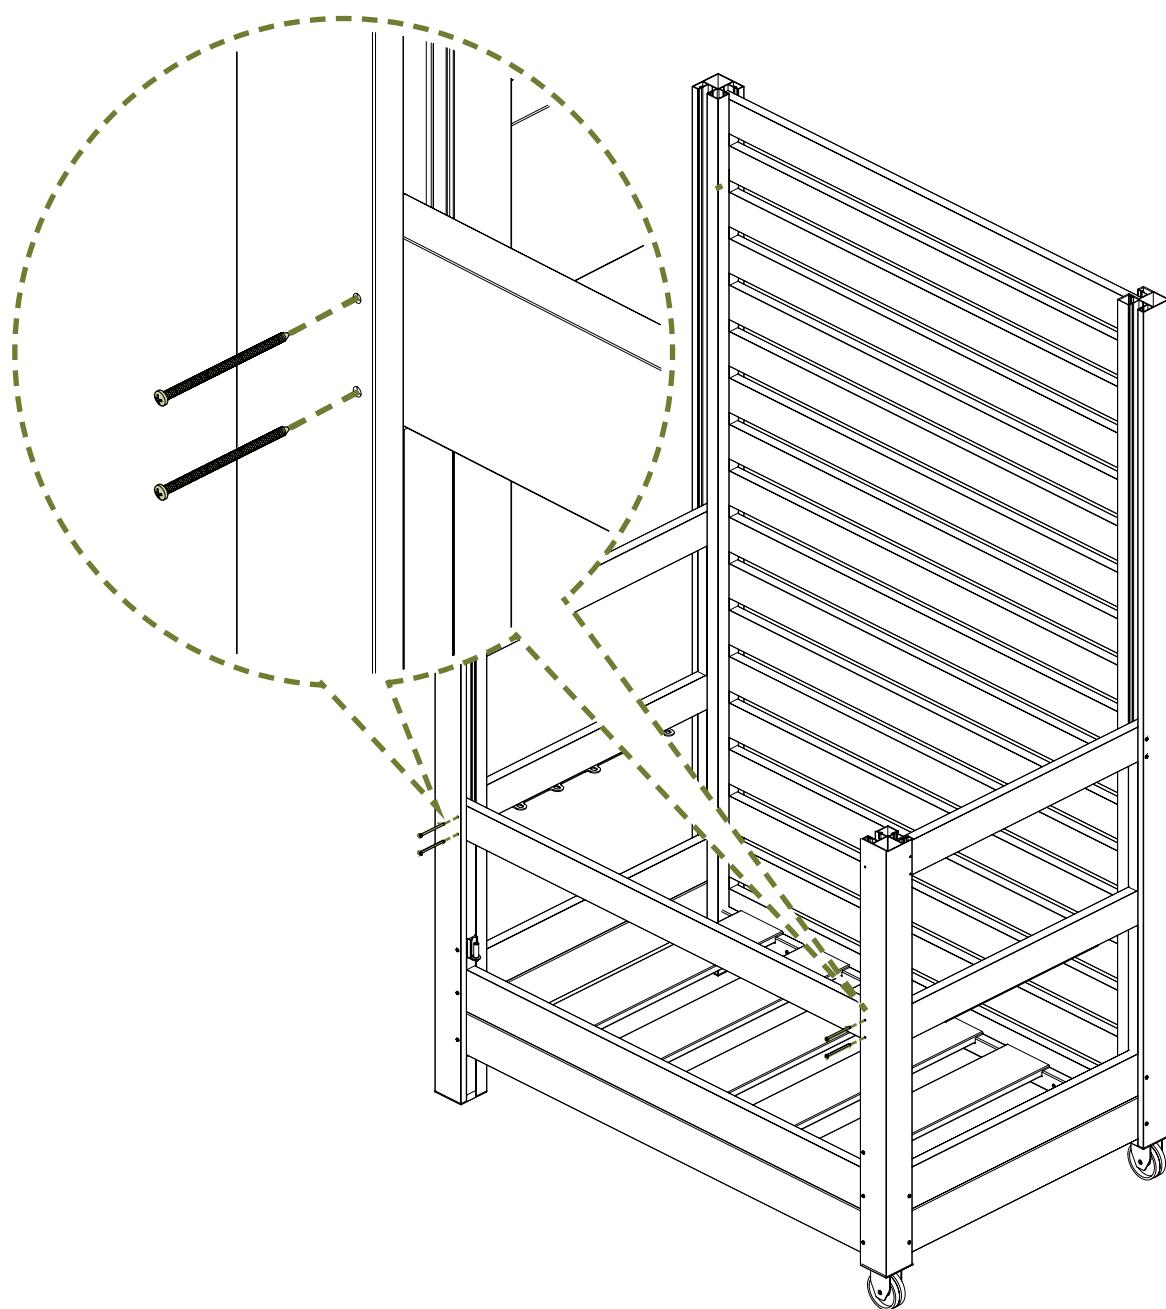

26


 **P** x2  **R** x2  **L** x2

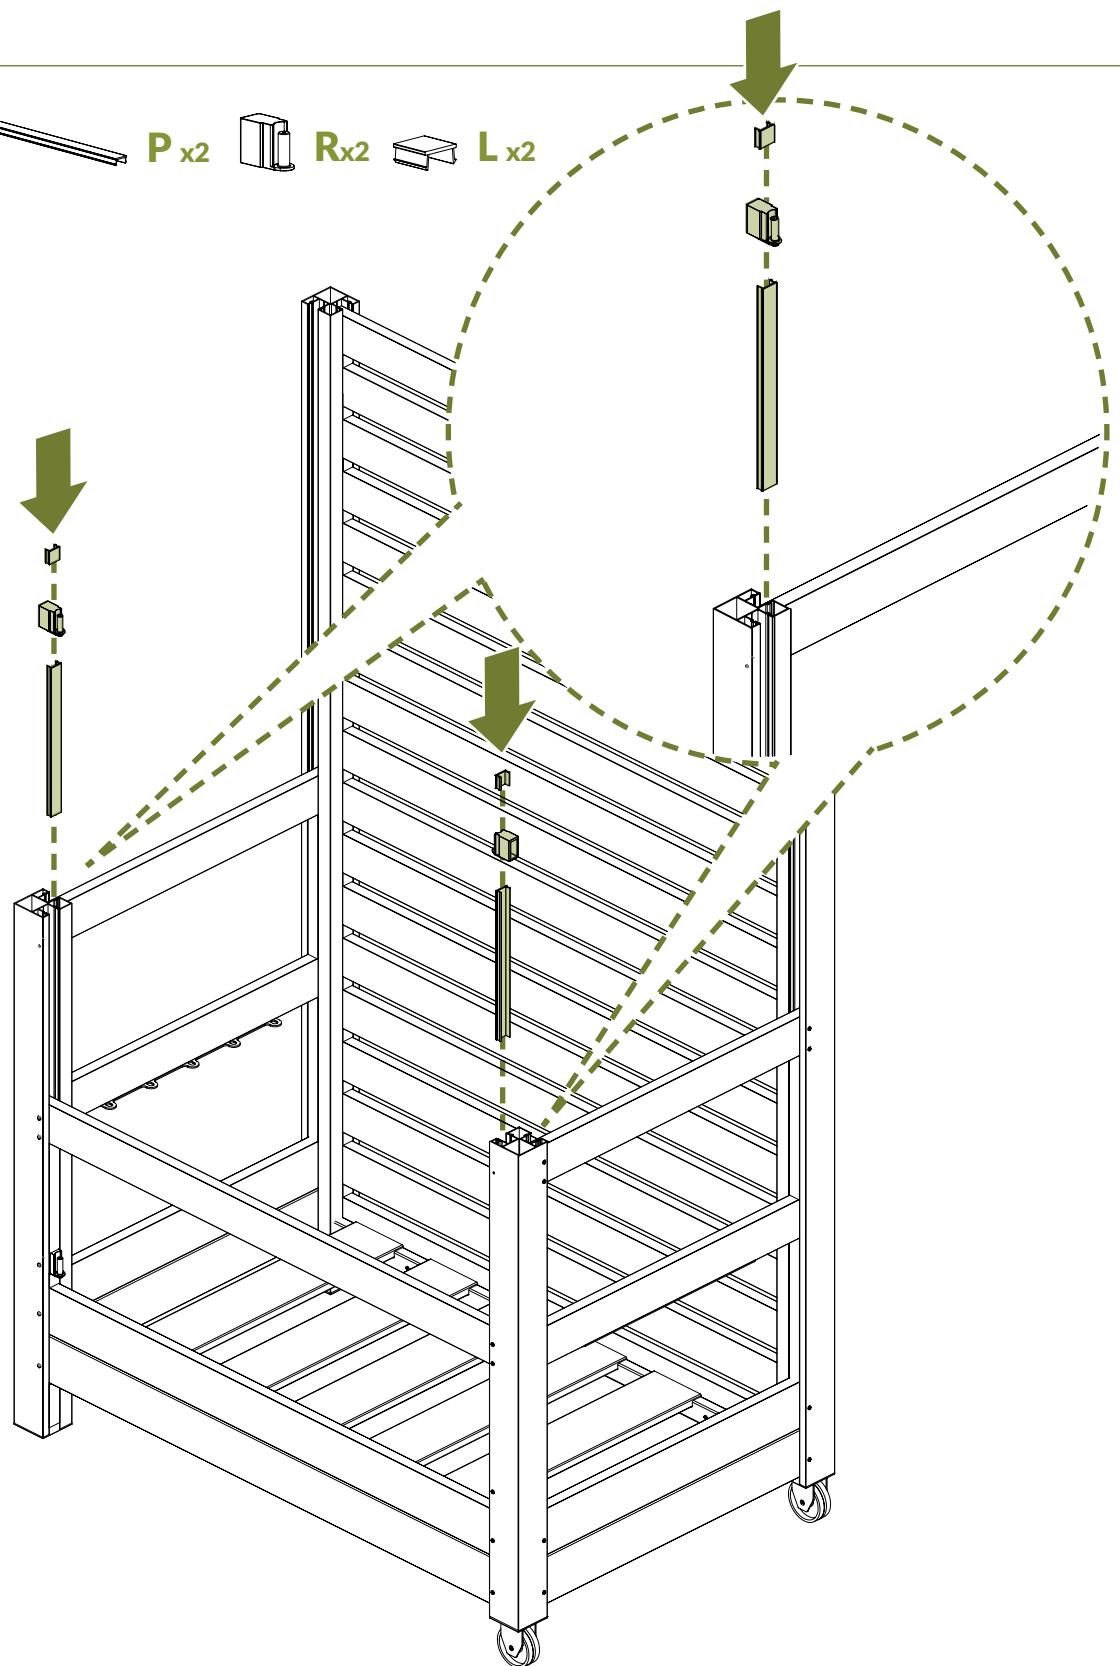

27




U x2

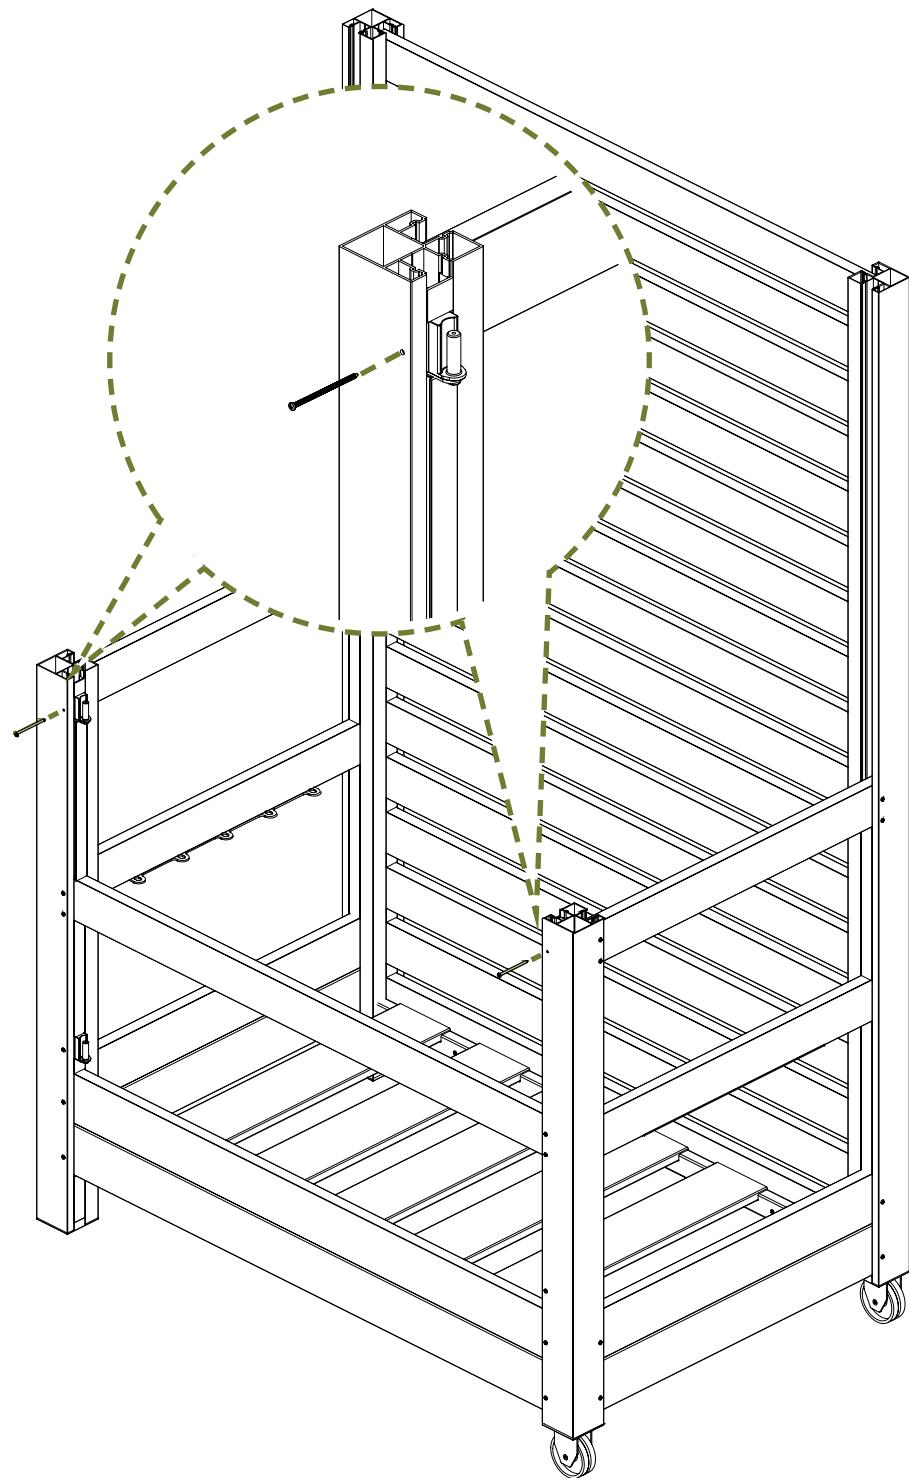


28




J x1

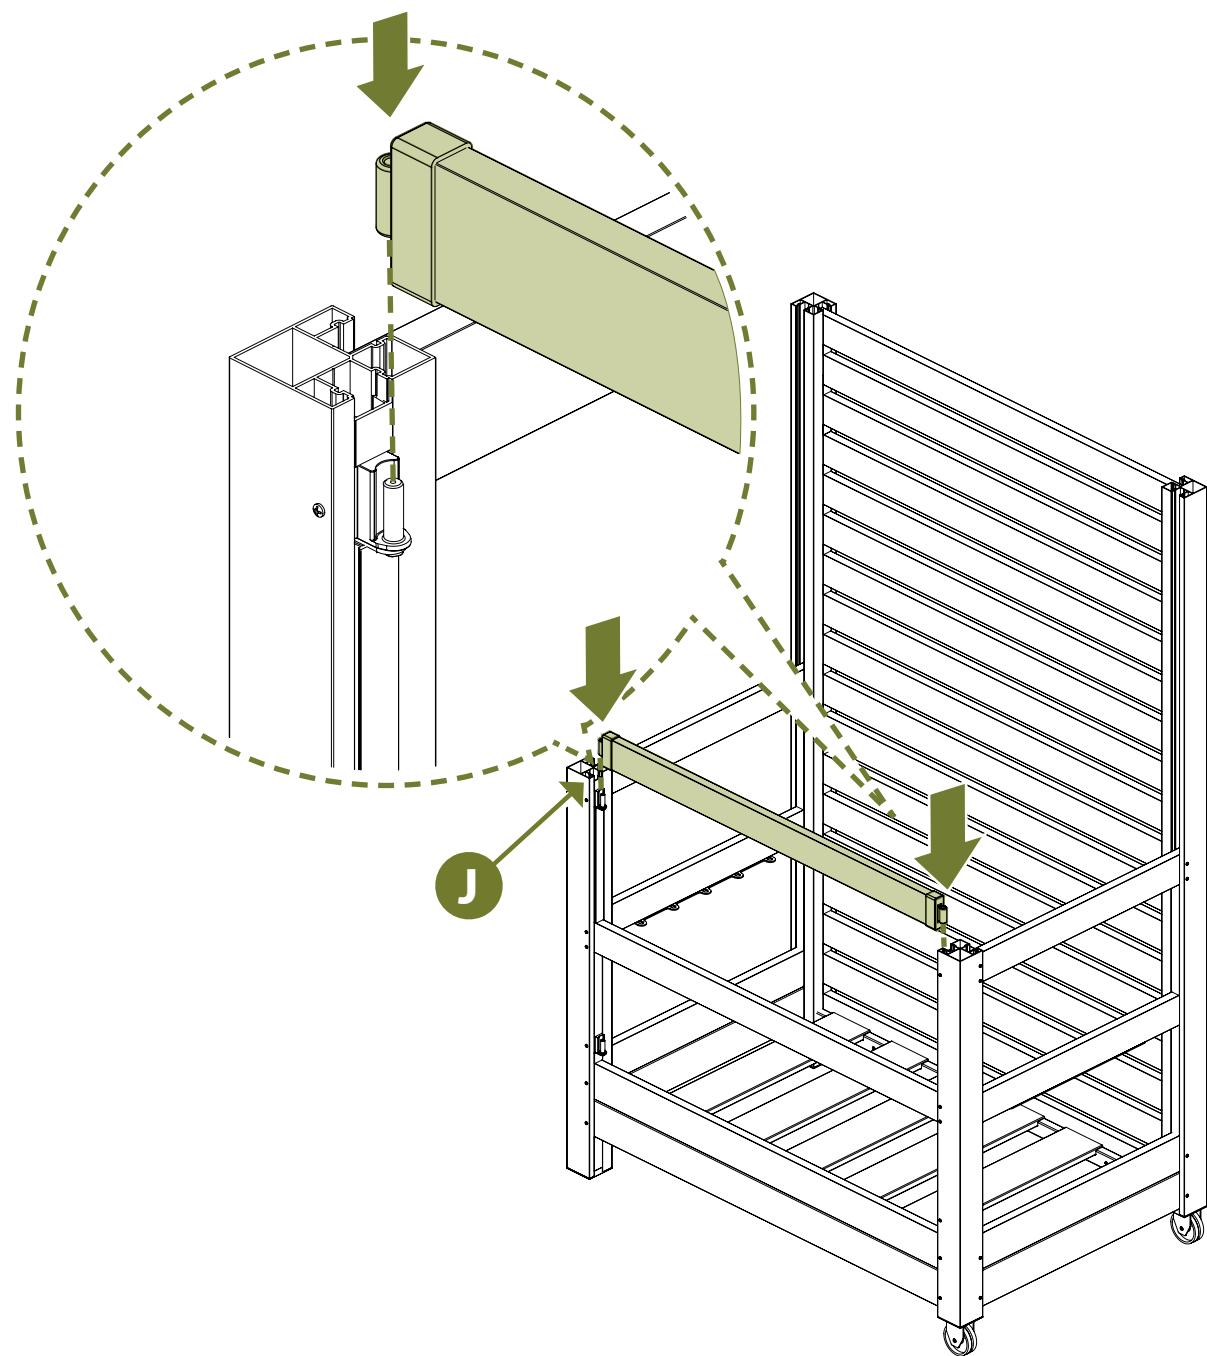

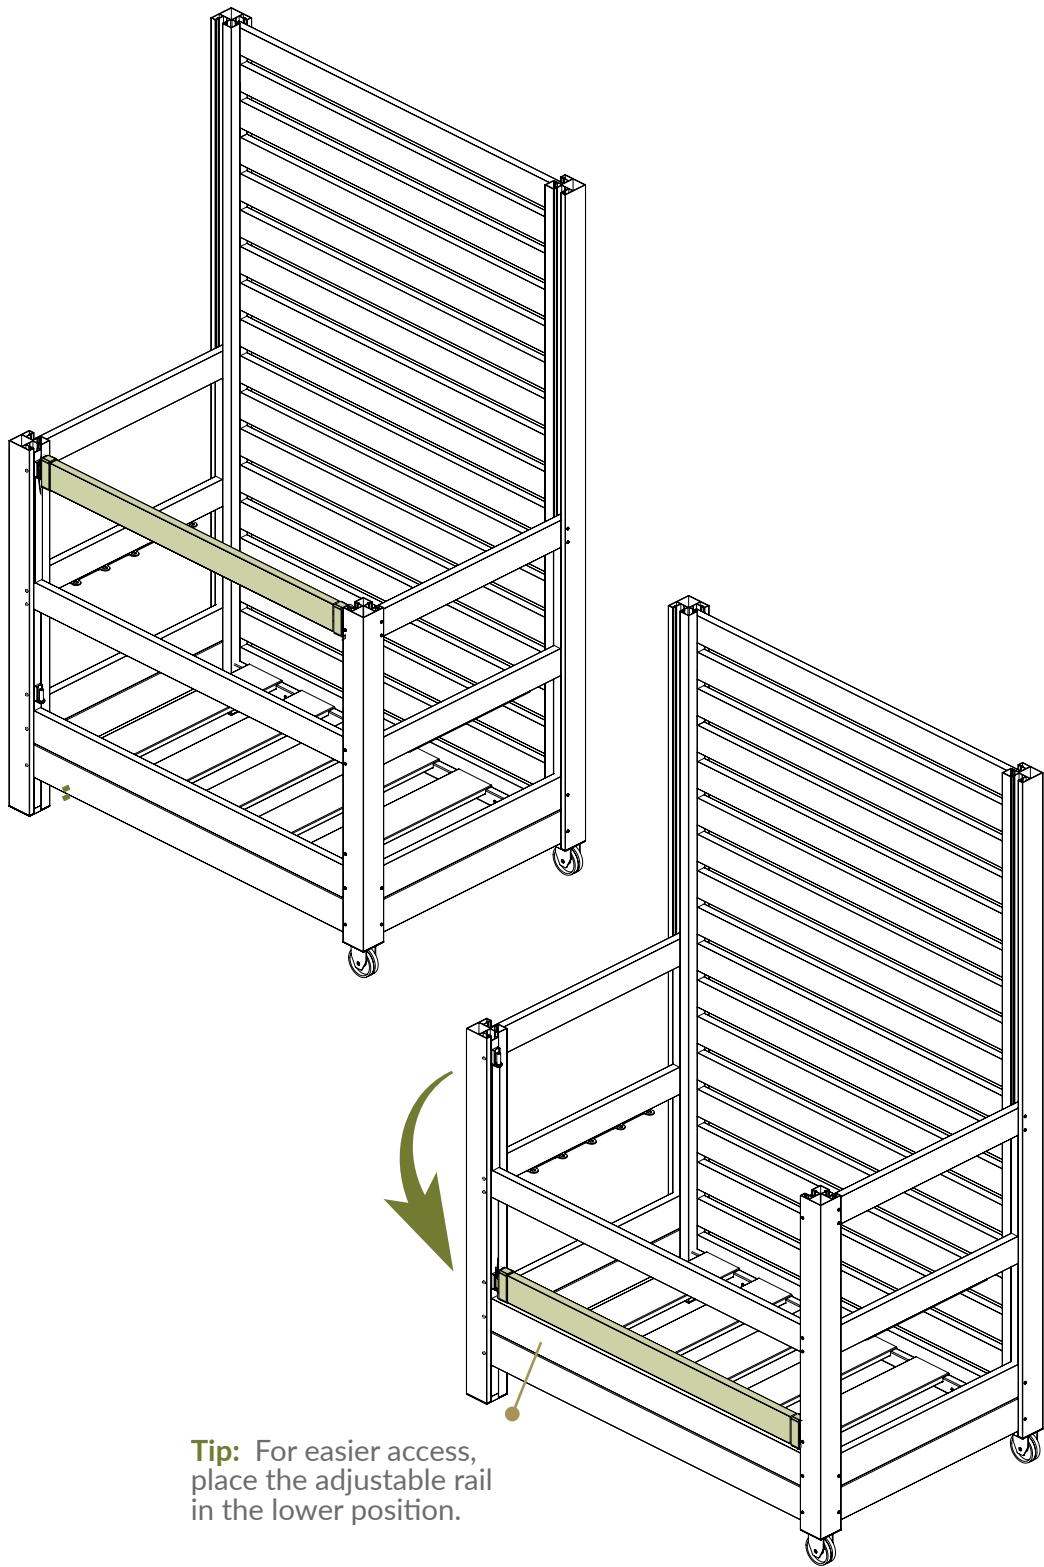


29

Q x2

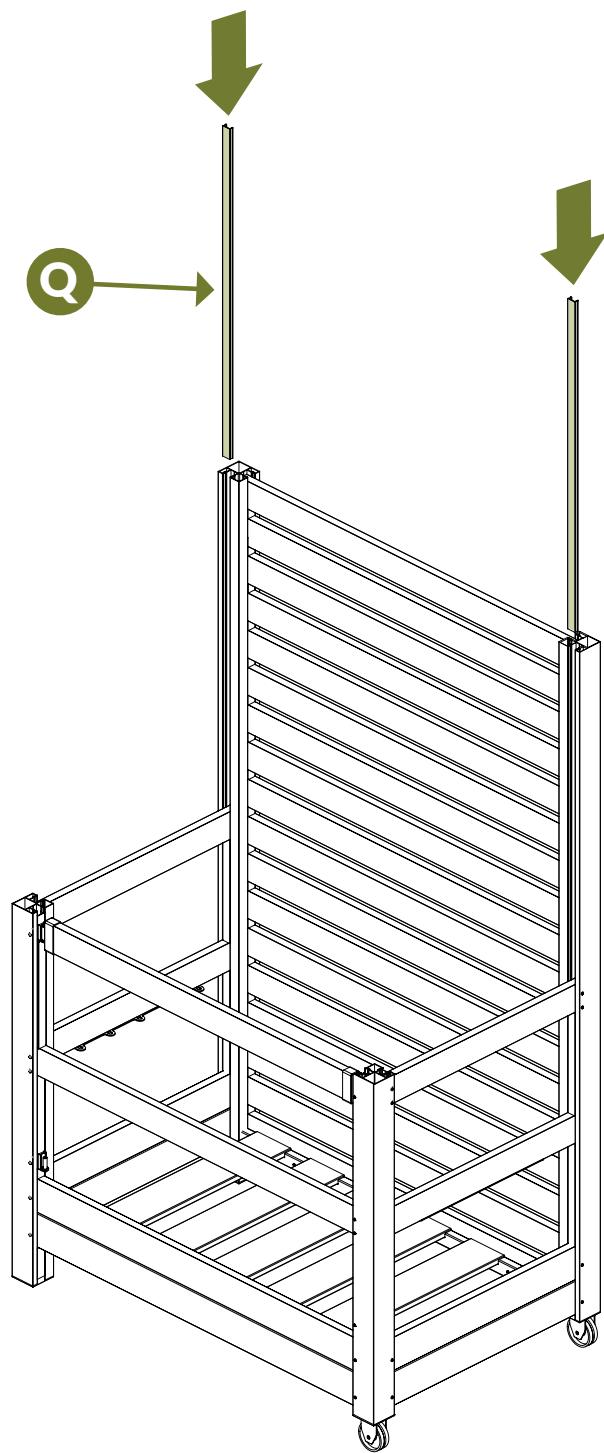

30

→ **W x3**

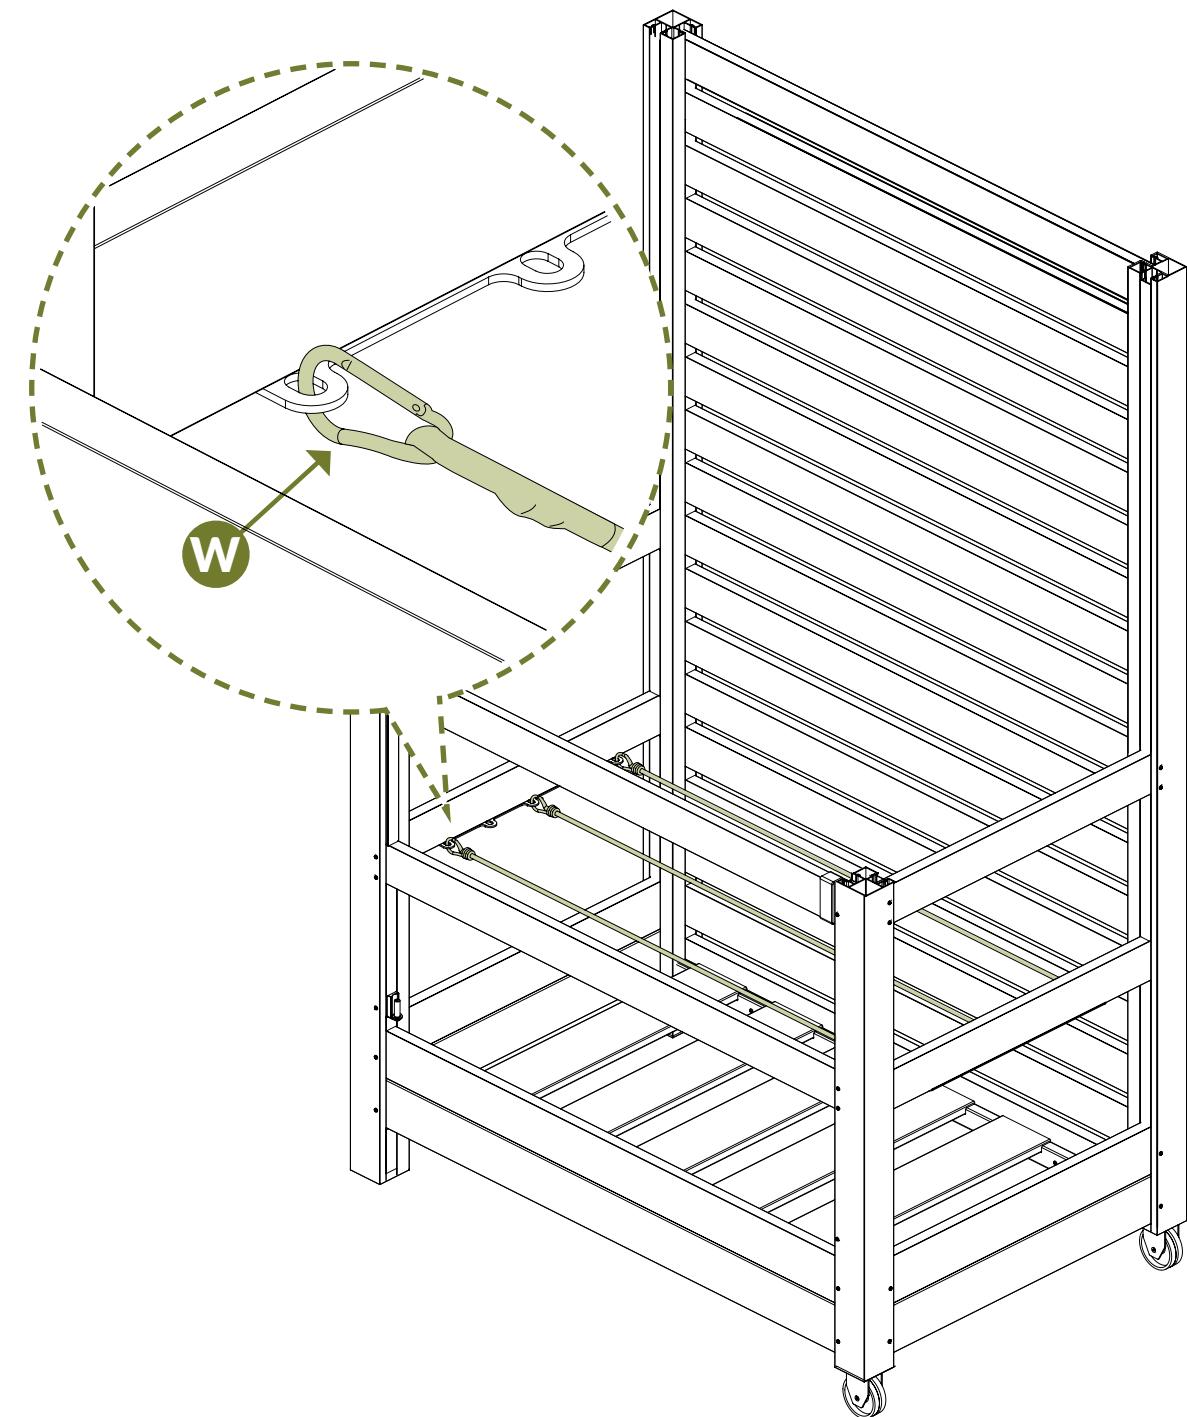


31



**S x4**



**T x6**

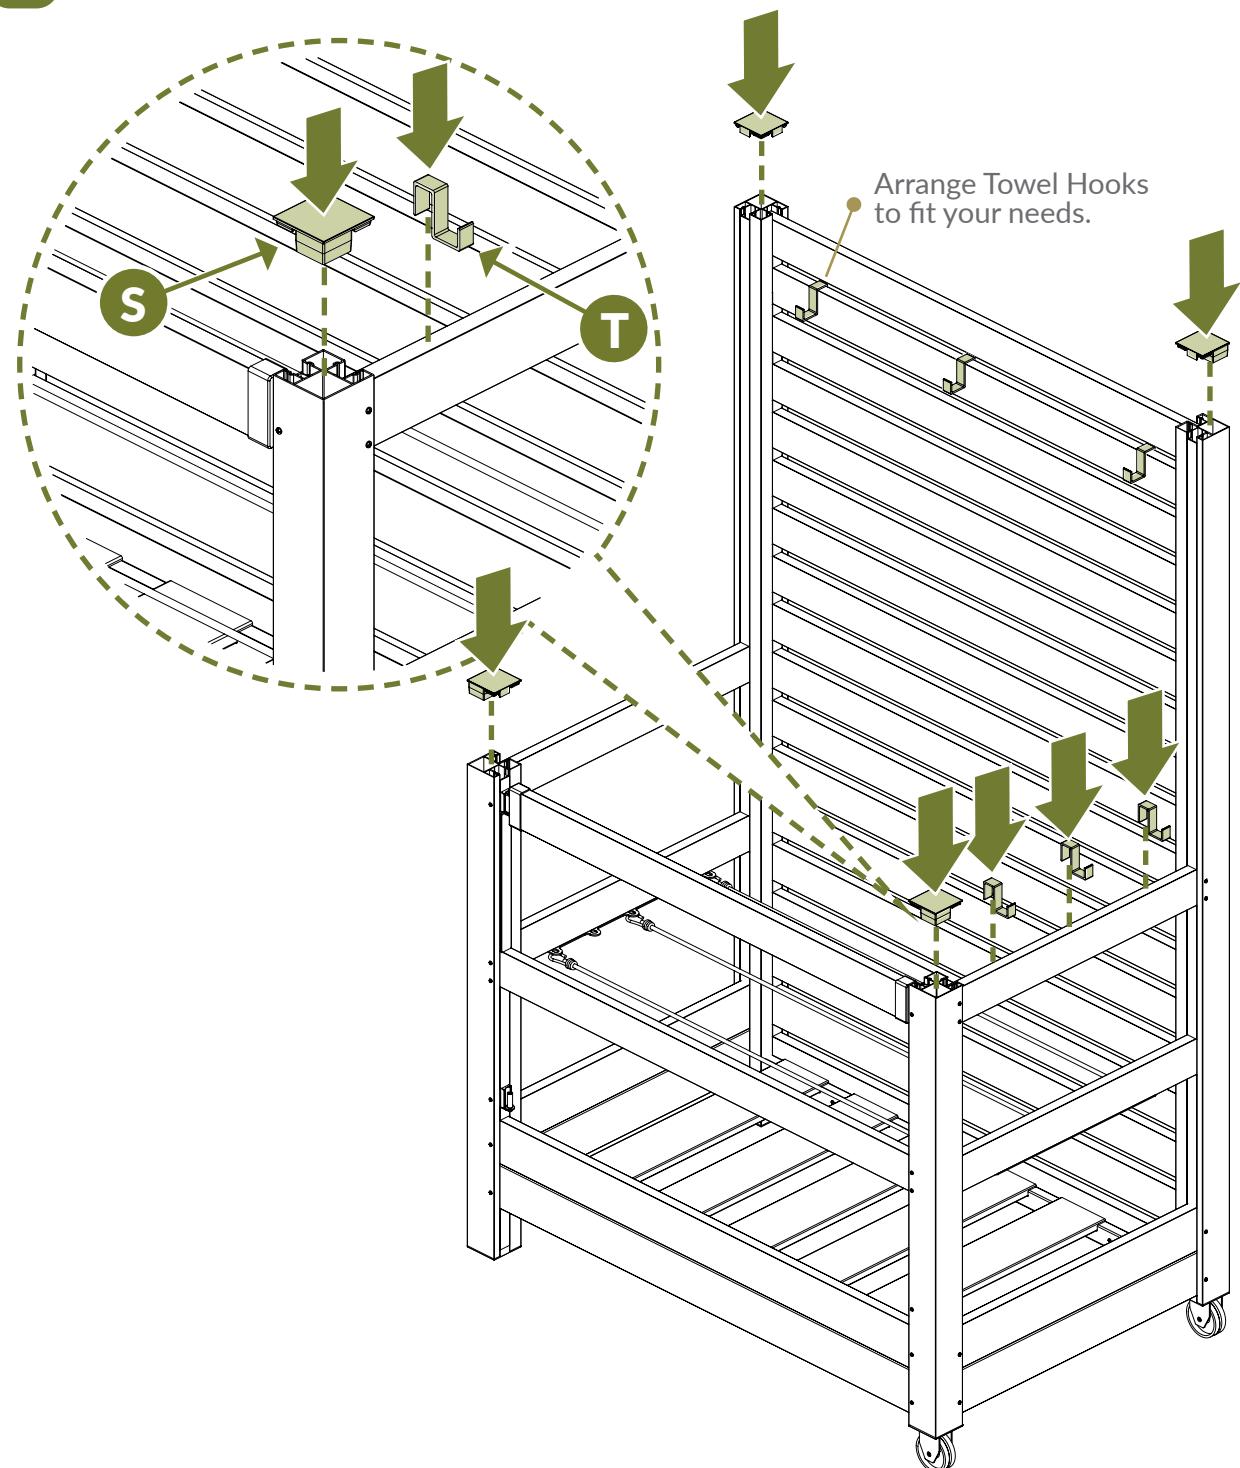



# ZIPPITY

*Easy Does It!*



6935 Reames Rd. Ste. K.  
Charlotte, NC 28216



[support@zippity-outdoor.com](mailto:support@zippity-outdoor.com)



704-892-5222  
877-234-6196



[WWW.ZIPPITY-OUTDOOR.COM](http://WWW.ZIPPITY-OUTDOOR.COM)

