



# ZIPPITY


*Easy Does It!*

**CONCORD**  
Light Post w/ Planter Box  
(19  $\frac{7}{8}$ " W x 103  $\frac{1}{2}$ " H)

**ASSEMBLY**  
INSTRUCTIONS  
**ZP19081**

**60 MIN**  
*Approximate assembly time*

Want to see a video on how to assemble  
this product?  
Scan the QR code

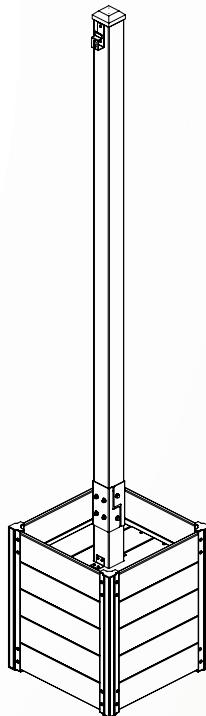

## GENERAL INFORMATION

### MISSING OR DAMAGED PARTS?



➤ **Visit Our Website**  
so we can help you right away!  
**parts.nychbrands.com**

\* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, **please have the following** ➤ Your product number (**ZP19081**)  
➤ Your affected part letters (**page 4-7**)  
➤ Your original product box

### NEED ASSEMBLY HELP?


If you are having problems with assembly or installation of this product,  
**please contact at:**

📞 **704-892-5222 / 877-234-6196**   ✉️ **support@zippity-outdoor.com**

### NEED TO RETURN?


If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

## Detailed Product Dimensions & Specifications

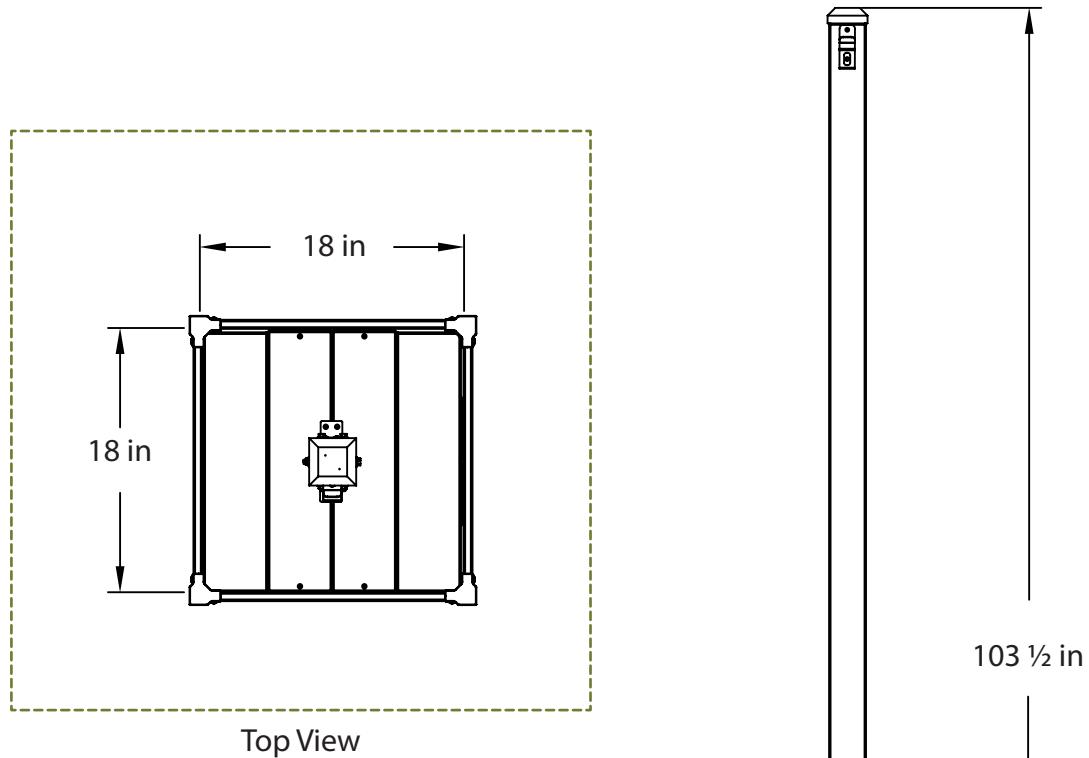


► *Planter Depth: 5" or 9.5" (See Steps 6a/6b for details)*

► *Planter Volume: 0.9 cu ft or 1.75 cu ft  
(See Steps 6a/6b for details)*

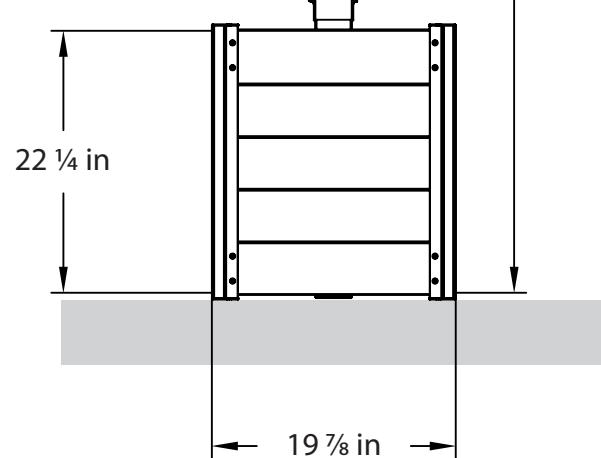


## LAY OUT MATERIALS

- Tools required for a smoother installation experience.

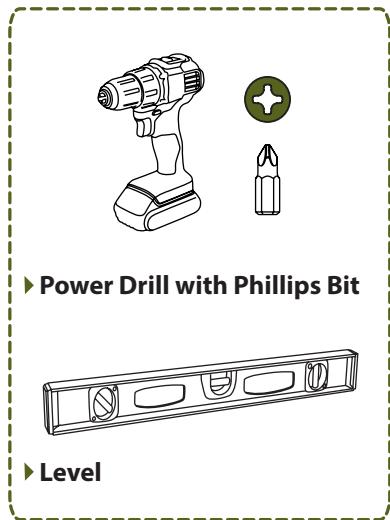


- We recommend 2 people for a smoother assembly.

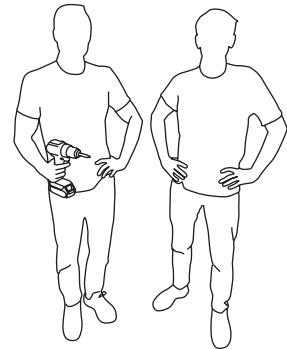

### Recommended:


For optimal stability, you will need to fill the lower chamber with roughly 50 lbs of weight. Sand bags or small rocks are recommended.

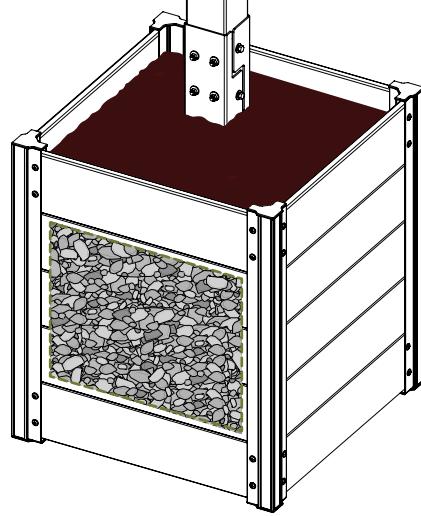

## LAY OUT MATERIALS


### LIGHT POST

**A**

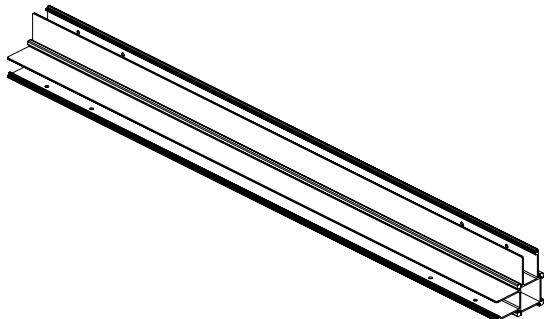


**Corner Post (4)**  
2 1/8" x 2 1/8" x 22"

**B**

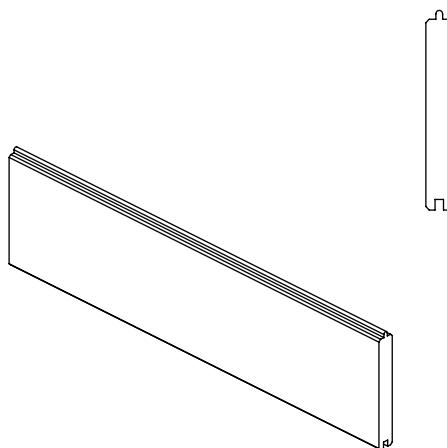


**Board (12)**  
5/8" x 4 1/2" x 17 1/2"

**C**

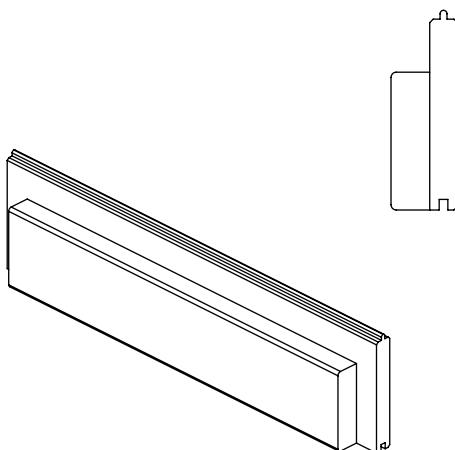

**Floor Support Board (4)**  
1 1/2" x 4 1/2" x 17 1/2"

**D**

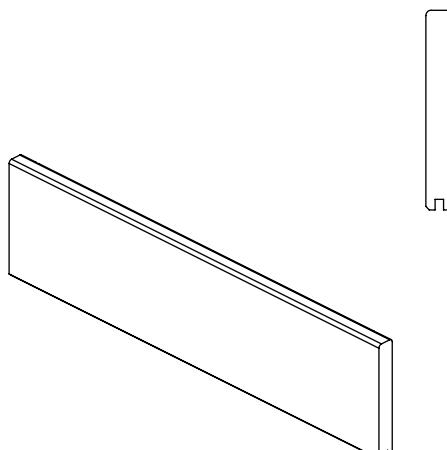


**Top Board (4)**  
5/8" x 4 1/2" x 17 1/2"

## LAY OUT MATERIALS


### LIGHT POST

**E**

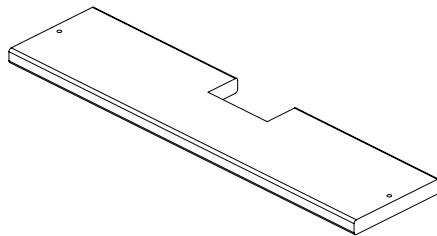


**Inside Floor Board (4)**  
 $5/8" \times 4 1/2" \times 17 \frac{3}{4}"$

**F**

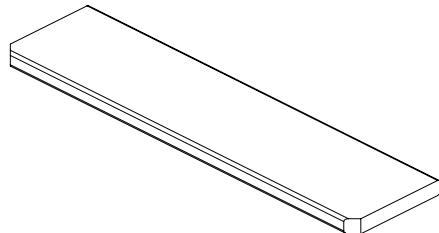


**Outside Floor Board (4)**  
 $5/8" \times 4 1/2" \times 17 \frac{3}{4}"$

**G**

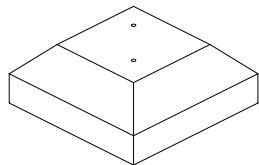


**Wooden Post Cap (1)**  
 $3 \frac{1}{4}'' \times 3 \frac{1}{4}'' \times 1 \frac{1}{4}''$

**H**

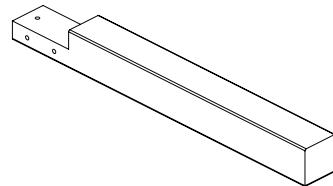

**Bottom Light Post (1)**  
 $3" \times 3" \times 28 \frac{5}{8}"$

**I**

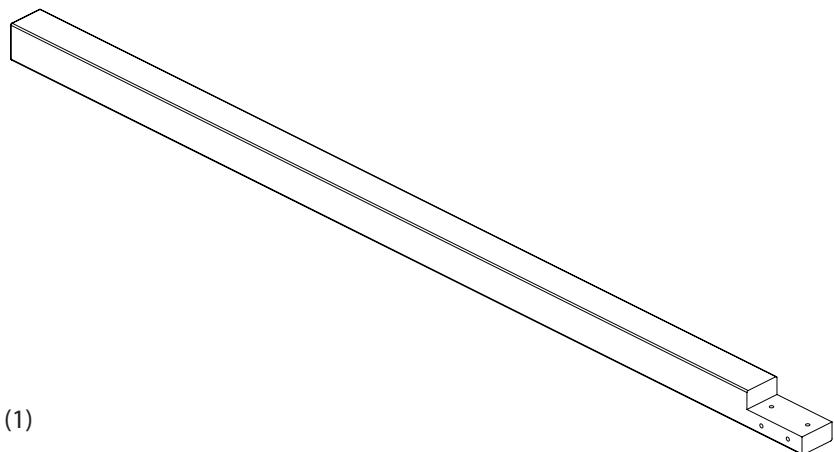


**Top Light Post (1)**  
 $3" \times 3" \times 79 \frac{1}{8}"$

# LAY OUT MATERIALS


## HARDWARE & ACCESSORIES

J

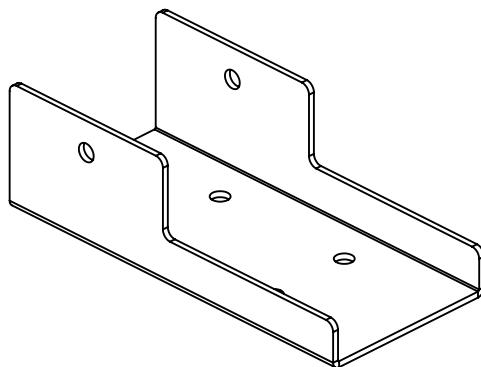


**Post Bracket (2)**

K

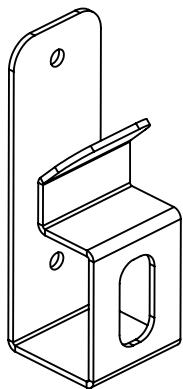


**Hook (1)**

L

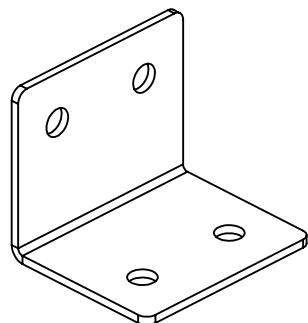


**L-Bracket (4)**

M

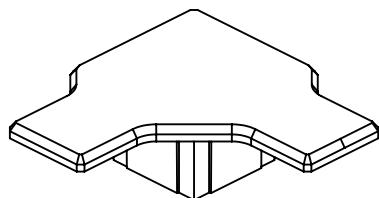

**Post Caps (8)**

N

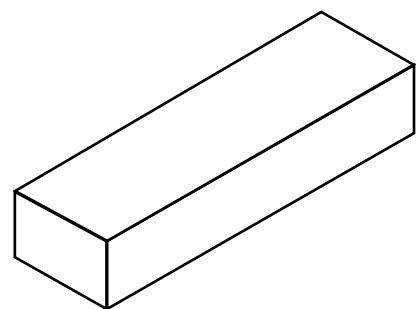


**Spacer (4)**

## LAY OUT MATERIALS


### HARDWARE & ACCESSORIES

O




**2" Countersunk Wood Screw (2)**

P




**5/8" Round Head Self-Drilling Screw (32)**

Q




**5/8" Self-Tapping Screw (18)**

R




**1 3/8" Countersunk Wood Screw (8)**

S




**3 3/4" Hex Bolt (6)**

T

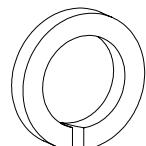


**Spring Lock Washer (6)**

U

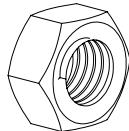


**Nut (6)**

V


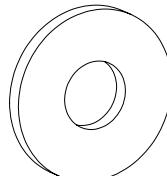


**Flat Washer (12)**

W


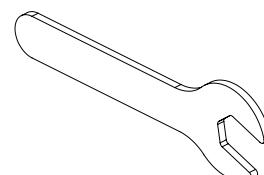


**Nut Wrench (2)**


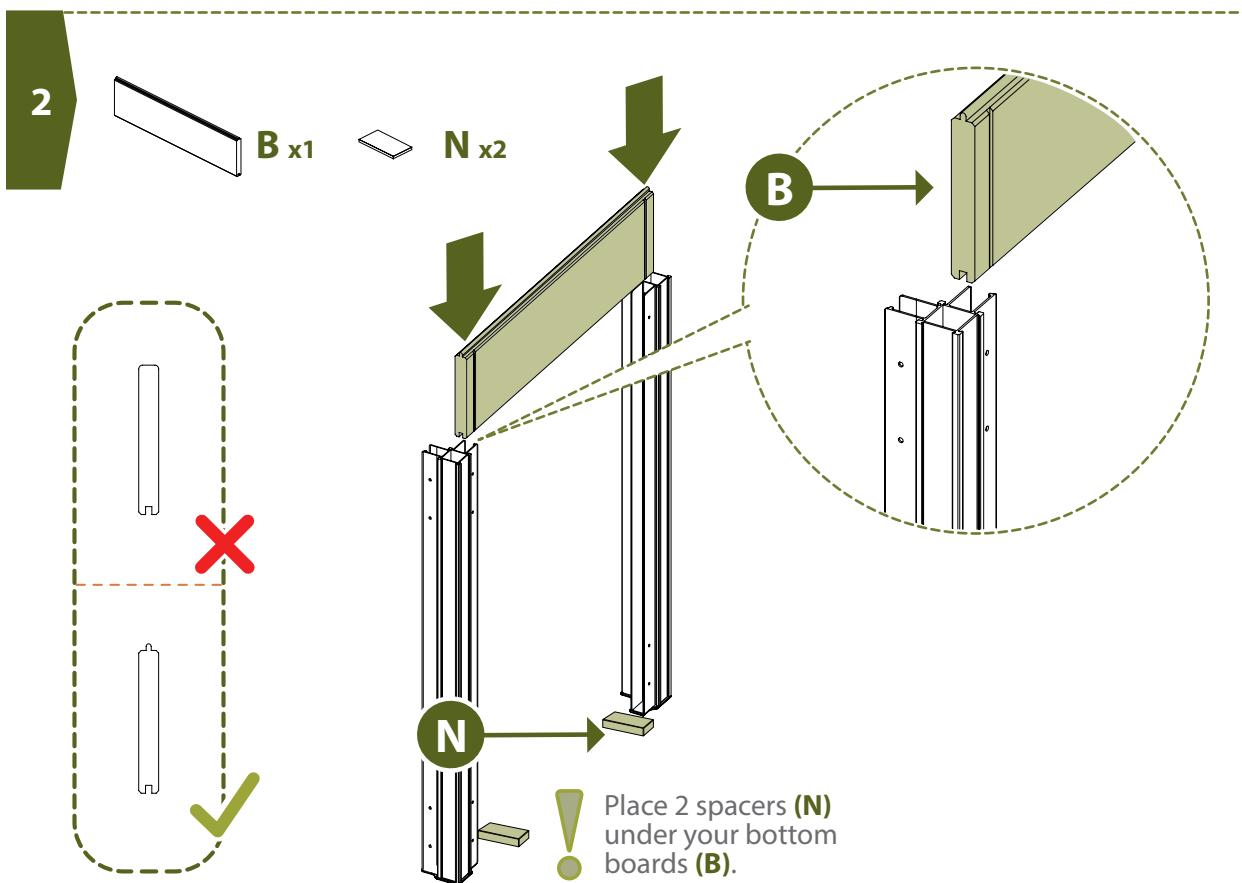
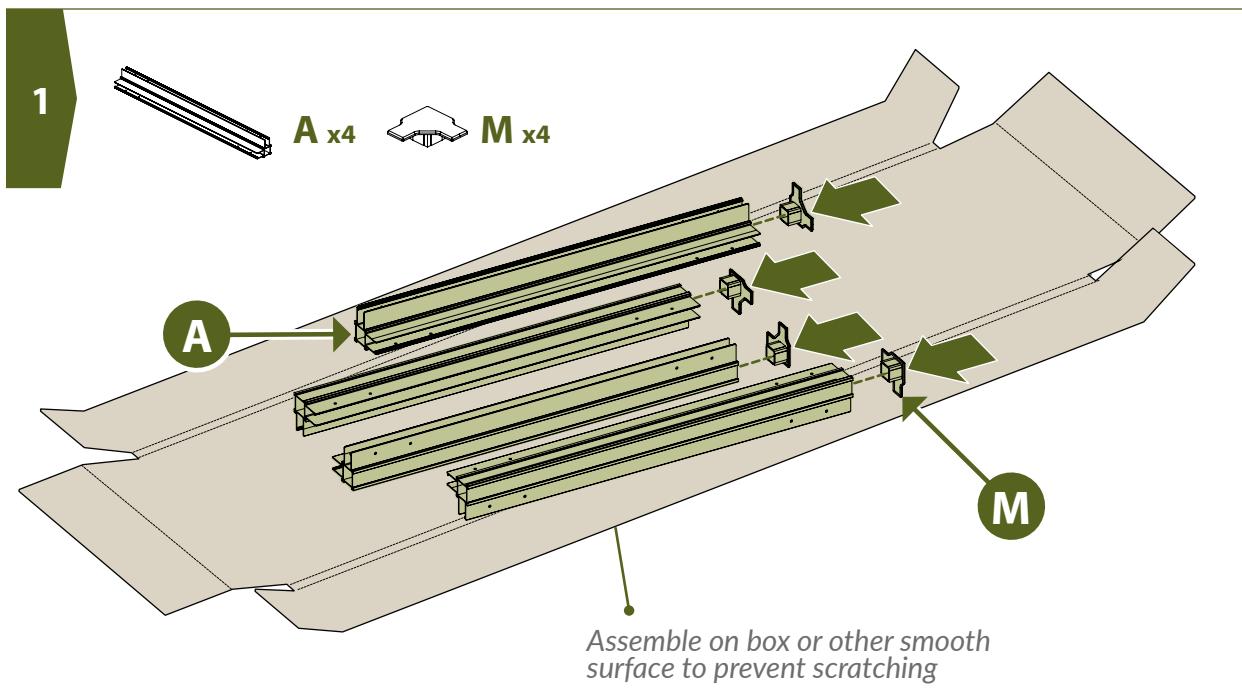


3


 **P x4**

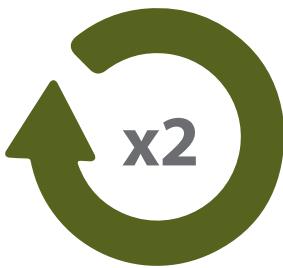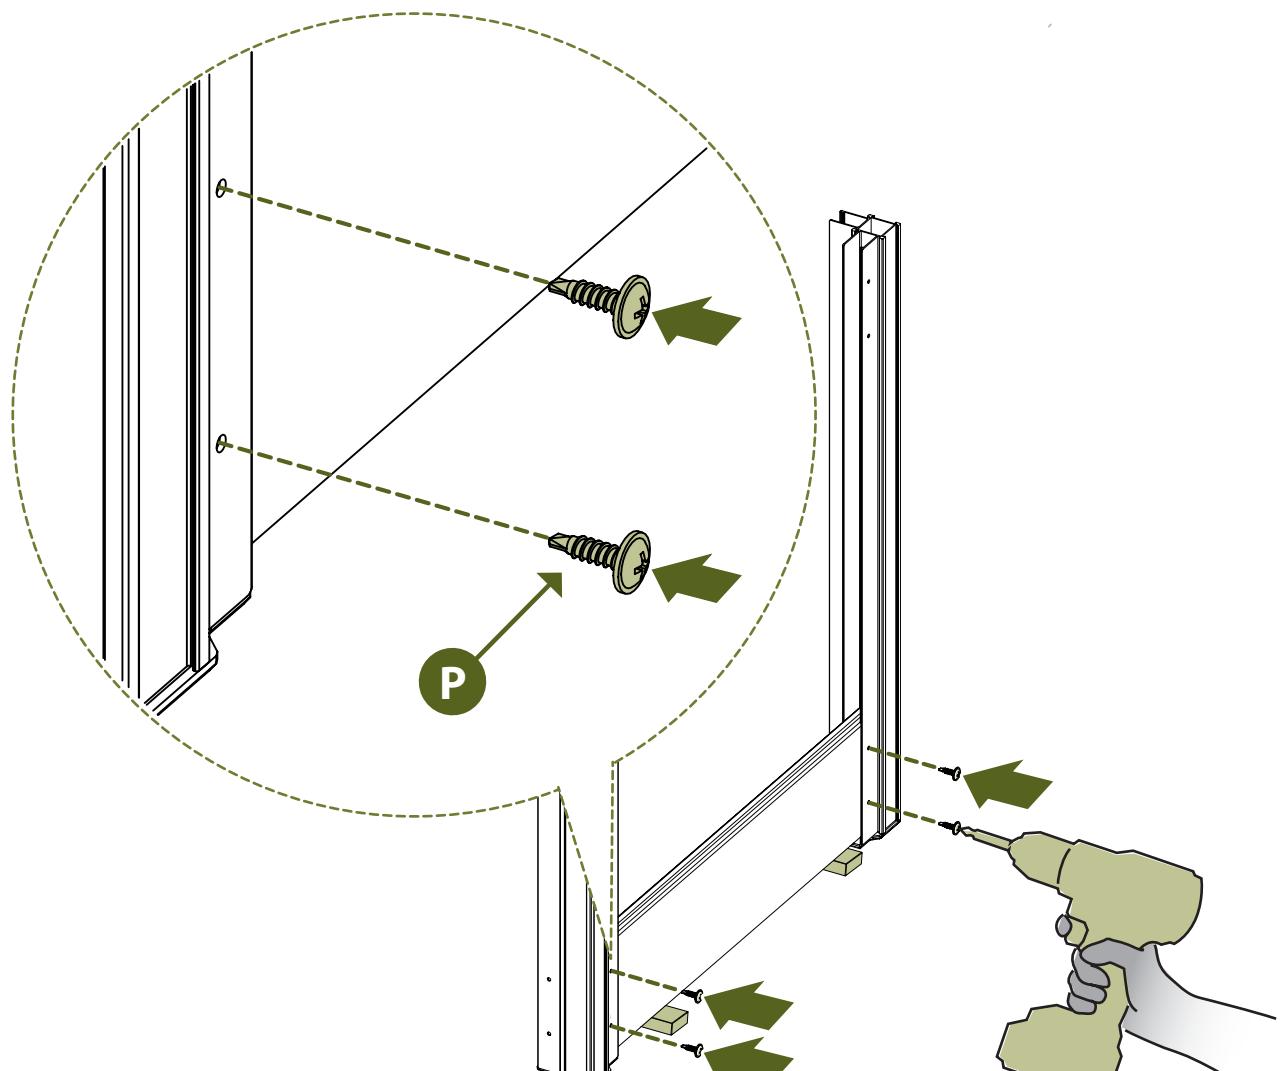


Repeat steps 2-3  
to create an  
additional panel

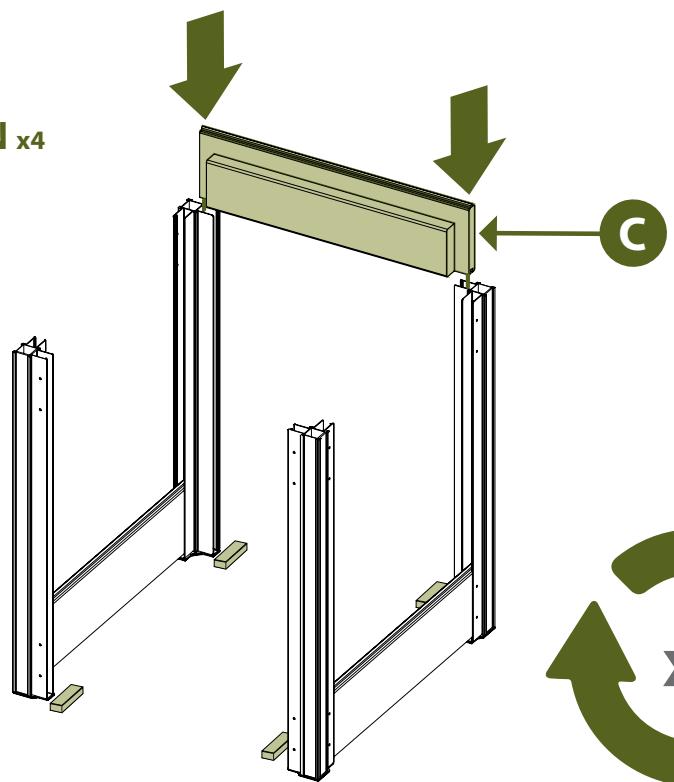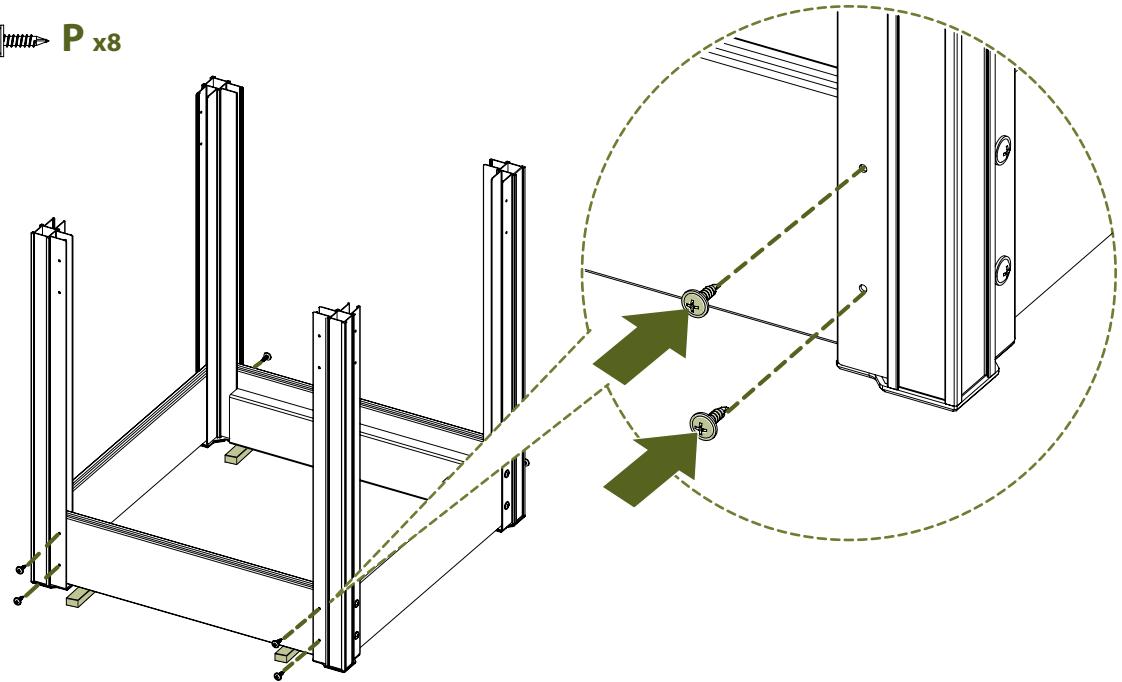**4****C x2****N x4****x2****5****P x8**


**6**




**E x2**




**F x2**

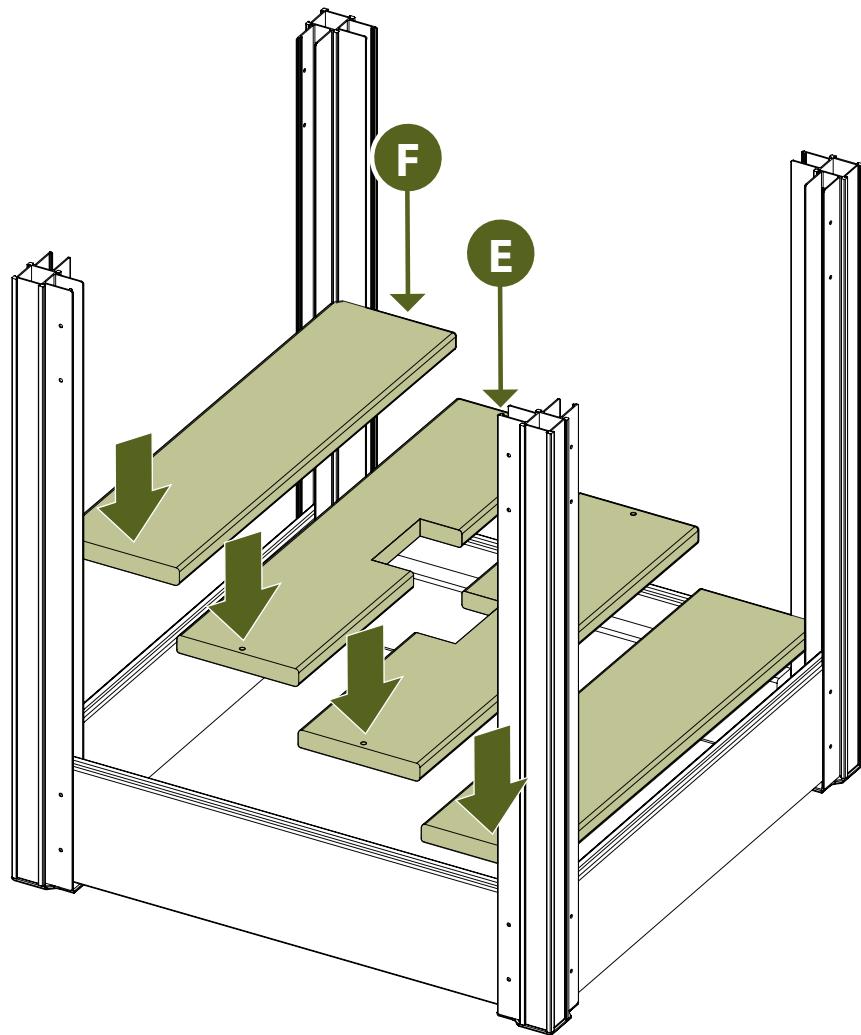

7a




► Use this option for a 5" deep planter box.

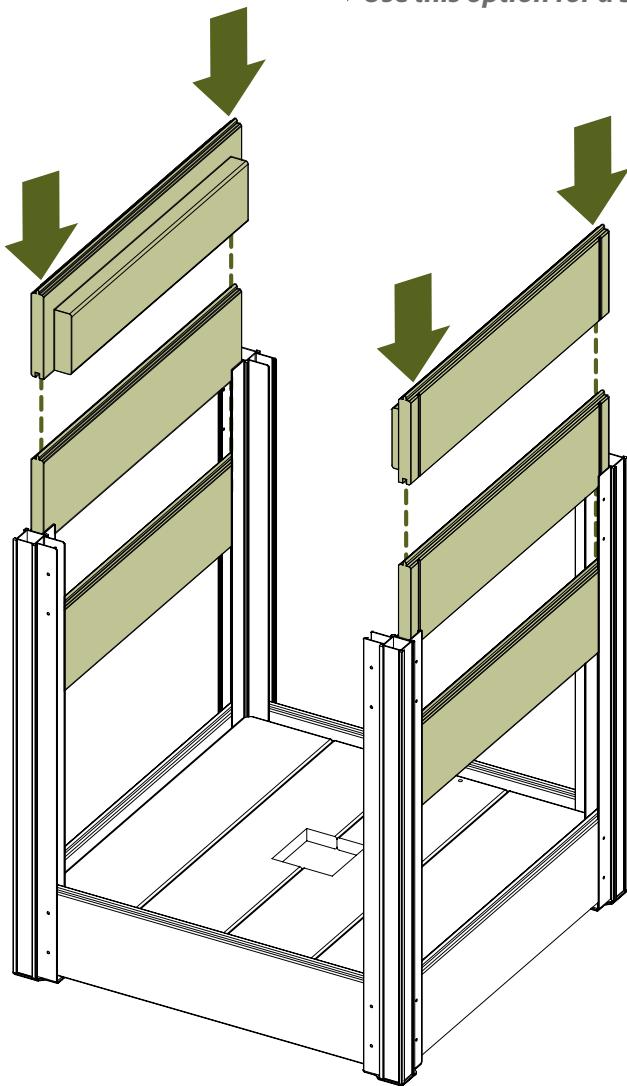


! Top support boards (C) should be on the opposite 2 sides as the bottom support boards.


7b




► Use this option for a 9.5" deep planter box.

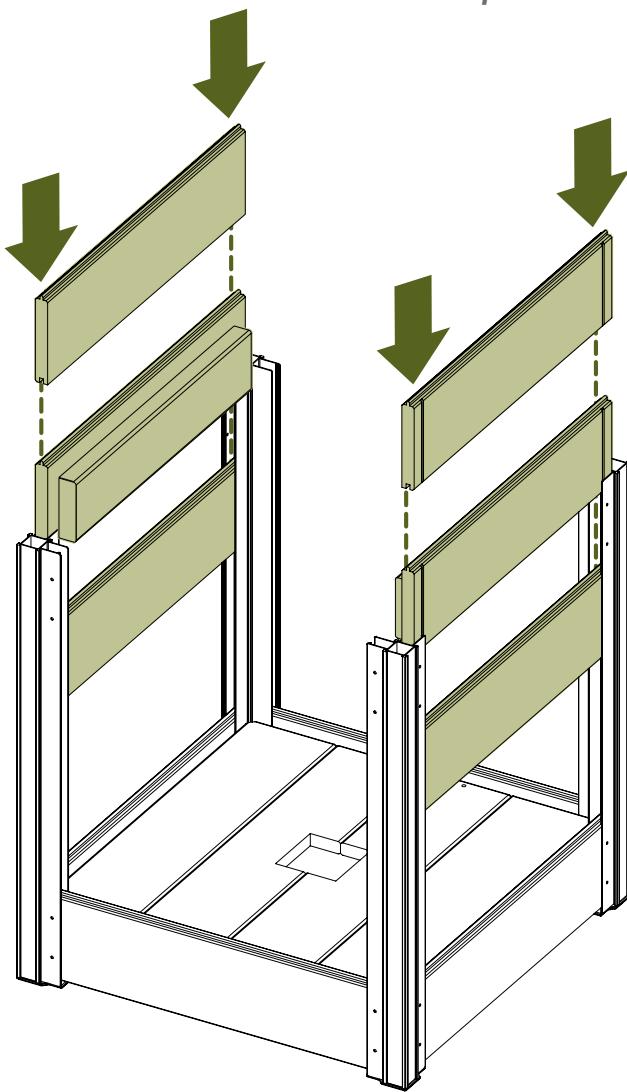


**8**




**E x2**




**F x2**

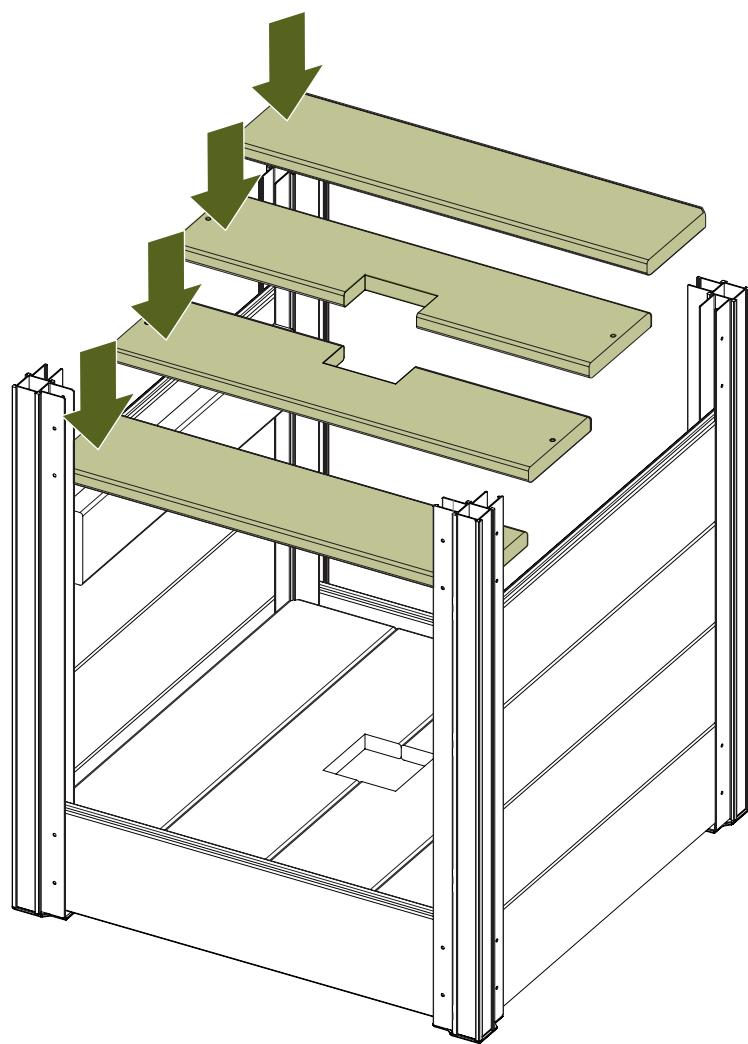

9




**H x1**

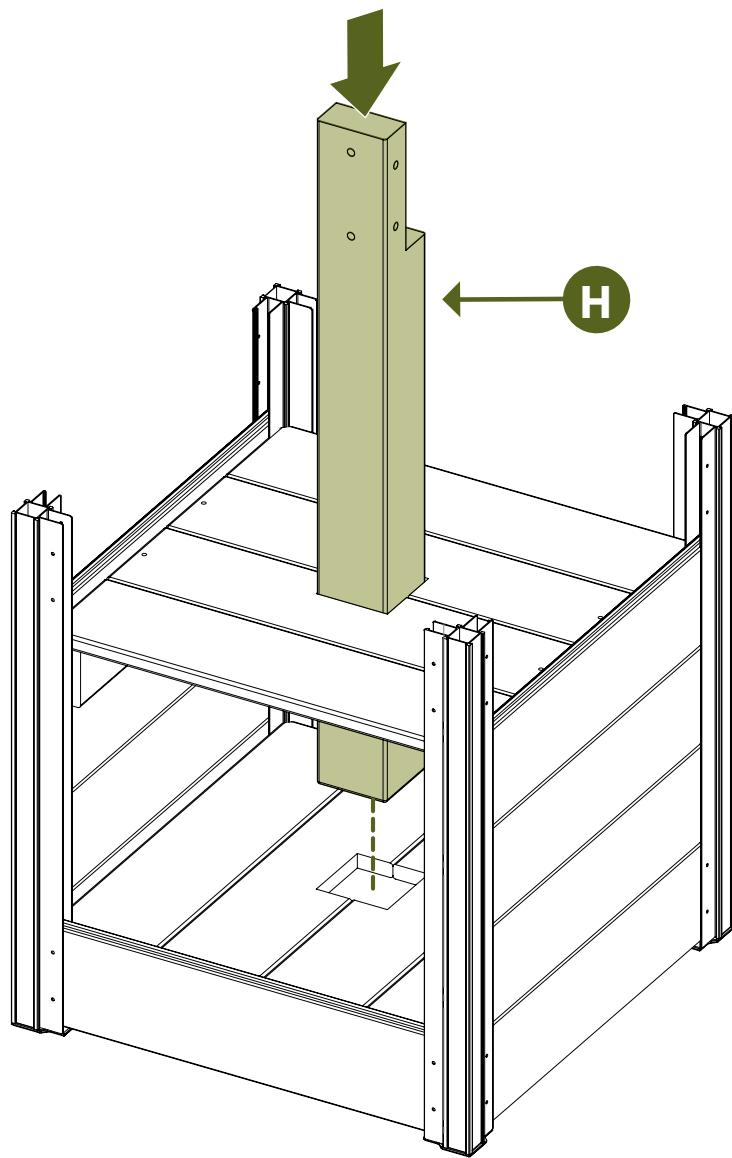

10


 **R x4**

! Ensure that bottom post **(H)** is leveled vertically before placing your screws.

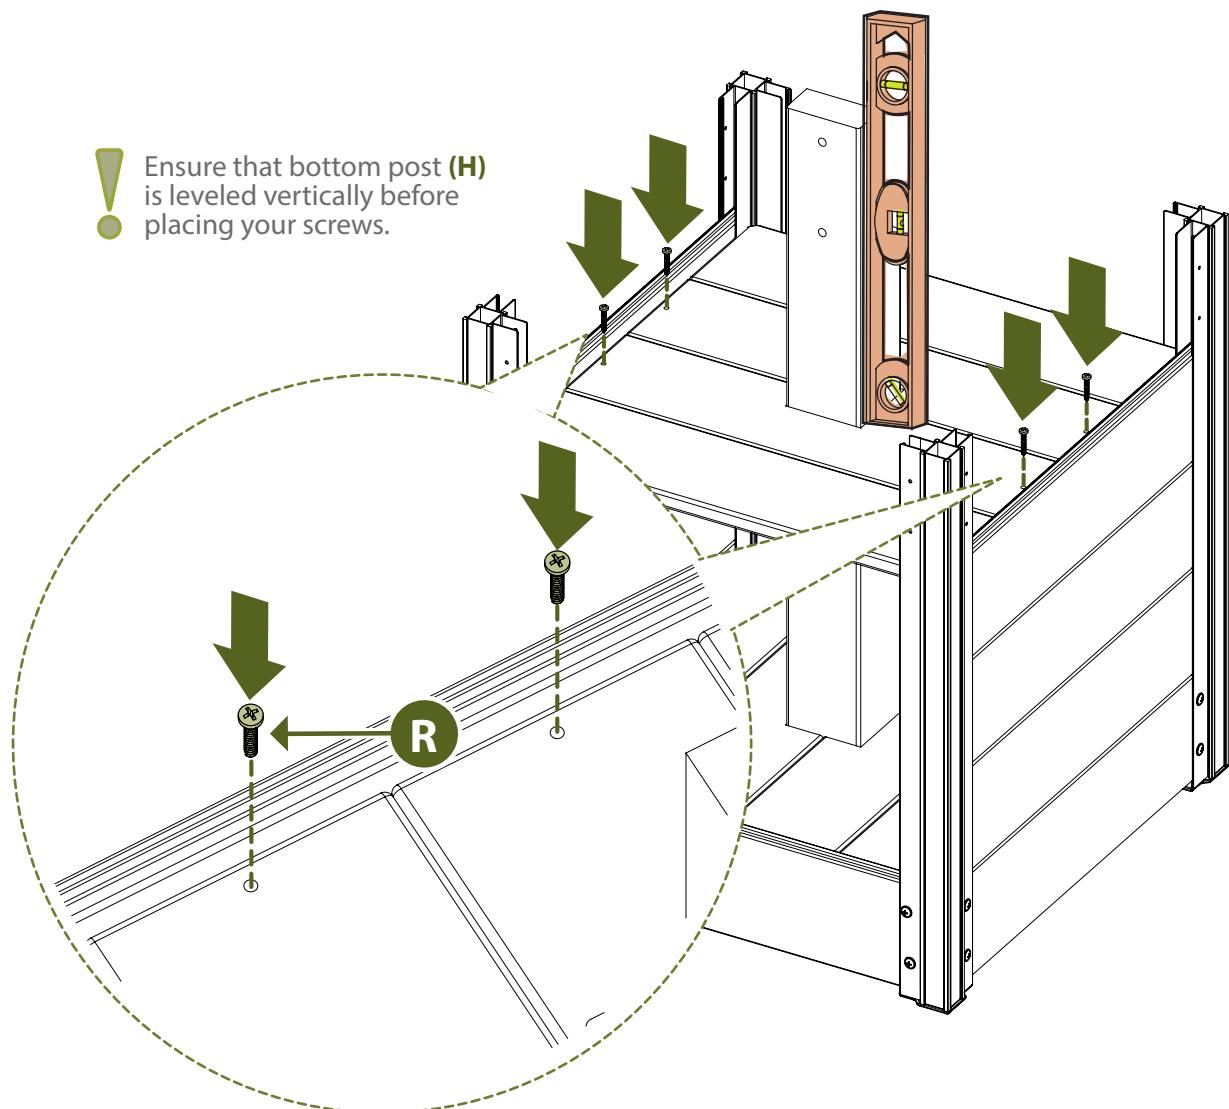


---


(Recommended)  
Temporarily remove your end  
boards for your next step.

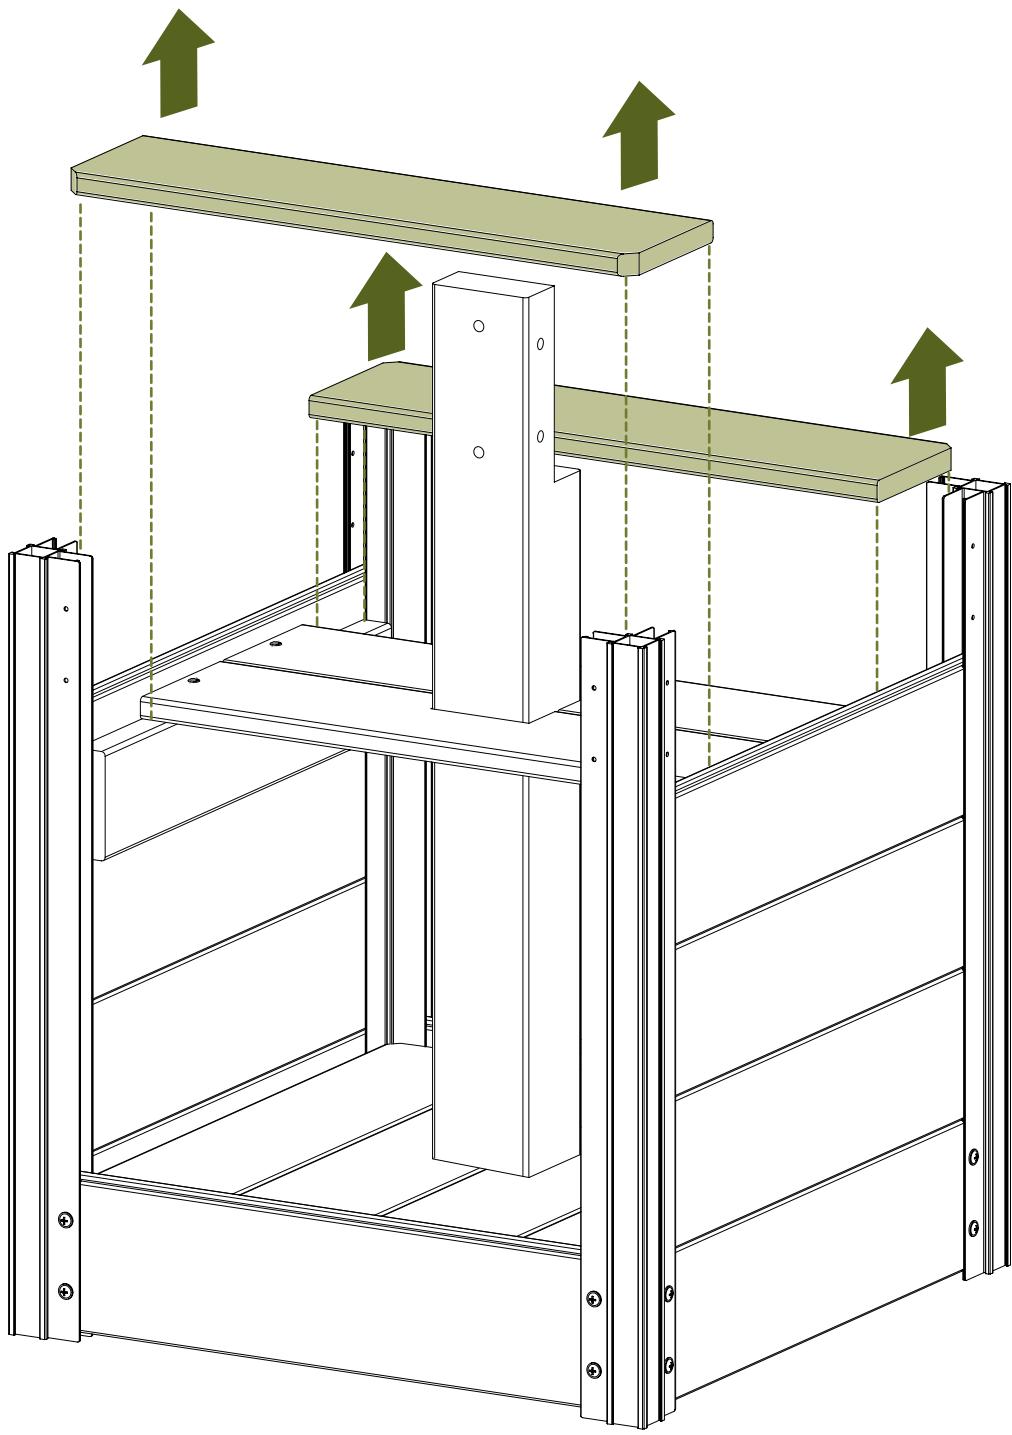


11

 **R x4**

! Ensure that bottom post (**H**) is leveled vertically before placing your screws.

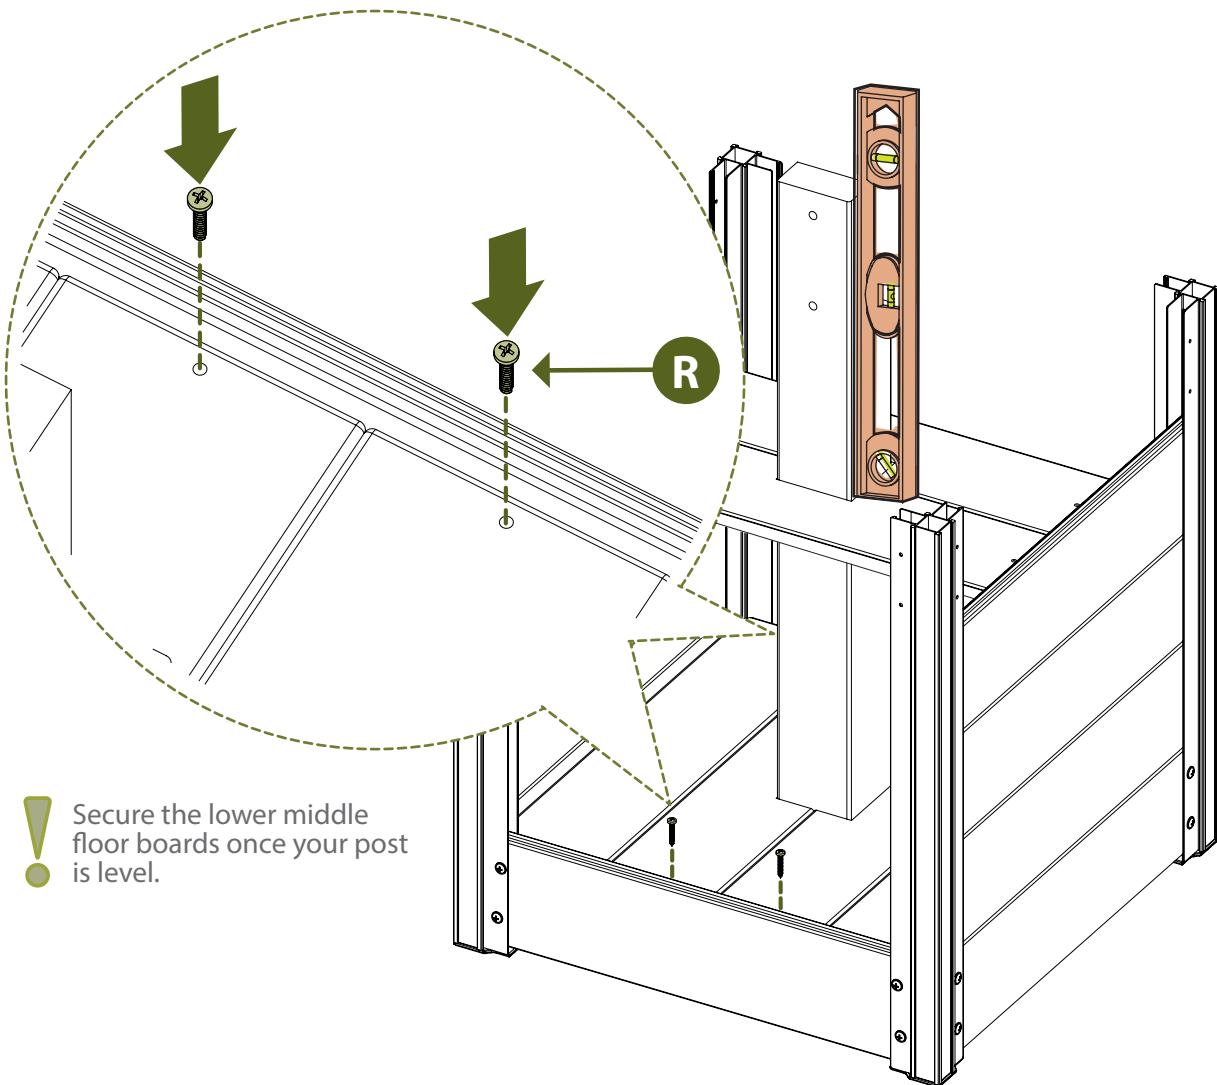


12



**L x2**




**Q x8**

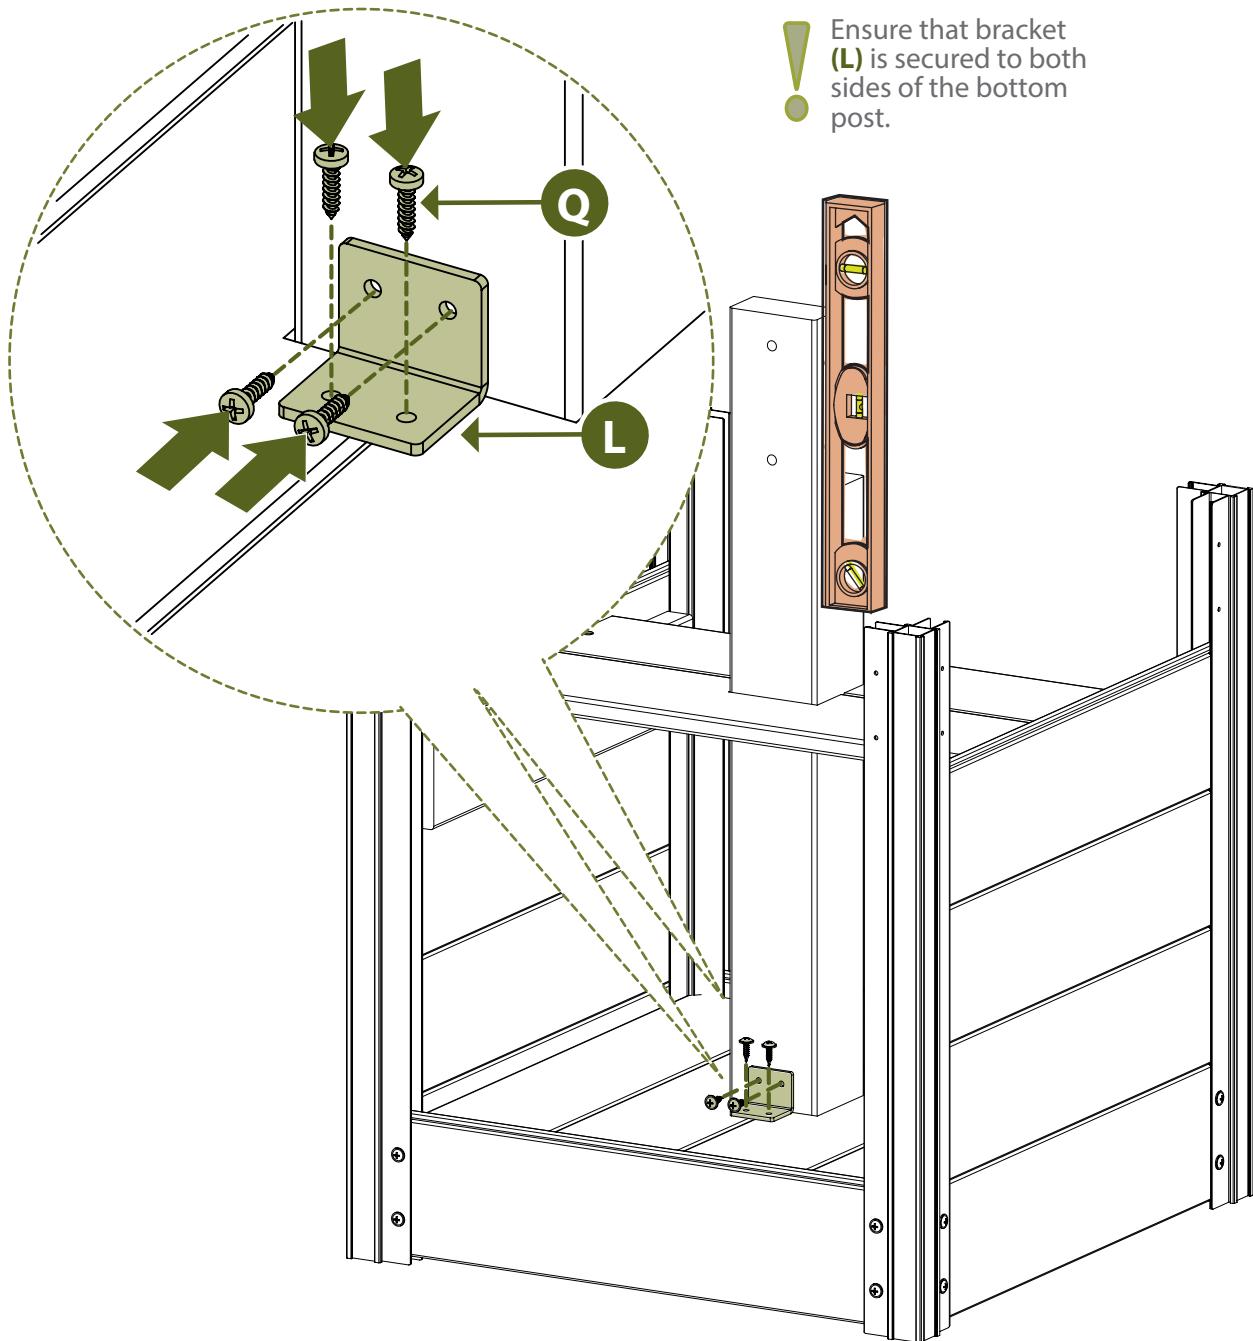



Return the top end boards.

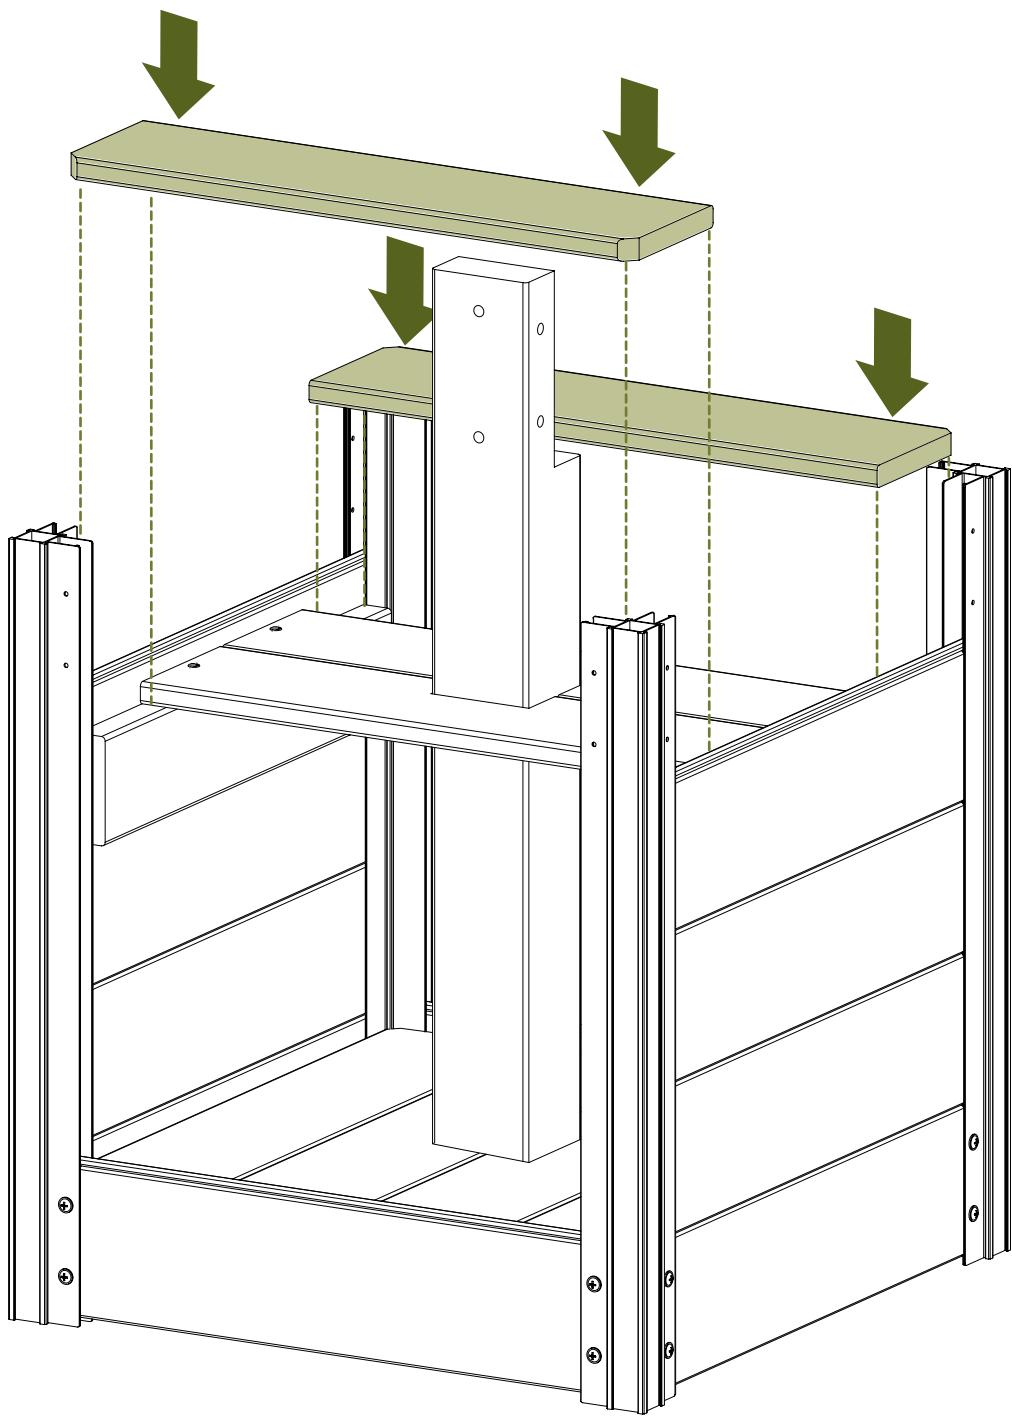

13



**G x1**



**I x1**



**K x1**


**O x2**




**Q x2**



! Hook (K) can be installed anywhere at top of post (I).

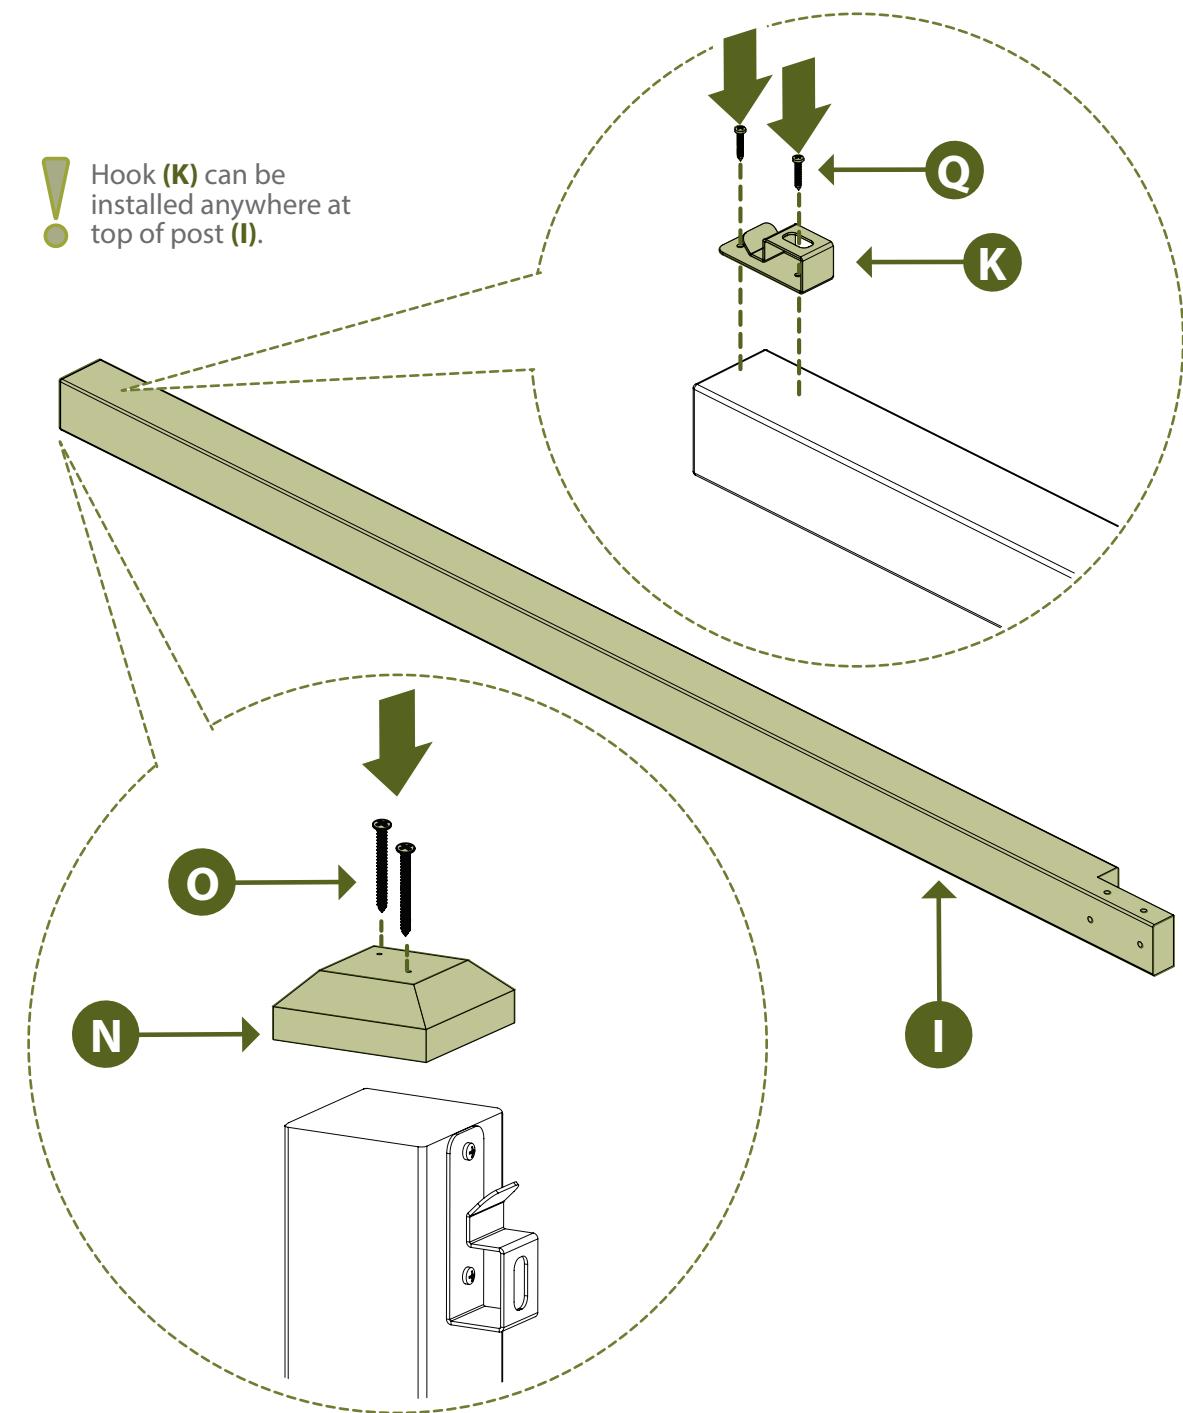


14

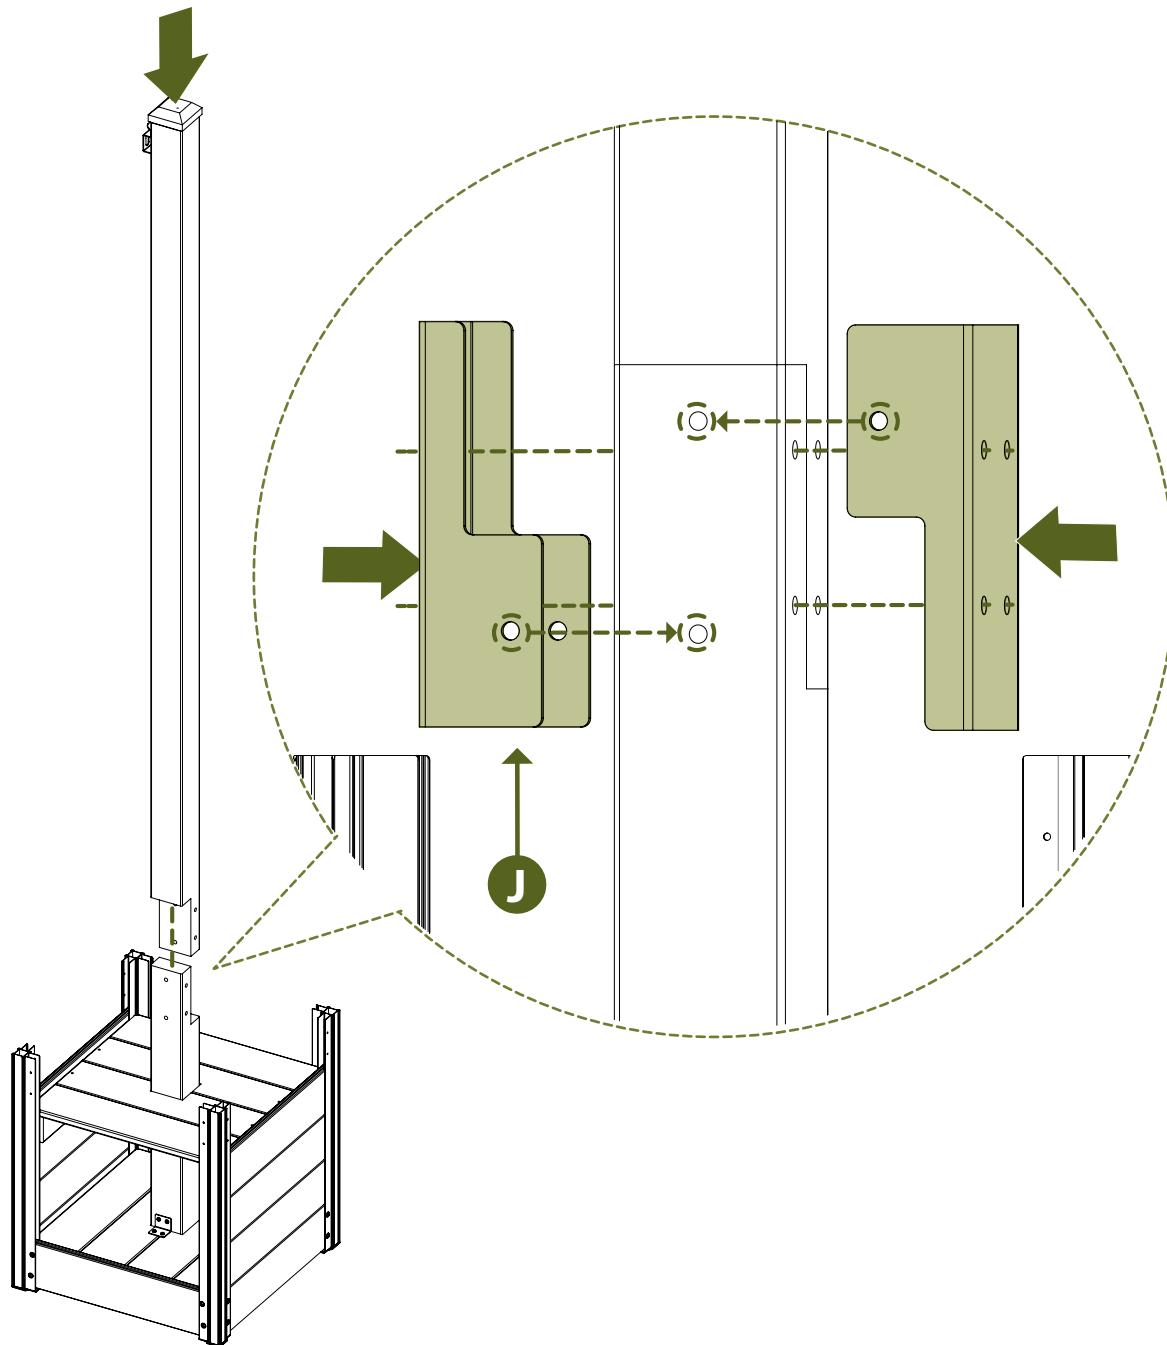


15

— **S x6** ○ **T x6** ○ **U x6** ○ **V x12**  **W x2**

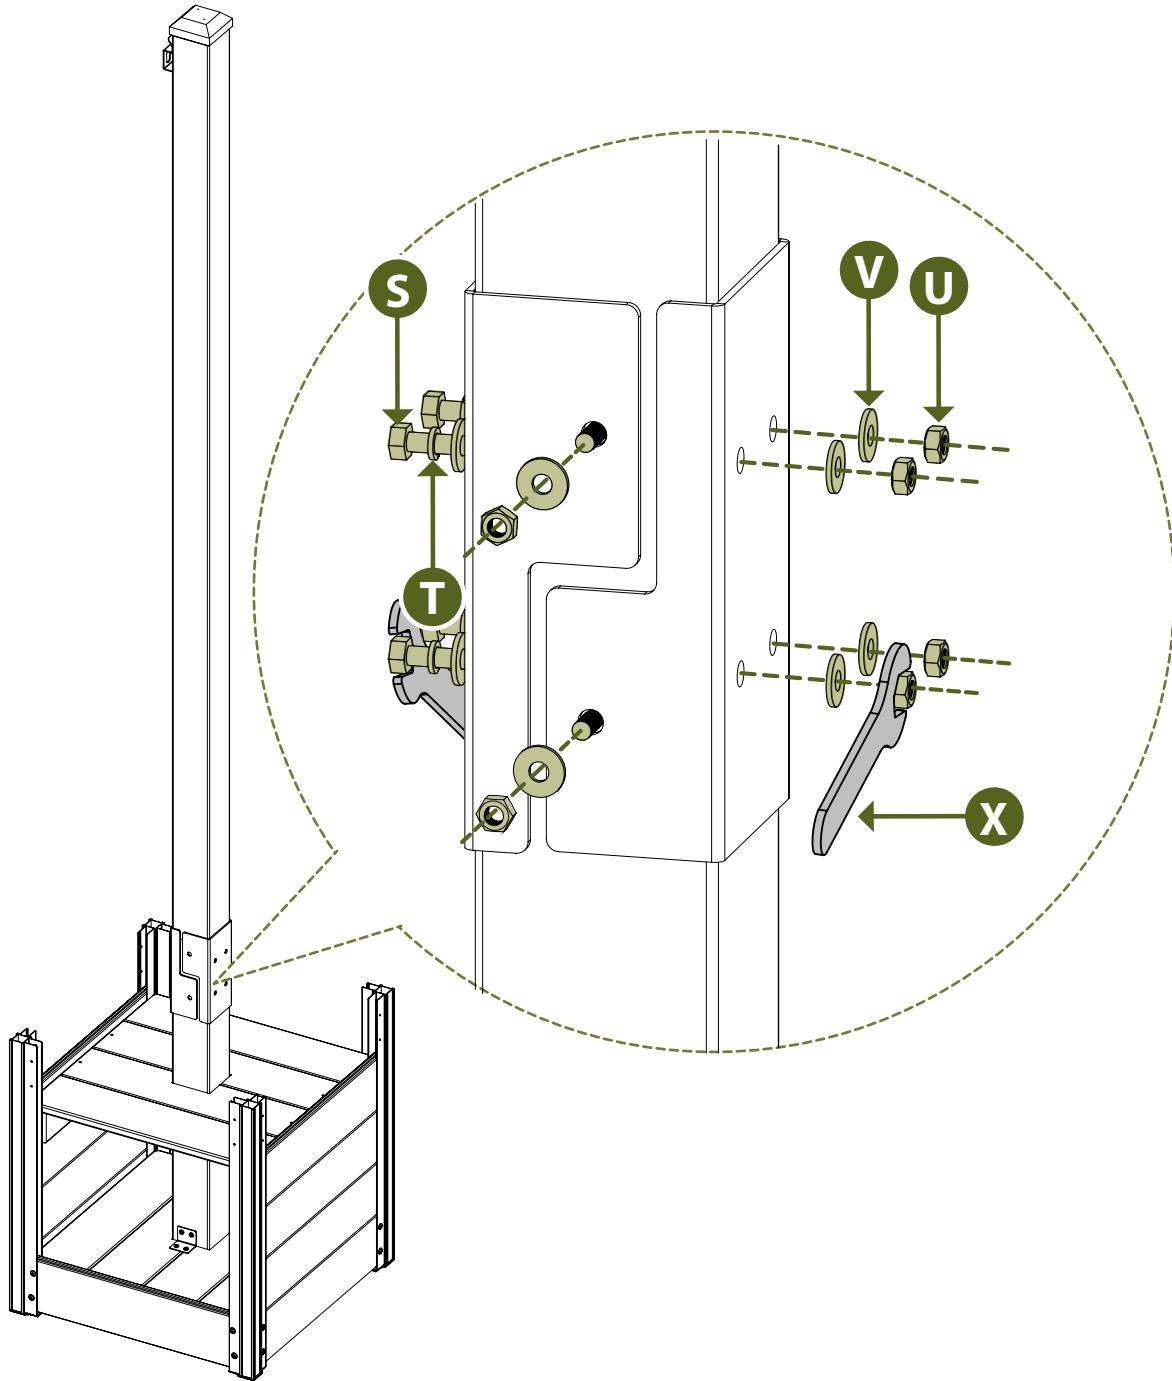


16



L x2

Q x8


! Ensure that top post (I) is leveled vertically before placing your screws.

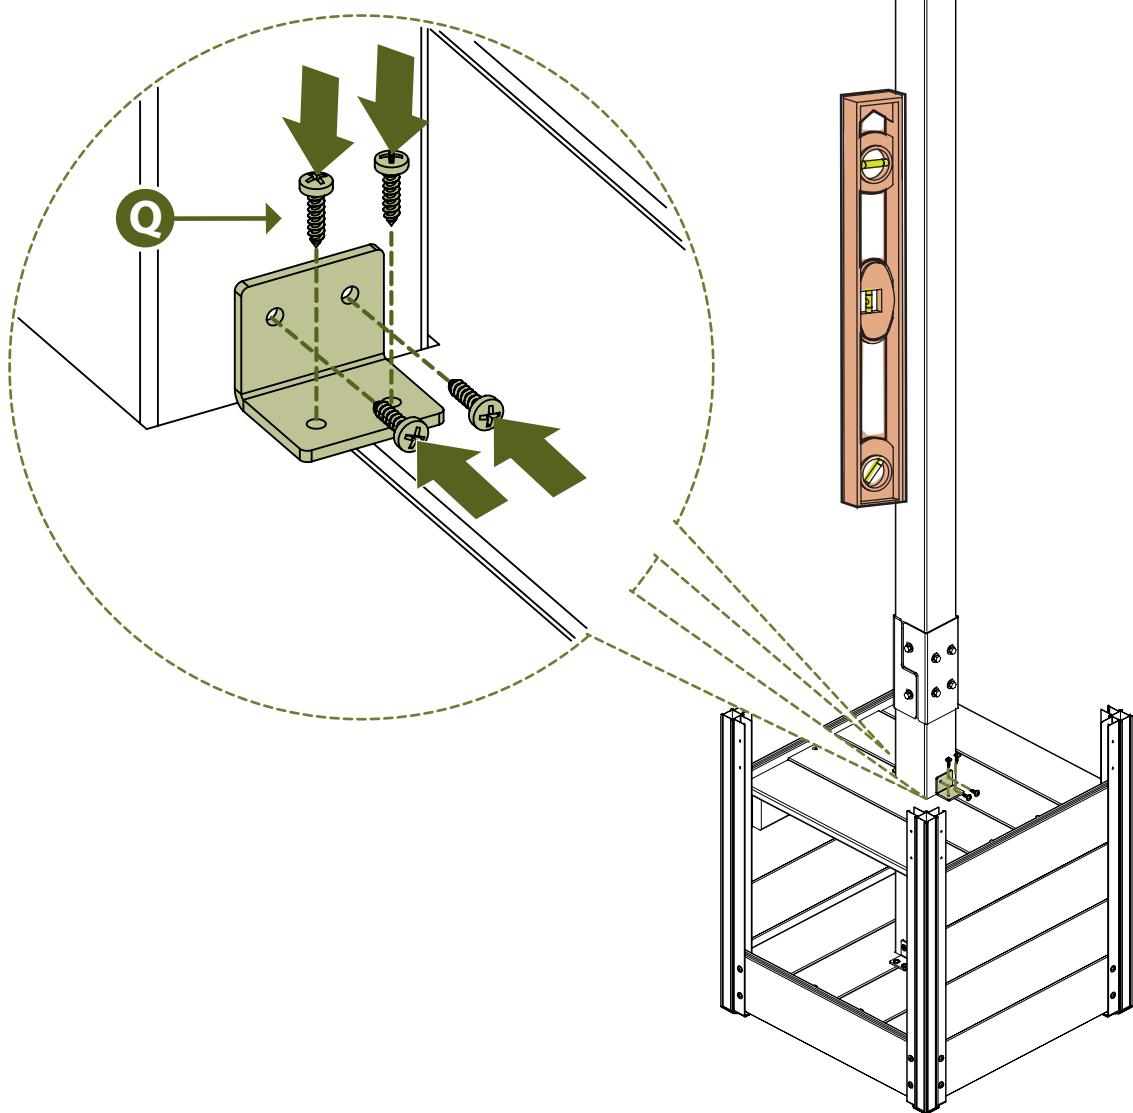


17




B x6

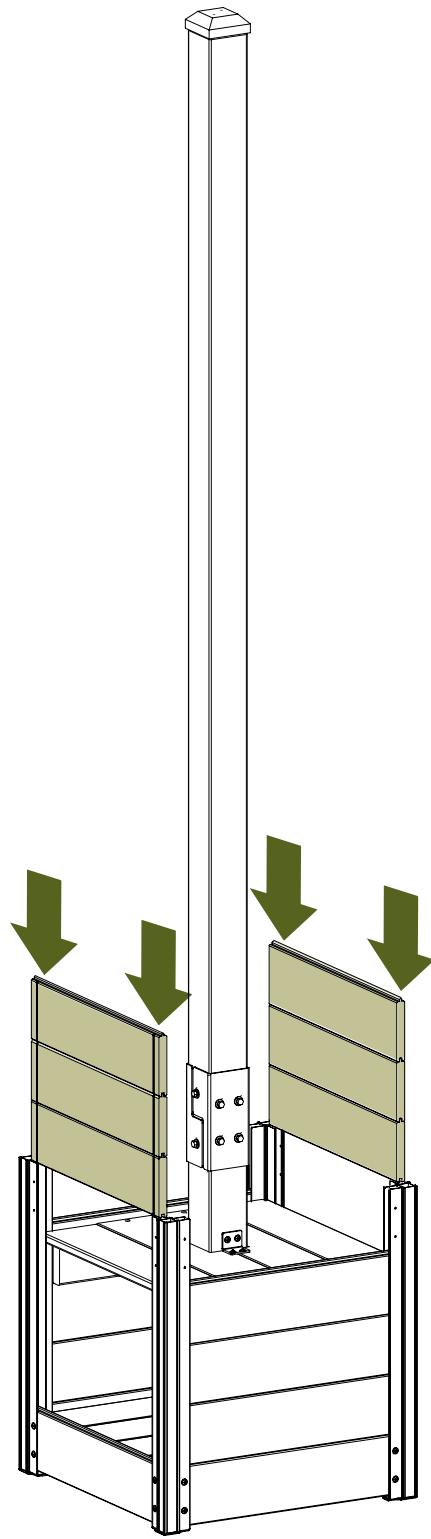

18




**D x4**

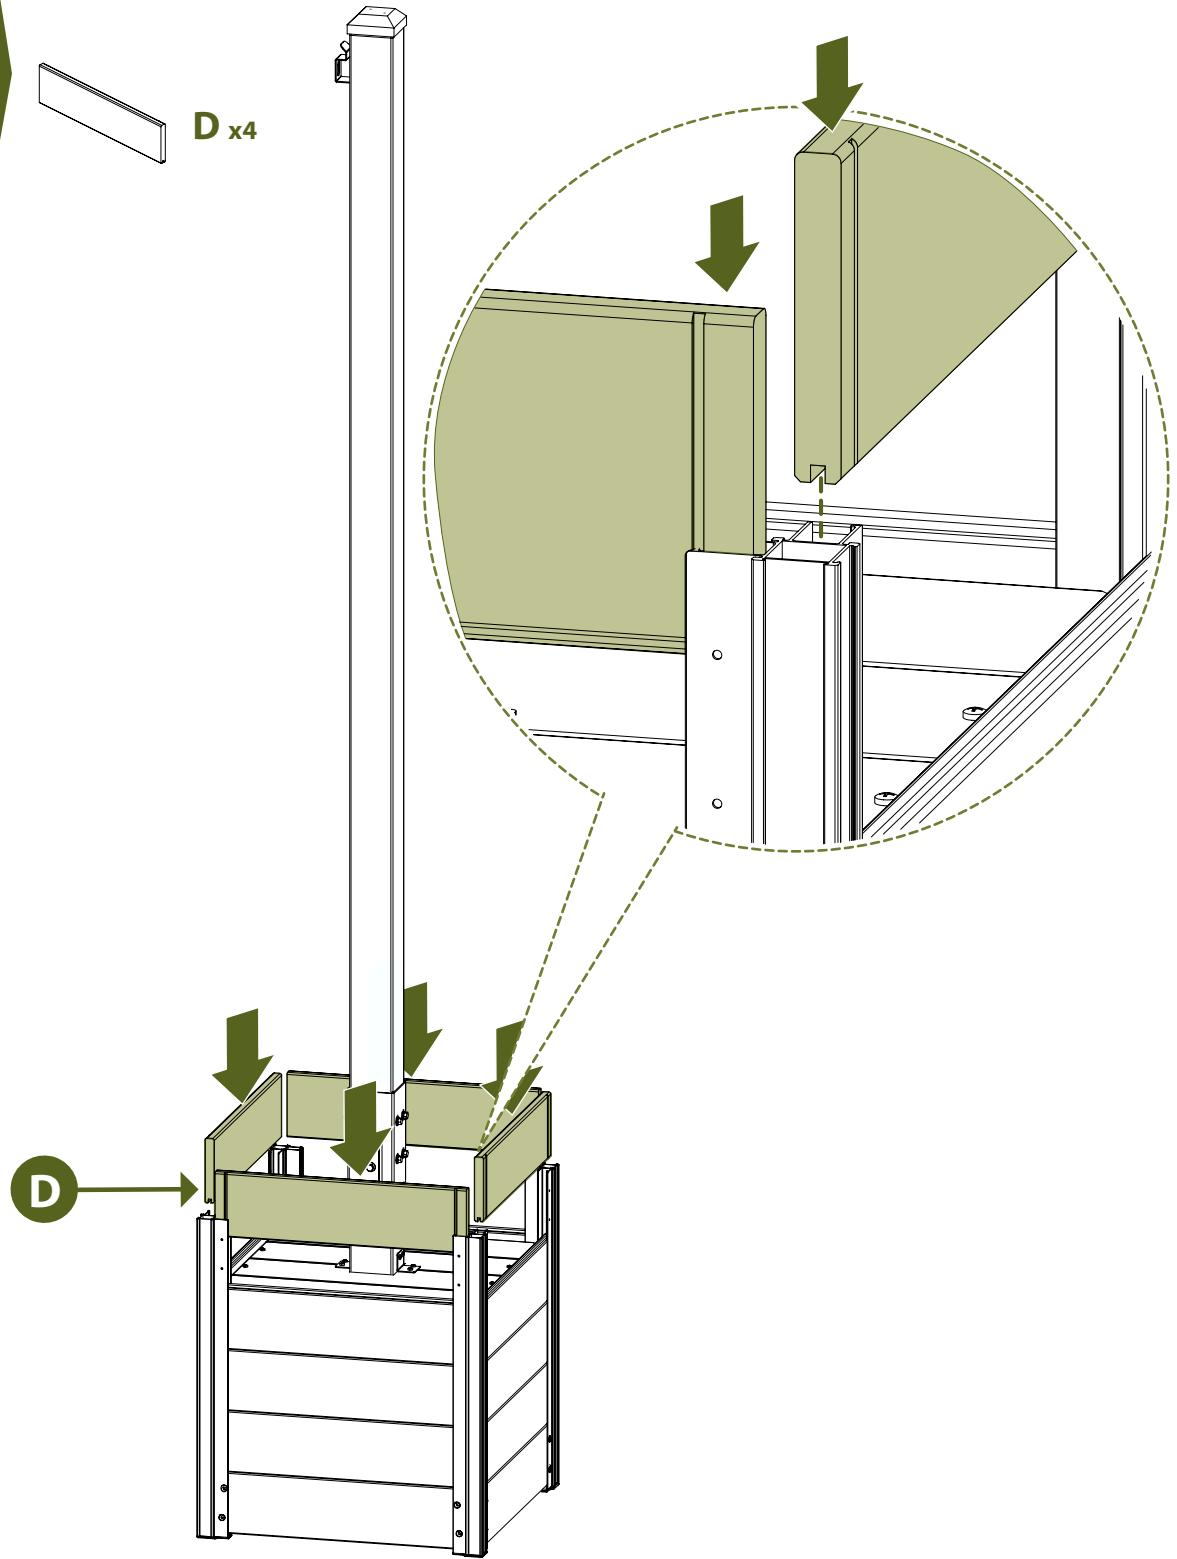

19


 **P x16**

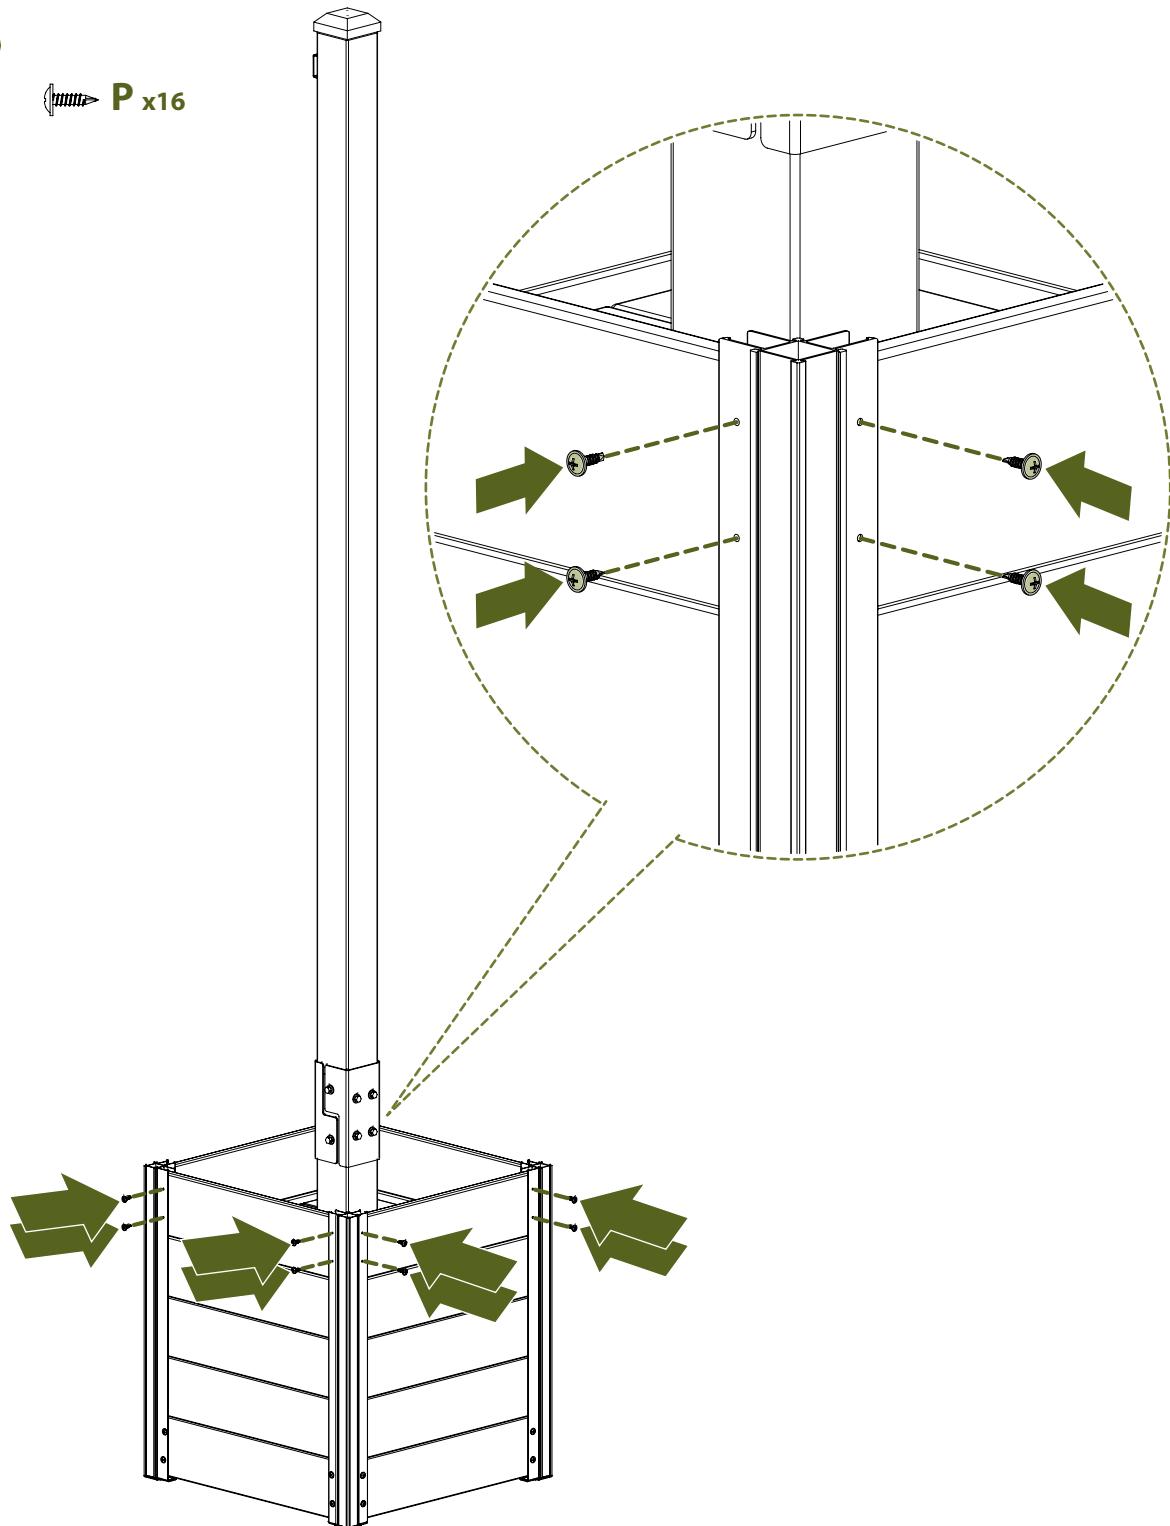



20



M x4

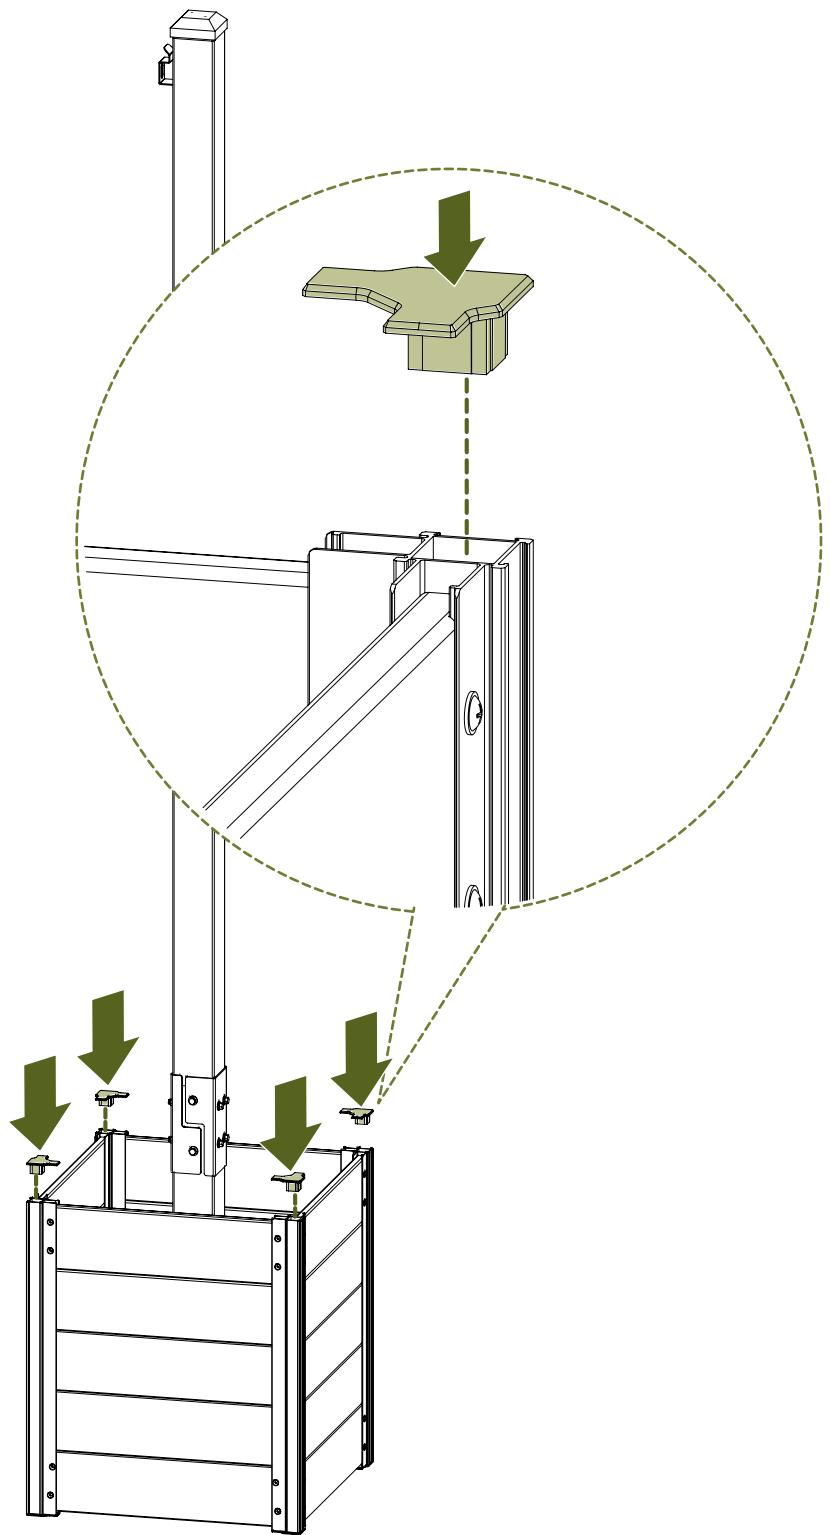

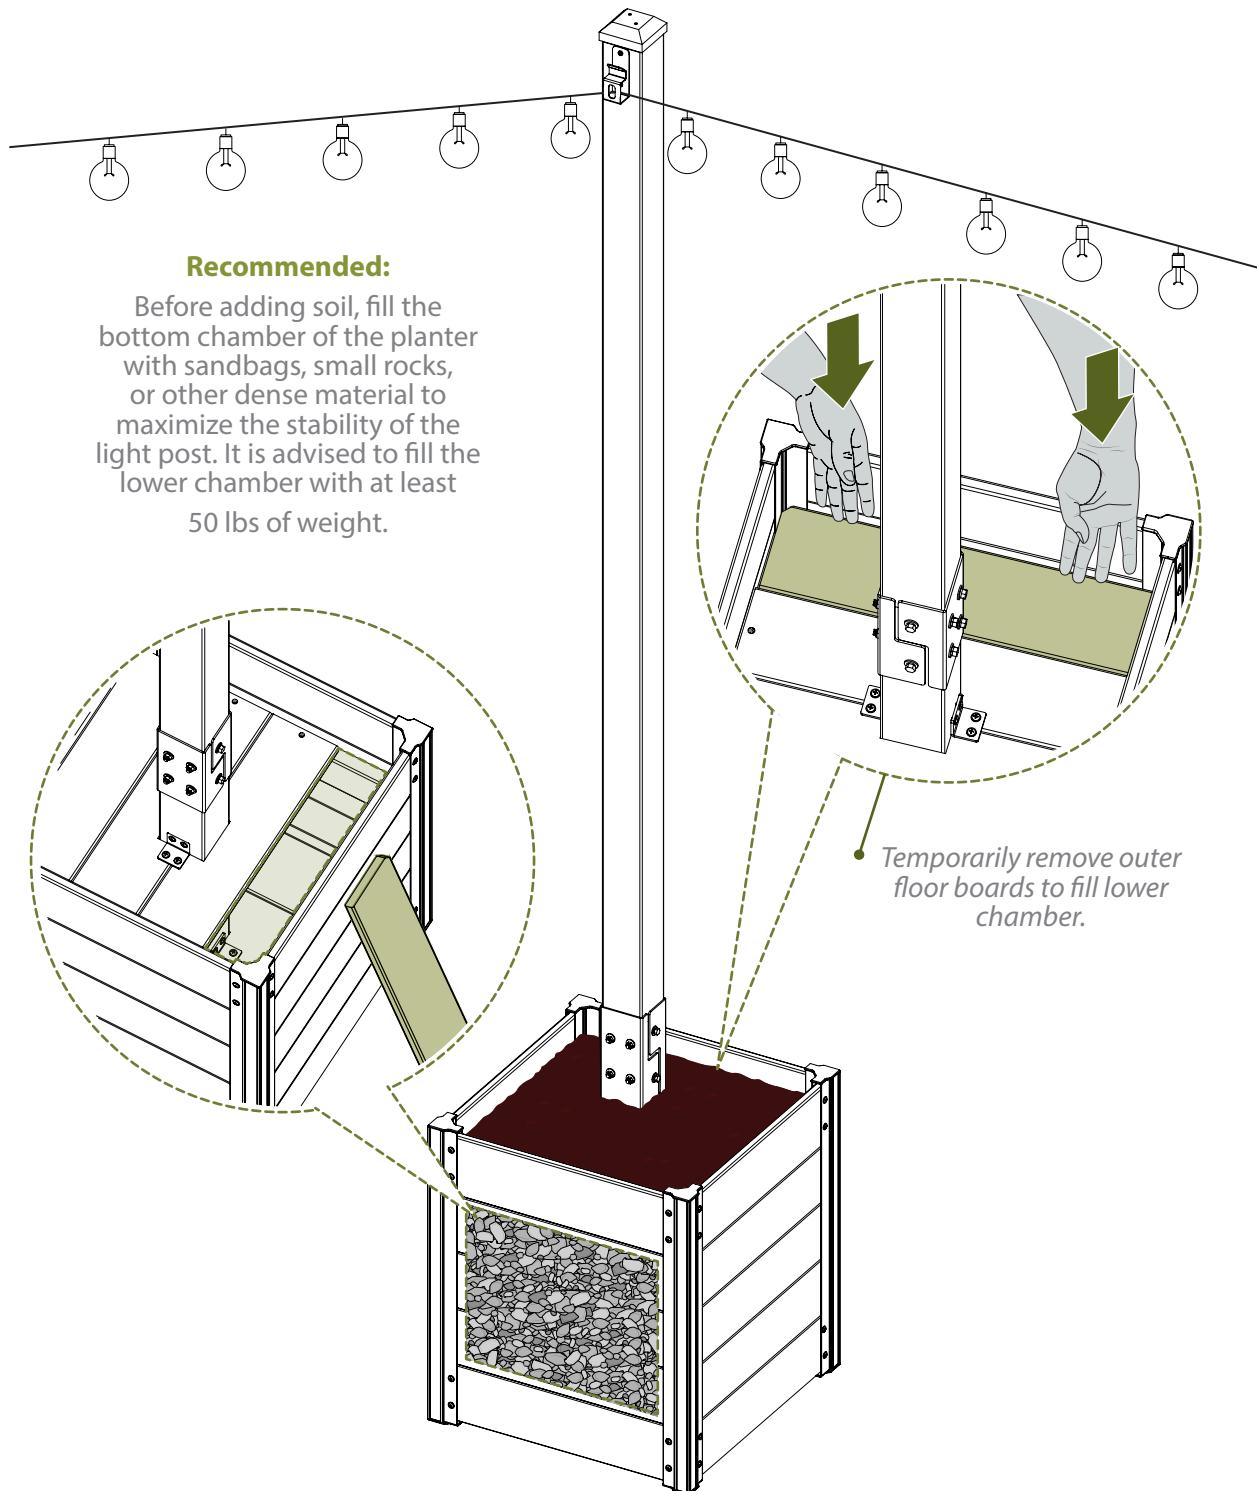

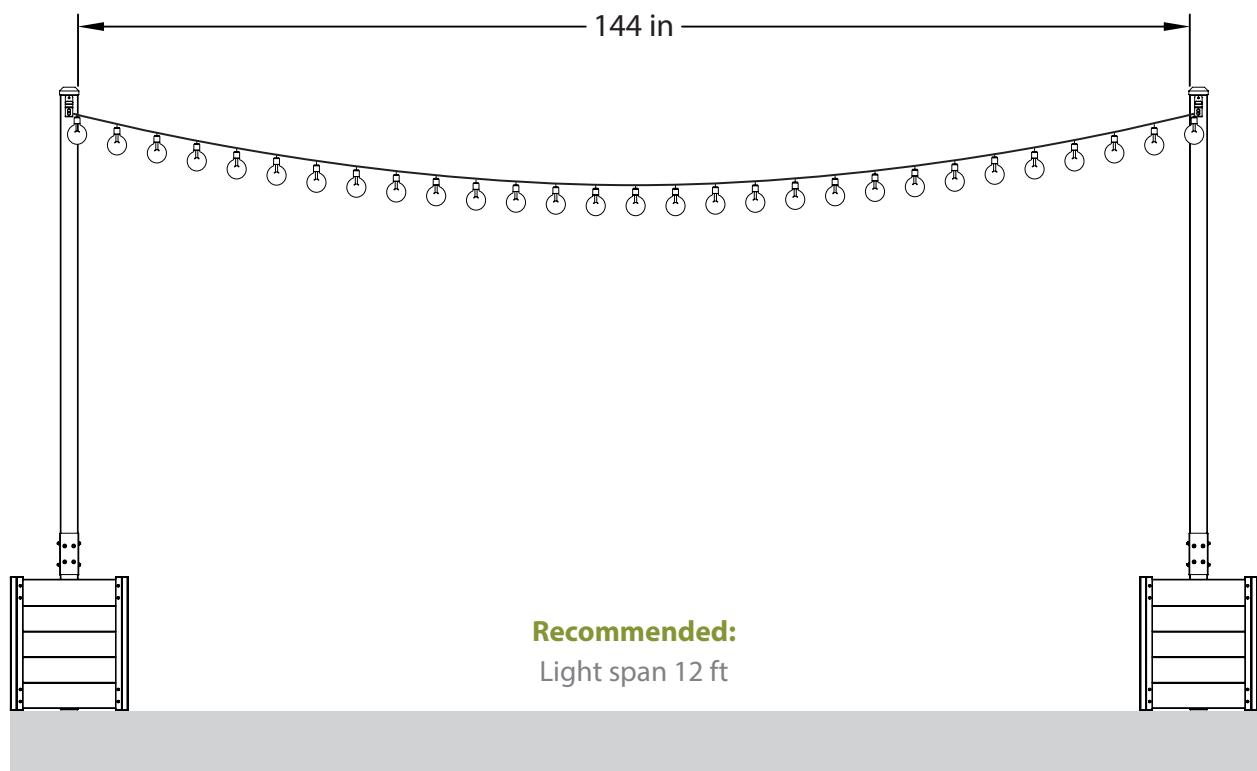



# ZIPPITY

*Easy Does It!*



6935 Reames Rd. Ste. K.  
Charlotte, NC 28216



[support@zippity-outdoor.com](mailto:support@zippity-outdoor.com)



704-892-5222  
877-234-6196



[WWW.ZIPPITY-OUTDOOR.COM](http://WWW.ZIPPITY-OUTDOOR.COM)

