



ASSEMBLY INSTRUCTIONS

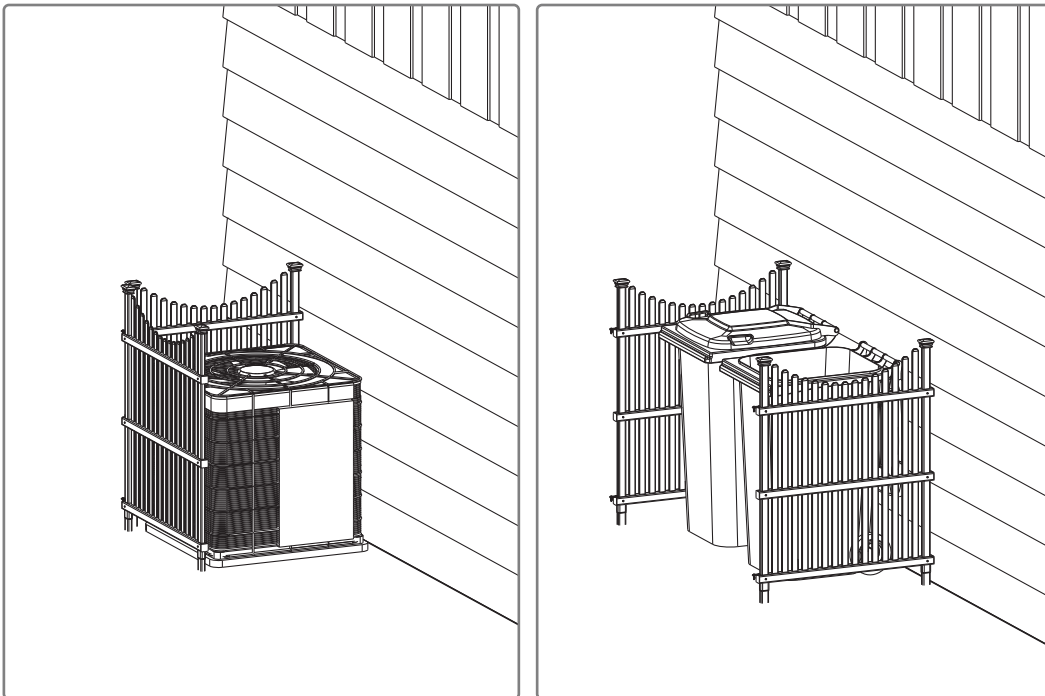

Huntersville Vinyl Screen Kit 2 Pack

(36"W x 48"H)

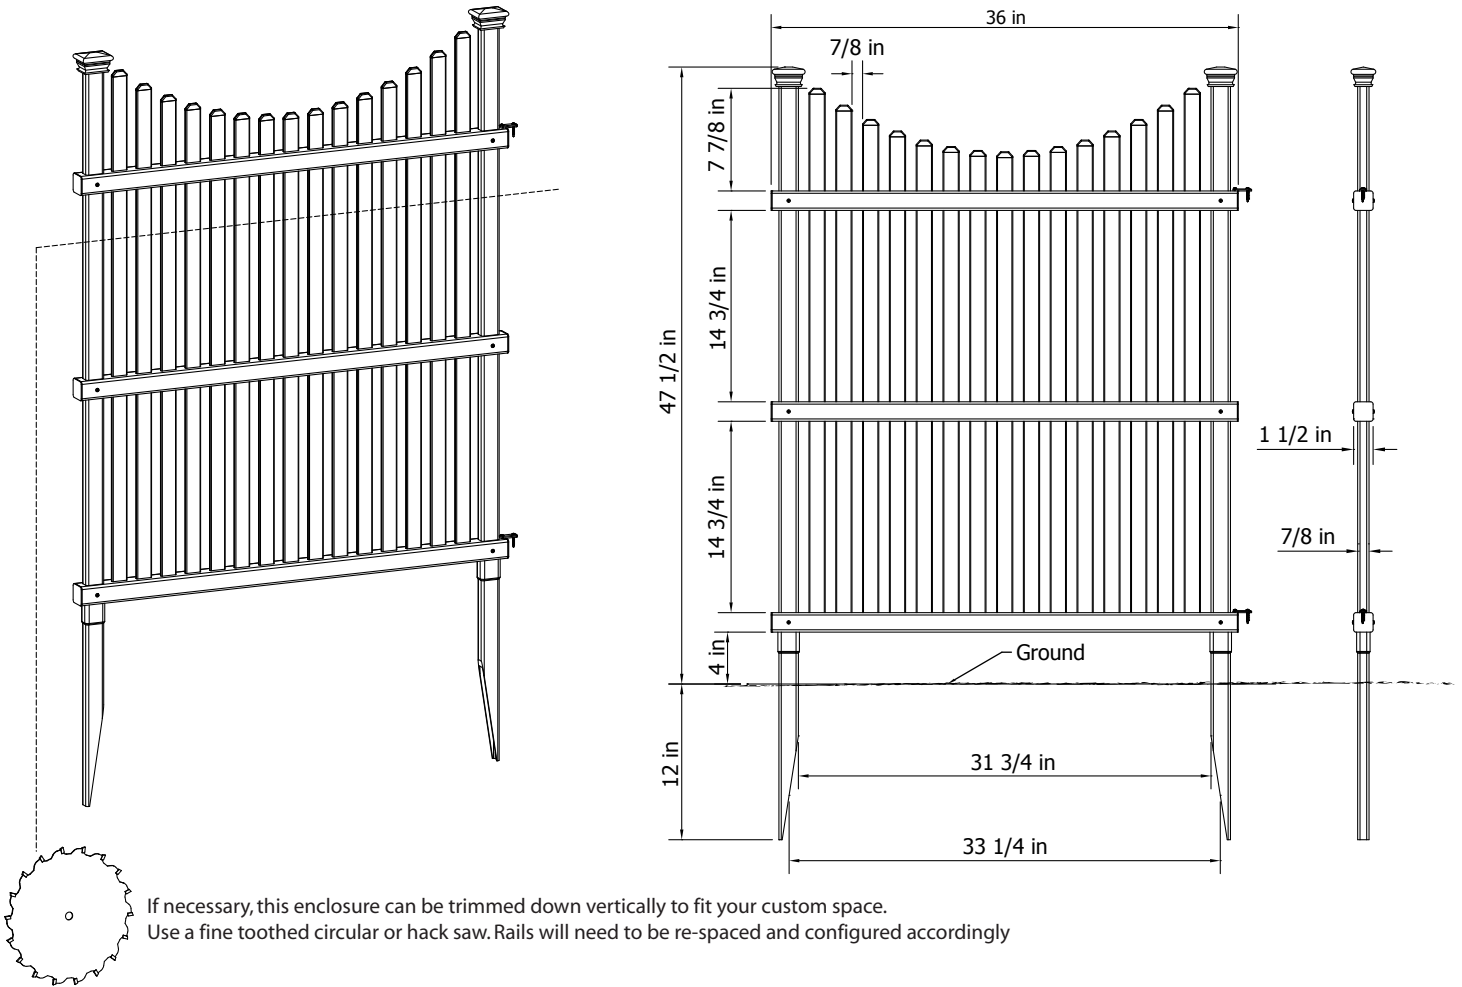

GENERAL INFORMATION



ZIPPITY
Easy Does It!

Please read through before starting assembly.

IMPORTANT: CHECK THE INSIDE OF THE LARGER PIECES IN YOUR BOX FOR OTHER MATERIALS PACKED INSIDE.

Check Box for These Contents

In the event of missing or defective parts please call our customer service department at **1 877 234 6196** (Mon. to Fri. 8:00 AM to 4:00 PM EST).

1. Post Caps (4)
2. Posts (4) - 7/8" x 1 1/2" x 44 1/2"
3. Top And Middle Rails (4) - 1 1/2" x 1 1/2" x 36"
4. Picket #1 (4) - 1/4" x 1 1/4" x 41 13/16"
Picket #2 (4) - 1/4" x 1 1/4" x 40 9/16"
Picket #3 (4) - 1/4" x 1 1/4" x 39 7/16"
Picket #4 (4) - 1/4" x 1 1/4" x 38 9/16"
Picket #5 (4) - 1/4" x 1 1/4" x 37 7/8"
Picket #6 (4) - 1/4" x 1 1/4" x 37 3/8"
Picket #7 (4) - 1/4" x 1 1/4" x 37 1/16"
Picket #8 (2) - 1/4" x 1 1/4" x 36 15/16"
5. Rail End Caps (6) (3 are installed, 3 are loose)
6. Bottom Rails (2) - 1 1/2" x 1 1/2" x 36"
7. Post Anchors (4)
8. Joiner Clips (4)
9. 3/4" Self-Auguring Stainless Steel Screw (24) (**Bag A**)
10. 1" Self-Tapping Stainless Steel Screw (8) (**Bag B**)



8




9



10

Not to Scale

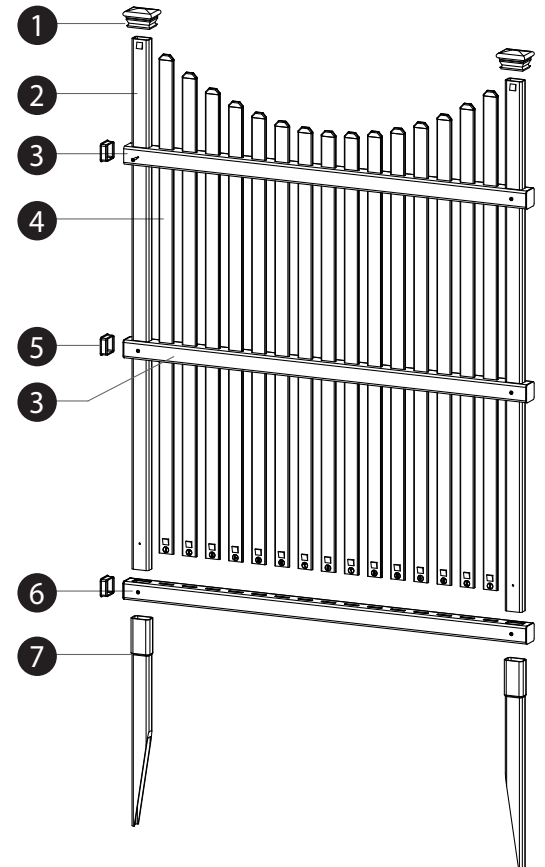


Tools You Will Need

- Cordless Drill
- Level
- Hammer

General Information

- **Read Instructions through carefully before beginning assembly.**
- When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- We recommend an area approx 5'x 8' for unobstructed assembling.
- You should not need to use excessive force when assembling components.

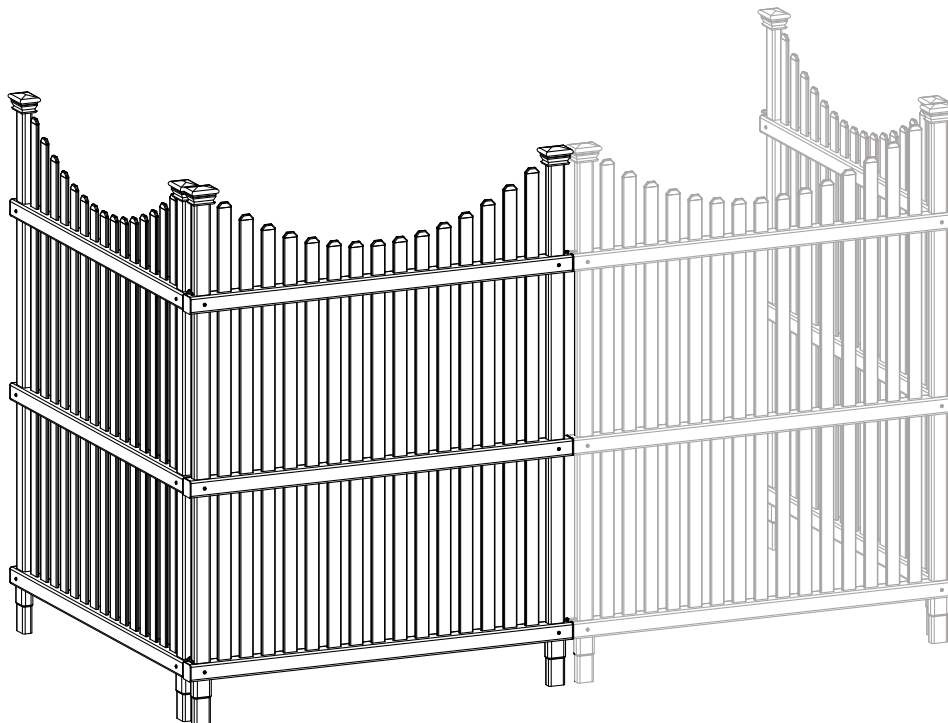

STEP ONE



ZIPPITY
Easy Does It!

1

Identify the top/middle and bottom rails
(Bottom rails' holes are on only one side for pickets)
Pressure fit the three loose rail end caps into the ends of each rail.

2




Position the two posts as illustrated and slide the top and middle rails down over the posts - towards the locking tabs - until the pre-drilled holes in rails are aligned with the the pre-drilled holes in both posts.

Tip!

Shine an LED light from smart phone or flashlight down the end of the posts to help identify alignment of pre-drilled holes if necessary.

3

Screw the top and middle rails into both sides of both posts using 8 of the 3/4" screws provided.

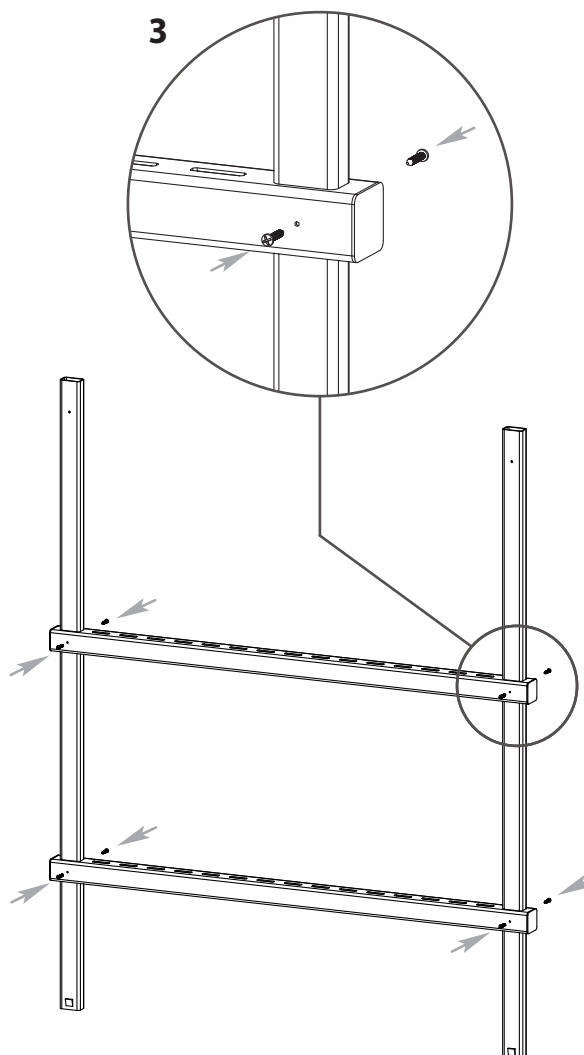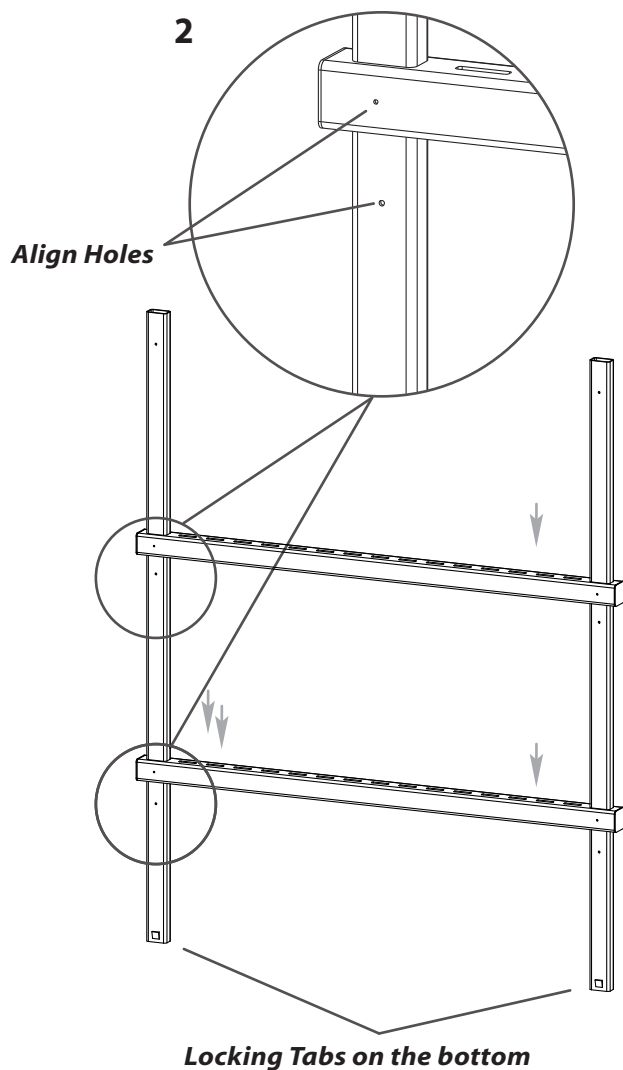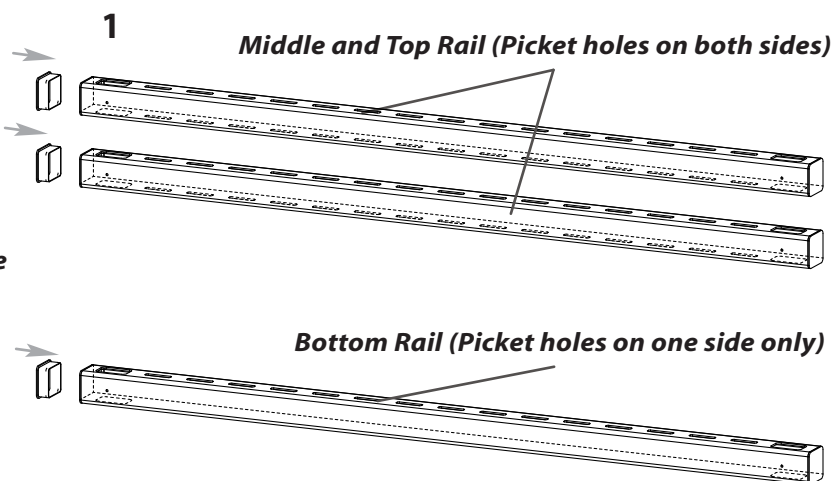

NOTE: Screen Being Displayed Upside Down In Image

STEP TWO


1

Align the pre-drilled holes on the rail and posts, then slide the post anchors all the way up through the enlarged holes on the bottom of the rail until they bottom out against the posts and fasten together with a total of four 3/4" screws.


2

One by one, guide the numbered pickets down through the three horizontal rails. Push down into the horizontal rail until the pickets lock into place.

1

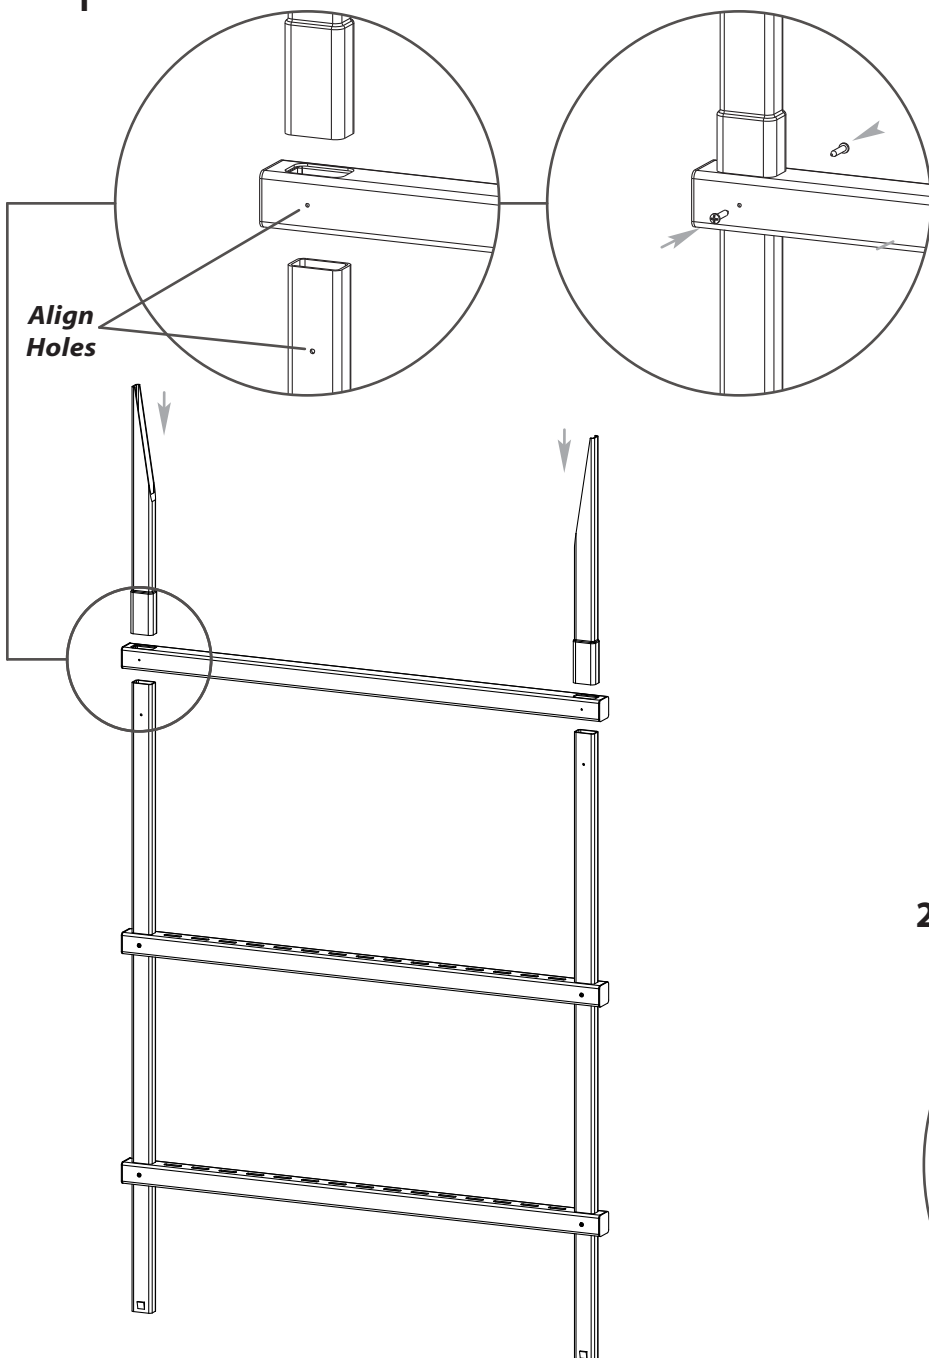

2

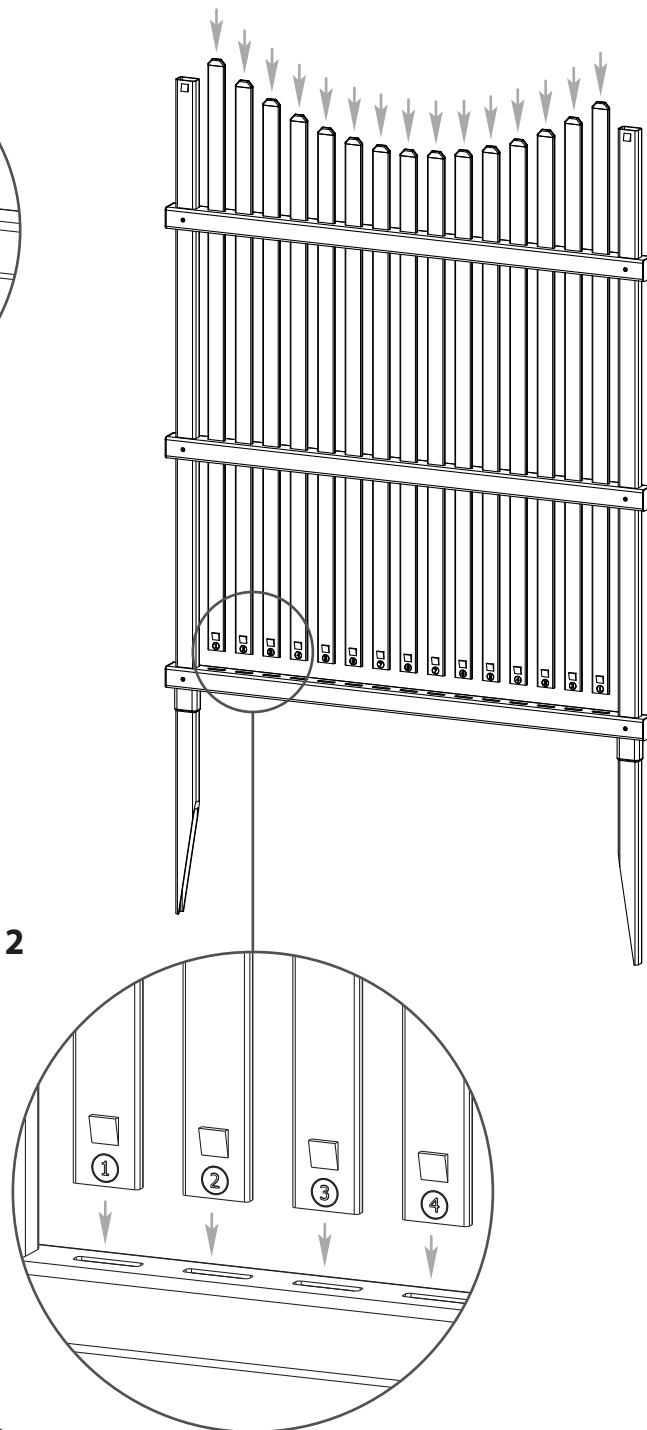

NOTE: Screen Being Displayed Upside Down In Image

Pickets 1, 2, 3, etc...

STEP THREE

Install Screen into Ground

1





Move the screen to its final location and identify the location of posts.

2

Attempt to push the unit into the ground as illustrated

Optionally:

1. If your ground is too hard, loosen the top 6" or 7" of the ground with a claw hammer as illustrated.
2. Add water to loosened soil
3. Use a block of wood to protect the top of post and gently hammer the post into the ground.

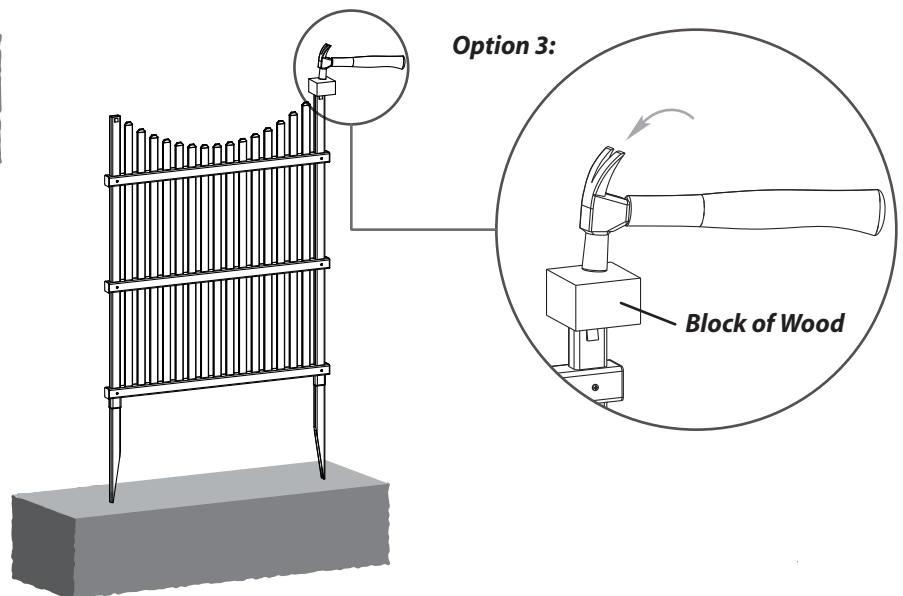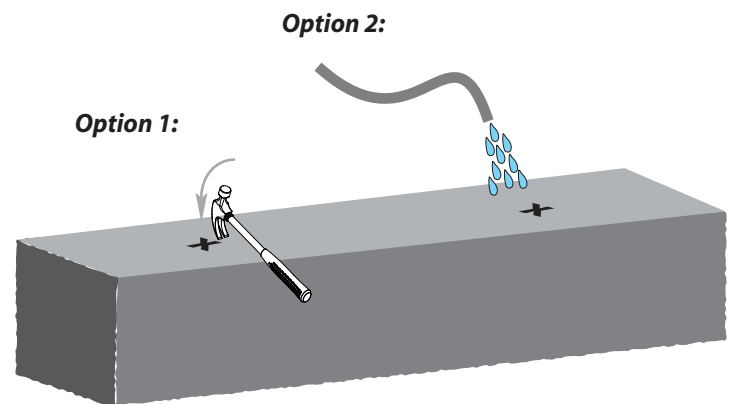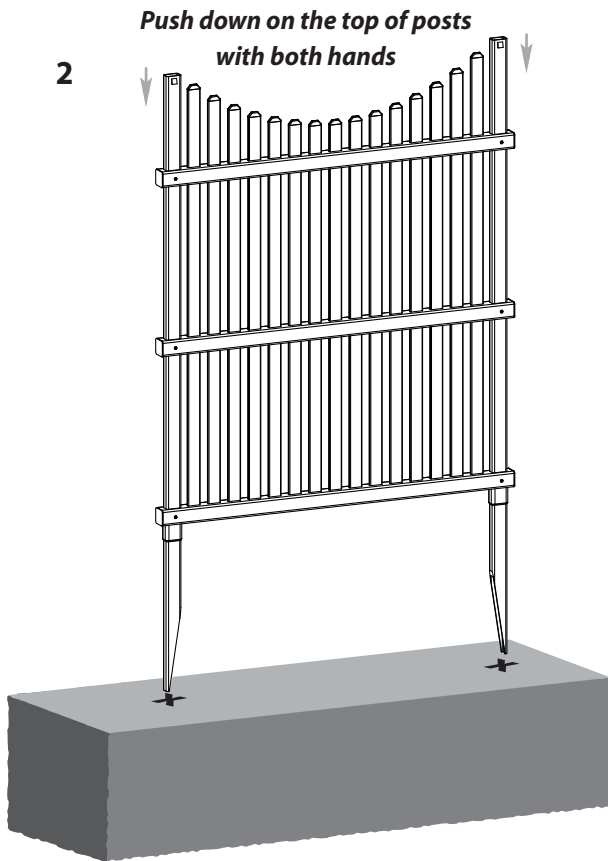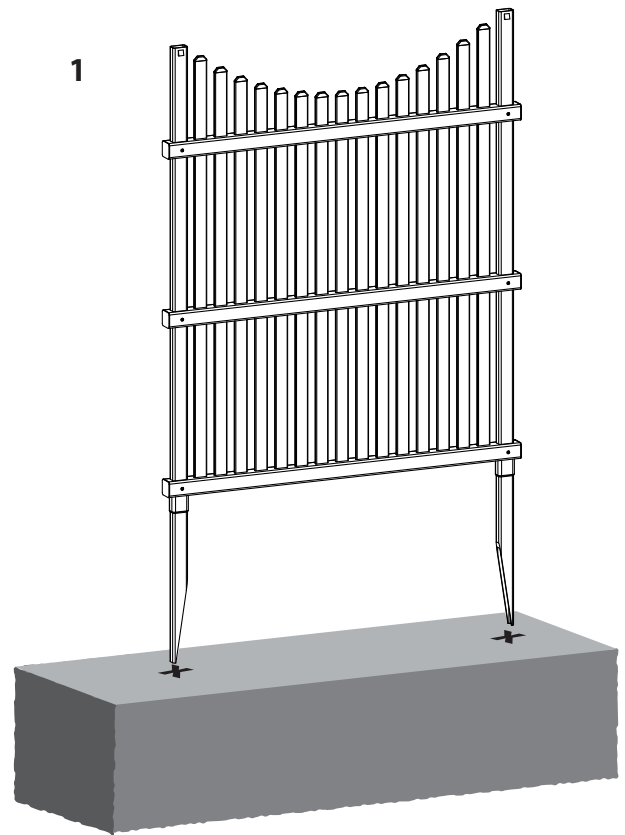

STEP THREE


Install Screen into Ground (Continued)

3

Level the screen as necessary and backfill excavated dirt and tamp as necessary.




ZIPPITY
Easy Does It!

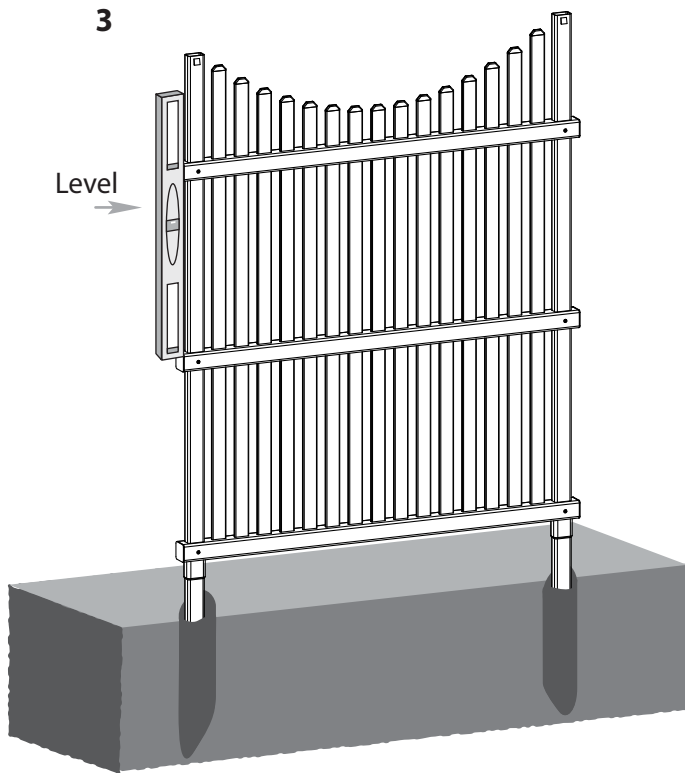

If your ground is really hard, you may need to dig a hole large enough to accommodate one post from each panel into the same hole - Approximately 8" in diameter and 10" deep.

Backfill and compact the dirt.

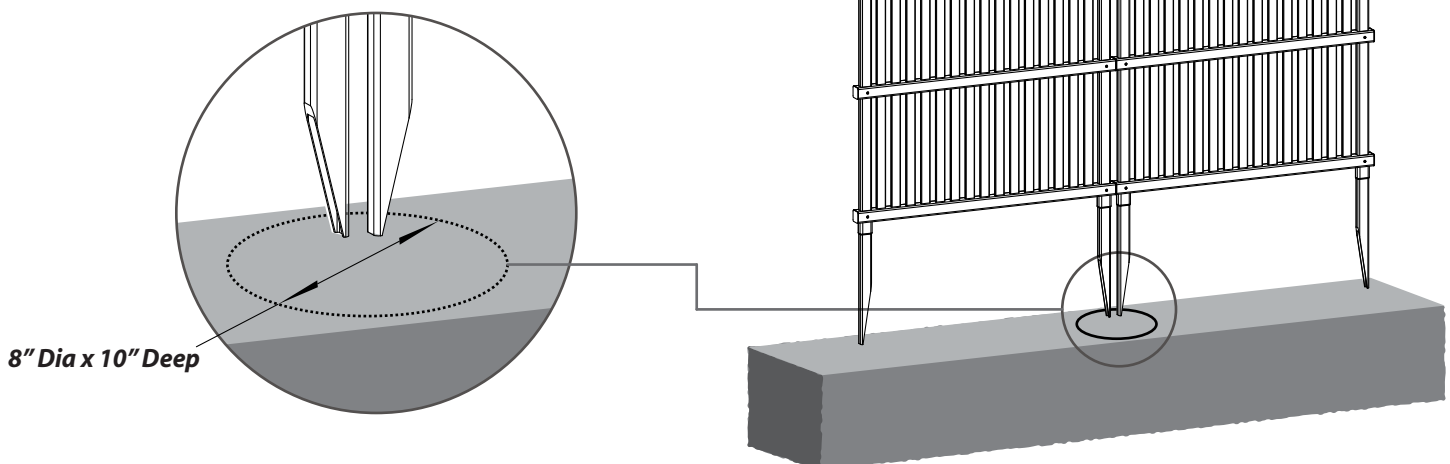

STEP FOUR


Fasten Joiner Clips

1



Fasten screens together by using joiner clips as illustrated.

2





Fasten the opposite end of the joiner clip as illustrated.

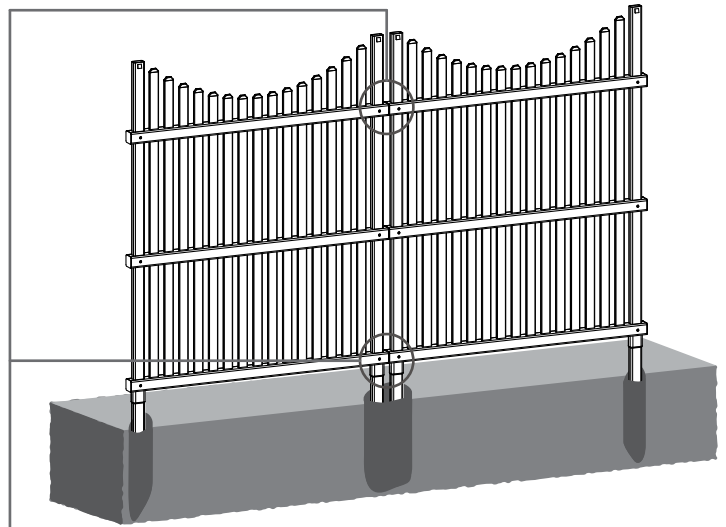



1

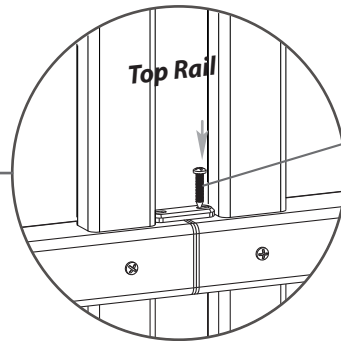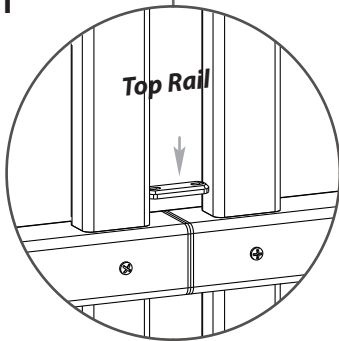


2

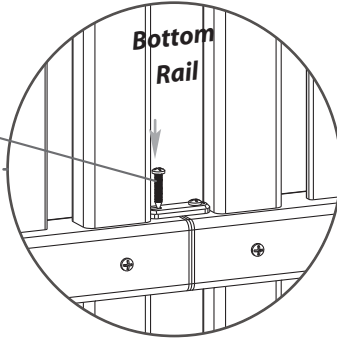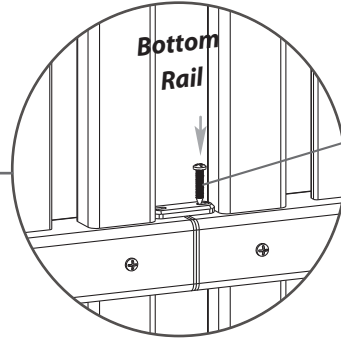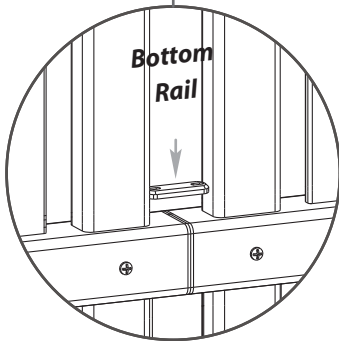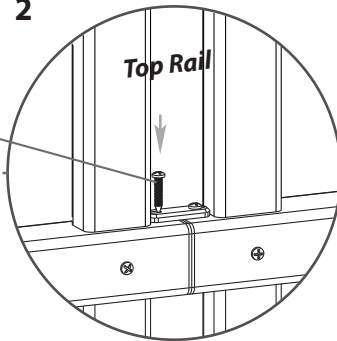


Angled Screens Application

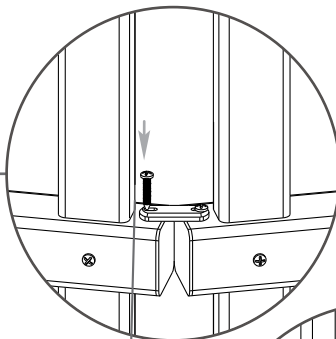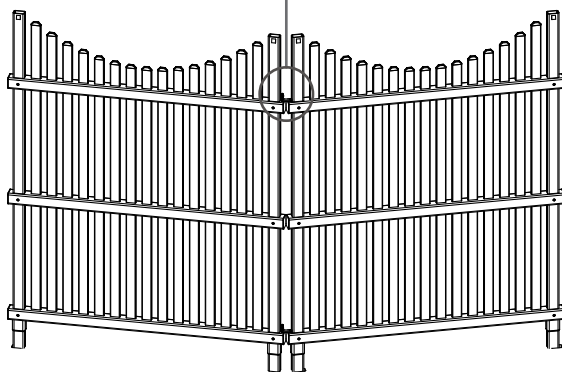

1" Screw

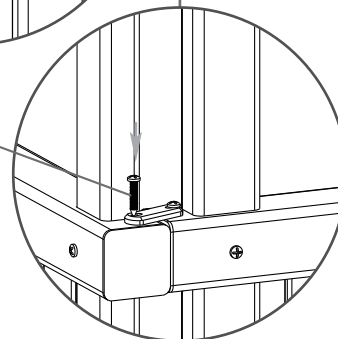

Corner Screens Application

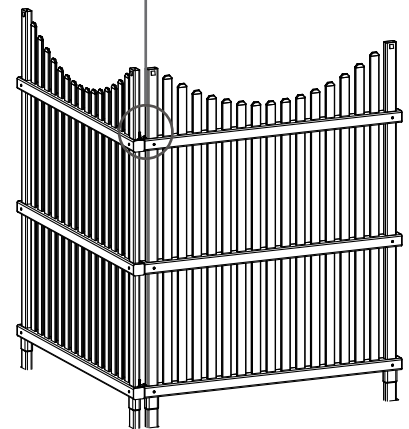

STEP FIVE

Fasten Post Caps

1

Push the post caps down over the posts to lock into place.

