

WamBam

Fun Name. Serious Fence.

VINYL SURFACE MOUNT


ASSEMBLY INSTRUCTIONS SB61000

60 MIN

Approximate assembly time

*Want to see a video on how to
assemble this product?*

Scan the QR code

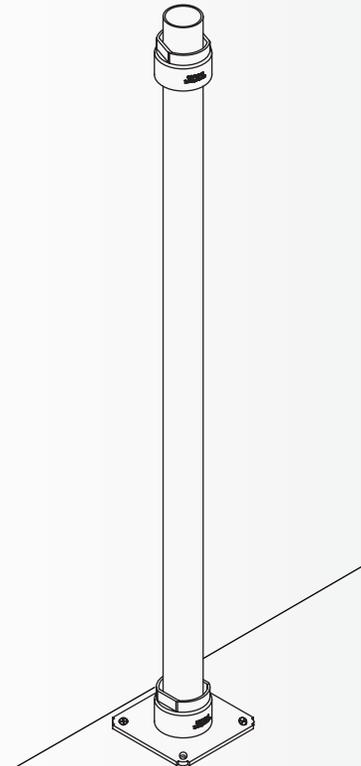

GENERAL INFORMATION



IMPORTANT

- ⊕ Check the inside of the larger pieces in your box for other materials packed inside.
- ⊕ When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- ⊕ We recommend an area approximately 5'x 8' for unobstructed assembling.
- ⊕ You should not need to use excessive force when assembling components.

MISSING OR DAMAGED PARTS?

VISIT OUR WEBSITE FIRST, SO WE CAN HELP YOU RIGHT AWAY!

Although great care has been taken to ensure proper packaging and handling of this product, occasionally problems occur. If you discover any missing, damaged, or defective parts, please visit our website to order replacement parts. If you experience any further trouble with your product, please contact our customer care department.

🌐 parts.nychbrands.com

✉ hmmm@wambamfence.com

☎ **704-892-5222 / 877-778-5733**

Customer service agents are available to take calls weekdays from 9am-5pm EST. If you call outside of business hours, please leave a voicemail.

To help you quickly and accurately, please have reference item number **SB61000** and the specific part name which can be found on page 5. It is helpful if you can provide the batch lot which is a stamped number inside the box.

NEED ASSEMBLY HELP?


Please give us a call at 704-892-5222 / 877-778-5733.

If you are having problems with the assembly or installation of this product, we are happy to assist you with the process.


NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**


DETAILED PRODUCT DIMENSIONS AND SPECIFICATIONS

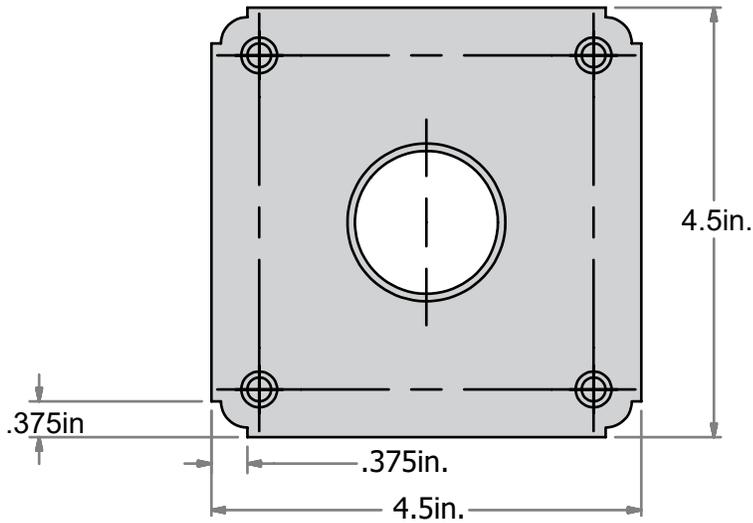


Top View

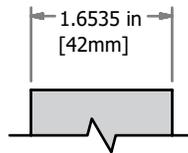

Note: First, it is hot dipped galvanized and then powder coated white.

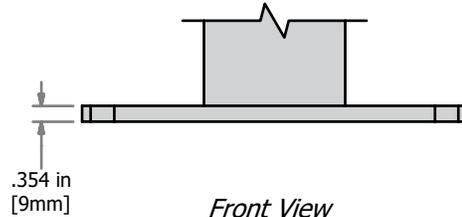

Front View
SCALE 1 / 2

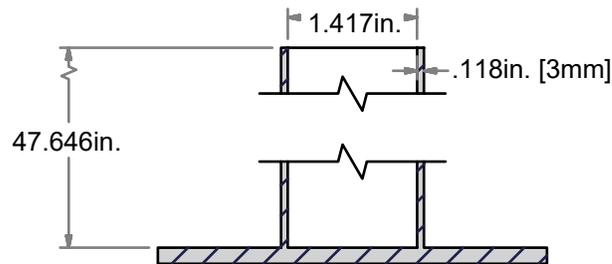

SECTION A-A

INFORMATION ABOUT FASTENERS

For Concrete:

Secure the surface mount to the concrete with $\frac{3}{8}$ " x 3" long wedge or sleeve anchors. Do not use concrete or blue screws.

For Wood:


If you have access under your wood deck, mount additional 2x6 or 2x8 wood blocking between your floor joists directly underneath your deck surface. Drill holes through both your deck surface and the additional wood blocking. Use $\frac{3}{8}$ " x 4" diameter bolts, washers, and nuts to secure from the underside of the deck. Do not use wood screws or lag bolts.

Visit wambamfence.com to watch a video of this product being installed on concrete. If you have any additional questions, please contact us at **1-877-778-5733**.

Note: *If you are mounting to a concrete surface in a coastal saltwater area you will want to use galvanized washers as spacers between the bottom of the flange plate and the concrete. This will create airflow and keep the bottom plate from rusting even though it is galvanized.*


STEP 1: LAY OUT MATERIALS

A ▶

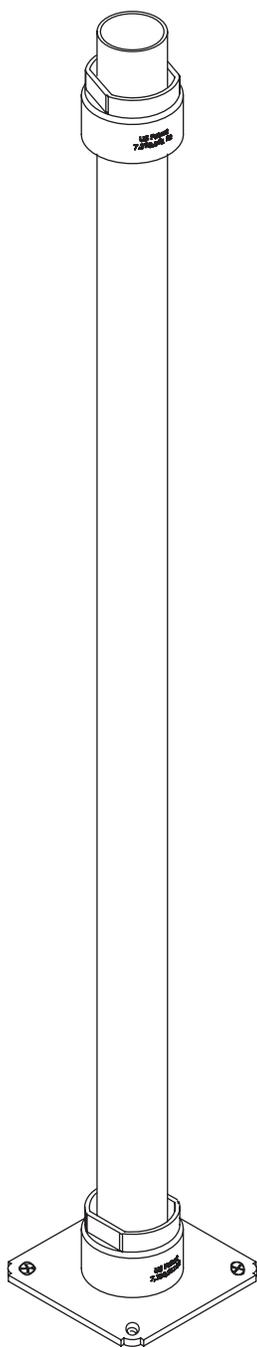

Surface Mount (1)

B ▶

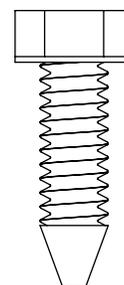

1/2" Hex Head
Tek Screw (4)


STEP 2: INSTALL SURFACE MOUNT

STEP 2.1

Concrete: Use a hammer drill to drill holes through the pre-drilled holes in the Surface Mount (A). Use (4) 3/8" x 3" long concrete wedge anchors (not included) to secure the surface mount.



Wood: Drill holes through the pre-drilled holes in the Surface Mount (A). Use (4) 3/8" x 4" long wood bolts (not included) to secure the surface mount.

Note: If you are installing over a wood deck, it is best to secure a 2x6 piece of wood between the joists where the mount will be installed.

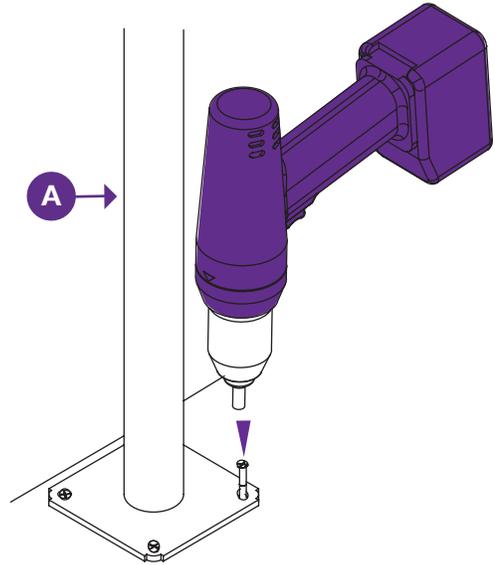

STEP 2.2

► Slide the leveling donuts to a position where they are vertically level and secure them with (4) 1/2" Hex Head Tek Screws (B).

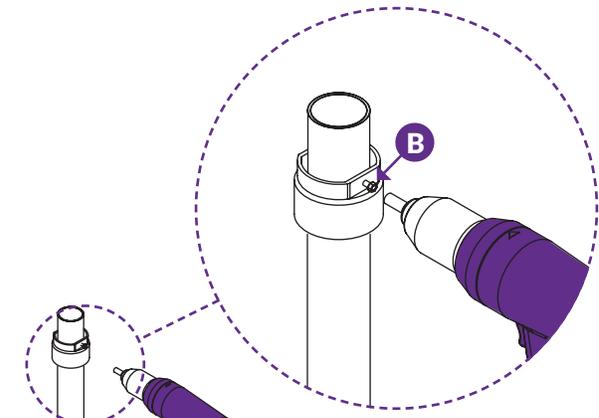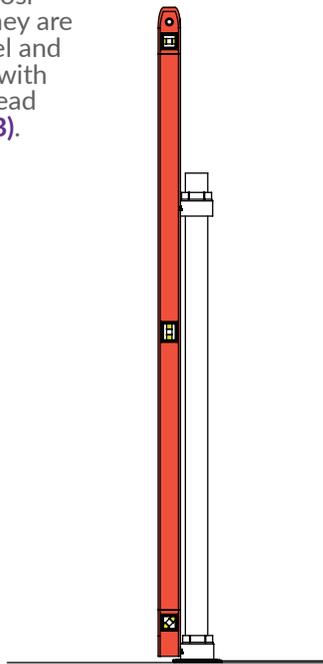

Note: The donut can be adjusted to compensate for a slightly crooked pipe anchor. Slide the donut either left or right to create a level plane between the anchor positioner and the donut.

WamBam

Fun Name. Serious Fence.



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



hmmm@wambamfence.com

704-892-5222
877-778-5733



WWW.WAMBAMFENCE.COM